

Part 1


OPERATION OF INSTRUMENTS AND CONTROLS—

Chapter 1-1

Overview of instruments and controls


- Instrument panel overview
- Instrument cluster overview
- Indicator symbols on the instrument panel

Instrument panel overview

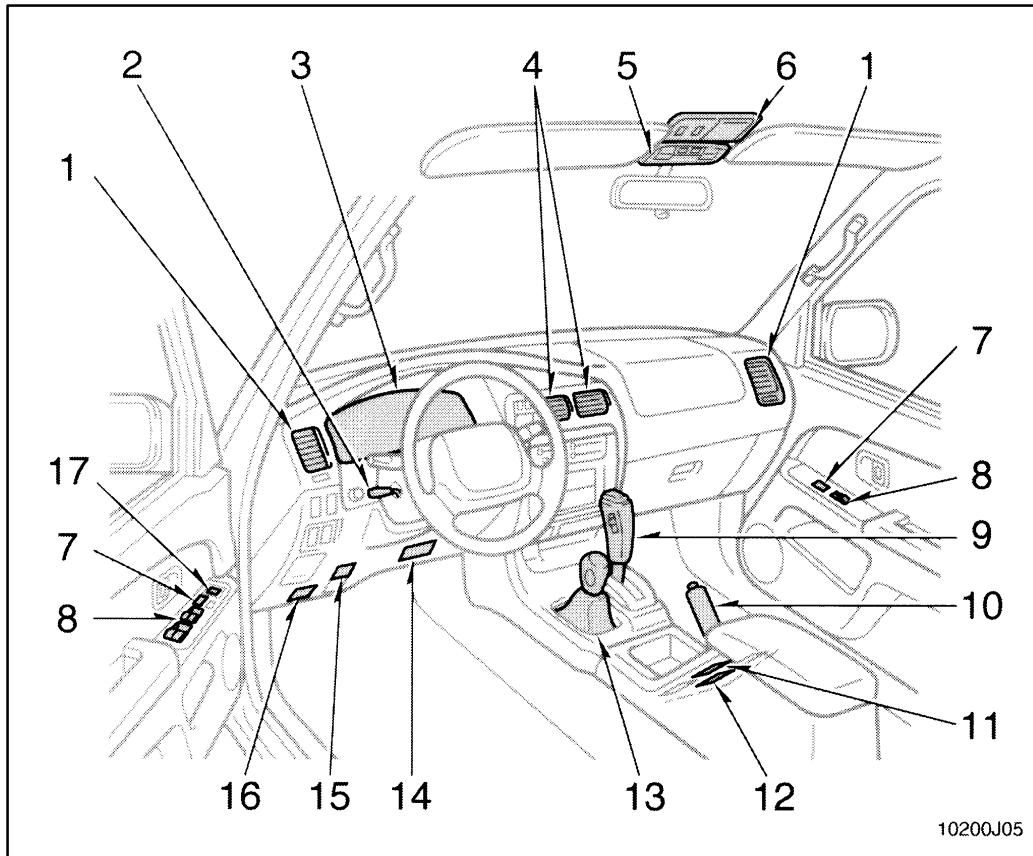

1. Side vent
2. Tilt steering lock release lever
3. Instrument cluster
4. Center vents
5. Personal lights
6. Electric moon roof switch
7. Power door lock switch
8. Power window switches
9. Automatic transmission selector lever or manual transmission gear shift lever
10. Parking brake lever
11. Driving pattern selector button
12. Power back window switch
13. Front drive control lever
14. Lower vent
15. Hood lock release lever
16. Fuel filler door opener
17. Power rear view mirror control switch (with power windows)


10200J05

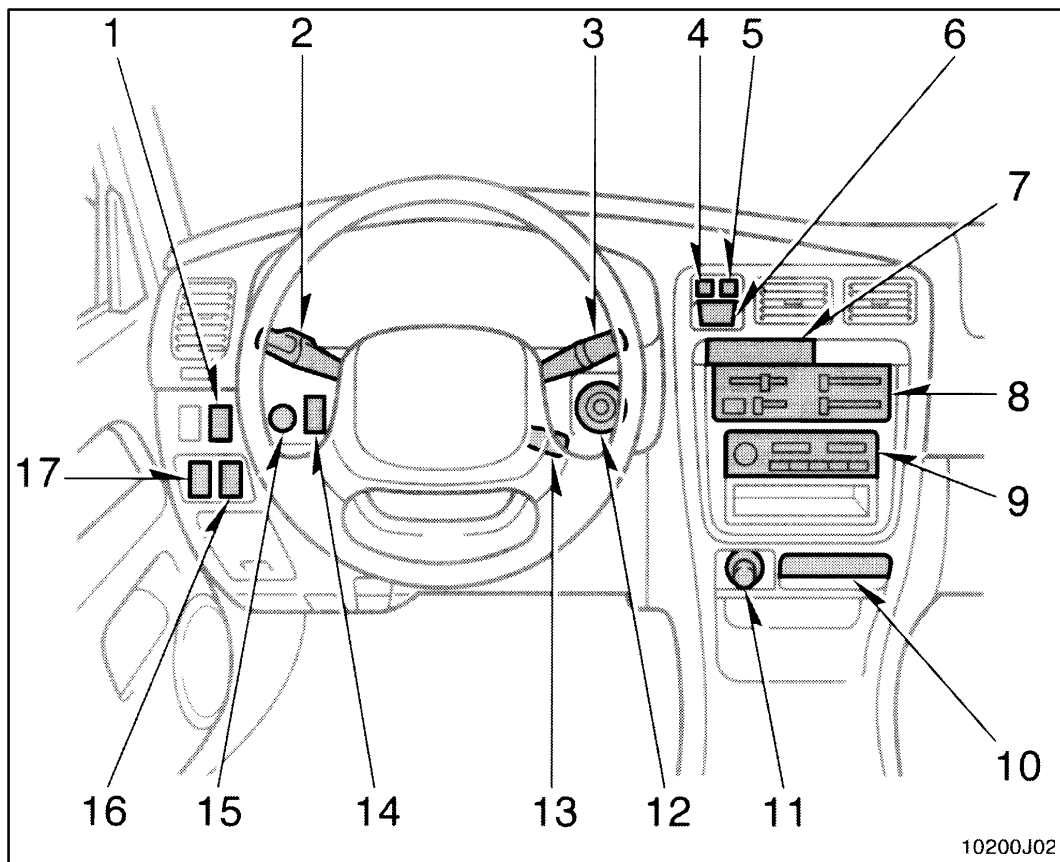

1. Clutch start cancel switch
2. Headlight and turn signal switch
3. Wiper and washer switches
4. Back window defogger switch
5. Emergency flasher switch
6. Clock
7. Cup holder
8. Air conditioning controls
9. Car audio
10. Ashtray
11. Cigarette lighter
12. Ignition switch
13. Cruise control switch
14. Rear differential lock switch
15. Instrument panel light control knob
16. Power rear view mirror control switch (without power windows)
17. Power back window lock switch (with-out power windows)

10200J02

Instrument cluster overview

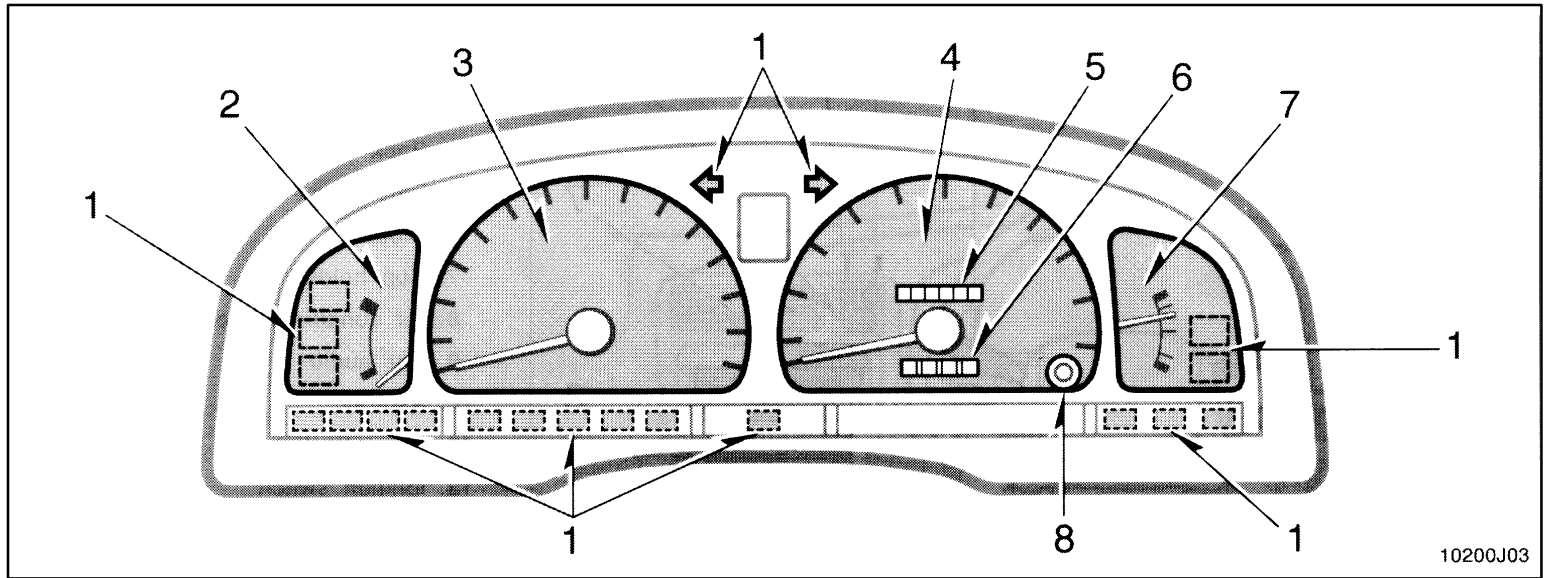

10200J03

- 1. Service reminder indicators or indicator lights
- 2. Engine coolant temperature gauge
- 3. Tachometer

- 4. Speedometer
- 5. Odometer
- 6. Trip meter

- 7. Fuel gauge
- 8. Trip meter reset knob

Indicator symbols on the instrument panel

	Brake system warning light* ¹
	Seat belt reminder light* ¹
	Discharge warning light* ¹
	Low oil pressure warning light* ¹
	Malfunction indicator lamp* ¹
	Low fuel level warning light* ¹
ABS (type A)  (type B)	Anti-lock brake system warning light * ¹

	Open door warning light* ¹
	SRS airbag warning light* ¹
A/T P	Unengaged "Park" warning light* ¹
A/T OIL TEMP	Automatic transmission fluid temperature warning light* ¹
	Low windshield washer fluid level warning light* ¹
	Turn signal indicator lights
	Headlight high beam indicator light
O/D OFF	Overdrive-off indicator light

CRUISE	Cruise control indicator light* ²
ECT PWR	Driving pattern ("POWER" mode) indicator light
	Four-wheel drive indicator light
RR DIFF LOCK	Rear differential lock indicator light

*¹: For details, see "Service reminder indicators and warning buzzers" in Chapter 1-5.

*²: If this light flashes, see "Cruise control" in Chapter 1-6.