

Part 1


OPERATION OF INSTRUMENTS AND CONTROLS—

Chapter 1-8

Other equipment

- [Clock](#)
- [Cigarette lighter and ashtray](#)
- [Glovebox](#)
- [Miscellany holder](#)
- [Miscellany box](#)
- [Cup holder](#)
- [Tie-down hooks](#)
- [Luggage cover](#)
- [Floor mat](#)

 Clock

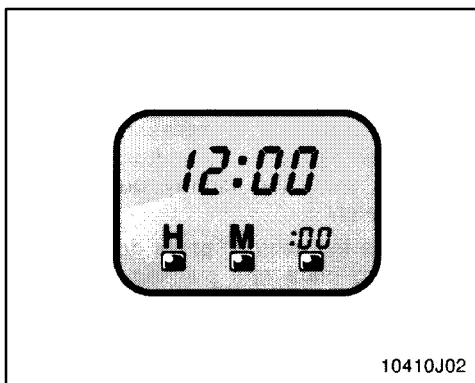

The digital clock indicates the time.

The key must be in the “ACC” or “ON” position.

To reset the hour: Push the “H” button.

To reset the minutes: Push the “M” button.

 
If quick adjustment to a full hour is desired, push the “:00” button.

For example, if the “:00” button is depressed when the time is between 1:01—1:29, the time will change to 1:00. If the time is between 1:30—1:59, the time will change to 2:00.

Once the electrical power source has been disconnected from the clock, the time is automatically set to 1:00 (one o'clock).

When the instrument panel lights are turned on, the brightness of the time indication will be reduced.

Cigarette lighter and ashtray

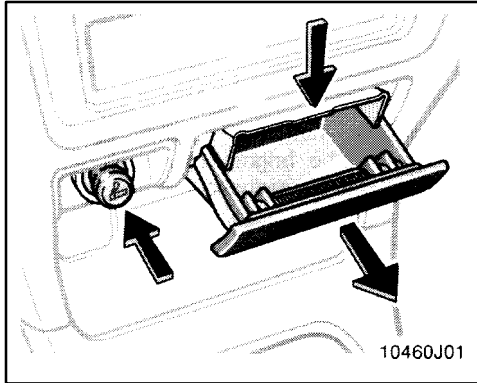

CIGARETTE LIGHTER

To use the cigarette lighter, press it in. When it becomes heated, it automatically pops out ready for use.

If the engine is not running, the key must be in the "ACC" position.

Do not hold the cigarette lighter pressed in.

Use a Toyota genuine cigarette lighter or equivalent for replacement.

ASHTRAY

To use the ashtray, pull it out.

 
When finished with your cigarette, thoroughly extinguish it in the ashtray to prevent other cigarette butts from catching fire. After using the ashtray, push it back in completely.

To remove the ashtray, press down on the lock spring plate and pull out.



To reduce the chance of injury in case of an accident or sudden stop while driving, always push the ashtray back in completely after using.

Glovebox

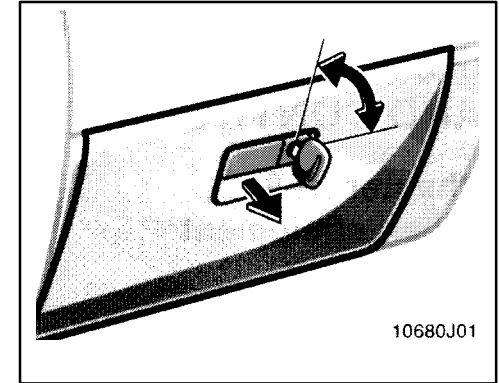

To use the glovebox, do this.

To open: Pull the lever.

 
To lock: Insert the master key and turn it clockwise.

On some models, the glovebox light will come on when the glovebox is open with the instrument panel lights on.



To reduce the chance of injury in case of an accident or a sudden stop, always keep the glovebox door closed while driving.

Miscellany holder

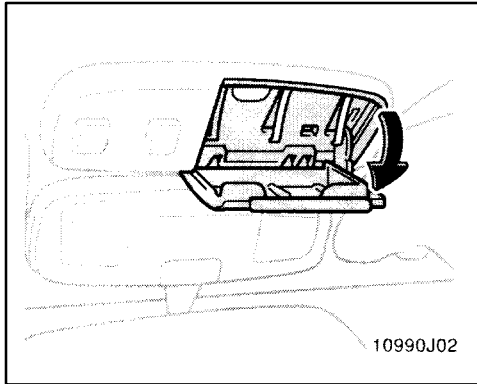


To use the miscellany holder, open the lid.



CAUTION


To prevent vibration noise while driving, do not bend the holding clips.

 Miscellany box

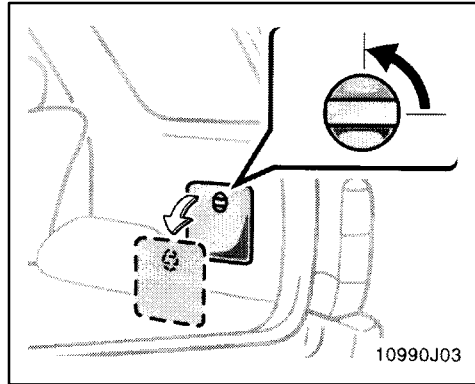


To open the box, turn the knob.

 Cup holder

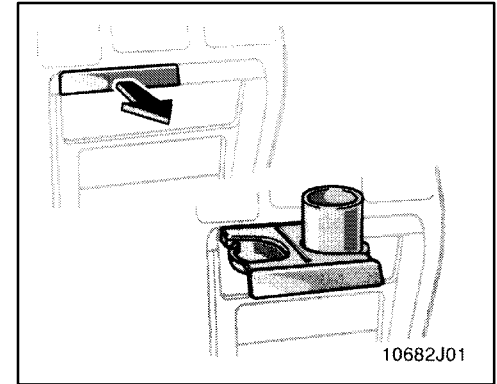

Front

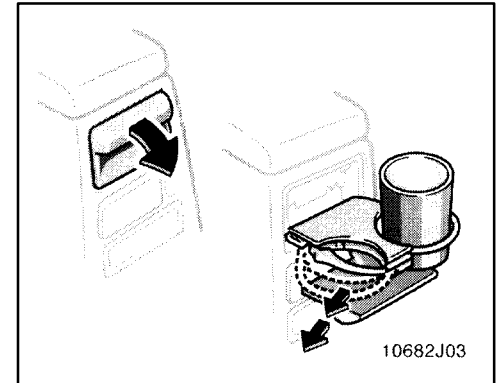 

Rear

The cup holder is designed for holding cups or drink-cans fit snugly in its holes.

 
To use the cup holder, pull it out.



CAUTION

- Do not place anything else on the cup holder, as such items may be thrown about and possibly injure people in the vehicle during sudden braking or an accident.
- Keep the cup holder shut when not in use.


Tie—down hooks

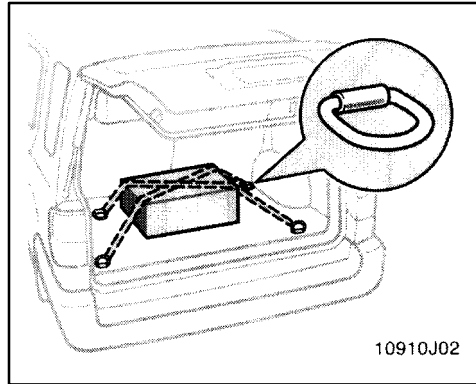

To secure your luggage, use the tie-down hooks as shown above.


See “Luggage stowage precautions” in Part 2 for what to observe in loading luggage.

 Luggage cover

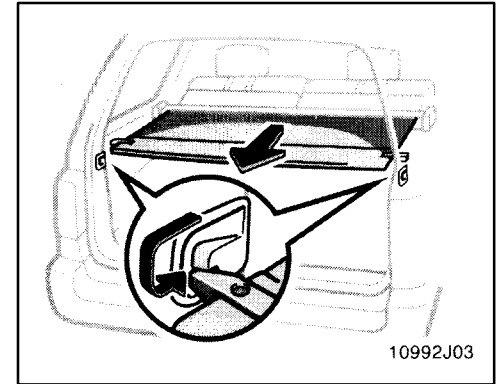

To use the luggage cover, pull it out of the retractor and hook it to the anchors.

 
When opening the back door, turn back the dropleaf of the luggage cover to gain access to the back door lever inside the vehicle.

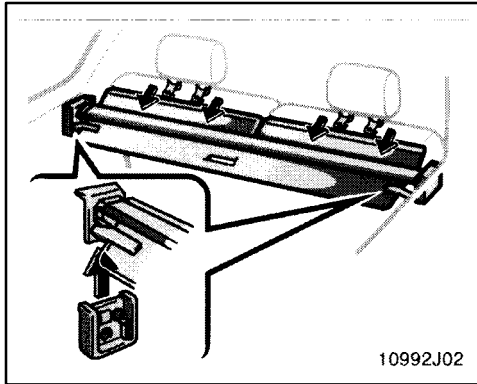

To remove the luggage cover:


1. Detach its hooks from the head restraints.
2. Lift it up.

 Floor mat

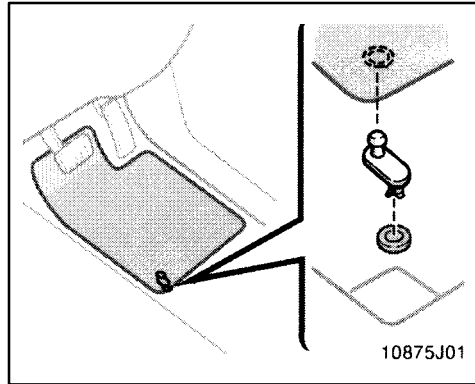

Use a floor mat of the correct size.

 If the floor mat has a hole, then it is designed for use with a locking clip. Fix the floor mat and locking clip into the hole in the floor carpet.

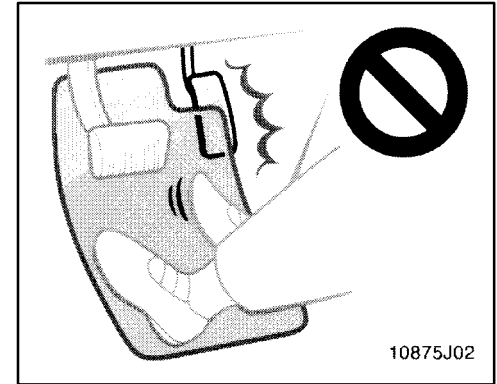

CAUTION

Make sure the floor mat is properly placed on the floor carpet. If the floor mat slips and interferes with the movement of the pedals during driving, it may cause an accident.

