

Part 1


OPERATION OF INSTRUMENTS AND CONTROLS—

Chapter 1-1


Overview of instruments and controls

- [Instrument panel overview](#)
- [Instrument cluster overview](#)
- [Indicator symbols on the instrument panel](#)

Instrument panel overview

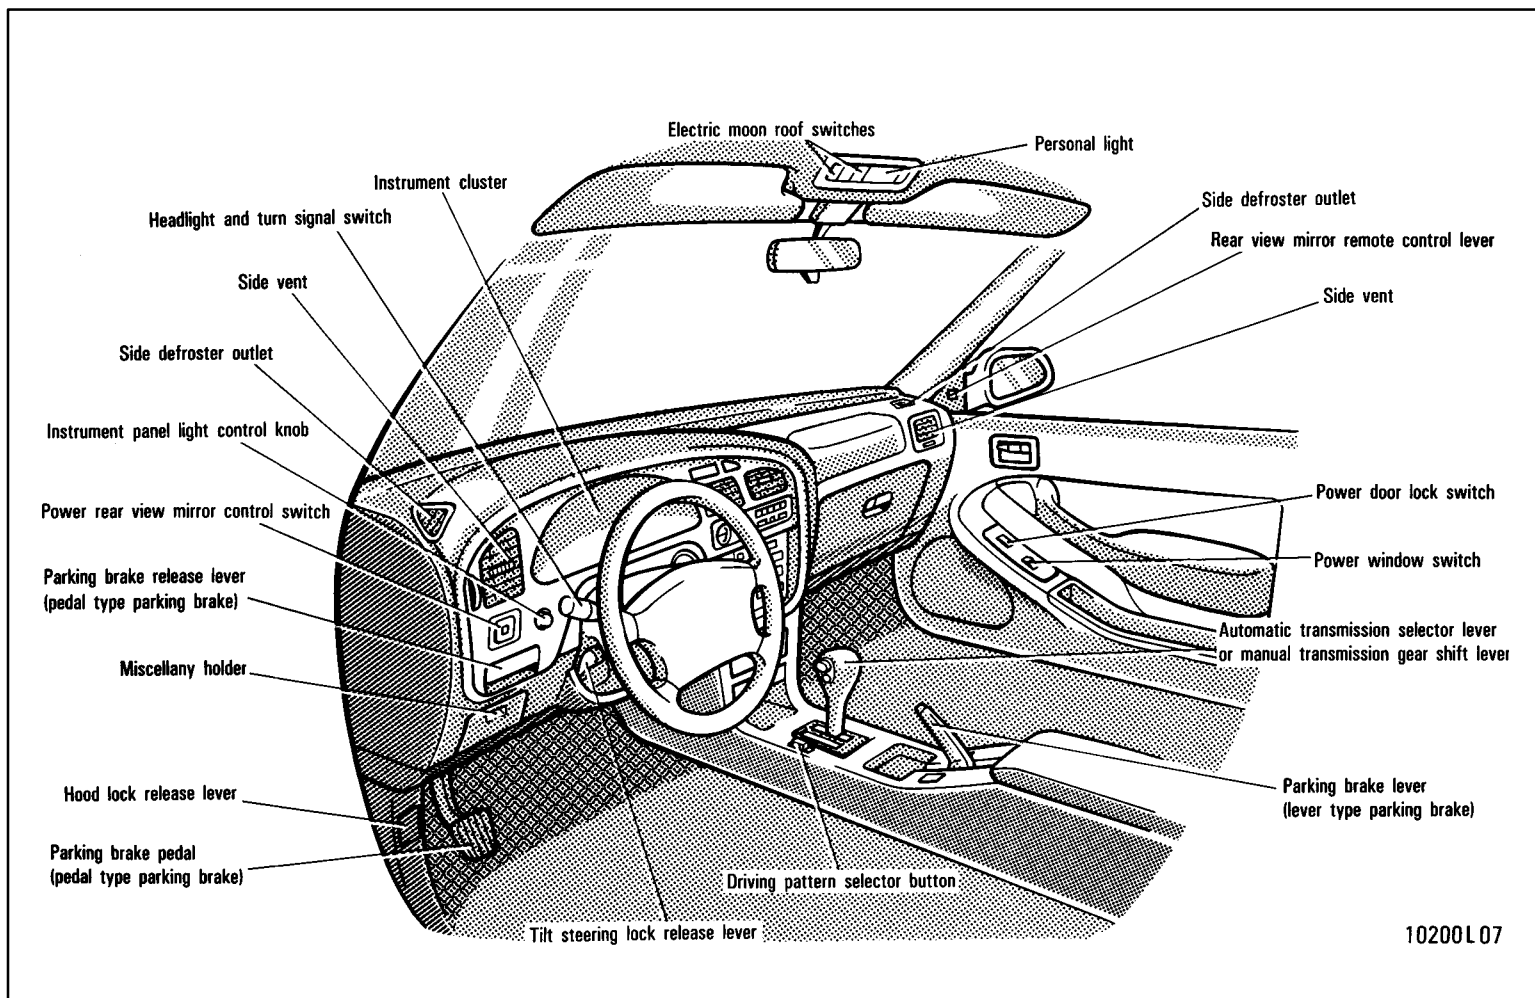


10200L07

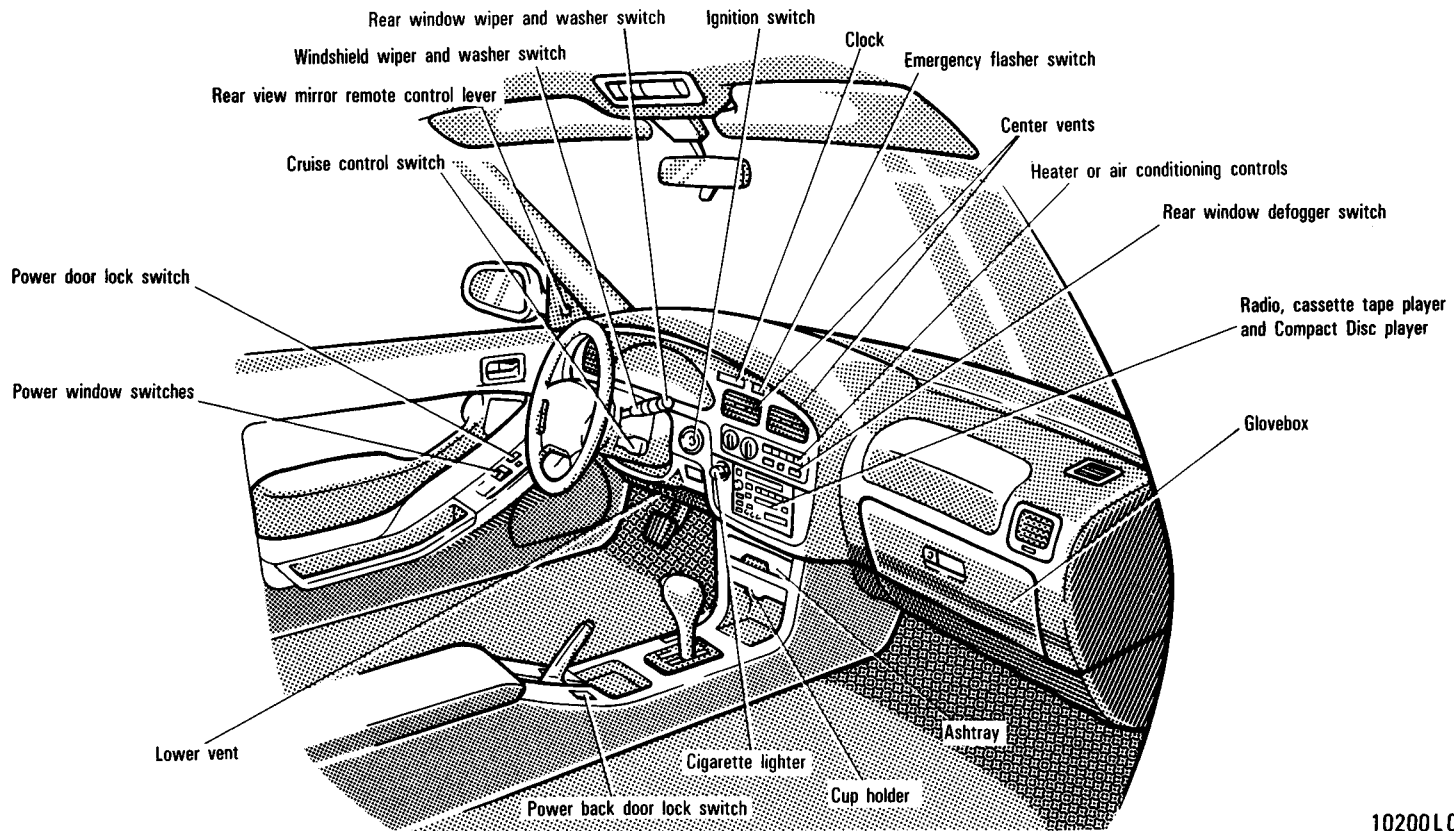

10200L08

Instrument cluster overview

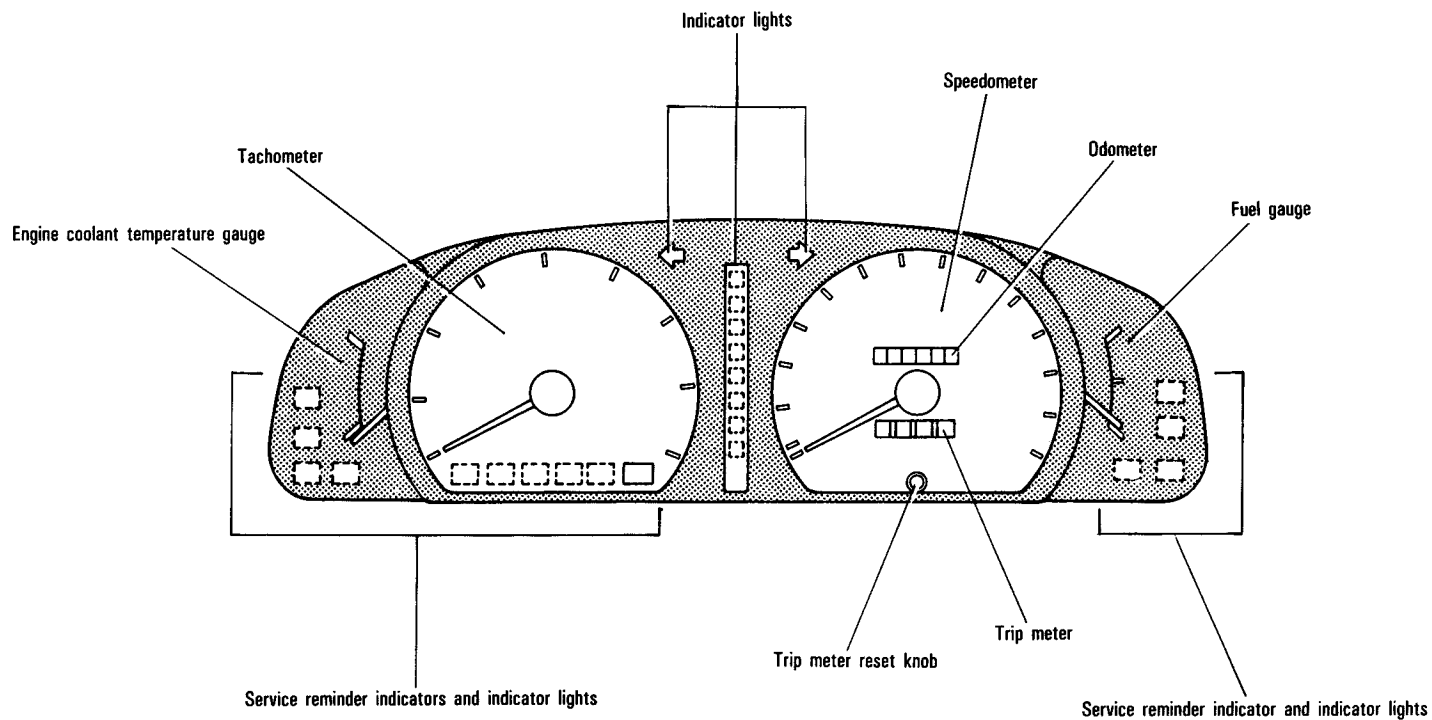

10200L09

Indicator symbols on the instrument panel

BRAKE (type A)  (type B)	Brake system warning light* ¹
	Seat belt reminder light* ¹
	Discharge warning light* ¹
 CHECK	Malfunction indicator lamp* ¹
	Low fuel level warning light* ¹
	Low oil pressure warning light* ¹
ABS (type A)  (type B)	Anti-lock brake system warning light* ¹
	Open door warning light* ¹

	Rear light failure warning light* ¹
	SRS airbag warning light* ¹
	Turn signal indicator lights
	Headlight high beam indicator light
O/D OFF	Overdrive-off indicator light
PWR (type A) ECT PWR (type B)	"PWR" mode indicator light
CRUISE	Cruise control indicator light* ²
PRN D 2 L	Automatic transmission indicator lights

*¹: For details, see "Service reminder indicators and warning buzzers" in Chapter 1-5.

*²: If this light flashes, see "Cruise control" in Chapter 1-6.

