

Part 1


OPERATION OF INSTRUMENTS AND CONTROLS—

Chapter 1-2

Keys and Doors

- Keys
- Side doors
- Power windows
- Trunk lid
- Back door
- Hood
- Fuel tank cap
- Electric moon roof

 
Keys

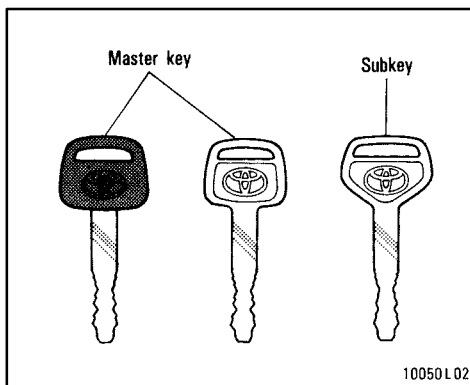

The master key works in every lock. The subkey will not work in the trunk and glovebox.

To protect things locked in the trunk or glovebox when you have your vehicle parked, leave the subkey with the attendant.

 
Since the side doors, back door and trunk lid can be locked without a key, you should always carry a spare master key in case you accidentally lock your keys inside the vehicle.

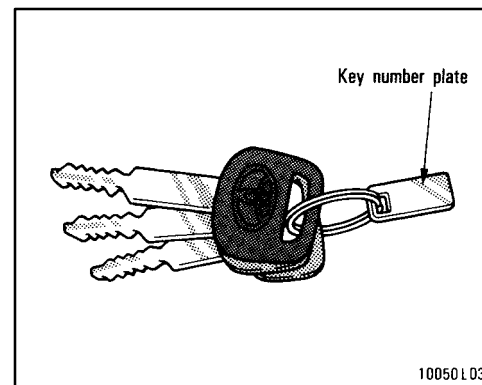

Keep the key number plate in a safe place such as your wallet, not in the vehicle.

If you should lose your keys or if you need additional keys, duplicates can be made by a Toyota dealer using the key number. You should also put a copy of the key number with your important papers.

 
Side doors

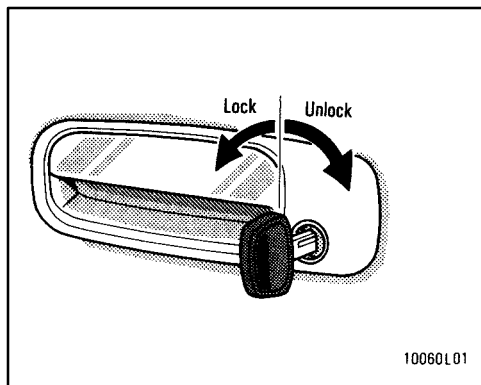

LOCKING WITH KEY

Turn the key towards the front of the vehicle to lock and towards the back to unlock.

 
Vehicles with power door lock system—All the side doors and back door lock and unlock simultaneously with either front door. In the driver's door lock, turning the key once will unlock the driver's door and twice in succession will unlock all the side doors and back door simultaneously. On some models, the door keyhole light will come on to help you locate the keyhole if you pull up and release the door handle when inserting the key into the driver's door keyhole in the dark.

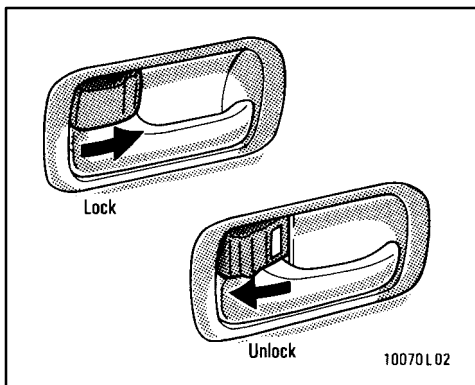

LOCKING WITH INSIDE LOCK KNOB


Turn the lock knob forward to lock and backward to unlock the door.

 Closing the door with the lock knob in the lock position will also lock the door. Be careful not to lock your keys in the vehicle. Vehicles with power door lock system—The door cannot be locked if you leave the key in the ignition switch.

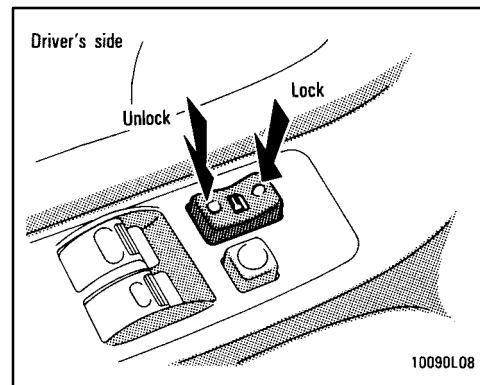


LOCKING WITH POWER DOOR LOCK SWITCH

 To lock all the side doors and back door simultaneously, push the power door lock switch on the LOCK side. Pushing on the UNLOCK side will unlock them.

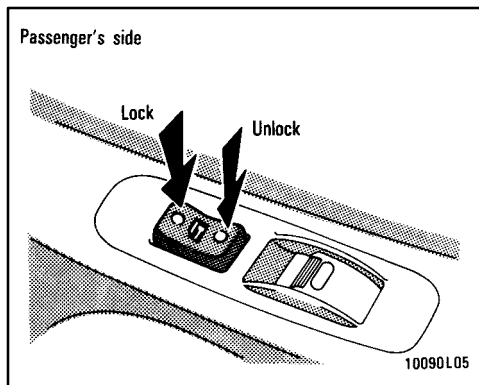

CAUTION

 Before driving, be sure that the doors are closed and locked, especially when small children are in the vehicle. Along with the proper use of seat belts, locking the doors helps prevent the driver and passengers from being thrown out from the vehicle during an accident. It also helps prevent the doors from being opened unintentionally.

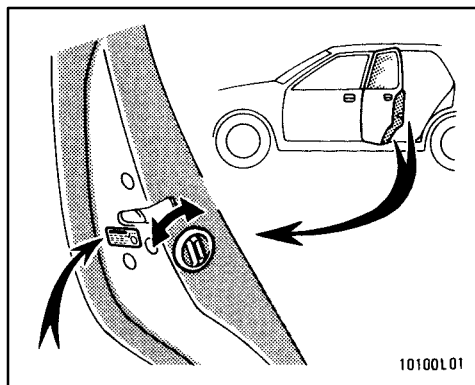


LOCKING WITH REAR DOOR CHILD-PROTECTORS

Turn the lock knob to the "LOCK" position as shown on the label.

This feature allows you to lock a rear door so it can be opened from the outside only, not from inside. We recommend using this feature whenever small children are in the vehicle.

 Power windows

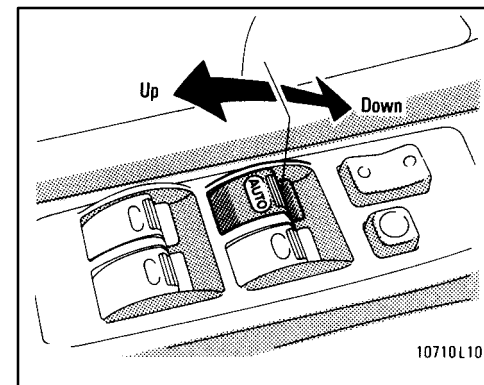

The windows can be operated with the switch on each side door.

The power windows work when the ignition switch is in the "ON" position. However, if both front doors are closed, they work for 60 seconds even after the ignition switch is turned off. They stop working when either front door is opened.

 
OPERATING THE DRIVER'S WINDOW

Use the switch on the driver's door.

Normal operation: The window moves as long as you hold the switch.


To open: Lightly push down the switch.

To close: Pull up the switch.

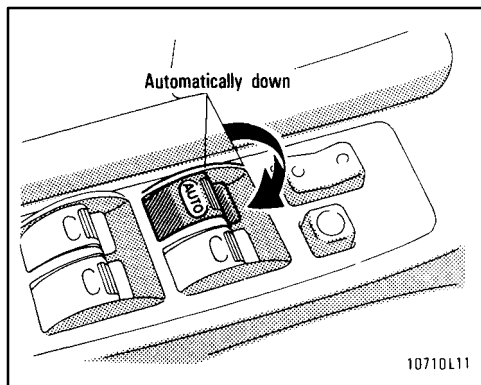

10710L11

 Automatic operation (to open only): Push the switch completely down and then release it. The window will fully open. To stop the window partway, lightly pull the switch up and then release it.

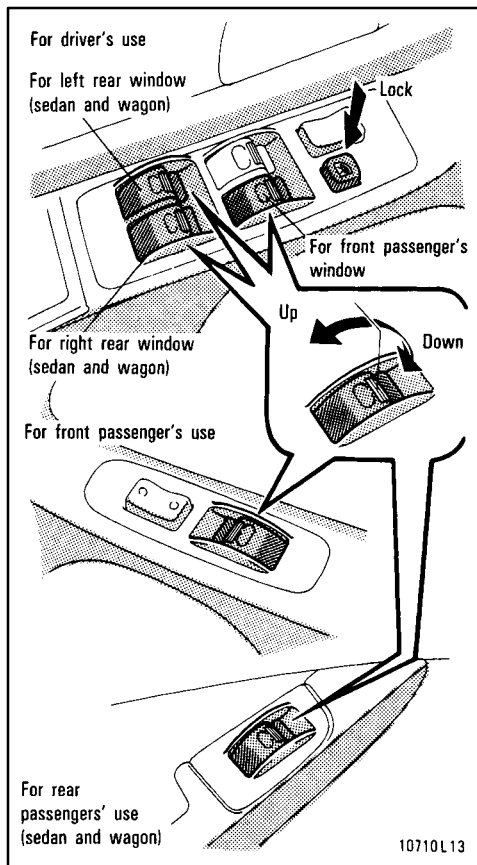

10710L13

OPERATING THE PASSENGERS' WINDOWS

Use the switch on each passenger's door or the switches on the driver's door that control each passenger's window.

The windows move as long as you hold the switch.

To open: Push down the switch.

To close: Pull up the switch.

If you push in the window lock button on the driver's door, the passengers' windows cannot be operated.

 


To avoid serious personal injury, you must do the following.

- Always make sure the head, hands and other parts of the body of all occupants are kept completely inside the vehicle before you close the power windows. If someone's neck, head or hands gets caught in a closing window, it could result in a serious injury. When anyone closes the power windows, be sure that they operate the windows safely.
- When small children are in the vehicle, never let them use the power window switches without supervision. Use the window lock button to prevent them from making unexpected use of the switches.

- Never leave small children alone in the vehicle, especially with the ignition key still inserted. They could use the power window switches and get trapped in a window. Unattended children can become involved in serious accidents.

Trunk lid (sedan and coupe)—

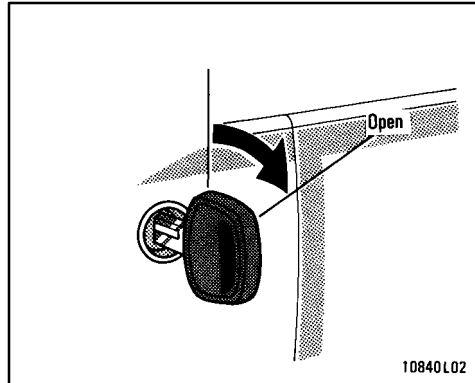

To open the trunk lid from the outside, insert the master key and turn it clockwise.

See “Luggage stowage precautions” in Part 2 for precautions to observe in loading luggage.

 
To close the trunk lid, lower it and press down on it. After closing the trunk lid, try pulling it up to make sure it is securely closed.



CAUTION


Keep the trunk lid closed while driving. This not only keeps the luggage from being thrown out but also prevents exhaust gases from entering the vehicle.

—Lock release lever—

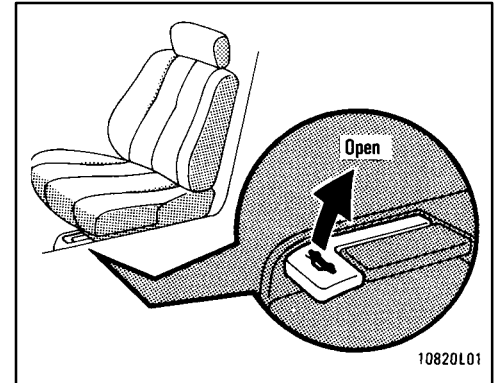

To open the trunk lid from the driver's seat, pull up on the lock release lever.

 
—Luggage security system

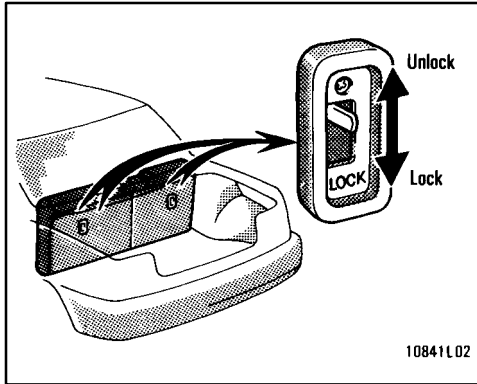

This system deactivates the lock release lever so that things locked in the trunk can be protected.

1. Push down the security lock levers to lock the rear seatbacks.

 
After locking the rear seatbacks, try folding them down to make sure they are securely locked—otherwise, someone could get into the trunk by folding down a rear seat.

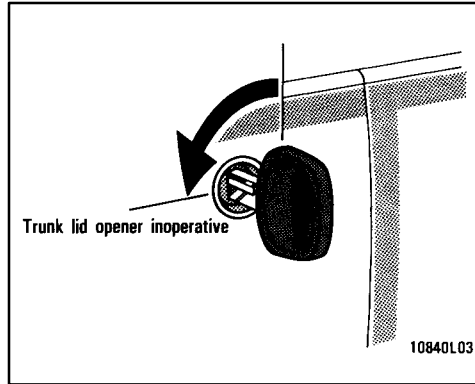

2. After closing the trunk lid, insert the master key and turn it counterclockwise to deactivate the lock release lever.

After closing the trunk lid, try pulling it up to make sure it is securely locked.

 Back door (wagon)—

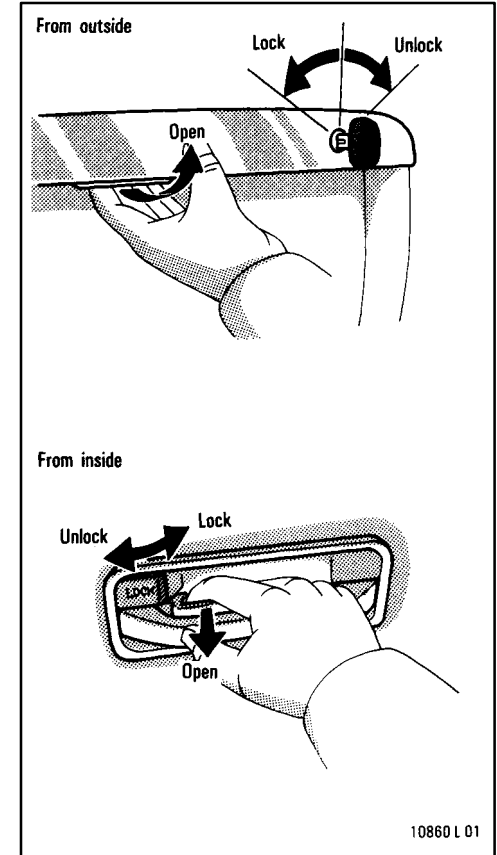

FROM OUTSIDE

To open the back door, insert the key and turn it clockwise to unlock. Then pull the handle and raise the door.

To close the door, lower it and press down on it. After closing the back door, try pulling it up to make sure it is securely closed.

FROM INSIDE (vehicles with third seat)

 
Turn the lock knob rightward to lock and leftward to unlock the back door. To open the door, pull the handle and push the door outward.

For closing, hold the lever and lower the door. After closing the back door, try pushing it outward to make sure it is securely closed.

See "Luggage stowage precautions" in Part 2 for precautions to observe in loading luggage.


Closing the back door with the lock knob set in the lock position will also lock the back door. Be careful not to lock your keys in the vehicle.

—Power back door lock

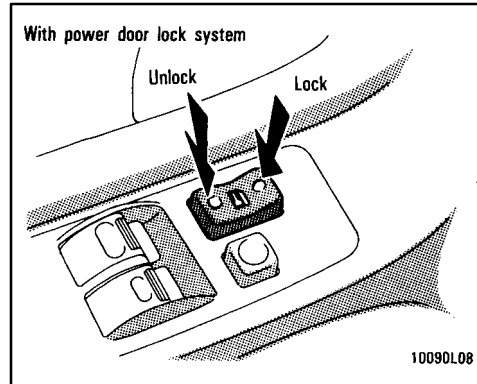

Vehicles with power door lock system—To lock the back door, push the power door lock switch on the LOCK side. Pushing on the UNLOCK side will unlock it.

 
At this time, all the side doors are operated simultaneously (See "Side doors"). You can, of course, lock and unlock the back door manually.

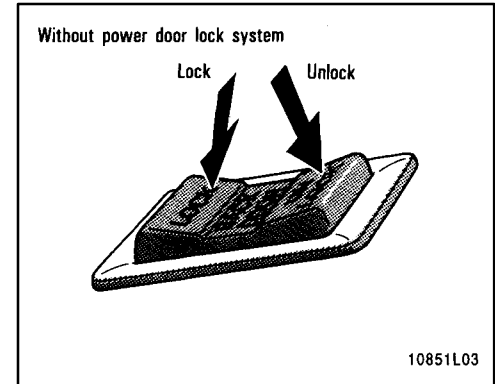

Vehicles without power door lock system—To lock the back door, push the switch on the "LOCK" side. To unlock the back door, push the switch on the "UNLOCK" side.

You can, of course, lock and unlock the back door manually.

 —Back door child protector (with third seat)

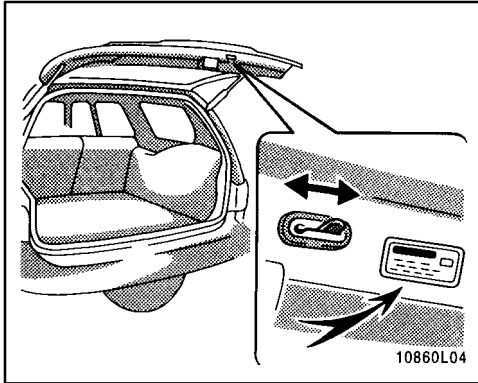

Move the lock lever to the “LOCK” position as shown on the label.

 
This feature allows you to lock a back door so it can be opened from the outside only, not from inside. We recommend using this feature whenever small children are in the vehicle.



CAUTION

- Before driving, be sure that the doors are closed and locked. Along with the proper use of seat belts, locking the back door helps prevent the passengers from being thrown out from the vehicle during an accident. It also helps prevent the back door from being opened unintentionally.
- Keep the back door closed while driving. This not only keeps the luggage from being thrown out but also prevents exhaust gases from entering the vehicle.



Hood

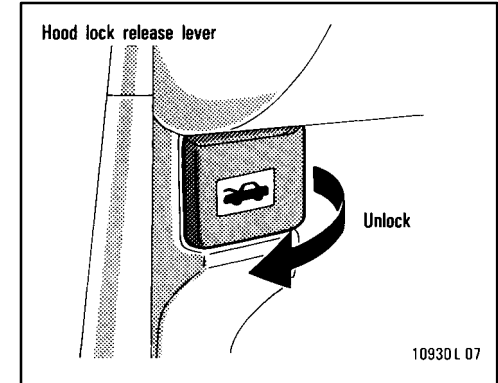

To open the hood, pull the hood lock release lever under the dash. The hood will spring up slightly. In front of the vehicle, press up on the auxiliary catch lever and lift the hood.

Before closing the hood, check to see that you have not forgotten any tools, rags, etc. Then lower the hood and make sure it locks into place. If necessary, press down gently on the front edge to lock it.

  Fuel tank cap

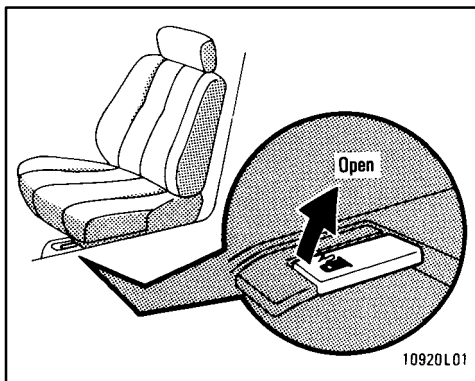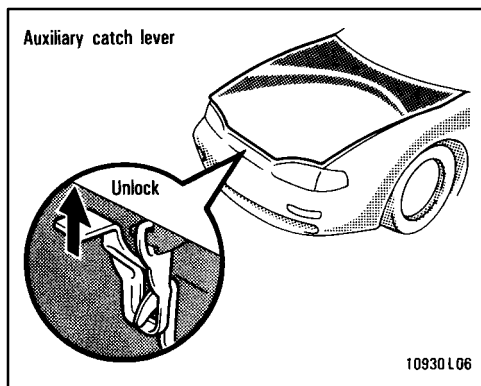


1. To open the fuel filler door, pull the lever up.



CAUTION

 - Do not smoke, cause sparks or allow open flames when refueling. The fumes are flammable.
- When opening the cap, do not remove the cap quickly. In hot weather, fuel under pressure could cause injury by spraying out of the filler neck if the cap is suddenly removed.

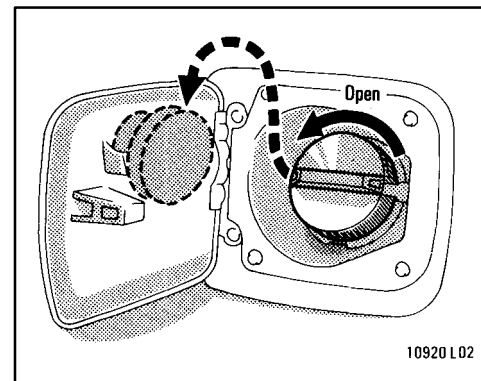

2. To remove the fuel tank cap, turn the cap slowly counterclockwise, then pause slightly before removing it. After removing the cap, hang it on the cap hanger.

It is not unusual to hear a slight swoosh when the cap is opened. When installing, turn the cap clockwise till you hear a click. 5S-FE engined vehicles with automatic transmission—

If the cap is not tightened securely, the malfunction indicator lamp comes on. Make sure the cap is tightened securely.

 
The indicator lamp goes off after driving several times. If the indicator lamp does not go off, contact your Toyota dealer as soon as possible.



CAUTION

- Make sure the cap is tightened securely to prevent fuel spillage in case of an accident.
- Use only a genuine Toyota fuel tank cap for replacement. It has a built-in check valve to reduce fuel tank vacuum.

Electric moon roof

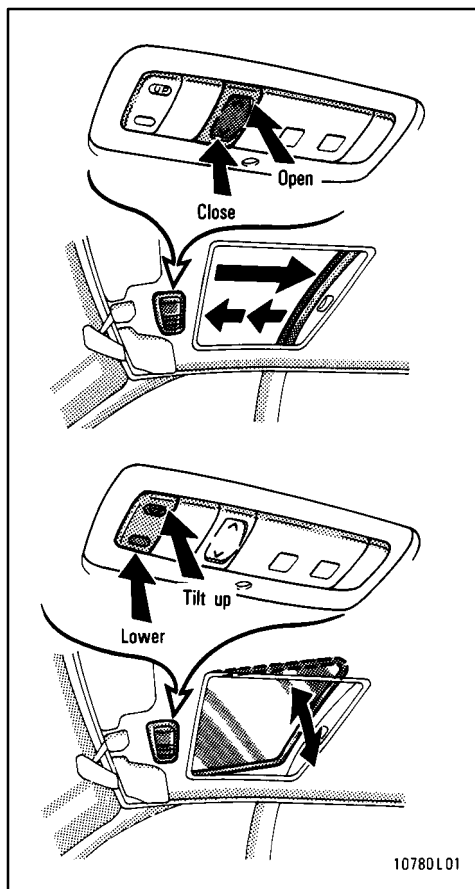

To open the moon roof, push the switch on the “SLIDE” side. Pushing on the opposite side will close it. To tilt up the rear end of the moon roof, push the switch on the “UP” side. Pushing on the opposite side will lower it.

The moon roof works when the ignition switch is in the “ON” position. However, if both front doors are closed, it works for 60 seconds even after the ignition switch is turned off. It stops working when either front door is opened.

The moon roof will move while the switch is being pushed and stop when released. However, as a precaution when closing, it stops at the three-quarters closed position before fully closing. Therefore, release the switch and then push it again to close it completely.

You may open the moon roof to any desired position.

The sun shade can be opened or closed manually. However, if you open the moon roof, the sun shade will be opened together with the moon roof.



CAUTION

To avoid serious personal injury, you must do the following.

- While the vehicle is moving, always keep the head, hands and other parts of the body of all occupants away from the roof opening. Otherwise, you could be seriously injured if the vehicle stops suddenly or if the vehicle is involved in an accident.
- Always make sure nobody places his/her head, hands and other parts of the body in the roof opening before you close the roof. If someone's neck, head or hands gets caught in the closing roof, it could result in a serious injury. When anyone closes the roof, first make sure it is safe to do so.
- Never leave small children alone in the vehicle, especially with the ignition key still inserted. They could use the moon roof switches and get trapped in the roof opening. Unattended children can become involved in serious accidents.
- Never sit on top of the vehicle around the roof opening.

