

Part 1


OPERATION OF INSTRUMENTS AND CONTROLS—

Chapter 1-8

Other equipment

- Clock
- Cigarette lighter and ashtray
- Glovebox
- Miscellany holder
- Cup holder
- Luggage cover
- Parcel straps
- Floor mat

 Clock

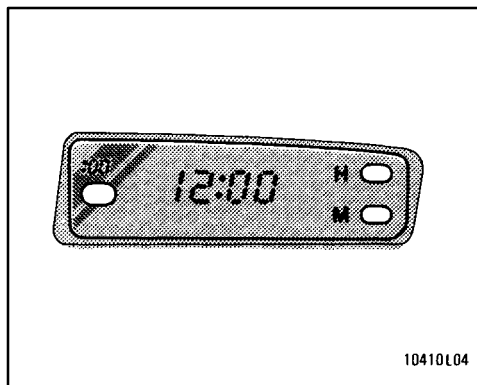


The digital clock indicates the time with the ignition key at the “ACC” or “ON” position. To reset the hour, depress the “H” button. To reset the minutes, depress the “M” button. To adjust the time to a full hour, depress the “:00” button.

For example, if the “:00” button is depressed when the time is between 1:01—1:29, the time will change to 1:00. If the time is between 1:30—1:59, the time will change to 2:00.

When the instrument panel lights are turned on, the brightness of the time indication will be reduced.

Once the electrical power source has been disconnected from the clock, the time is automatically set to 1:00 (one o'clock).

 Cigarette lighter and ashtray

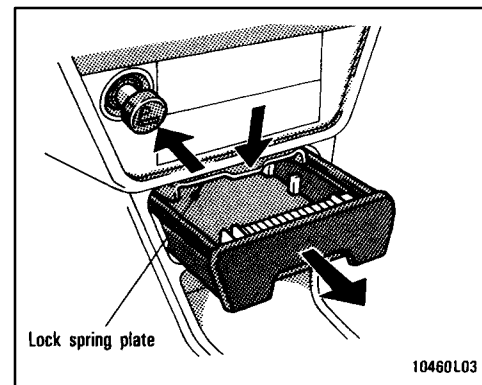

To use the cigarette lighter, press it in. When it becomes heated, it automatically pops out ready for use.

If the engine is not running, the key must be in the “ACC” position.

Do not hold the cigarette lighter pressed in.

When finished with your cigarette, thoroughly extinguish it in the ashtray to prevent other cigarette butts from catching fire. After using the ashtray, push it back in completely.

To remove the ashtray, press down on the lock spring plate and pull out.

 
Use a Toyota genuine cigarette lighter or equivalent for replacement.



CAUTION

To reduce the chance of injury in case of an accident or sudden stop while driving, always push the ash-tray back in completely after using.

Glovebox

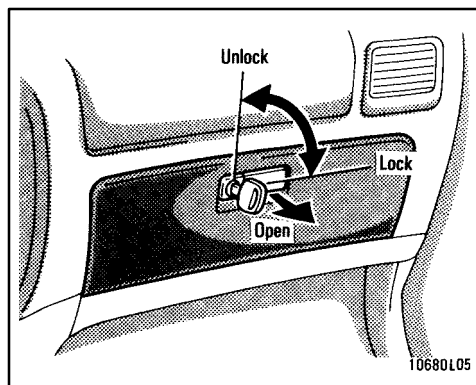

To open the glovebox door, pull the lever. To lock the glovebox door, insert the master key and turn it clockwise.

 
With the instrument panel lights on, the glovebox light will come on when the door is open.



CAUTION

To reduce the chance of injury in case of an accident or a sudden stop, always keep the glovebox door closed while driving.

Miscellany holder

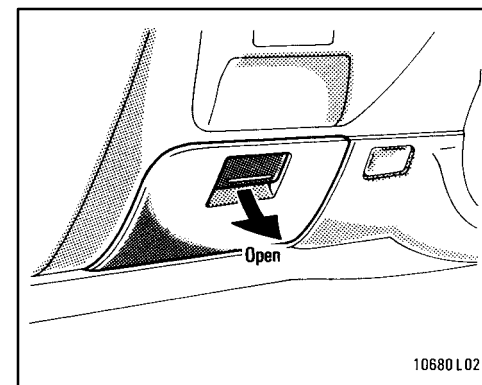


To open the holder, pull the lever as shown above.



CAUTION

To reduce the chance of injury in case of an accident or a sudden stop, always keep the miscellany holder closed while driving.

 Cup holder

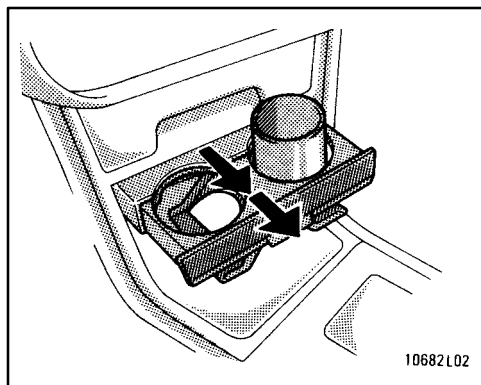


To use the cup holder, pull it out completely.

The cup holder is designed for holding cups or drink-cans fit snugly in its holes.



- Do not place anything else on the cup holder, as such items may be thrown about and possibly injure people in the vehicle during sudden braking or an accident.
- Keep the cup holder shut when not in use.

 
Luggage cover

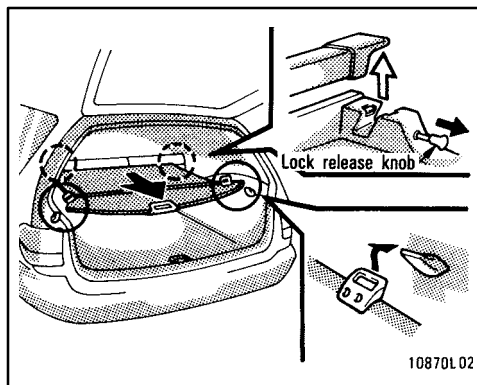

USING THE LUGGAGE COVER

To use the luggage cover, pull it out of the retractor and hook it to the anchors.

 To remove the luggage cover, pull the lock release knobs and lift up the luggage cover.

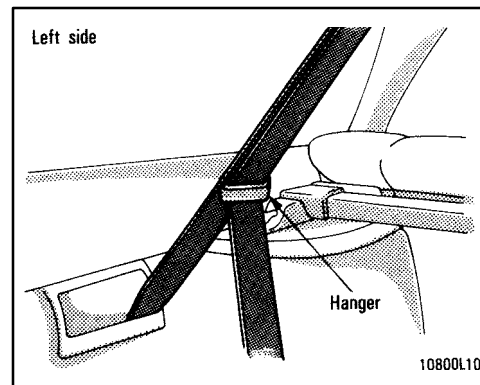



Wagon with third seat—

Make sure the shoulder belt passes through the hanger when using the luggage cover.

This prevents the shoulder belt from being damaged.



  
Seat belt must be removed from the hanger when seat belt is in use.

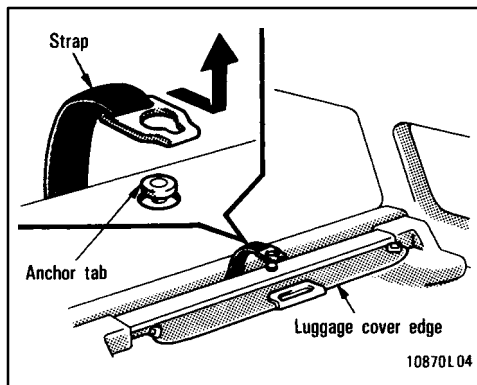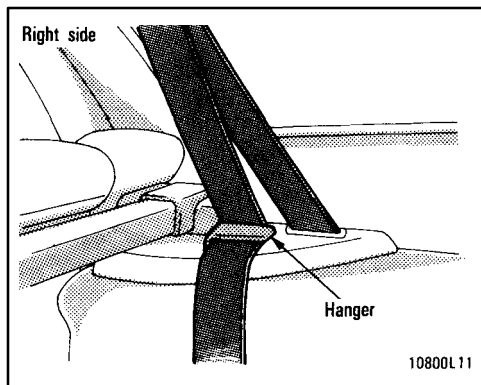

HOLDING THE LUGGAGE COVER EDGE UPRIGHT

When using the third seat, fold up the luggage cover edge so that it does not interfere with the passengers.

 
1. Unhook the strap from the anchor tab.

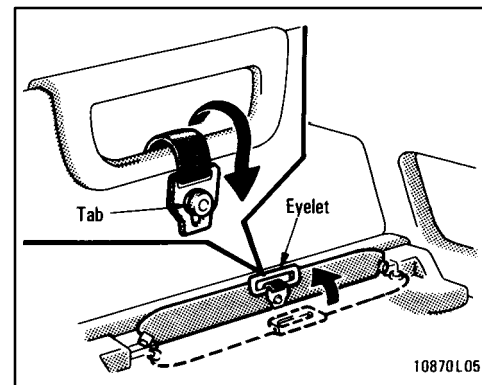

2. Fold the luggage cover edge. Then pass the strap through the eyelet and hook it onto the tab on the reverse side of the luggage cover.

When using the luggage cover, hook the strap onto the anchor tab.

 
Parcel straps (wagon)

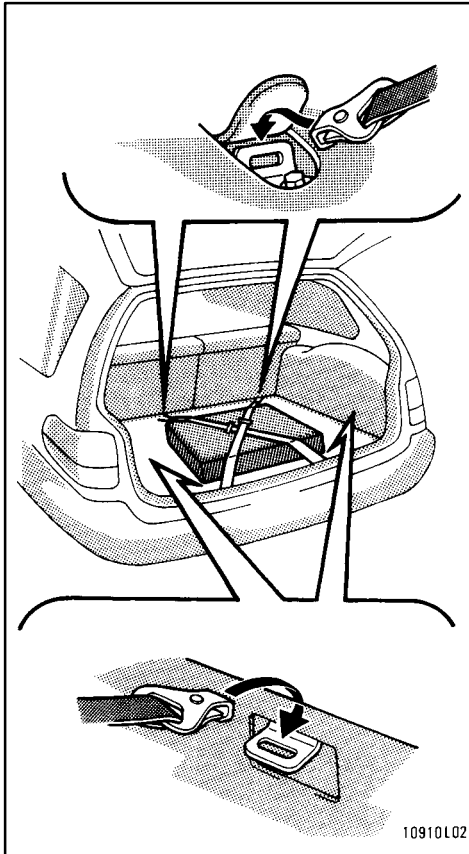

To secure your parcels, hook the parcel straps to the catches and tighten the straps by pulling on the free end.


See "Luggage stowage precautions" in Part 2 for precautions to observe in loading luggage.

 Floor mat

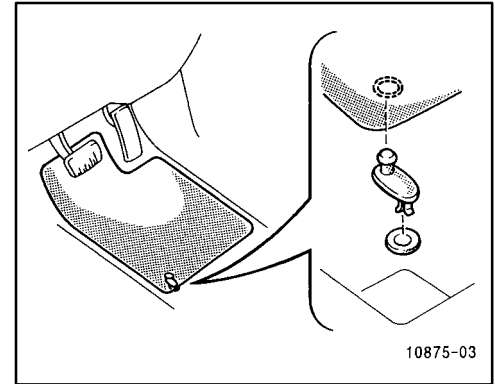

Use a floor mat of the correct size.

 If the floor mat has a hole, then it is designed for use with a locking clip. Fix the floor mat and locking clip into the hole in the floor carpet.

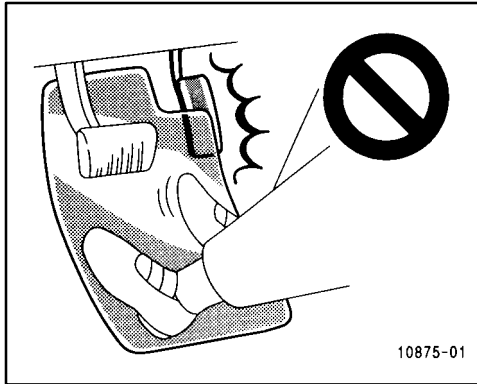

Make sure the floor mat is properly placed on the floor carpet. If the floor mat slips and interferes with the movement of the pedals during driving, it may cause an accident.