

Part 1


OPERATION OF INSTRUMENTS AND CONTROLS—

Chapter 1-1


Overview of instruments and controls

- Instrument panel overview
- Instrument cluster overview
- Indicator symbols on the instrument panel

Instrument panel overview

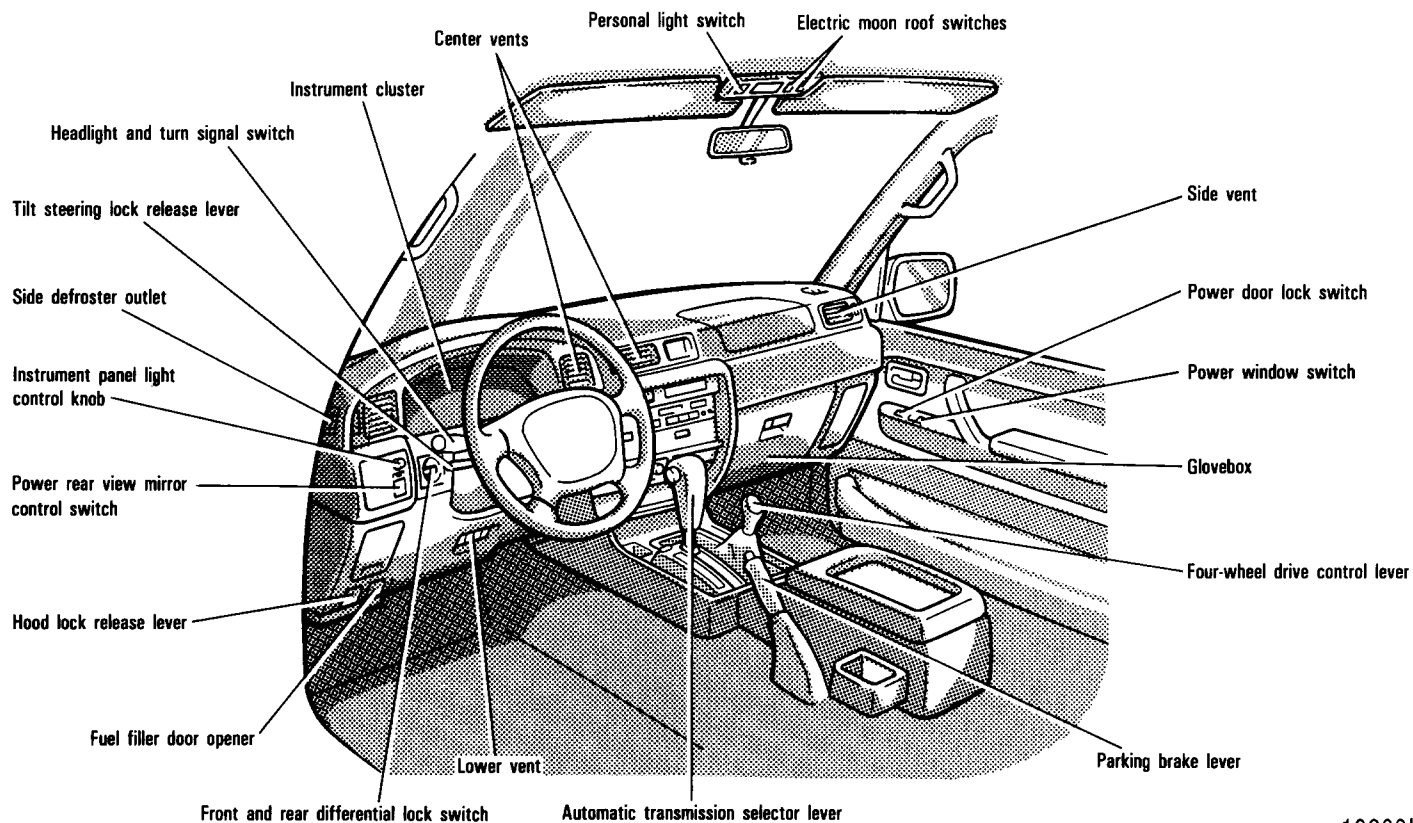


10200138

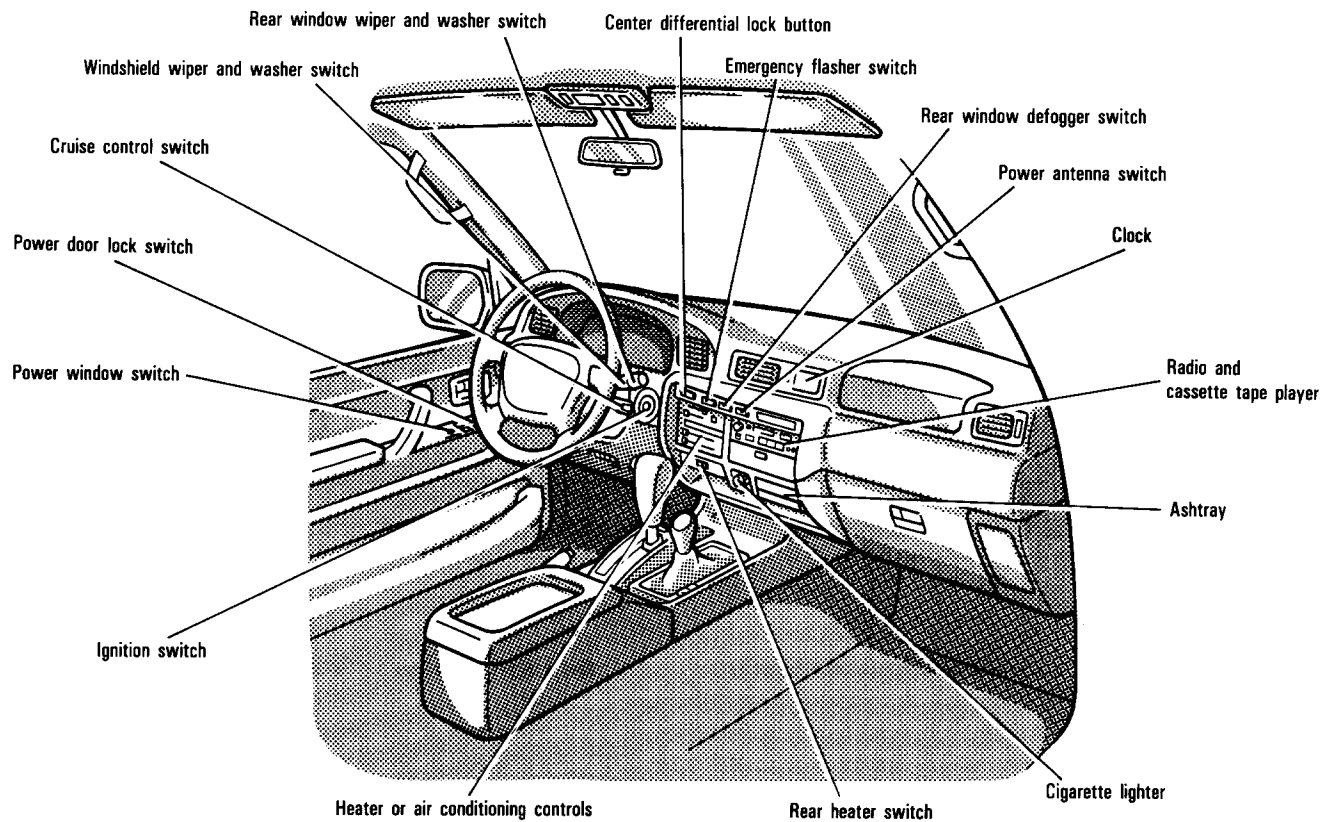

10200139

Instrument cluster overview

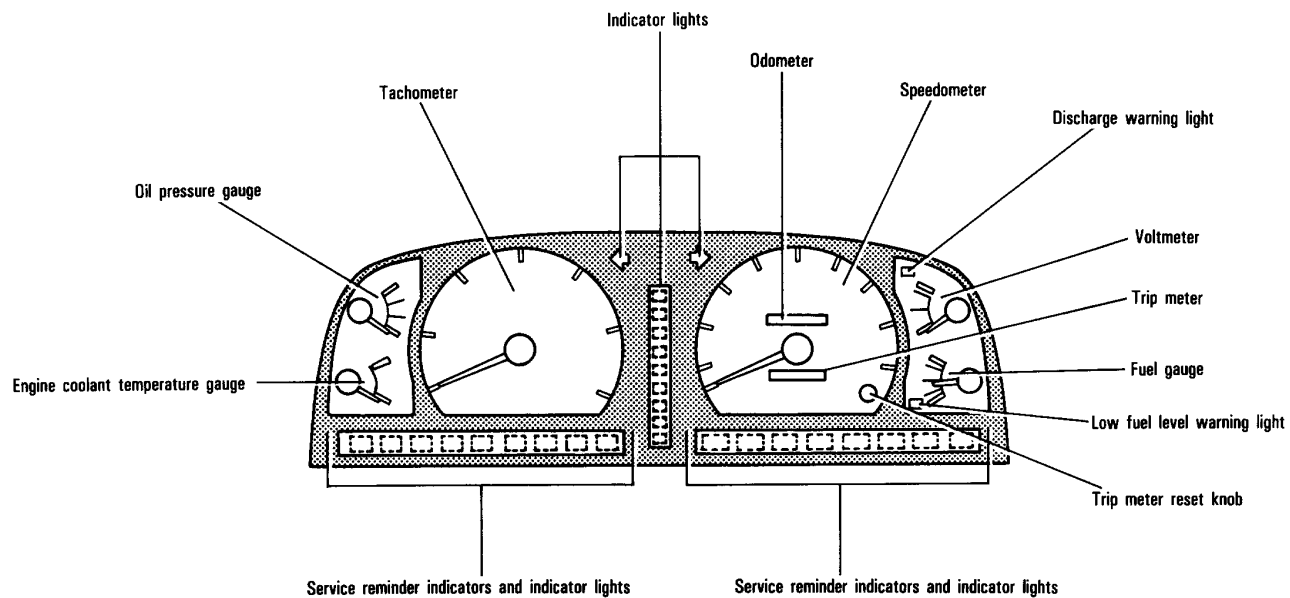

10200146

Indicator symbols on the instrument panel

BRAKE	Brake system warning light * ¹
	Seat belt reminder light* ¹
	Low oil pressure warning light* ¹
	Malfunction indicator lamp* ¹
ABS	Anti-lock brake system warning light * ¹
	Open door warning light * ¹
A/T P	Unengaged "Park" warning light * ¹
A/T OIL TEMP	Automatic transmission fluid temperature warning light* ¹
	SRS airbag warning light* ¹

	Turn signal indicator lights
	Headlight high beam indicator light
O/D OFF	Overdrive-off indicator light* ²
PWR	"PWR" mode indicator light
2nd STRT	Automatic transmission second start indicator light
	Center differential lock indicator light
	Front differential lock indicator light
	Rear differential lock indicator light

CRUISE	Cruise control indicator light ^{*3}
PRN D 2 L	Automatic transmission indicator lights

*1: For details, see “Service reminder indicators and warning buzzers” in Chapter 1-5.

*2: If this light flashes, see “Automatic transmission” in Chapter 1-6.

*3: If this light flashes, see “Cruise control” in Chapter 1-6.