

Part 1


OPERATION OF INSTRUMENTS AND CONTROLS—

Chapter 1-1


Overview of instruments and controls

- [Instrument panel overview](#)
- [Instrument cluster overview](#)
- [Indicator symbols on the instrument panel](#)

Instrument panel overview

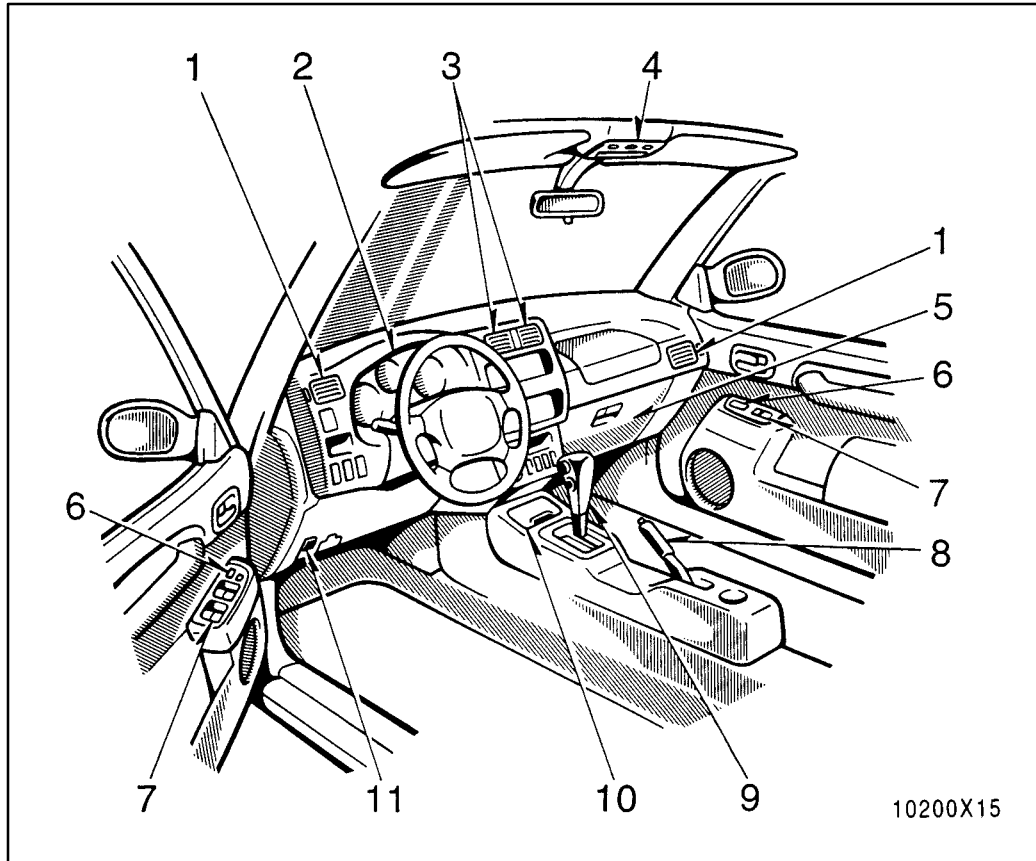


1. Side vent
2. Instrument cluster
3. Center vents
4. Personal lights
5. Glovebox
6. Power door lock switch
7. Power window switches
8. Parking brake lever
9. Automatic transmission selector lever or manual transmission gear shift lever
10. Ashtray
11. Hood lock release lever

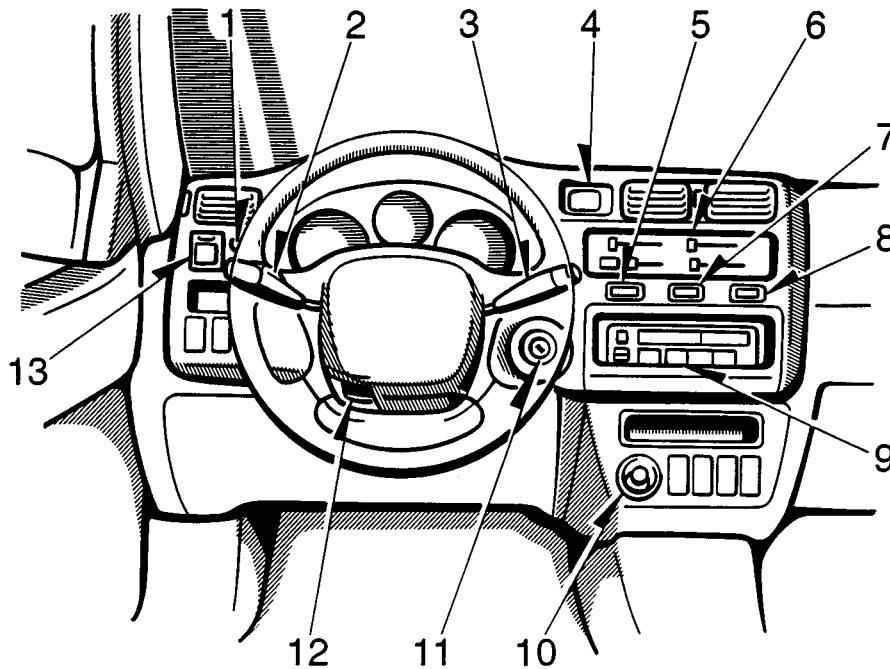

1. Instrument panel light control knob
2. Headlight and turn signal switch
3. Wiper and washer switches
4. Clock
5. Center differential lock button or driving pattern selector button
6. Air conditioning controls
7. Emergency flasher switch
8. Rear window defogger switch
9. Car audio
10. Cigarette lighter
11. Ignition switch
12. Tilt steering lock release lever
13. Power rear view mirror control switch

10200X16

Instrument cluster overview

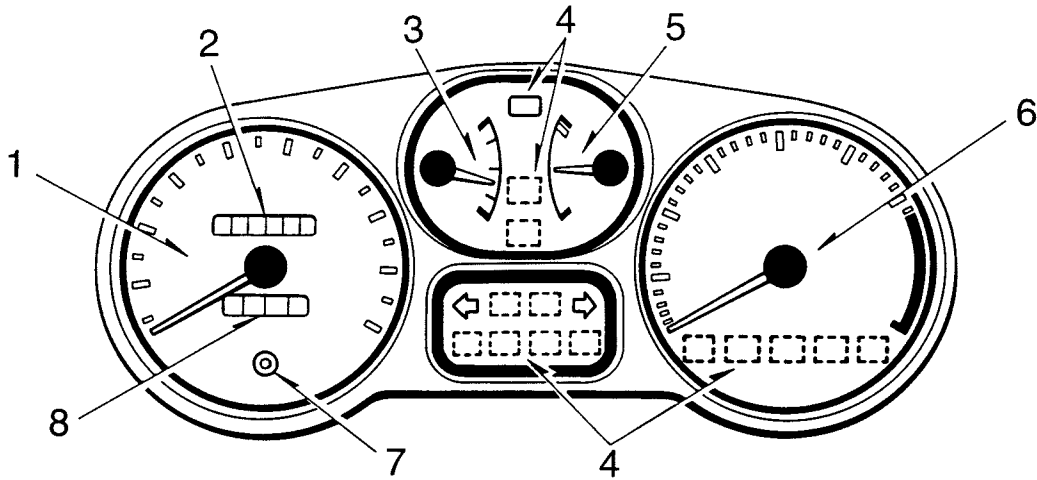

10200X14

- | | | |
|----------------|---|--------------------------|
| 1. Speedometer | 4. Service reminder indicators
or indicator lights | 7. Trip meter reset knob |
| 2. Odometer | 5. Engine coolant temperature gauge | 8. Trip meter |
| 3. Fuel gauge | 6. Tachometer | |

Indicator symbols on the instrument panel

BRAKE	Brake system warning light* ¹
	Seat belt reminder light* ¹
	Discharge warning light* ¹
	Low oil pressure warning light* ¹
	Malfunction indicator lamp* ¹
	Low fuel level warning light* ¹
ABS	Anti-lock brake system warning light* ¹
	Open door warning light* ¹
	SRS airbag warning light* ¹

A/T OIL TEMP	Automatic transmission fluid temperature warning light* ¹
	Turn signal indicator lights
	Headlight high beam indicator light
O/D OFF	Overdrive-off indicator light
ECT PWR	“POWER” mode indicator light
C.DIFF LOCK	Center differential lock indicator light
CRUISE	Cruise control indicator light* ²

*¹: For details, see “Service reminder indicators and warning buzzers” in Chapter 1-5.

*²: If this light flashes, see “Cruise control” in Chapter 1-6.

