

Part 1


OPERATION OF INSTRUMENTS AND CONTROLS—

Chapter 1-1


Overview of instruments and controls

- Instrument panel overview
- Instrument cluster overview
- Indicator symbols on the instrument panel

Instrument panel overview

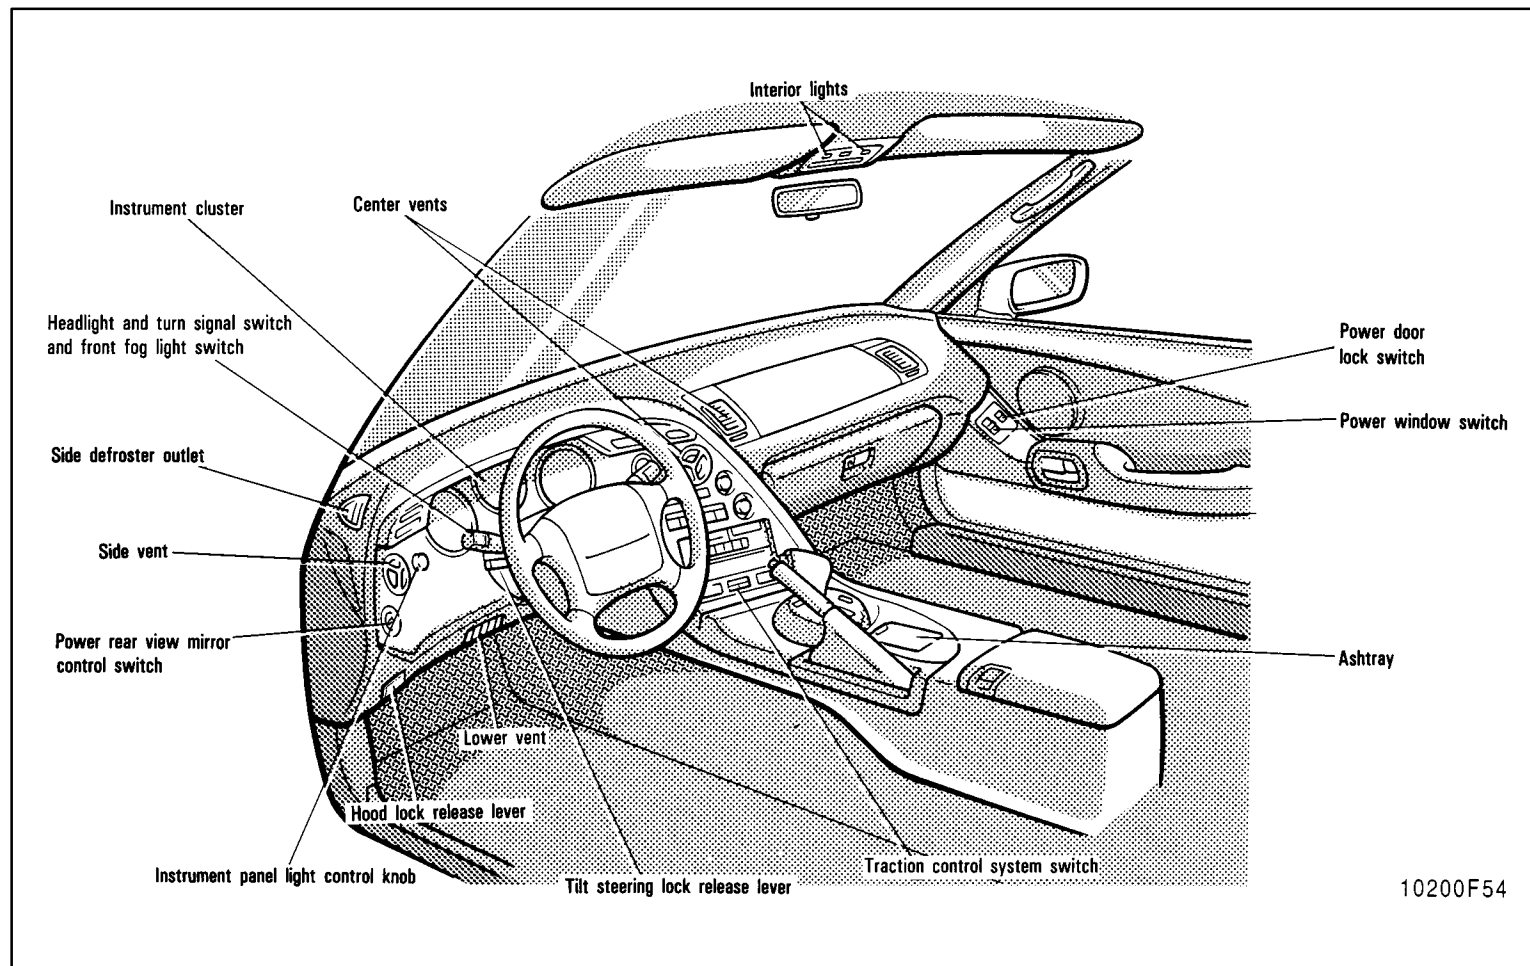


10200F54

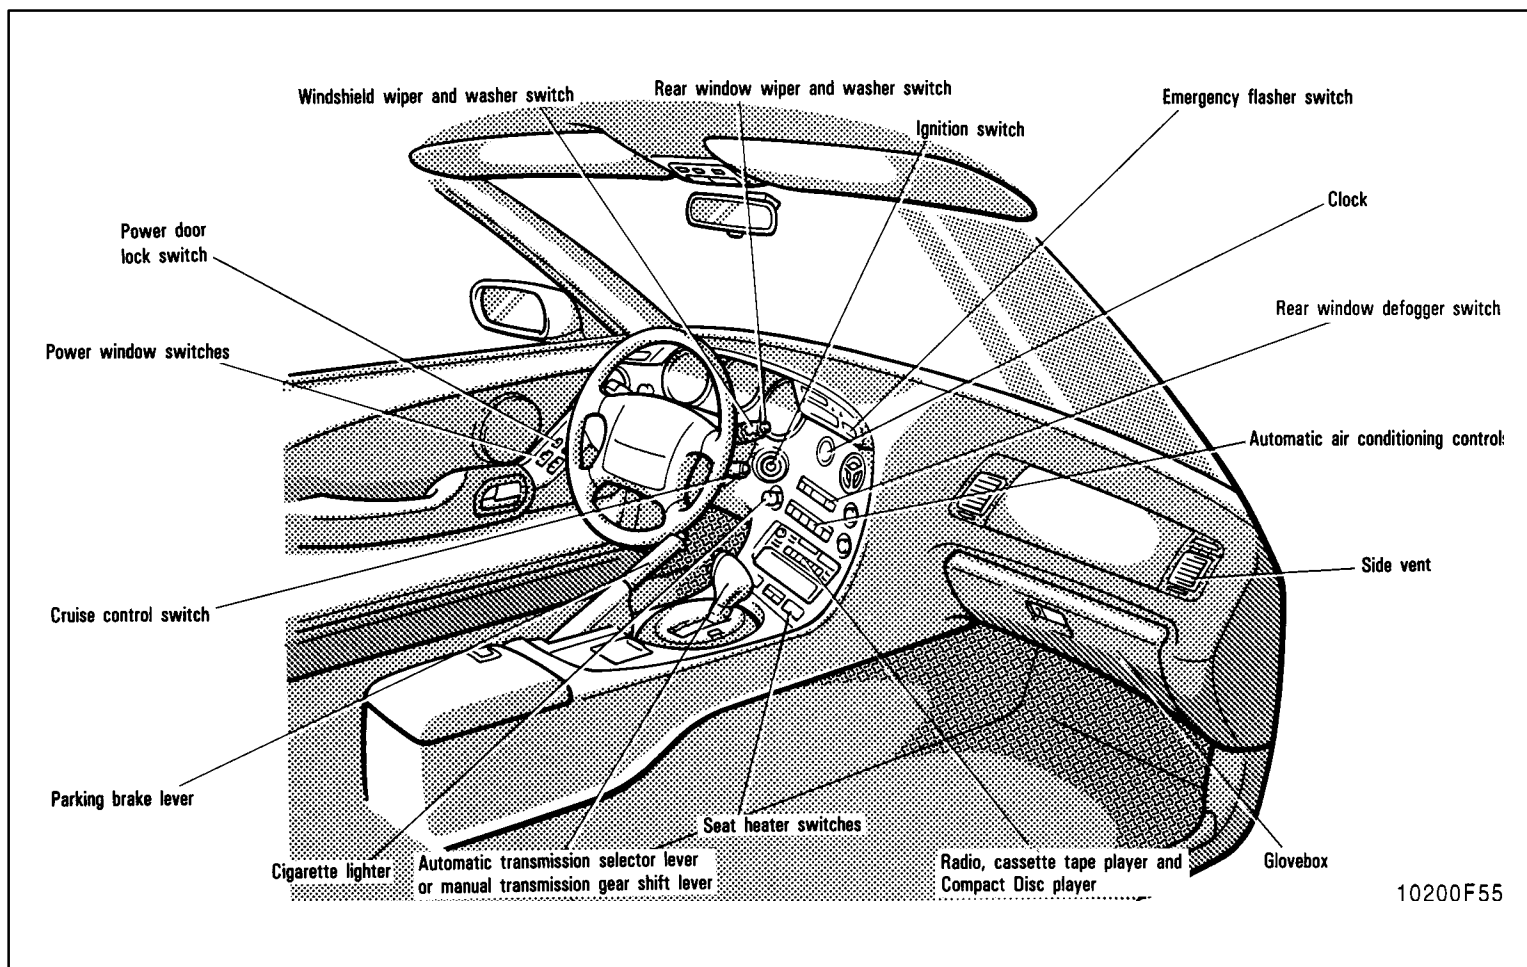

10200F55

Instrument cluster overview

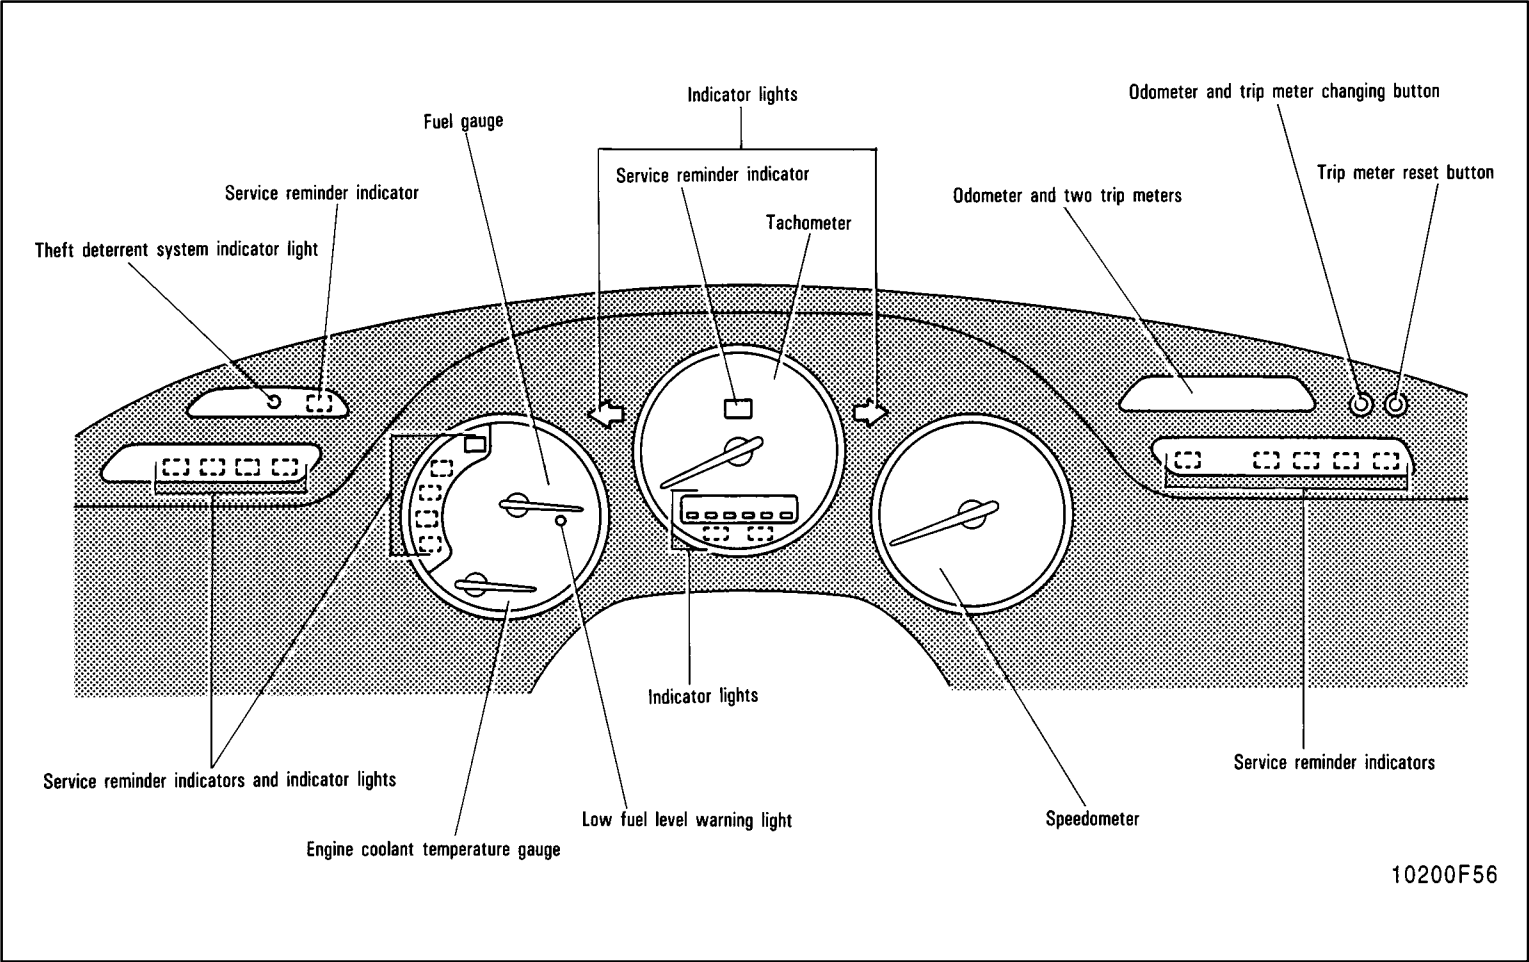

10200F56

Indicator symbols on the instrument panel

	Master warning light* ¹
BRAKE (type A)  (type B)	Brake system warning light* ¹
	Seat belt reminder light* ¹
	Discharge warning light* ¹
	Malfunction indicator lamp* ¹
	Low oil pressure warning light* ¹
	Low engine oil level warning light* ¹

ABS (type A)  (type B)	Anti-lock brake system warning light* ¹
	Open door warning light* ¹
	Rear light failure warning light* ¹
	SRS airbag warning light* ¹
TRAC OFF	Traction control system off indicator/warning light* ¹
	Slip indicator light
SNOW	SNOW indicator light
	Turn signal indicator lights

	Headlight high beam indicator light
O/D OFF	Overdrive-off indicator light
MANU	Automatic transmission manual mode indicator light* ²
P R N D 2 L	Automatic transmission indicator lights
CRUISE	Cruise control indicator light* ³

*1: For details, see “Service reminder indicators and warning buzzers” in Chapter 1-5.

*2: If this light flashes, see “Automatic transmission” in Chapter 1-6.

*3: If this light flashes, see “Cruise control” in Chapter 1-6.