 
 


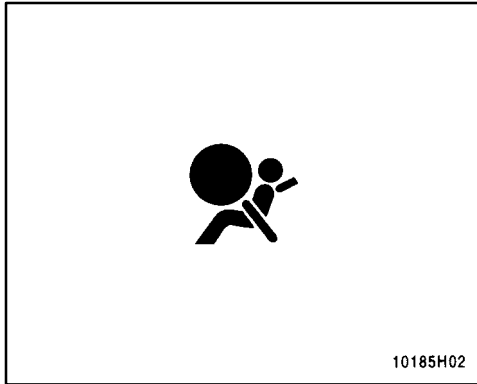

This SRS airbag system has a service reminder indicator to inform the driver of operating problems. If either of the following conditions occurs, this indicates a malfunction of the airbag. Contact your Toyota dealer as soon as possible to service the vehicle.

- The light does not come on when the ignition key is turned to the “ACC” or “ON” position, or remains on.
- The light comes on while driving.

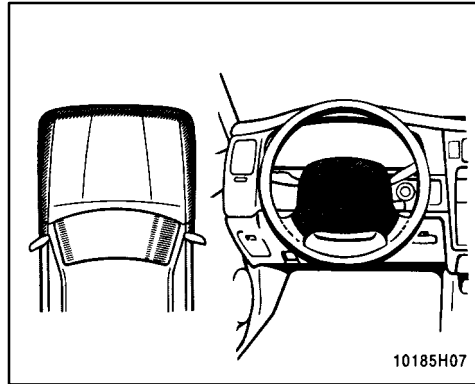

In the following cases, contact your Toyota dealer as soon as possible:

- The SRS airbag has been inflated.
- The front part of the vehicle (shaded in the illustration) was involved in an accident not of the extent to cause the SRS airbags to inflate.
- The pad section of the steering wheel (shaded in the illustration) is scratched, cracked, or otherwise damaged.

Child restraint— —Child restraint precautions

Toyota strongly urges the use of child restraint systems for children small enough to use them.

The laws of all fifty states in the U.S.A. and Canada now require the use of a child restraint system.



For effective protection in automobile accidents and sudden stops, children must be properly restrained. Holding a child in your arms is not a substitute for a child restraint system. In an accident, the child can be crushed against the windshield, or between you and the vehicle's interior, if you are unrestrained.

—Child restraint system

A child restraint system for a small child or baby must itself be restrained on the seat with the lap portion of the lap/shoulder belt.

The child restraint system should conform to the size of the child and properly fit the vehicle seat. For greater safety, the child restraint system should be installed in the rear seat if your vehicle is equipped with rear seats. According to accident statistics, children are safer when properly restrained in the rear seat than in the front seat. However, the shape of a child restraint system may not allow to be installed securely in the rear seat. In this case, we recommend to install the child restraint system in the front seat.

 
When installing a child restraint system, follow the instructions provided by the manufacturer of the system. General directions are also provided under the following illustrations.



CAUTION


After installing the child restraint system, make sure it is secured in place. If it is not restrained securely, it may cause injury to the child in the event of a sudden stop or accident.

When not using the child restraint system, keep it secured with the seat belt or place it somewhere other than in passenger compartment. This will prevent it injuring passengers in the event of a sudden stop or accident.

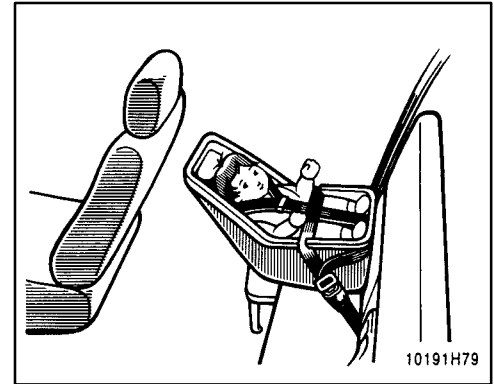

(A) INSTALLATION ON REAR SEAT(Xtra-Cab models), RIGHT FRONT PASSENGER'S SEAT (Xtra-cab models) OR RIGHT PASSENGER'S SEAT (normal cab models)

 
When installing a rear-facing child restraint system, follow the same procedure as when installing a forward-facing child restraint system.

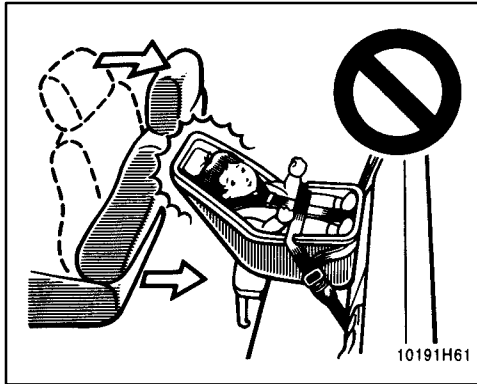

10191H61

CAUTION

 - Do not use a rear-facing child restraint system in the rear seat if the child restraint system interferes with the front seat lock mechanism or with your proper driving position. This may cause severe injury to the child and front passenger in case of sudden braking or a collision.
- If your driving position is not satisfactory, install the child restraint system at another position.

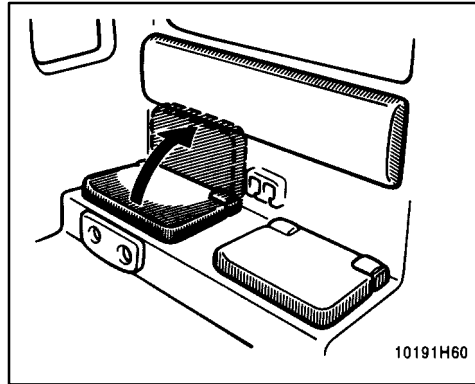


10191H60

WHEN INSTALLING ON THE REAR SEAT (Xtra-cab models):

Raise the bottom cushion before installing the child restraint system.

 If your child restraint system is too large, you can use the folding table as an auxiliary support. For instructions about how to stand the table, see "Cup holder (Xtra-cab models)" in Chapter 1-8.

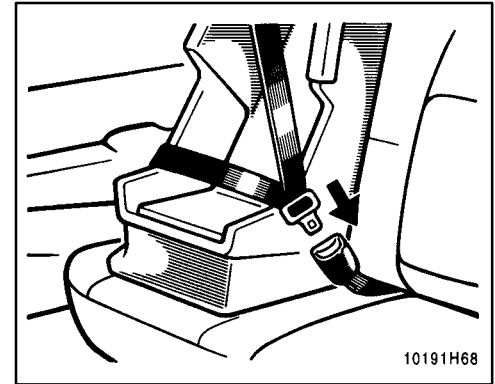


10191H68

1. Fasten the lap and shoulder belt over the child restraint system following the instructions provided by its manufacturer. Keep the lap portion of the belt tight.




CAUTION

 
- After inserting the tab, make sure the tab and buckle are locked.
- Do not insert coins, clips, etc. in the buckle as this may prevent you from properly latching the tab and buckle.
- If the seat belt does not function normally, immediately contact your Toyota dealer.

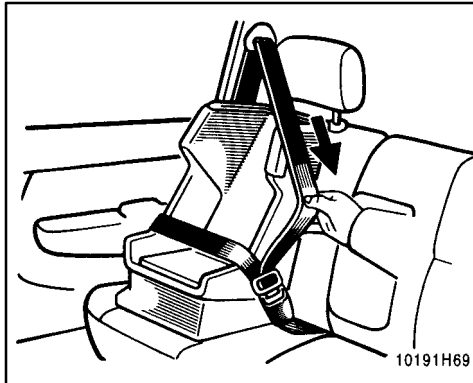

 2. Fully extend the shoulder belt to put it in the lock mode.

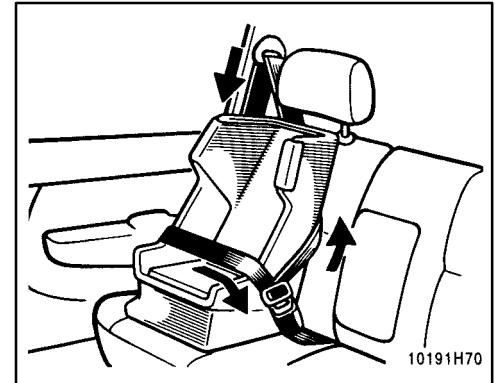

 3. Place the shoulder belt between the vehicle seatback and the child restraint system and allow it to retract. To hold the child restraint system securely, let the shoulder belt retract as far as it will go while firmly pushing down the child restraint system.

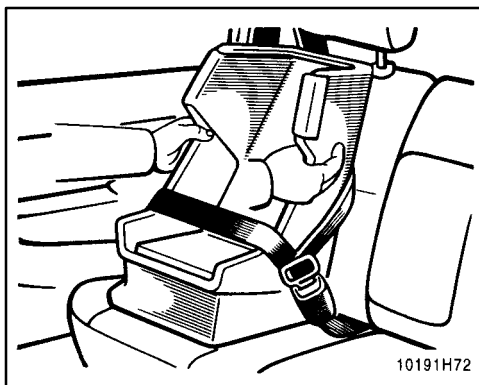


10191H72




CAUTION

 Make sure the the seat belt is securely locked. Also make sure the child restraint system is secure by pushing and pulling it in different directions.

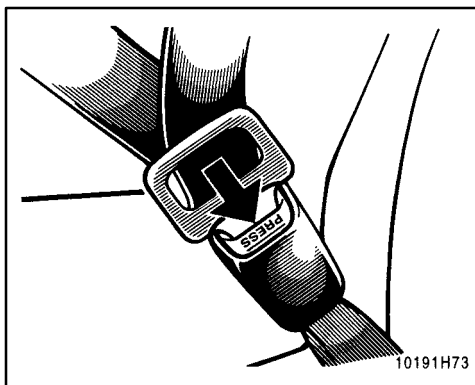

10191H73

 4. To remove the child restraint system, press the buckle-release button and allow the belt to retract.

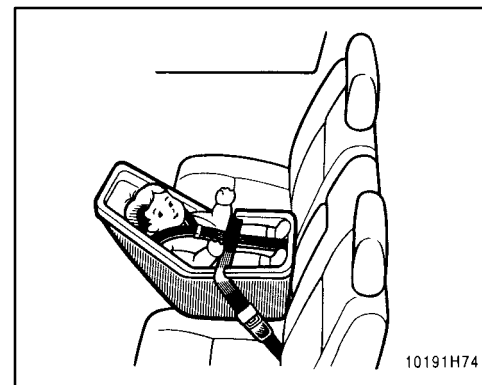

10191H74

(B) INSTALLATION ON CENTER SEAT (normal cab models) OR FRONT CENTER SEAT (Xtra-cab models)

When installing a rear-facing child restraint system, follow the same procedures as when installing a forward-facing child restraint system.

With the child restraint system installed, check that your driving position is satisfactory and that the child restraint system does not interfere with your driving.

If you driving position is not satisfactory, or the child restraint system interferes with your driving, install it at another position.

 
Split bench seat—

Adjust the passenger seat travel and seatback position so that the child restraint system is securely restrained.



CAUTION

Ignoring the above instructions may result in a serious injury in case of an accident.

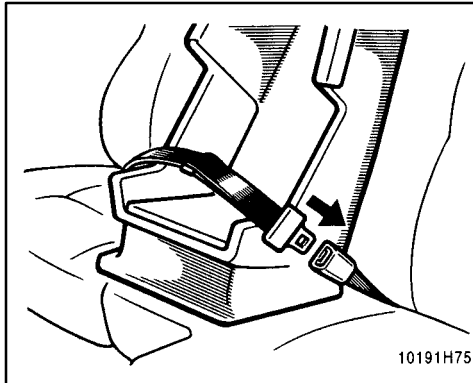


1. Fasten the lap belt over the child restraint system following the instructions provided by its manufacturer.




CAUTION

 - After inserting the tab, make sure the tab and buckle are locked.
- Do not insert coins, clips, etc. in the buckle as this may prevent you from properly latching the tab and buckle.
- If the seat belt does not function normally, immediately contact your Toyota dealer.

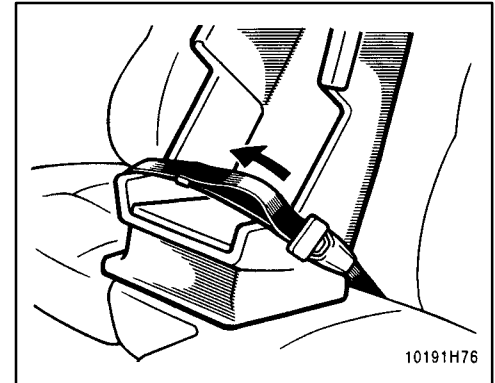


 2. Make sure the belt is tight by pulling its free end while you firmly push down the child restraint system.

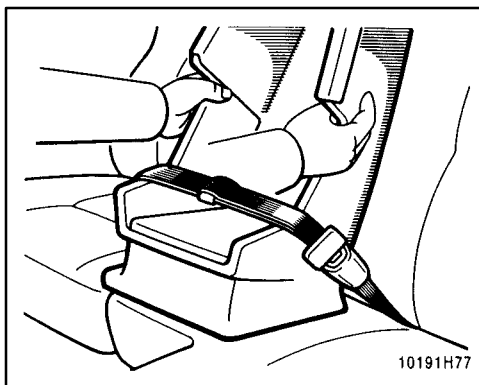


CAUTION

 Push and pull the child restraint system in different directions to be sure it is secure.

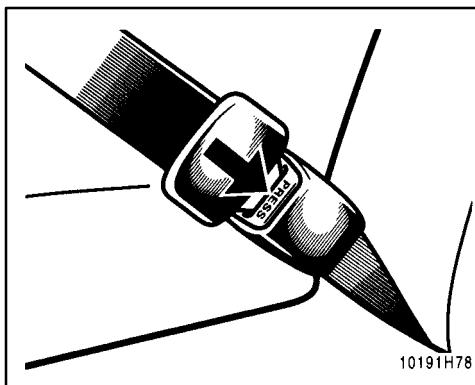

3. To remove the child restraint system, press the buckle-release button.

 Tilt steering wheel

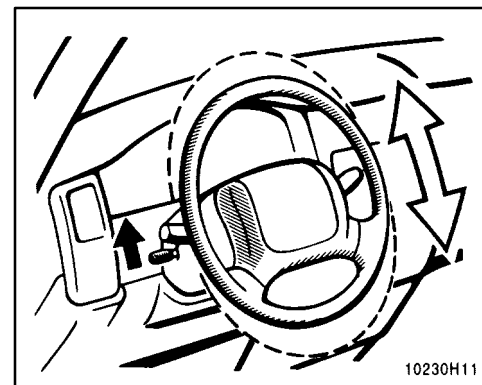

To change the steering wheel angle, hold the steering wheel, pull up the lock release lever, tilt the steering wheel to the desired angle and release the lever.

When the steering wheel is in a low position, it will spring up as you release the lock release lever.



CAUTION

- Do not adjust the steering wheel while the vehicle is moving.
- After adjusting the steering wheel, try moving it up and down to make sure it is locked in position.