

Part 1


OPERATION OF INSTRUMENTS AND CONTROLS—

Chapter 1-1

Overview of instruments and controls


- Instrument panel overview
- Instrument cluster overview
- Indicator symbols on the instrument panel

Instrument panel overview

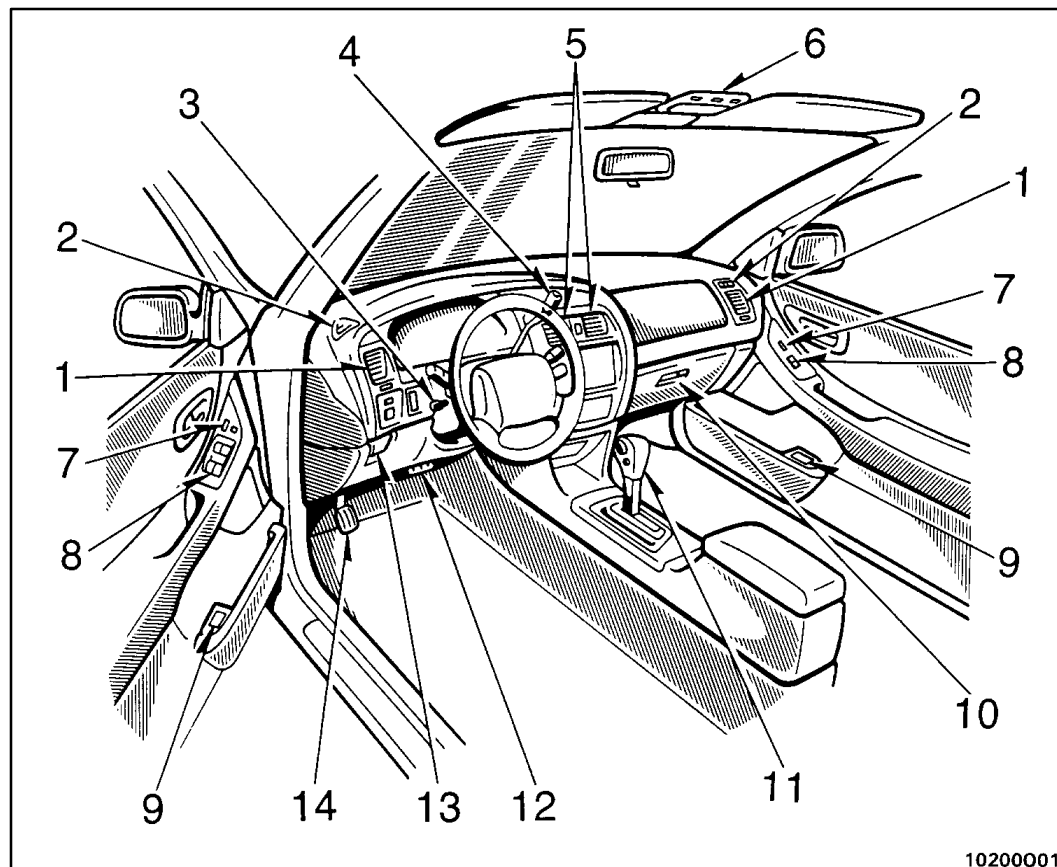

1. Side vent
2. Side defroster outlet
3. Tilt steering lock release lever
4. Automatic transmission selector lever (column shift)
5. Center vents
6. Electric moon roof switch or front interior light, and personal lights
7. Power door lock switch
8. Power window switches
9. Seat heater switch
10. Glovebox
11. Automatic transmission selector lever (column shift)
12. Lower vent
13. Parking brake release lever
14. Parking brake pedal


10200001

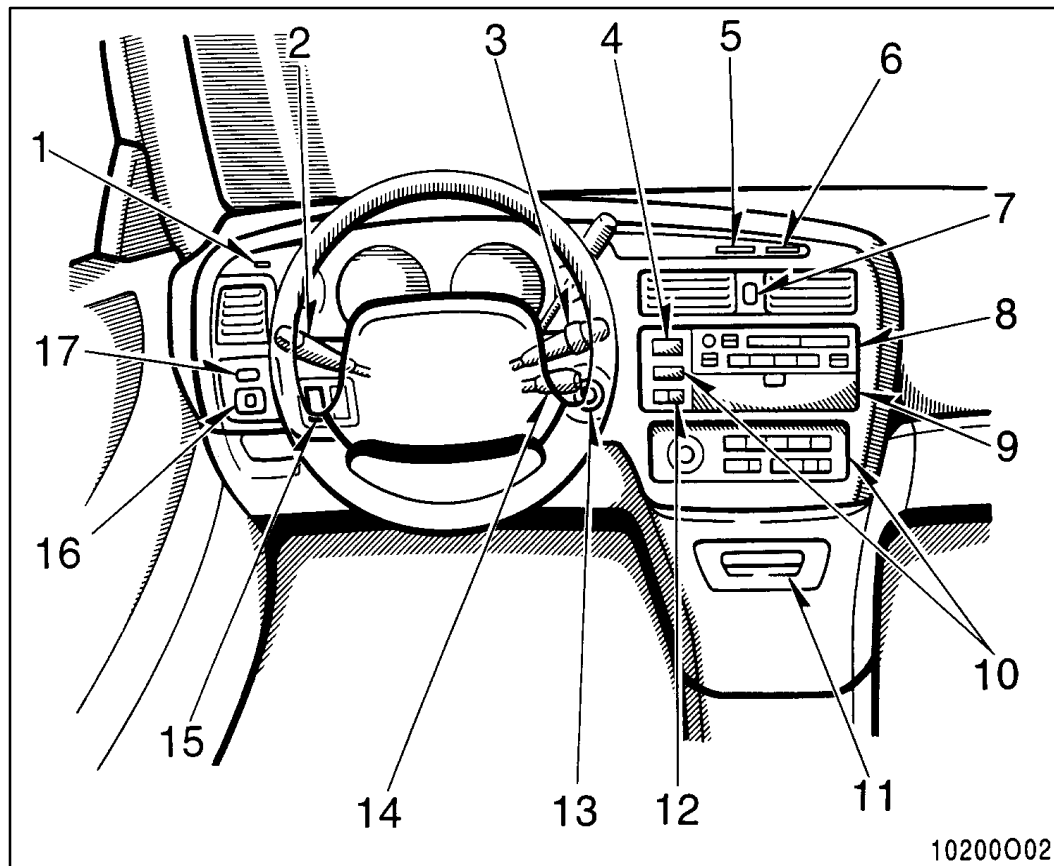

1. Instrument panel light control dial
2. Headlight and turn signal switch
3. Wiper and washer switches
4. Driving pattern selector button
5. Thermometer
6. Clock
7. Emergency flasher switch
8. Car audio
9. Miscellany box
10. Air conditioning controls
11. Ashtray and cigarette lighter
12. Rear window defogger switch
13. Ignition switch
14. Cruise control switch
15. Traction control system off switch
16. Power rear view mirror control switch
17. Headlight cleaner switch

10200002

Instrument cluster overview

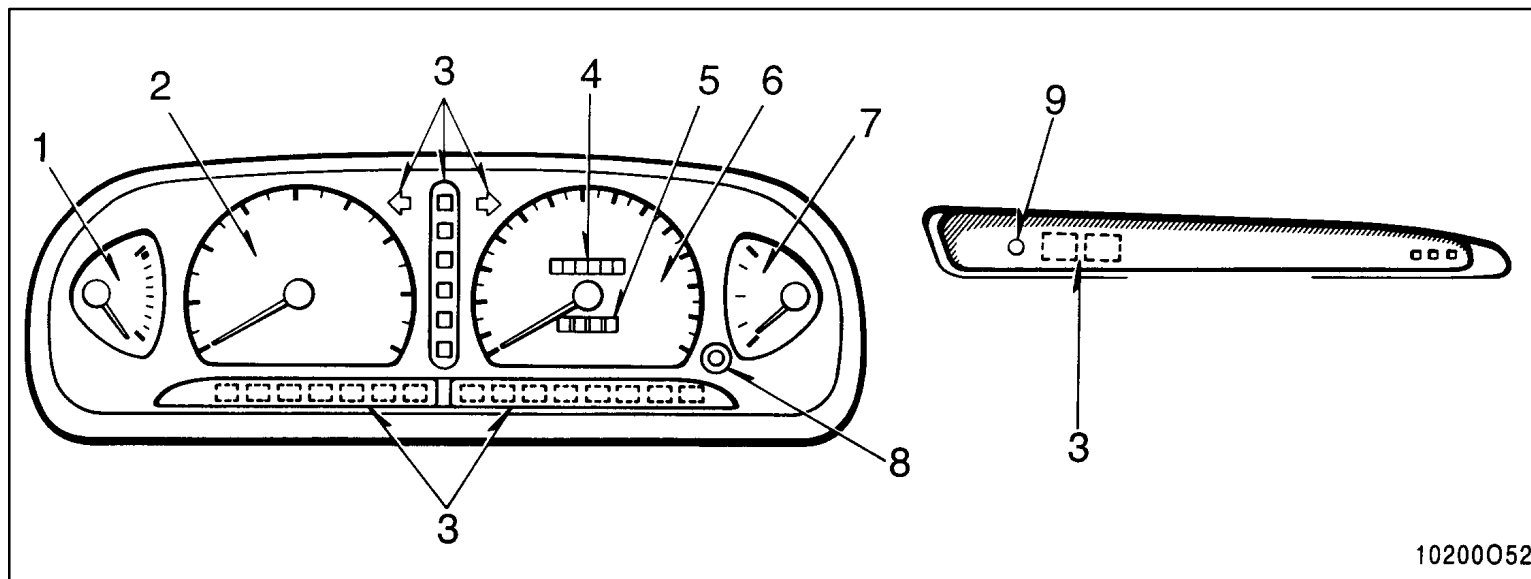

- 1. Engine coolant temperature gauge
- 2. Tachometer
- 3. Service reminder indicators or indicator lights

- 4. Odometer
- 5. Trip meter
- 6. Speedometer

- 7. Fuel gauge
- 8. Trip meter reset knob
- 9. Theft deterrent system indicator light

Indicator symbols on the instrument panel

BRAKE (type A)  (type B)	Brake system warning light * ¹
	Seat belt reminder light* ¹
	Discharge warning light* ¹
	Low oil pressure warning light* ¹
	Malfunction indicator lamp* ¹
	Low fuel level warning light * ¹

ABS (type A)  (type B)	Anti-lock brake system warning light * ¹
	Open door warning light* ¹
	Rear light failure warning light* ¹
	SRS airbag warning light* ¹
TRAC OFF	Traction control system off indicator/warning light* ¹
	Turn signal indicator lights

	Headlight high beam indicator light
O/D OFF	Overdrive-off indicator light
ECT PWR	Driving pattern indicator light
CRUISE	Cruise control indicator light *2
P R N D 2 L	Automatic transmission indicator lights
	Slip indicator light

*1: For details, see “Service reminder indicators and warning buzzers” in Chapter 1-5.

*2: If this light flashes, see “Cruise control” in Chapter 1-6.