

Part 1


OPERATION OF INSTRUMENTS AND CONTROLS—

Chapter 1-1

Overview of instruments and controls


- Instrument panel overview
- Instrument cluster overview
- Indicator symbols on the instrument panel

Instrument panel overview

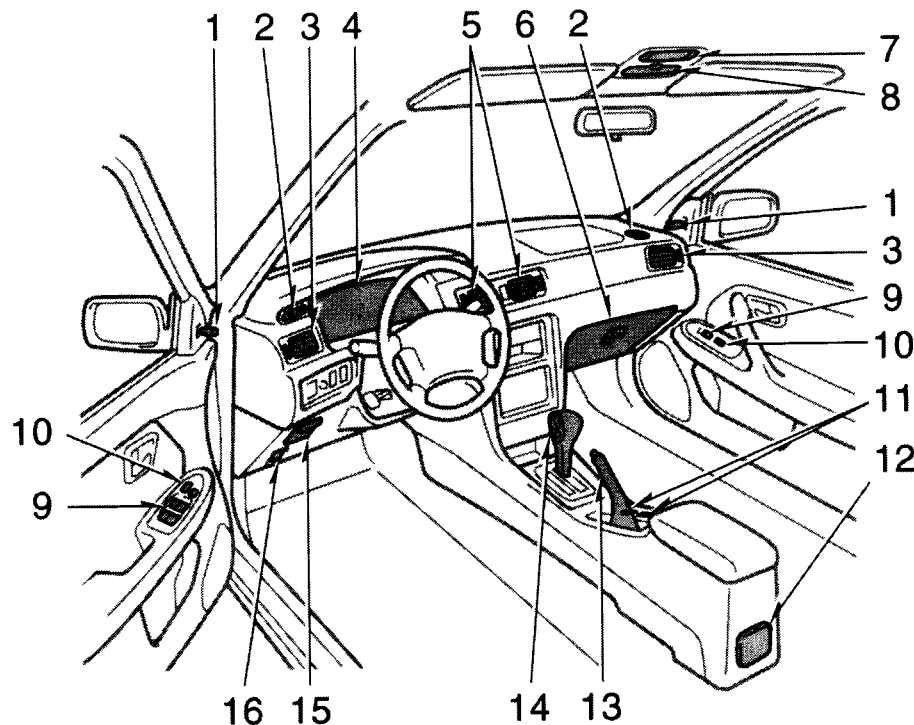

1. Rear view mirror remote control lever
2. Side defroster outlet
3. Side vent
4. Instrument cluster
5. Center vents
6. Glovebox
7. Electric moon roof switch and personal light
8. Garage door opener box or miscellany box
9. Power window switches
10. Power door lock switch
11. Cup holders
12. Cup holder or rear ashtray
13. Parking brake lever
14. Automatic transmission selector lever or manual transmission gear shift lever
15. Miscellany box
16. Hood lock release lever


L11003

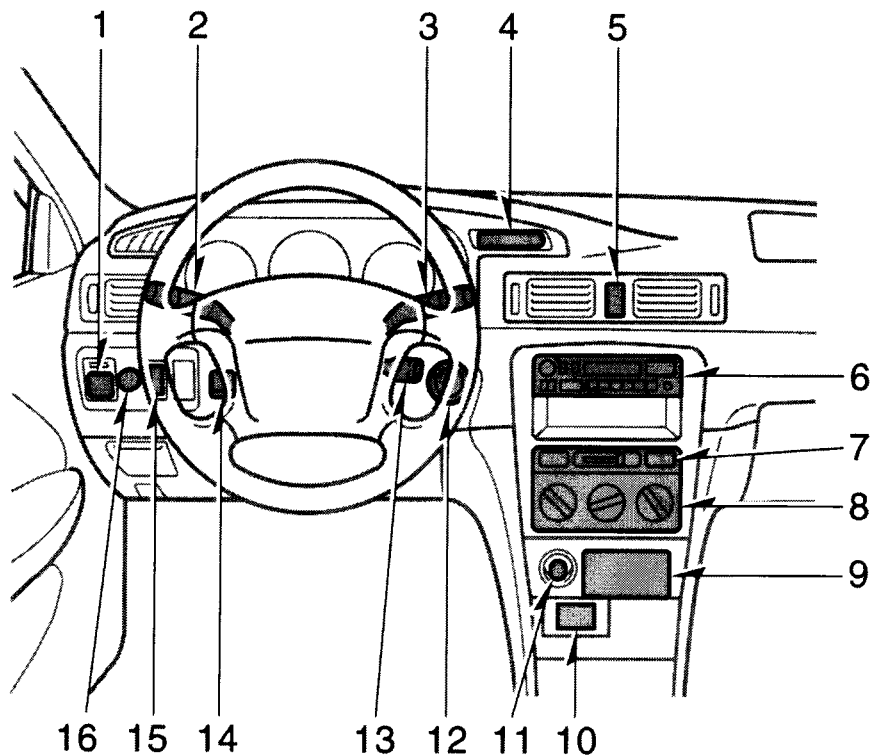

1. Power rear view mirror control switch
2. Headlight and turn signal switch
3. Wiper and washer switches
4. Clock
5. Emergency flasher switch
6. Car audio
7. Rear window and outside rear view mirror defoggers switch
8. Air conditioning controls
9. Front ashtray
10. Power outlet
11. Cigarette lighter
12. Ignition switch
13. Cruise control switch
14. Tilt steering lock release lever
15. Traction control system off switch
16. Instrument panel light control knob

L11002

Instrument cluster overview

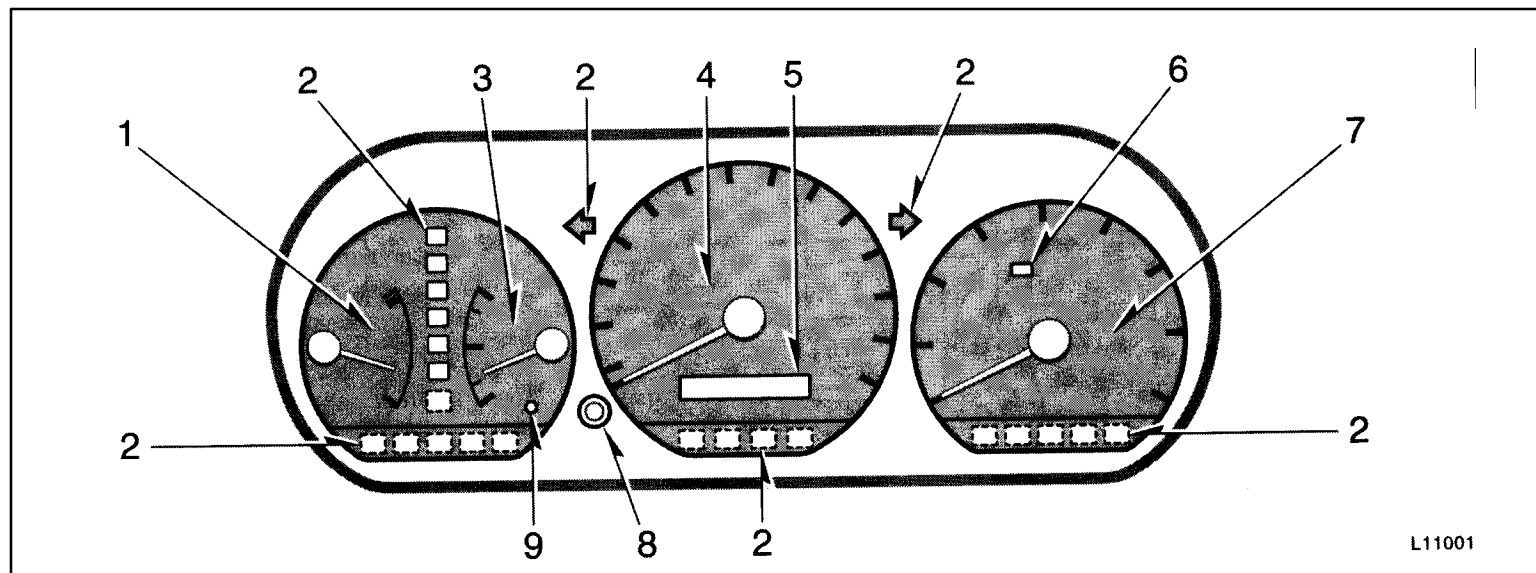

L11001

- | | | |
|--|---|---------------------------------|
| 1. Engine coolant temperature gauge | 4. Speedometer | 7. Tachometer |
| 2. Service reminder indicators or indicator lights | 5. Odometer and two trip meters | 8. Trip meter reset knob |
| 3. Fuel gauge | 6. Theft deterrent system indicator light | 9. Low fuel level warning light |

Indicator symbols on the instrument panel

BRAKE (type A)  (type B)	Brake system warning light *1
	Seat belt reminder light*1
	Discharge warning light*1
 CHECK	Malfunction indicator lamp*1
	Low oil pressure warning light*1

ABS (type A)  (type B)	Anti-lock brake system warning light *1
	Open door warning light*1
	Rear light failure warning light*1
	SRS airbag warning light*1
	Low windshield washer fluid warning light*1

TRAC OFF	Traction control system off indicator/warning light * ¹
	Turn signal indicator lights.
	Headlight high beam indicator light
O/D OFF	Overdrive-off indicator light.
CRUISE	Cruise control indicator light* ²

P R N D 2 L	Automatic transmission indicator light.
	Slip indicator light.

*¹: For details, see “Service reminder indicators and warning buzzers” in Chapter 1-5.

*²: If this light flashes, see “Cruise control” in Chapter 1-6.