

Part 1


OPERATION OF INSTRUMENTS AND CONTROLS—

Chapter 1-8


Other equipment

- Clock
- Cigarette lighter and ashtray
- Power outlet
- Glovebox
- Garage door opener box
- Miscellaneous box
- Miscellany box
- Cup holder
- Tranction control system
- Floor mat

 Clock

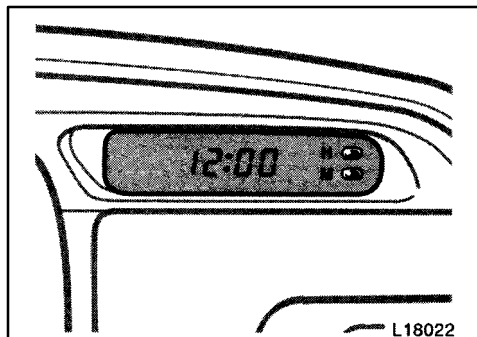

Type A

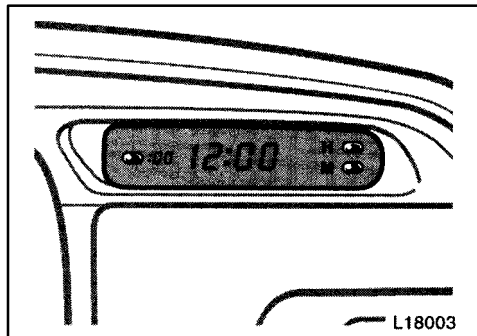 

Type B

The digital clock indicates the time.

The key must be in the “ACC” or “ON” position.

To reset the hour: Push the “H” button.

To reset the minutes: Push the “M” button.

Once the electrical power source has been disconnected from the clock, the time is automatically set to 1:00 (one o'clock).

 
When the instrument panel lights are turned on, the brightness of the time indication will be reduced.

Type B only-


If quick adjustment to a full hour is desired, push the “:00” button.

For example, if the “:00” button is depressed when the time is between 1:01—1:29, the time will change to 1:00. If the time is between 1:30—1:59, the time will change to 2:00.

Cigarette lighter and ashtrays

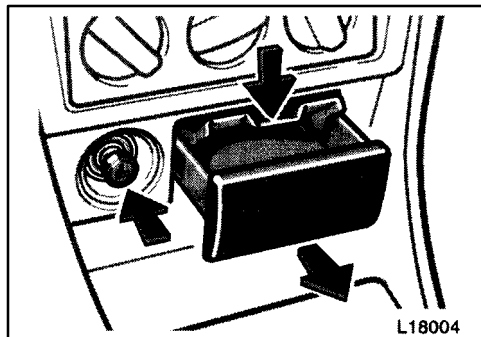

Cigarette lighter and front ashtray

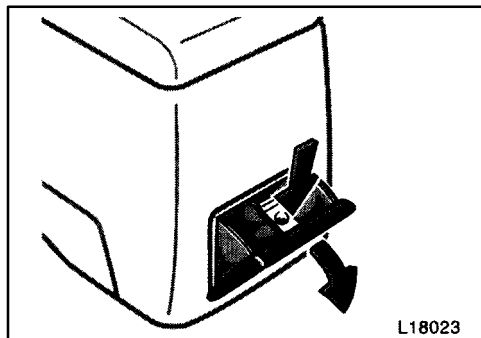 

Rear ashtray (some models only)

CIGARETTE LIGHTER

To use the cigarette lighter, press it in. When it becomes heated, it automatically pops out ready for use.

If the engine is not running, the key must be in the "ACC" position.

Do not hold the cigarette lighter pressed in.

Use a Toyota genuine cigarette lighter or equivalent for replacement.

ASHTRAY

To use the ashtray, open the cover.

When finished with your cigarette, thoroughly extinguish it in the ashtray to prevent other cigarette butts from catching fire. After using the ashtray, close the ashtray cover completely.

 
To remove the ashtray, open the ashtray cover and pull it out.



CAUTION

To reduce the chance of injury in case of an accident or sudden stop while driving, always close the ashtray cover completely after use.

Power outlet

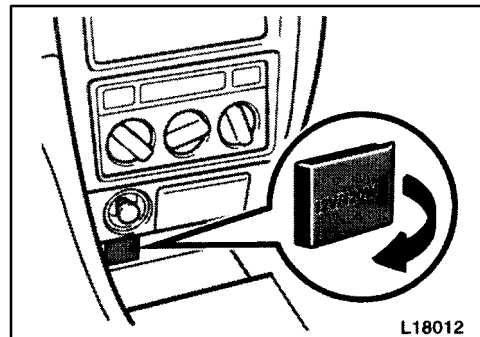

The power outlet is designed for power supply for car accessories.

 
The key must be in the "ACC" or "ON" position for the power outlet.

NOTICE

- ◆ To prevent the fuse from being blown, do not use the electricity more than 12V/120W in total capacity of the vehicle.
- ◆ To prevent the battery from being discharged, do not use the power outlet longer than necessary when the engine is not running.

◆ *Close the power outlet lid when the power outlet is not in use. Inserting a foreign object other than plug that fits the outlet, or pouring juice or other liquid into the outlet, or pouring juice or other liquid into the outlet may cause troubles or short circuits.*

Glovebox

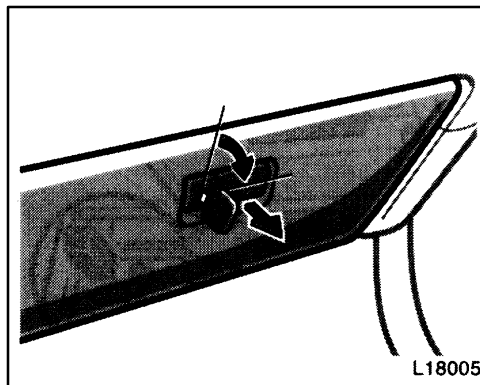

To use the glovebox, do this.

To open: Pull the lever.

With the instrument panel lights on, the glovebox light will come on when the glovebox is open.

 
To lock: Insert the master key and turn it clockwise.



CAUTION

To reduce the chance of injury in case of an accident or sudden stop, always keep the glovebox door closed while driving.


Garage door opener box

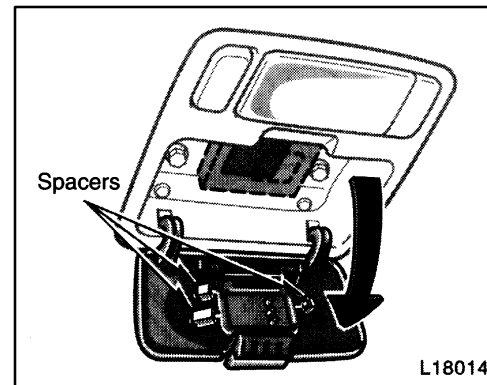


The box is designed to store a garage door opener.

Attach the provided velcro to your garage door opener in advance.

 
Open the cover and install your garage door opener in the box with the velcro. Tear the spacers off the center panel of the cover.

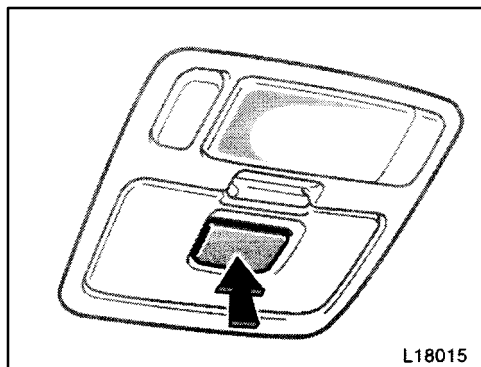

 When a garage door opener is properly stored, you can operate the opener by pushing the center panel of the cover.

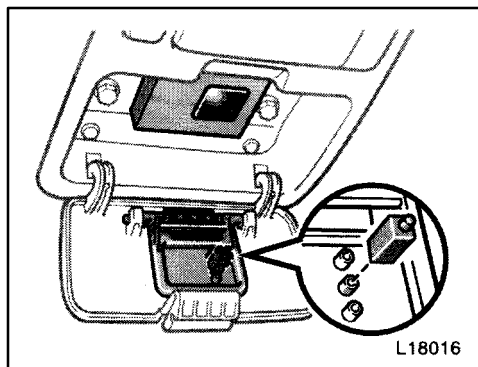

 If the center panel does not contact with your garage door opener switch, attach one of the torn-off spacers to proper position behind the center panel to bring the spacer in contact with your opener switch.

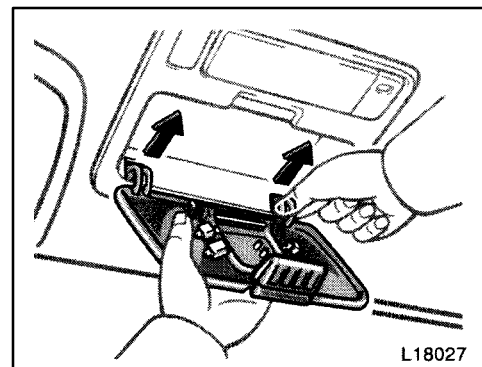

The miscellaneous box and garage door opener box (stored in the glove-box) are interchangeable.

 
Removing the cover—

Half open the cover. Pinch each hinge and pull it out of its pivot one by one as shown above.

Do not remove the cover forcibly.



- **To reduce the chance of injury in case of an accident or a sudden stop, always keep the garage door opener box closed while driving.**
- **Keep the remained spacers away from children.**

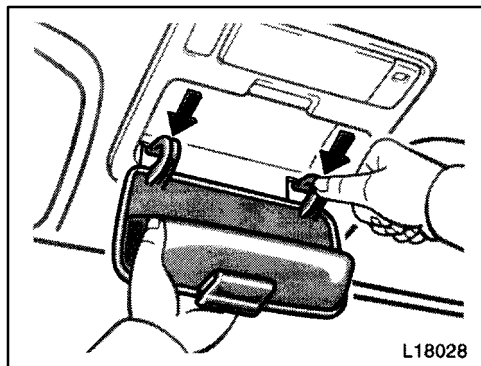


L18028

Installing the cover—

Align the hinges to the pivots, and press each hinge with a thumb until you hear a click.

Make sure that the cover opens and closes smoothly.

 Miscellaneous box

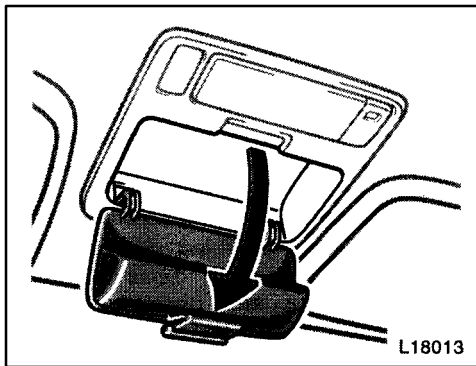

L18013

To use the box, open it as shown above.



 
CAUTION

To reduce the chance of injury in case of an accident or a sudden stop, always keep the miscellaneous box closed while driving.

NOTICE

In hot weather, inside of the vehicle becomes very hot. Do not leave anything flammable or deformable such as a lighter, the glasses, etc. inside.

Miscellany box

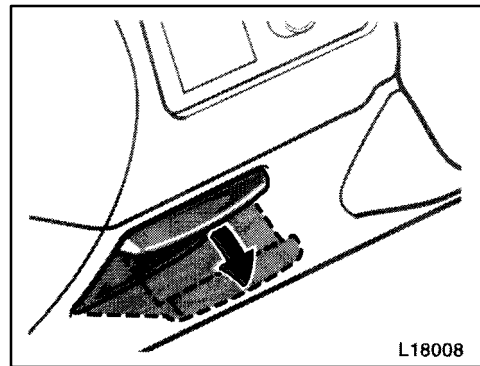

L18008

 
To use the box, pull on the handle.




CAUTION

To reduce the chance of injury in case of an accident or a sudden stop, always keep the miscellany box closed while driving.

Cup holder

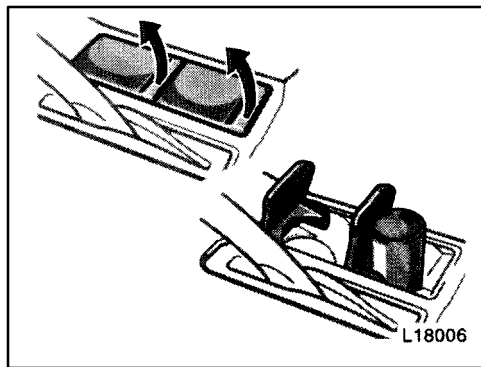

Front

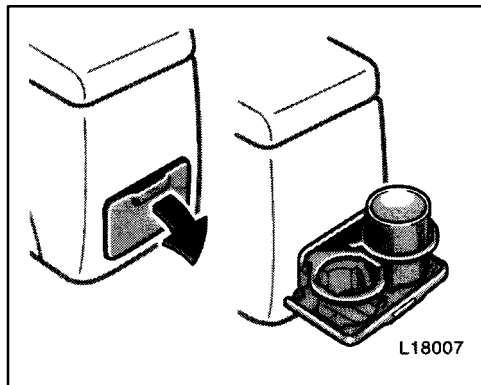 

Rear

The cup holder is designed for holding cups or drink-cans fit snugly in its holes.

Front: To use the holder, open the lid.

 
Rear: To use the holder, pull it out.




CAUTION

- Do not place anything else on the cup holder, as such items may be thrown about and possible injure people in the vehicle during sudden braking or accident.
- Keep the cup holder shut when not in use.

Traction control system

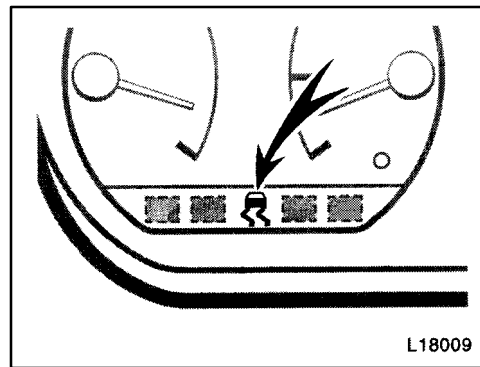

Slip indicator light

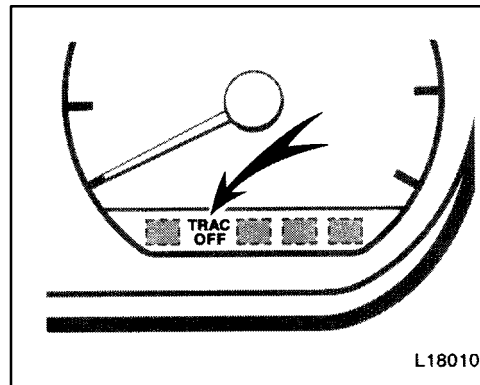 

"TRAC OFF" indicator/warning light

 
AUTOMATIC TRACTION CONTROL SYSTEM

The traction control system automatically controls spinning of the front wheels which may occur when accelerating on slippery road surfaces, thus assisting driver control and driving power to the front wheels. When you turn the ignition switch on, the traction control system always turns on automatically, and the slip indicator/warning light will come on. the indicator lights will go off after about 3 seconds.

Leave the system on during ordinary driving so that it can operate when needed. When traction control is applied, the slip indicator light blinks.

You may hear a slight clicking noise in the engine compartment when the engine is started. This means that the traction control system is in the self-check mode., and does not indicate malfunction. When the traction control system is operating, you may feel vibration of your vehicle, caused by operation of brakes. This indicates the system is functioning properly.

When getting the vehicle out of mud or new snow, etc. the traction control system will operate to prevent the wheels from spinning. Even though the accelerator pedal is fully depressed, the engine speed will be restrained to a certain level.

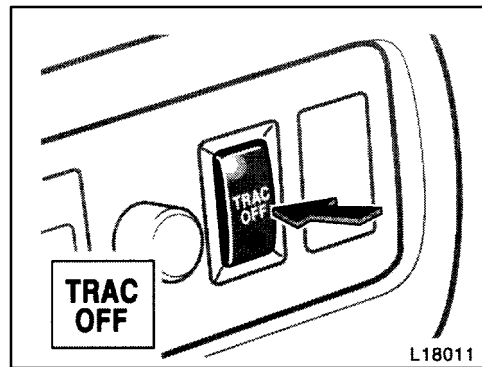

MANUAL OPERATION

 
You can turn off the traction control system by pushing the "TRAC OFF" switch. The "TRAC OFF" indicator/warning light will come on. Pushing the "TRAC OFF" switch a second time turns on the traction control system and the "TRAC OFF" indicator/warning light will go off.



CAUTION

Under certain slippery road conditions, full stability of the vehicles and power to the front wheels cannot be maintained, even though the traction control system is in operation. In situations where the road surface is covered with ice or snow, your vehicle should be fitted with snow tires or tire chains and driven at a more cautious pace.

Floor Mat

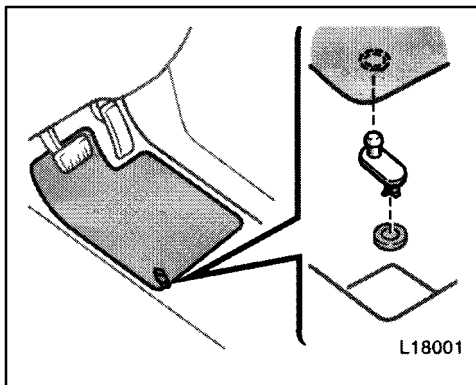

Use a floor mat of the correct size.

If the floor mat has a hole, then it is designed for use with a locking clip. Fix the floor mat and locking clip into the hole in the floor carpet.



CAUTION

Make sure the floor mat is properly placed on the floor carpet. If the floor mat slips and interferes with the movement of the pedals during driving, it may cause an accident.