

# Part 1


## OPERATION OF INSTRUMENTS AND CONTROLS—

### Chapter 1-1


#### Overview of instruments and controls

- Instrument panel overview
- Instrument cluster overview
- Indicator symbols on the instrument panel

## Instrument panel overview

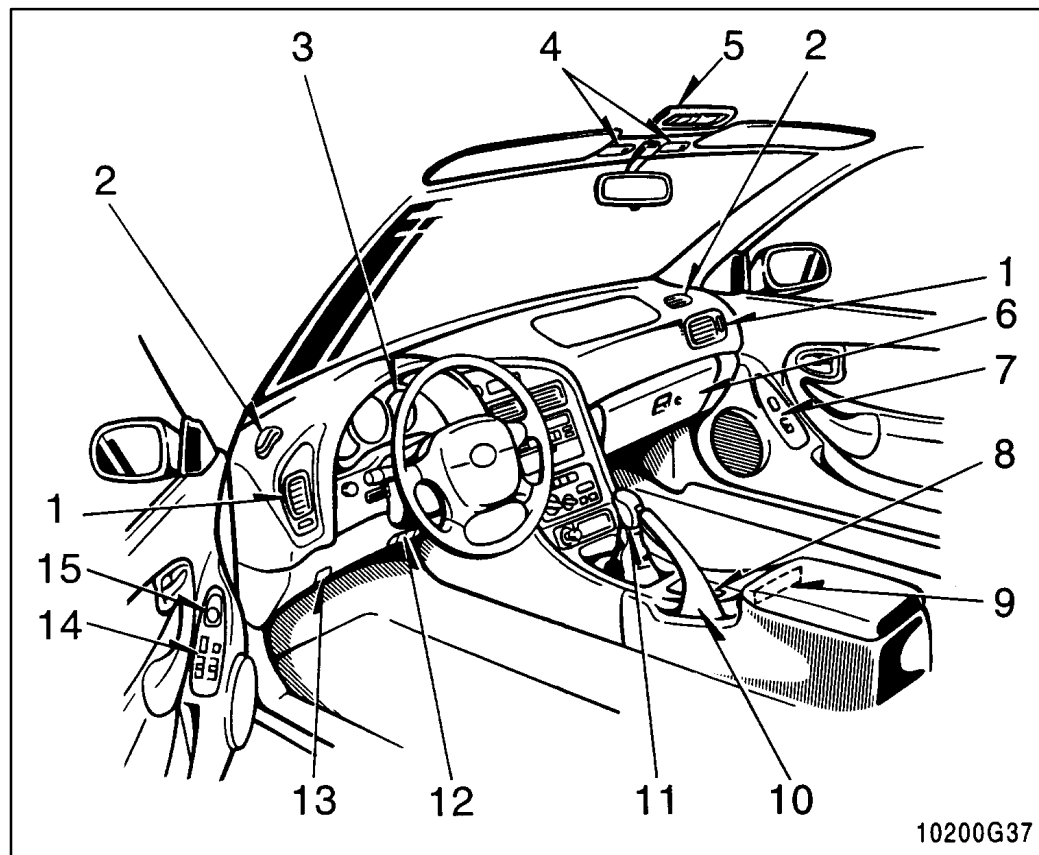


1. Side vent
2. Side defroster outlet
3. Instrument cluster
4. Personal lights
5. Electric moon roof switches and interior lights
6. Glovebox
7. Power window switch and power door lock switch
8. Ashtray
9. Cup holder
10. Parking brake lever
11. Manual transmission gear shift lever or automatic transmission selector lever
12. Lower vent
13. Hood lock release lever
14. Power window switches and power door lock switch
15. Power rear view mirror control switch (with power windows)

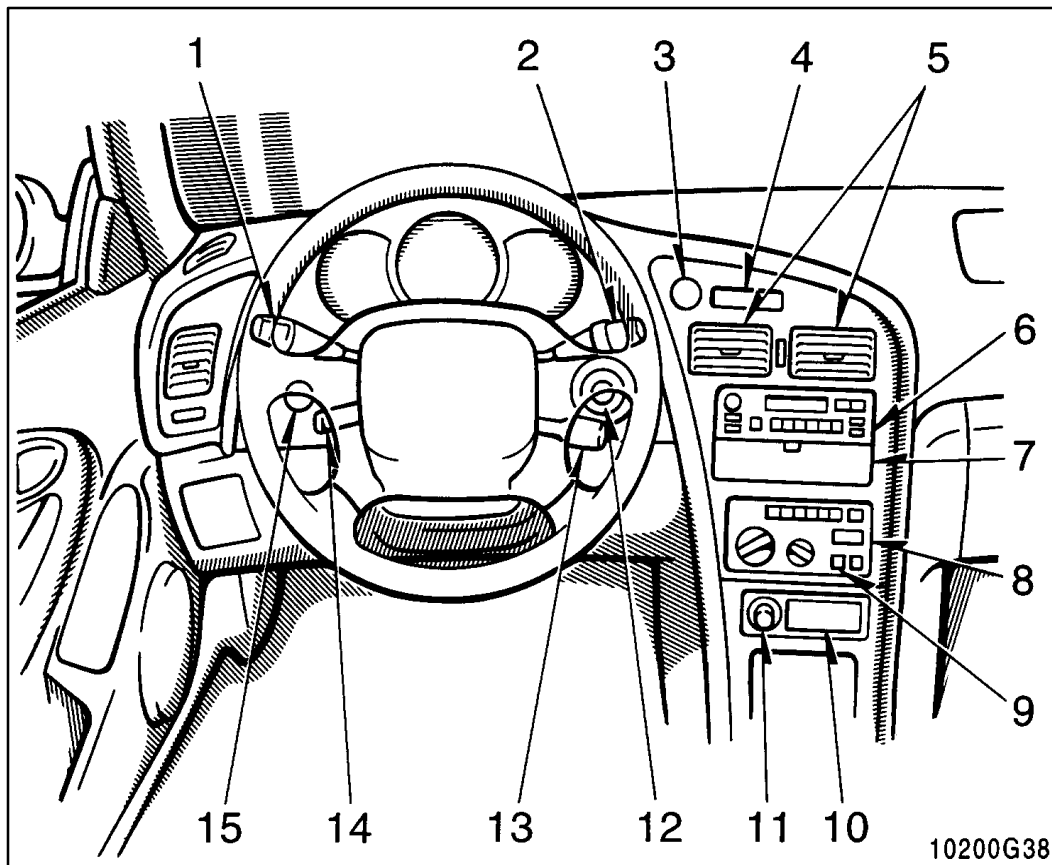

1. Headlight and turn signal switch
2. Wiper and washer switches
3. Emergency flasher switch
4. Clock
5. Center vents
6. Car audio
7. Miscellany box
8. Air conditioning controls
9. Rear window and outside rear view mirror defoggers switch
10. Coupe and liftback—  
Power rear view mirror control switch (without power windows)  
Convertible—  
Convertible top control switch and quarter window control switches
11. Cigarette lighter
12. Ignition switch
13. Cruise control switch
14. Tilt steering lock release lever
15. Instrument panel light control knob

10200G38

# Instrument cluster overview

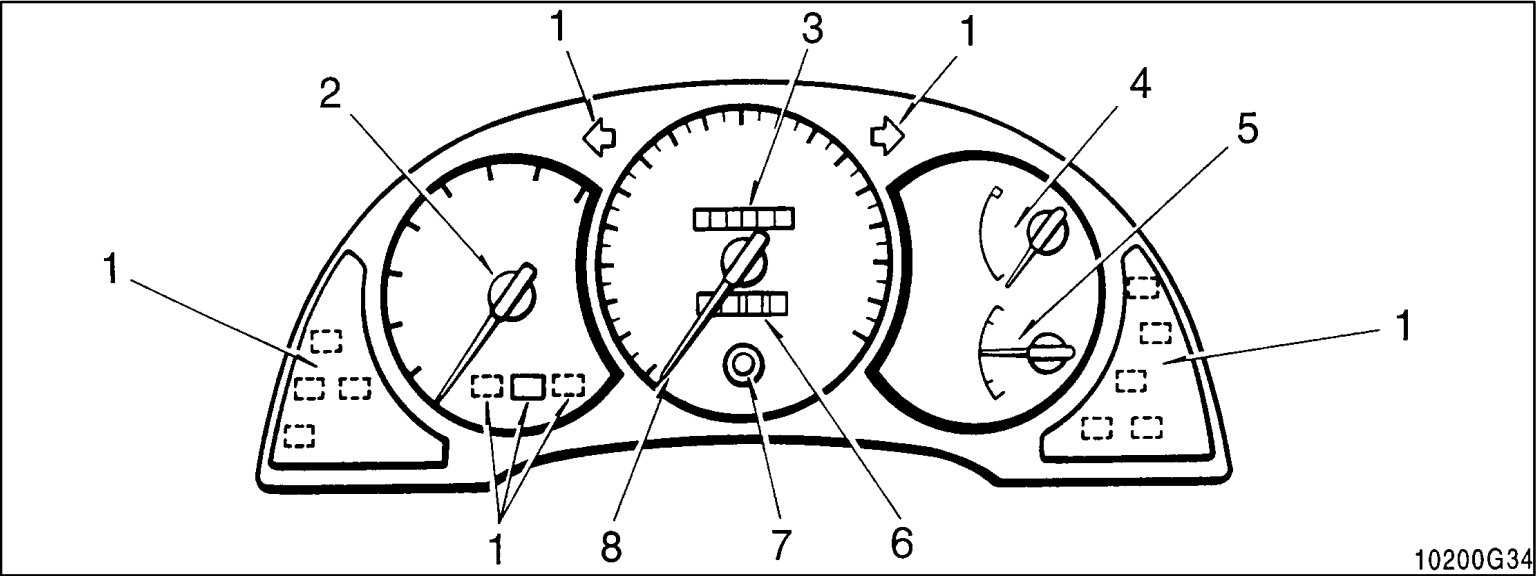

10200G34

- |                                                    |                                     |                          |
|----------------------------------------------------|-------------------------------------|--------------------------|
| 1. Service reminder indicators or indicator lights | 4. Engine coolant temperature gauge | 7. Trip meter reset knob |
| 2. Tachometer                                      | 5. Fuel gauge                       | 8. Speedometer           |
| 3. Odometer and two trip meters                    | 6. Trip meter                       |                          |

## Indicator symbols on the instrument panel

|                                                                                                                           |                                         |
|---------------------------------------------------------------------------------------------------------------------------|-----------------------------------------|
| <b>BRAKE</b><br>(type A)<br><br>(type B) | Brake system warning light *1           |
|                                          | Seat belt reminder light*1              |
|                                          | Discharge warning light*1               |
|                                          | Low oil pressure warning light*1        |
| <br>CHECK                                | Malfunction indicator light*1           |
|                                          | Low fuel level warning light *1         |
| <b>ABS</b><br>(type A)<br><br>(type B)   | Anti-lock brake system warning light *1 |

|                                                                                   |                                     |
|-----------------------------------------------------------------------------------|-------------------------------------|
|  | Open door warning light*1           |
|  | SRS airbag warning light*1          |
|  | Turn signal indicator lights        |
|  | Headlight high beam indicator light |
| <b>O/D<br/>OFF</b>                                                                | Over-drive indicator light          |
| <b>CRUISE</b>                                                                     | Cruise control indicator light*2    |

\*1: For details, see “Service reminder indicators and warning buzzers” in Chapter 1-5.

\*2: If this light flashes, see “Cruise control” in Chapter 1-6.