

Part 1


OPERATION OF INSTRUMENTS AND CONTROLS—

Chapter 1–1


Overview of instruments and controls

- Instrument panel overview
- Instrument cluster overview
- Indicator symbols on the instrument panel

Instrument panel overview

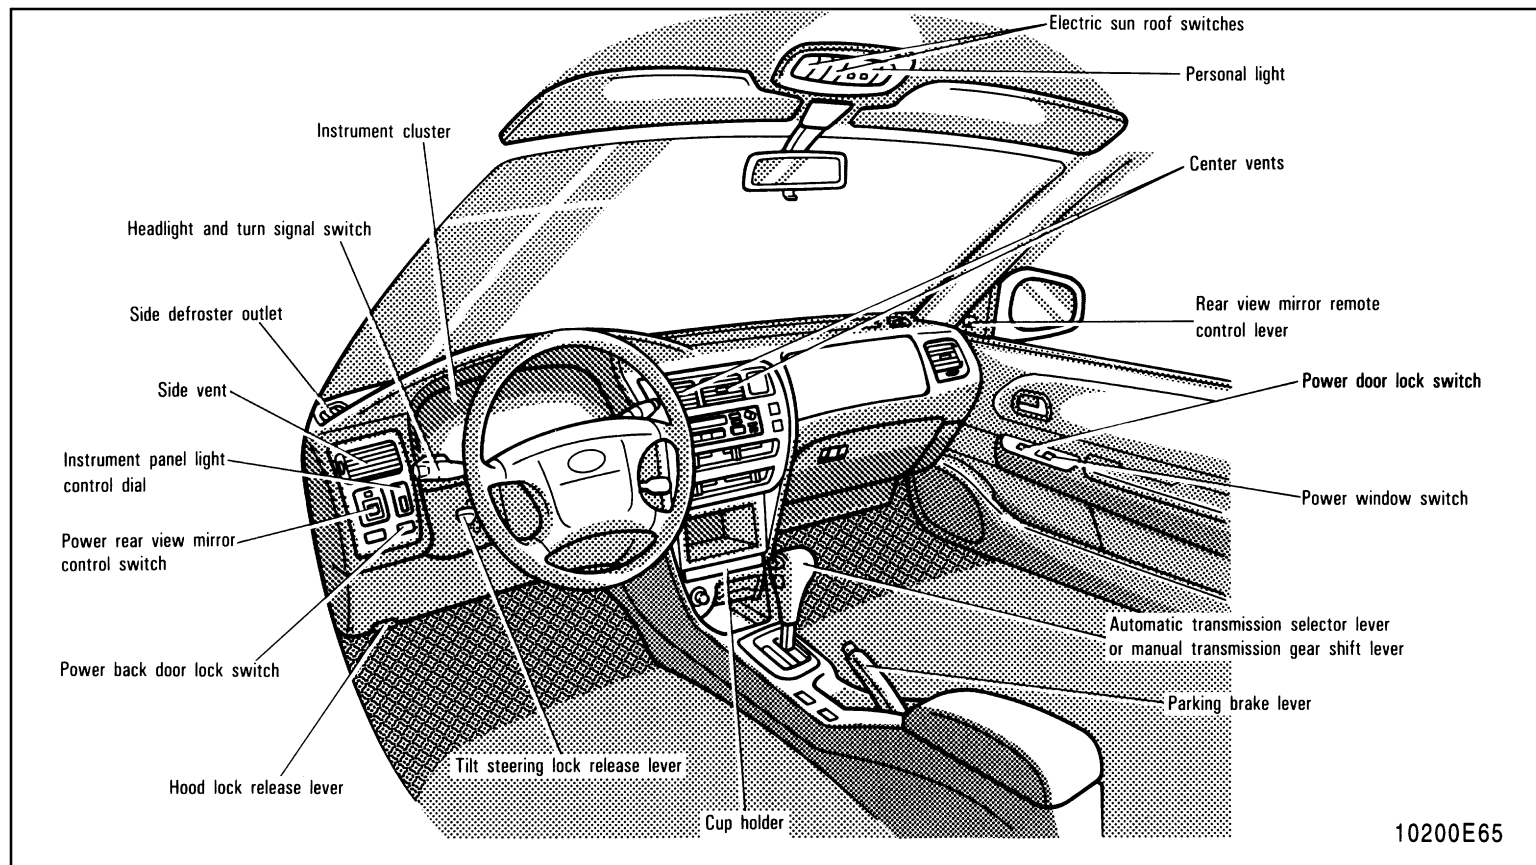


10200E65

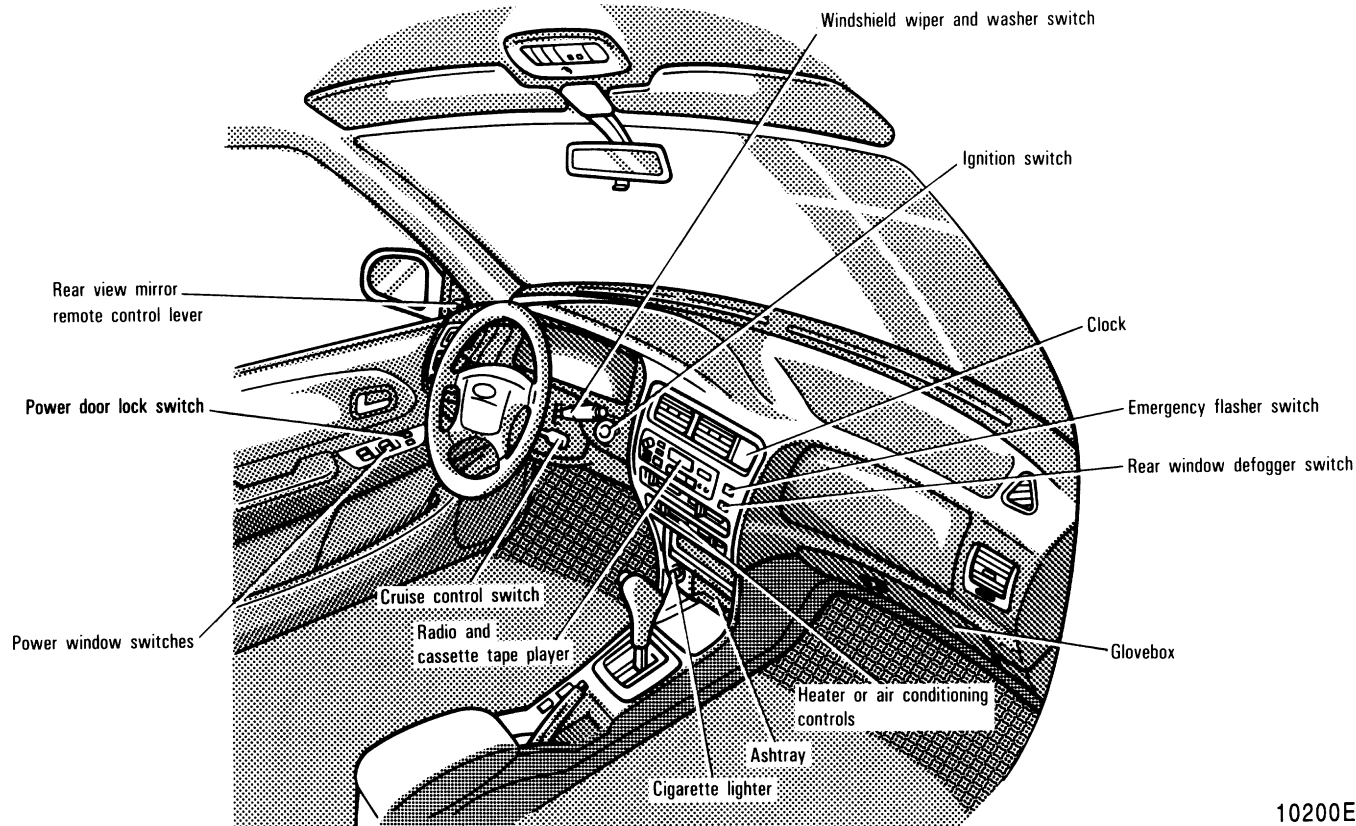

10200E66


Instrument cluster overview

► Without tachometer

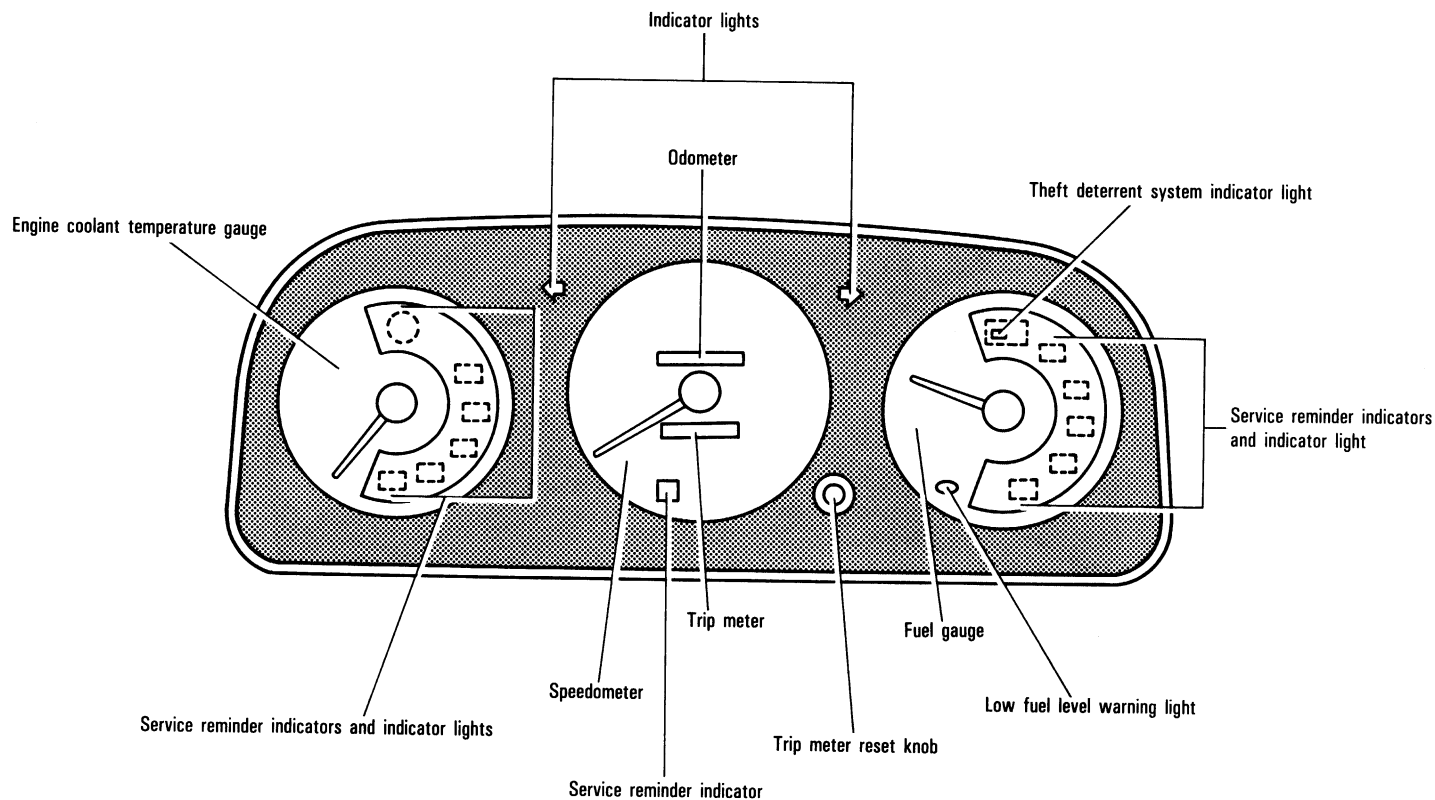

10200E56

►With tachometer

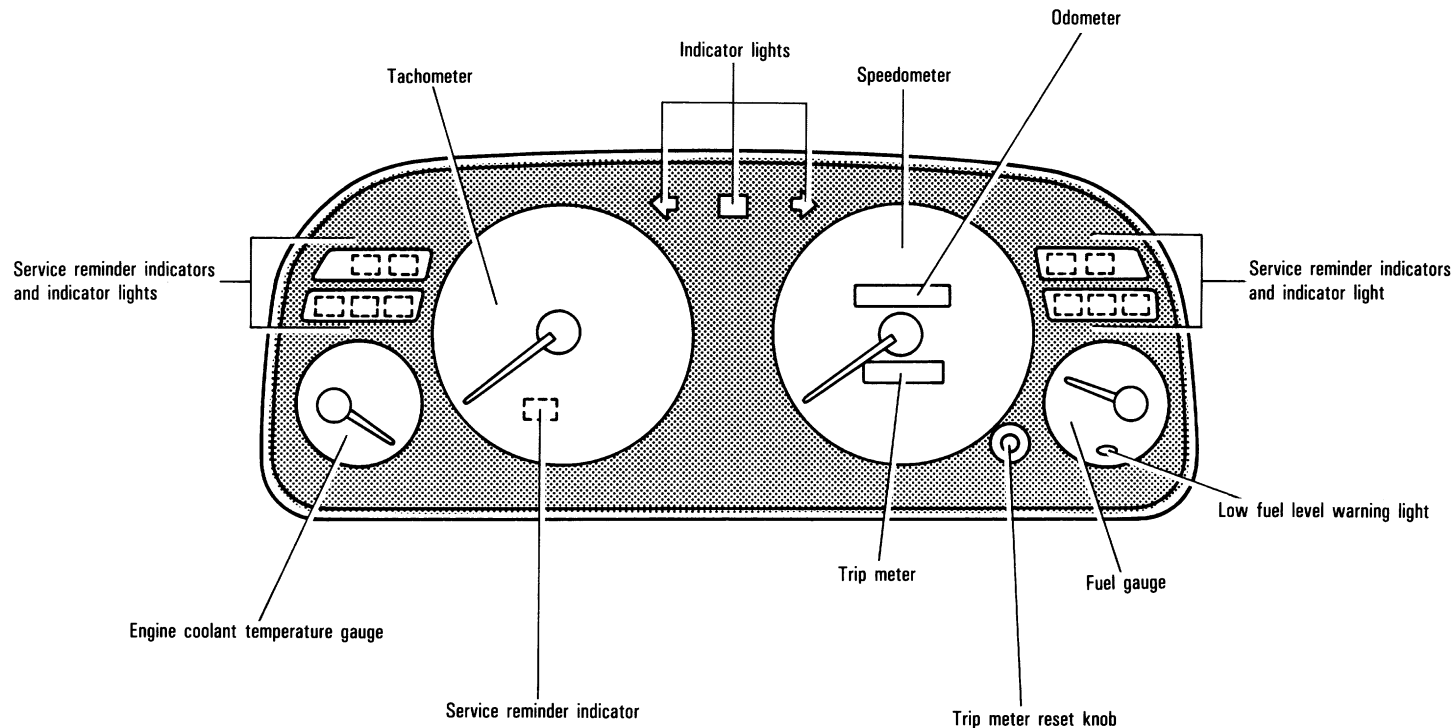

Indicator Symbols on the Instrument Panel

BRAKE (type A)  (type B)	Brake system warning light *1
	Seat belt reminder light*1
	Discharge warning light*1
	Low oil pressure warning light*1
 CHECK	Malfunction indicator lamp*1
ABS (type A)  (type B)	Anti-lock brake system warning light *1

	Open door warning light*1
	SRS airbag warning light*1
	Turn signal indicator lights
	Headlight high beam indicator light
O/D OFF	Over-drive indicator light
CRUISE	Cruise control indicator light*2
	Rear window defogger indicator light.

*1: For details, see “Service reminder indicators and warning buzzers” in Chapter 1–5.

*2: If this light flashes, see “Cruise control” in Chapter 1–6.