

Part 1


OPERATION OF INSTRUMENTS AND CONTROLS—

Chapter 1-2

Keys and Doors

- Keys
- Side doors
- Power windows
- Side windows
- Back door
- Hood
- Fuel tank cap
- Electric moon roof

 
Keys

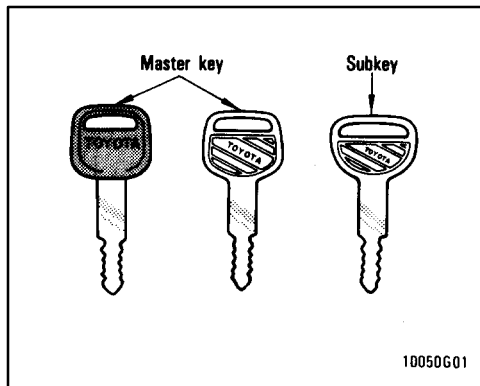

The master key works in every lock. The subkey will not work in the glove-box.

To protect things locked in the glovebox when you have your vehicle parked, leave the subkey with the attendant.

 
Since the doors can be locked without a key, you should always carry a spare master key in case you accidentally lock your keys inside the vehicle.

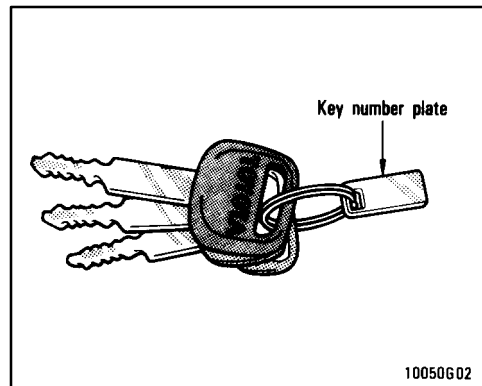

Keep the key number plate in a safe place such as your wallet, not in the vehicle.

If you should lose your keys or if you need additional keys, duplicates can be made by a Toyota dealer using the key number. You should also put a copy of the key number with your important papers.

 
Side doors

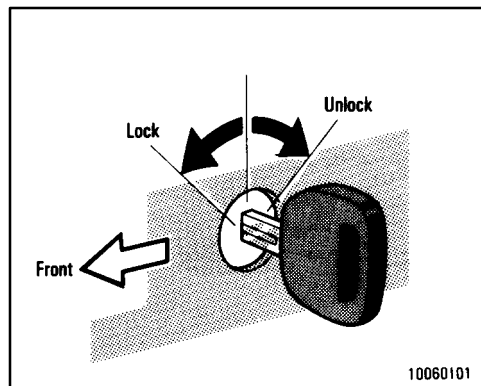

LOCKING WITH KEY

Turn the key towards the front of the vehicle to lock and towards the back to unlock.

 
On vehicles with a power door lock switch, all the side doors and back door lock and unlock simultaneously with either front door. In the driver's door lock, turning the key once will unlock the driver's door and twice in succession will unlock all the side doors and back door simultaneously.

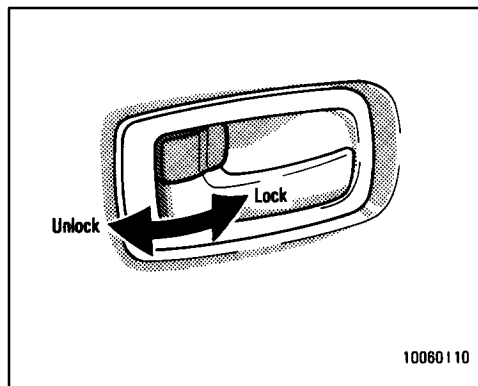

LOCKING WITH INSIDE LOCK KNOB

Turn the knob forward to lock and backward to unlock the door.


 
Closing the door with the lock button pushed in will also lock the door. Be careful not to lock your keys in the vehicle. On vehicles with a power door lock switch, the front doors cannot be locked if you leave the key in the ignition switch.

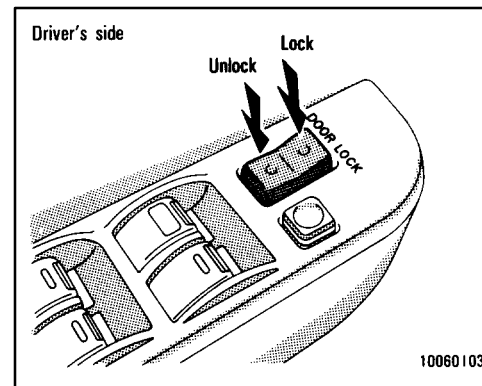

LOCKING WITH POWER DOOR LOCK SWITCH

To lock all the side doors and back door simultaneously, push the switch on the "DOOR LOCK" side. Pushing on the opposite side will unlock them.

  When the front doors are locked from the outside, the switch will not work until either front door is unlocked with the key or lock knob.

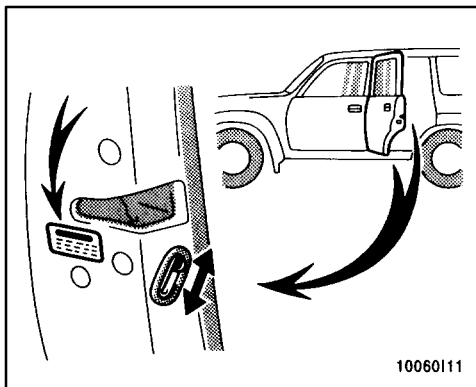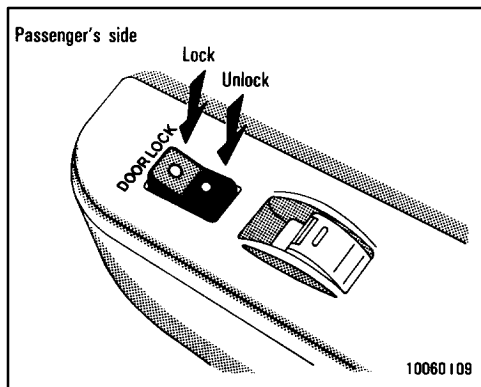

REAR DOOR CHILD-PROTECTORS

 
Move the lock lever to the "LOCK" position as shown on the label.

This feature allows you to lock a rear door so it can be opened from the outside only, not from inside. We recommend using this feature whenever small children are in the vehicle.



Before driving, be sure that the doors are closed and locked, especially when small children are in the vehicle. Along with the proper use of seat belts, locking the doors helps prevent the driver and passengers from being thrown out from the vehicle during an accident. It also helps prevent the doors from being opened unintentionally.

Power windows

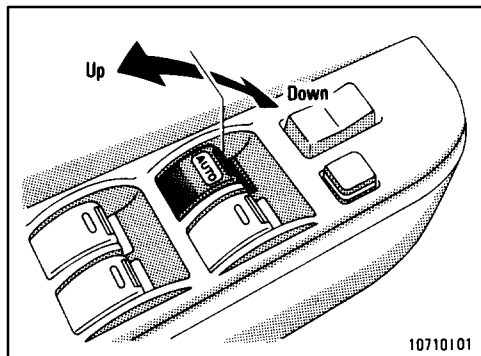

The windows can be operated with the switch on each side door.

The ignition key must be in the "ON" position.

 
OPERATING THE DRIVER'S WINDOW

Use the switch on the driver's door.

Normal operation: The window moves as long as you hold the switch.


To open: Lightly push down the switch.

To close: Pull up the switch.

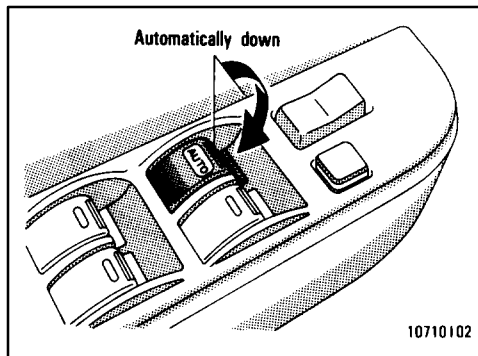

Automatic operation (to open only):

 Push the switch completely down and then release it. The window will fully open. To stop the window partway, lightly pull the switch up and then release it.

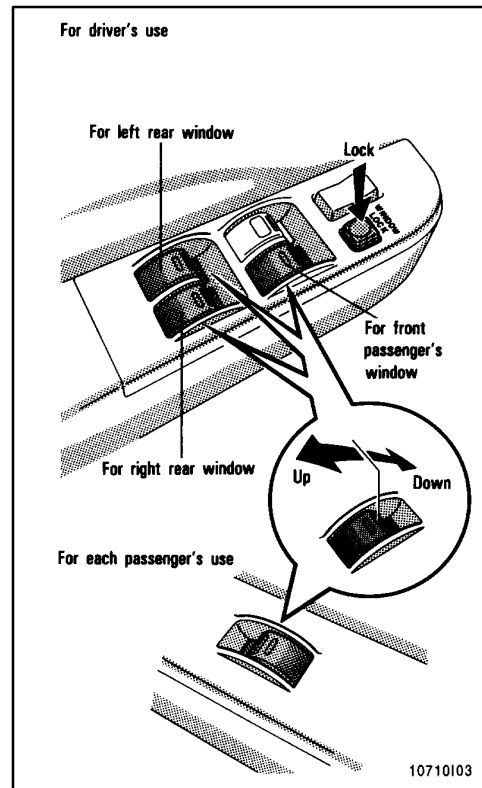

OPERATING THE PASSENGERS' WINDOW

Use the switch on each passenger's door or the switches on the driver's door that control each passenger's window.

The window moves as long as you hold the switch.

To open: Push down the switch.

To close: Pull up the switch.

If you push in the "window lock" switch on the driver's door, the passengers' windows cannot be operated.



 
CAUTION

To avoid serious personal injury, you must do the following.

- Always make sure the head, hands and other parts of the body of all occupants are kept completely inside the vehicle before you close the power windows. If someone's neck, head or hands gets caught in a closing window, it could result in a serious injury. When anyone closes the power windows, be sure that they operate the windows safely.
- When small children are in the vehicle, never let them use the power window switches without supervision. Use the "WINDOW LOCK" switch to prevent them from making unexpected use of the switches.
- Never leave small children alone in the vehicle, especially with the ignition key still inserted. They could use the power window switches and get trapped in a window. Unattended children can become involved in serious accidents.

Side windows

Type A



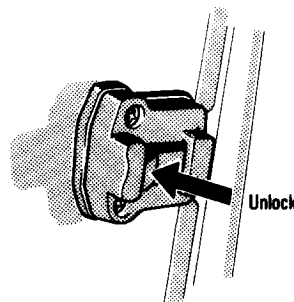


10984 T 01

Push the lever to unlock and slide the window.

When closing the window, make sure it is completely closed.

   Back door

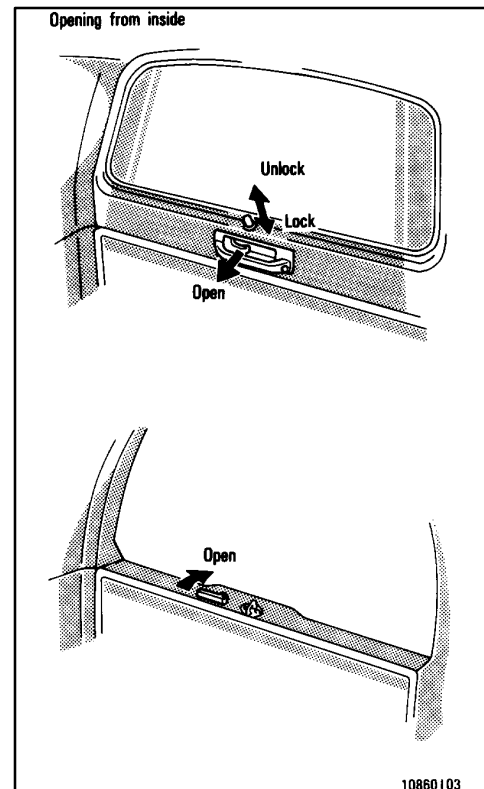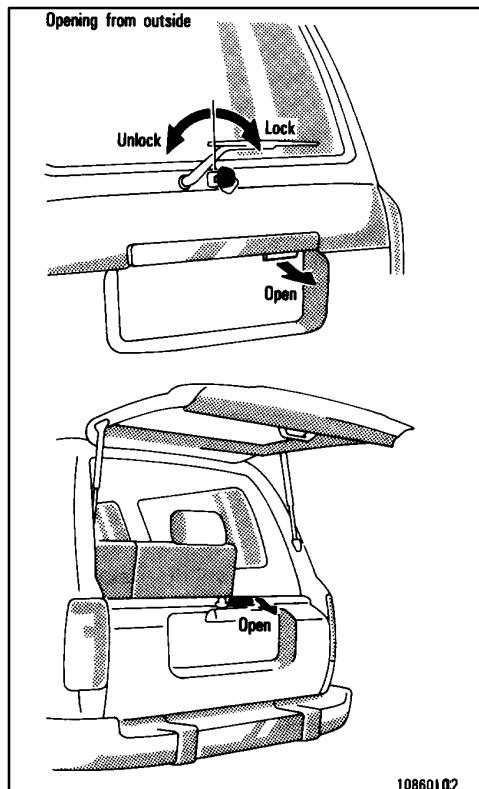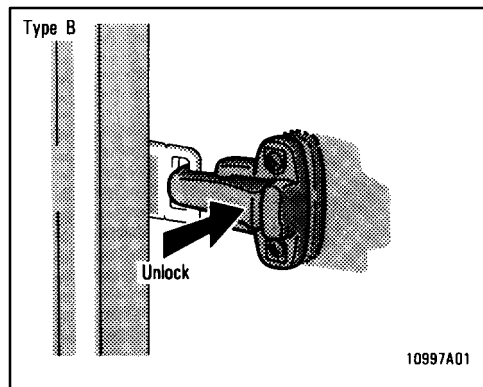

OPENING AND CLOSING

The back door can be opened as shown.

See "Luggage stowage precautions" in Part 2 for precautions to observe in loading luggage.

After closing the back door, try pulling it up to make sure it is securely closed.

 
Closing the back door with the lock button pushed in will also lock the back door. Be careful not to lock your keys in the vehicle.

On switches with a power door lock switch, the back door lock will be controlled with the power door lock switch. (For instructions, see "Side doors" in this chapter.)



CAUTION

Keep the back door closed while driving. This not only keeps the luggage from being thrown out but also prevents exhaust gases from entering the vehicle.

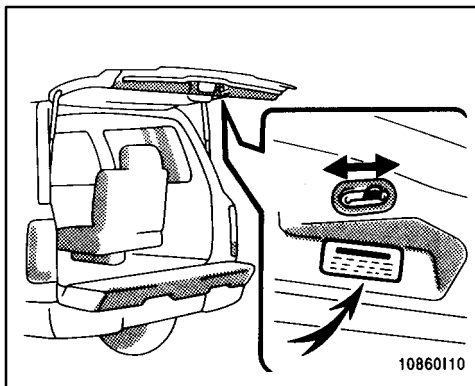


BACK DOOR CHILD-PROTECTOR

Move the lock lever to the "LOCK" position as shown on the label.

This feature allows you to lock a back door so it can be opened from the outside only, not from inside. We recommend using this feature whenever small children are in the vehicle.


 
Hood

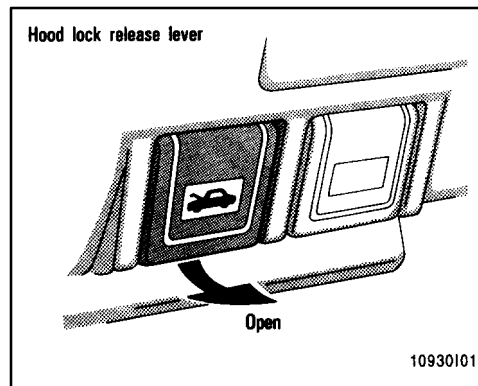

To open the hood, pull the hood lock release lever under the dash. The hood will spring up slightly. In front of the vehicle, press up on the auxiliary catch lever and lift the hood.

When closing the hood, check to see that you have not forgotten any tools, rags, etc. Then lower the hood and make sure it locks into place. If necessary, press down gently on the front edge to lock it.

  Fuel tank cap

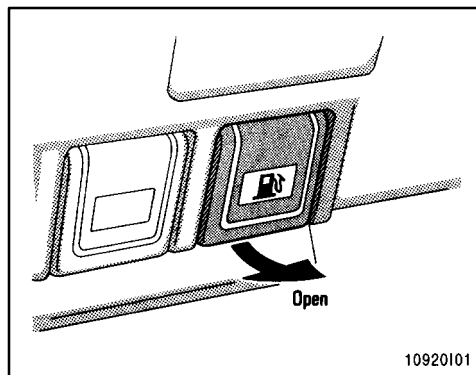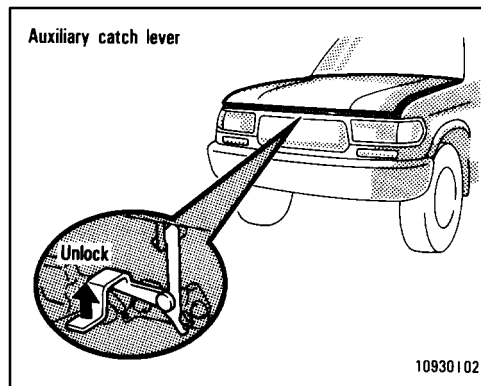


1. To open the fuel filler door, pull the lever up.



CAUTION

 - Do not smoke, cause sparks or allow open flames when refuelling. The fumes are flammable.
- When opening the cap, do not remove the cap quickly. In hot weather, fuel under pressure could cause injury by spraying out of the filler neck if the cap is suddenly removed.

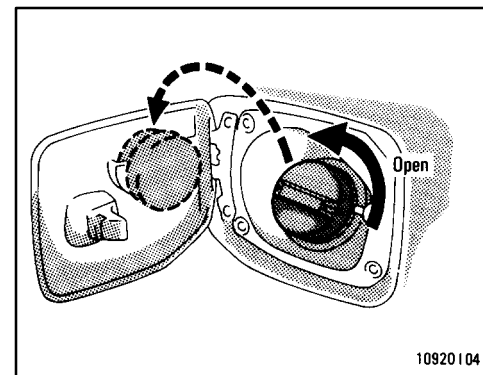

2. To remove the fuel tank cap, turn the cap slowly counterclockwise, then pause slightly before removing it. After removing the cap, hang it on the cap hanger.

 
It is not unusual to hear a slight swoosh when the cap is opened. When installing, turn the cap clockwise till you hear a click.



CAUTION

- Make sure the cap is tightened securely to prevent fuel spillage in case of an accident.
- Use only a genuine Toyota fuel tank cap for replacement. It has a built in check valve to reduce fuel tank vacuum.

Electric moon roof

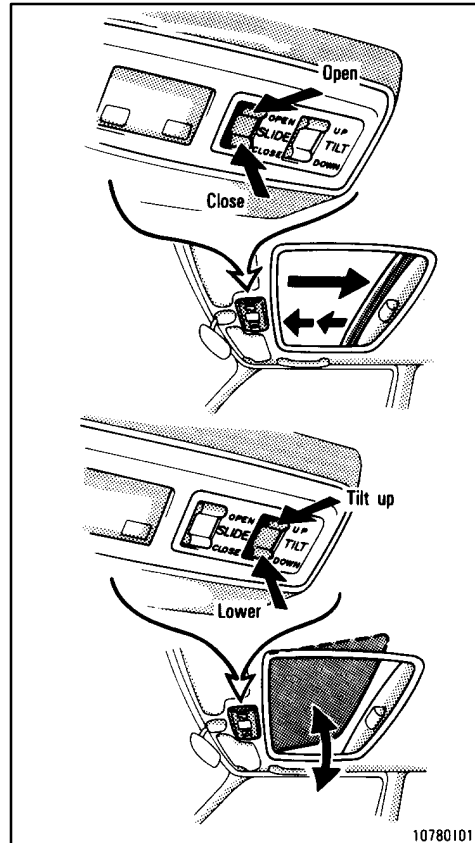

To slide open or close the moon roof, push the switch on the “OPEN” or “CLOSE” side. To tilt up or lower the rear end of the moon roof, push the switch on the “UP” or “DOWN” side.

The ignition key must be in the “ON” position.

The moon roof will move while the switch is being pushed and stop when released. However, as a precaution when closing, it stops at the three-quarters closed position before fully closing. Therefore, release the switch and then push it again to close it completely.

The sun shade can be opened or closed manually. However, if you open the moon roof, the sun shade will be opened together with the moon roof.



CAUTION

To avoid serious personal injury, you must do the following.

- While the vehicle is moving, always keep the head, hands and other parts of the body of all occupants away from the roof opening. Otherwise, you could be seriously injured if the vehicle stops suddenly or if the vehicle is involved in an accident.
- Always make sure nobody places his/her head, hands and other parts of the body in the roof opening before you close the roof. If someone's neck, head or hands get caught in the closing roof, it could result in a serious injury. When anyone closes the roof, first make sure it is safe to do so.
- Never leave small children alone in the vehicle, especially with the ignition key still inserted. They could use the moon roof switches and get trapped in the roof opening. Unattended children can become involved in serious accidents.

- Never sit on top of the vehicle around the roof opening.