 
 


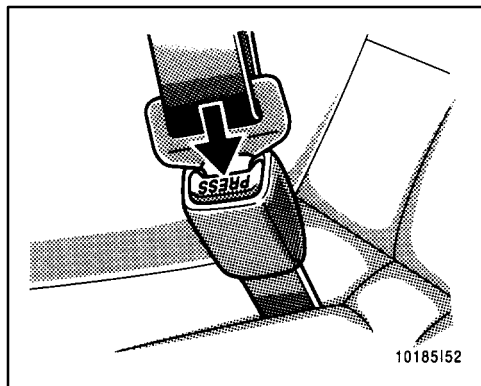

2. To remove the child restraint system, press the buckle-release button and allow the belt to retract.

Tilt steering wheel

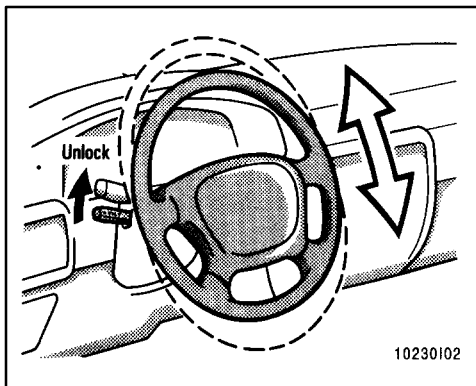

To change the steering wheel angle, hold the steering wheel, pull up the lock release lever, tilt the steering wheel to the desired angle and release the lever.

 
When the steering wheel is in a low position, it will spring up as you release the lock release lever.



CAUTION

- Do not adjust the steering wheel while the vehicle is moving.
- After adjusting the steering wheel, try moving it up and down to make sure it is locked in position.


Outside rear view mirrors—

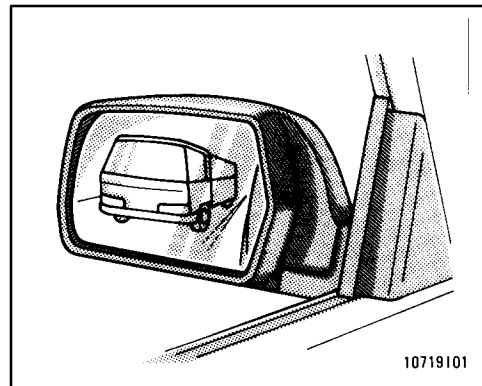

Adjust the mirror so you can just see the side of your vehicle in the mirror.

Be careful when judging the size of distance of any object seen in the outside rear view mirror on the passenger's side. It is a convex mirror with a curved surface. Any object seen in a convex mirror will look smaller and farther away than when seen in a flat mirror.

 —Power rear view mirror control

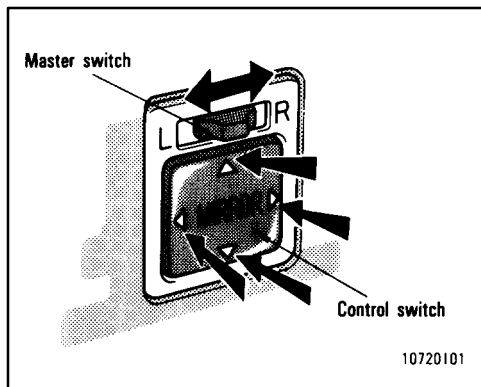


To adjust a power rear view mirror, first place the master switch at "L" (left) or "R" (right) depending on which mirror needs adjusting, then push the control switch in the desired direction. If the engine is not running, the key must be in the "ACC" position.

NOTICE

If ice should jam the mirror, do not operate the control or scrape the mirror face. Use a spray de-icer to free the mirror.

 
—Folding rear view mirrors

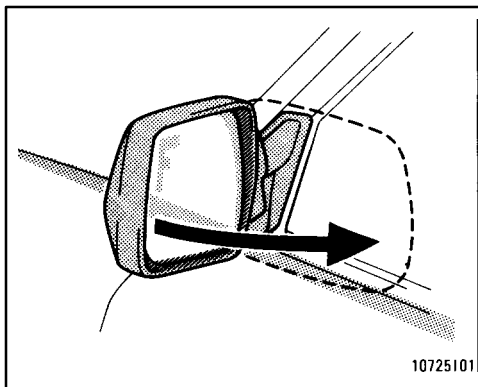

To fold the rear view mirror, push backward.

The rear view mirrors can be folded backward for parking in restricted areas.

 Anti-glare inside rear view mirror

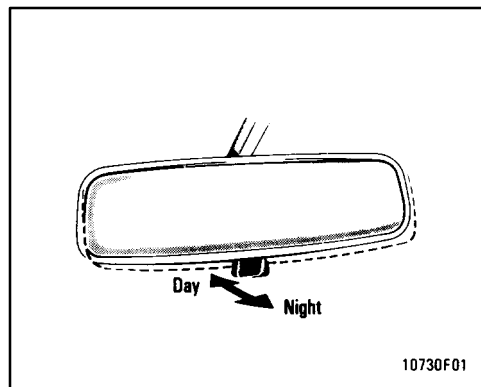


Pull the lever toward you to reduce glare from the headlights of the vehicle behind you during night driving.

Before adjusting the mirror to the position with most clarity, push the day-night charge lever away from you (daylight driving position).

Remember that by reducing glare you also lose some rear view clarity.

 Vanity mirrors

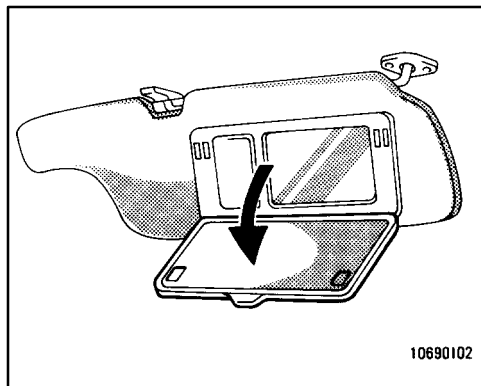

To use the vanity mirror, swing down the sun visor and open the cover.

The vanity light comes on when you open the cover.