

Part 1


OPERATION OF INSTRUMENTS AND CONTROLS—

Chapter 1-1


Overview of instruments and controls

- Instrument panel overview
- Instrument cluster overview
- Indicator symbols on the instrument panel

Instrument panel overview

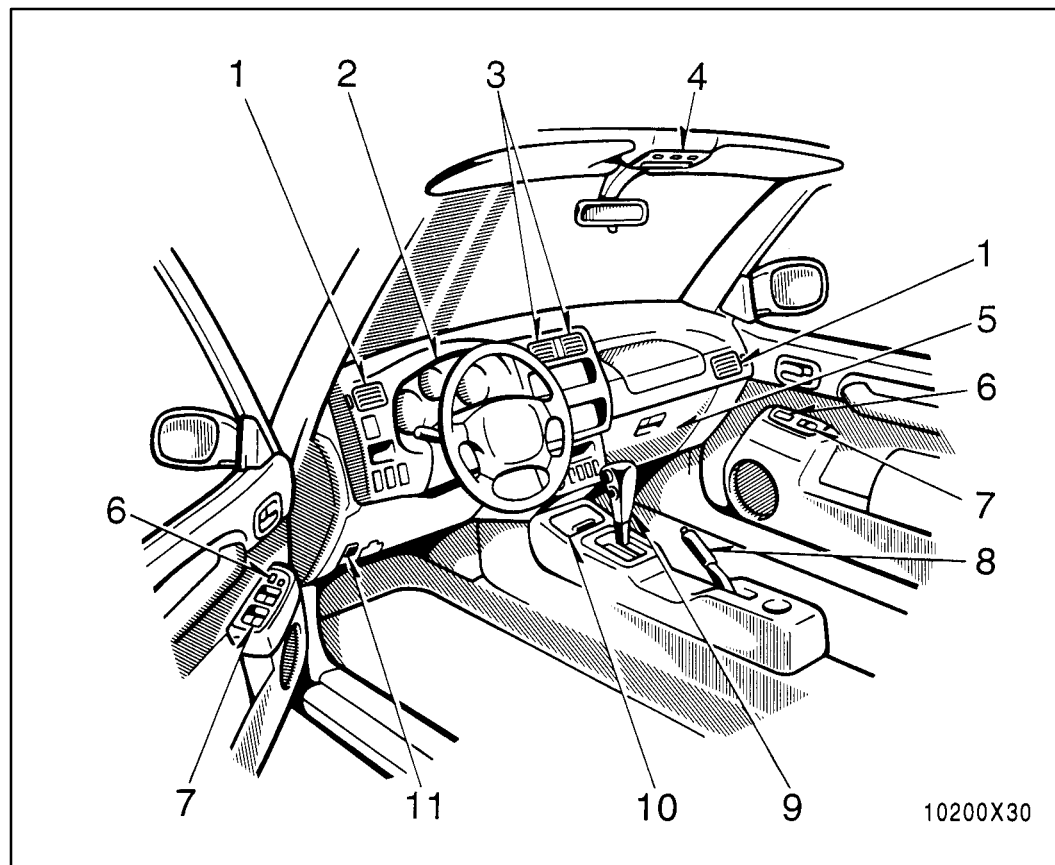


1. Side vent
2. Instrument cluster
3. Center vents
4. Electronic moon roof switch and personal lights
5. Glovebox
6. Power door lock switch
7. Power window switches
8. Parking brake lever
9. Automatic transmission selector lever or manual transmission gear shift lever
10. Ashtray
11. Hood lock release lever

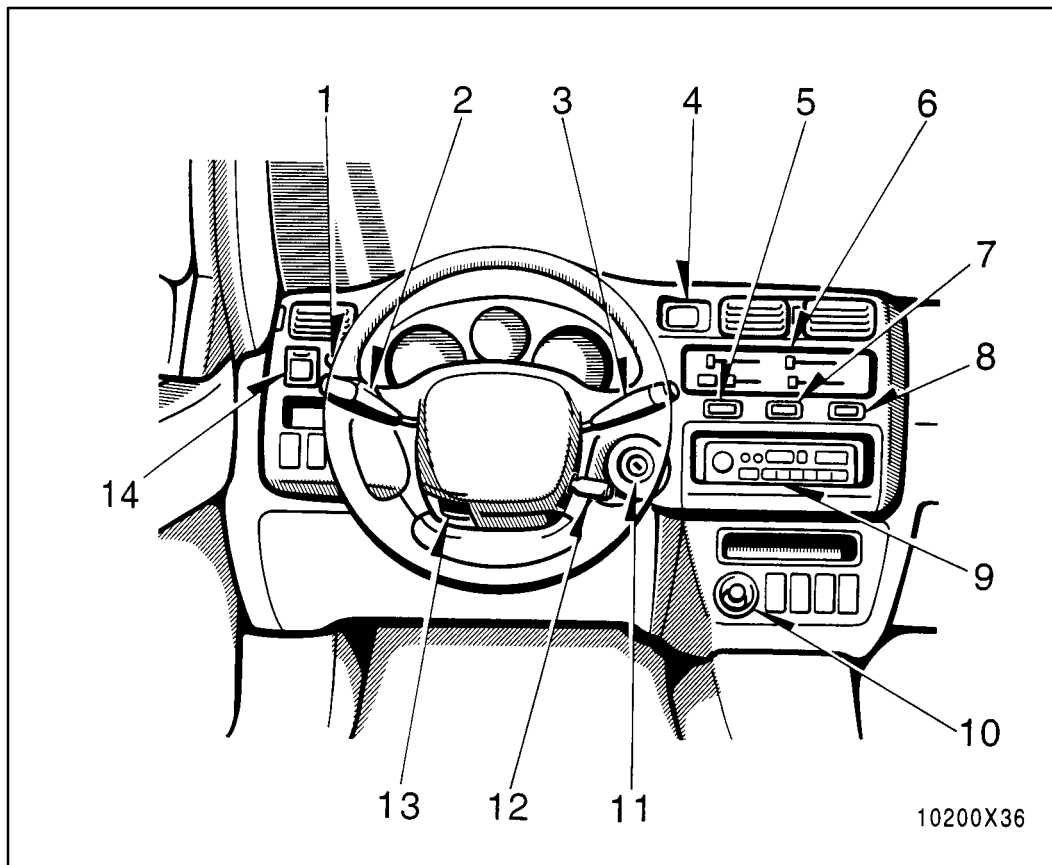

1. Instrument panel light control knob
2. Headlight and turn signal switch
3. Wiper and washer switch
4. Clock
5. Center differential lock button or driving pattern selector button
6. Air conditioning controls
7. Emergency flasher switch
8. Rear window defogger switch
9. Car audio
10. Cigarette lighter
11. Ignition switch
12. Cruise control switch
13. Tilt steering lock release lever
14. Power rear view mirror control switch

Instrument cluster overview

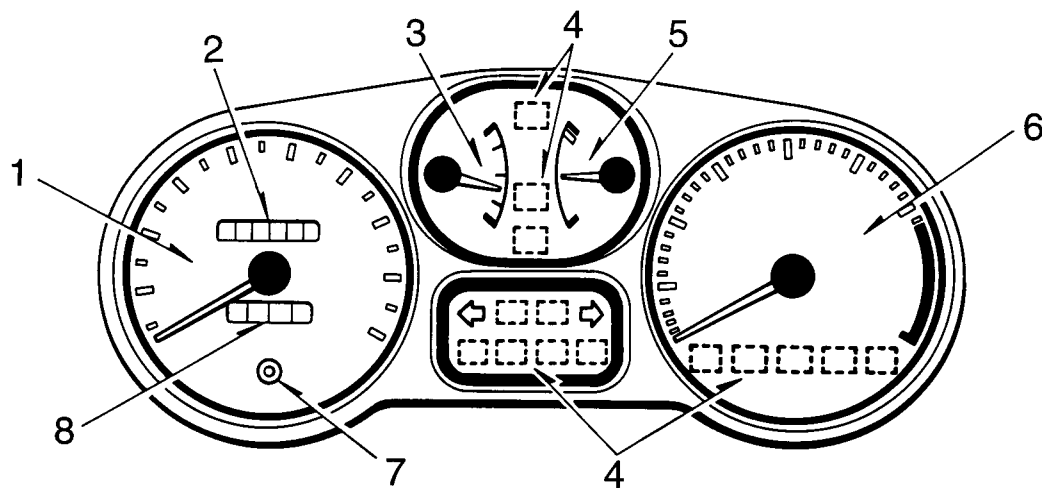

10200X22

- 1. Speedometer
- 2. Odometer
- 3. Fuel gauge

- 4. Service reminder indicators or indicator lights
- 5. Engine coolant temperature gauge
- 6. Tachometer

- 7. Trip meter reset knob
- 8. Trip meter

Indicator symbols on the instrument panel

BRAKE (type A)  (type B)	Brake system warning light *1
	Seat belt reminder light*1
	Discharge warning light*1
	Low oil pressure warning light*1
 CHECK (type A)  (type B)	Malfunction indicator light*1
	Low fuel level warning light *1

ABS (type A)  (type B)	Anti-lock brake system warning light *1
	Open door warning light*1
	SRS airbag warning light*1
A/T OIL TEMP	Automatic transmission fluid temperature warning light*1
	Turn signal indicator lights
	Headlight high beam indicator light
O/D OFF	Over-drive indicator light

ECT PWR	Driving pattern indicator light
C.DIFF LOCK	Center differential lock indicator light
CRUISE	Cruise control indicator light *2

*1: For details, see “Service reminder indicators and warning buzzers” in Chapter 1-5.

*2: If this light flashes, see “Cruise control” in Chapter 1-6.