

Part 1


OPERATION OF INSTRUMENTS AND CONTROLS—

Chapter 1-1


Overview of instruments and controls

- [Instrument panel overview](#)
- [Instrument cluster overview](#)
- [Indicator symbols on the instrument panel](#)

Instrument panel overview

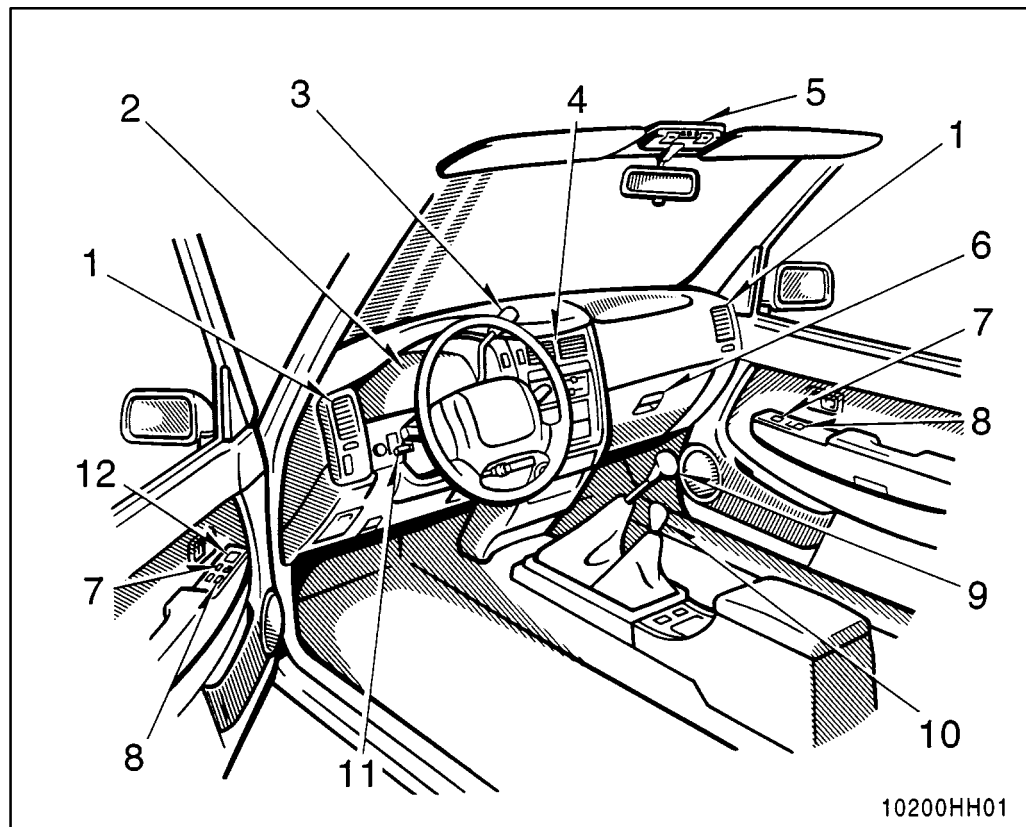


1. Side vent
2. Instrument cluster
3. Automatic transmission selector lever (column shift)
4. Center vents
5. Personal lights or interior light
6. Glovebox
7. Power door lock switch
8. Power window switches
9. Manual transmission gear shift lever or automatic transmission selector lever (floor shift)
10. Front drive control lever
11. Tilt steering lock release lever
12. Power rear view mirror control switch

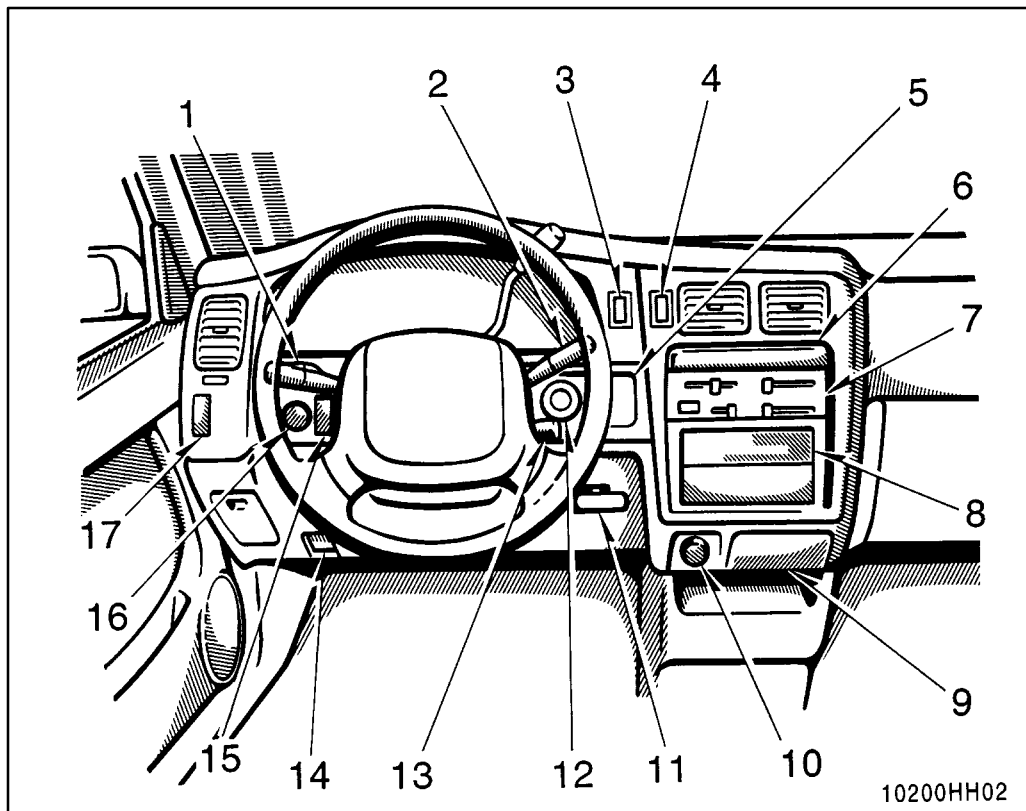

1. Headlight and turn signal switch
2. Wiper and washer switches
3. Driving pattern selector button
4. Emergency flasher switch
5. Clock
6. Cup holder
7. Air conditioning controls
8. Car audio
9. Ashtray
10. Cigarette lighter
11. Parking brake lever
12. Ignition switch
13. Cruise control switch
14. Hook lock release lever
15. Rear differential lock button
16. Instrument panel light control knob
17. Clutch start cancel switch

Instrument cluster overview


►With tachometer

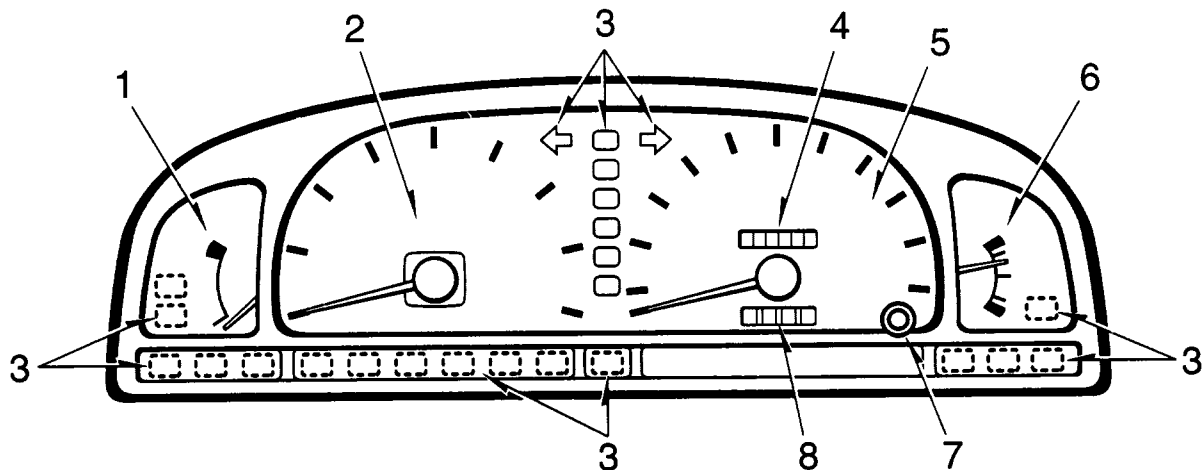

19200H04

- | | | |
|--|----------------|--------------------------|
| 1. Engine coolant temperature gauge | 4. Odometer | 7. Trip meter reset knob |
| 2. Tachometer | 5. SPeedometer | 8. Tripmeter |
| 3. Service reminder indicators or indicator lights | 6. Fuel Gauge | |

►Without tachometer

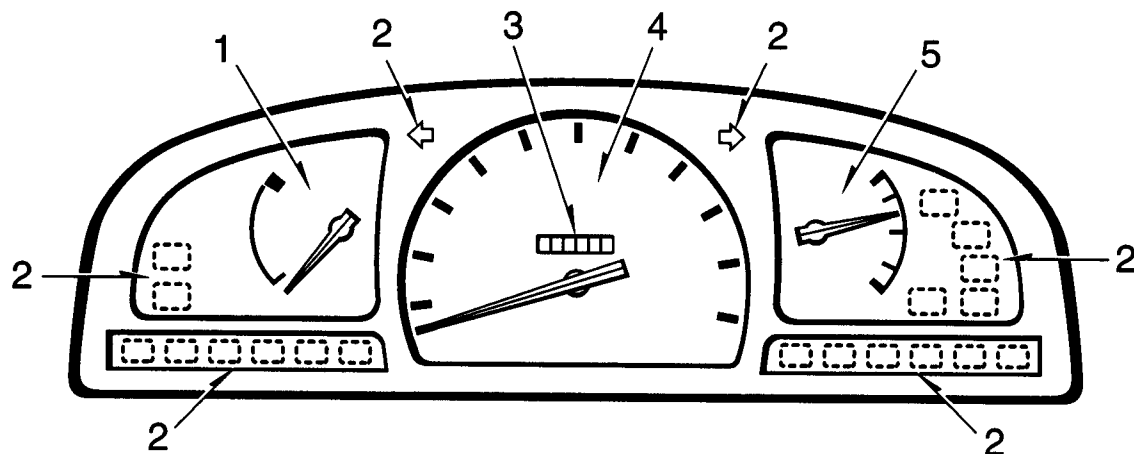

19200H03

- | | | |
|--|----------------|---------------|
| 1. Engine coolant temperature guage | 3. Odometer | 5. Fuel gauge |
| 2. Service reminder indicators or indicator lights | 4. Speedometer | |

Indicator symbols on the instrument panel

 BRAKE	Brake system warning light *1
	Seat belt reminder light*1
	Discharge warning light*1
	Low oil pressure warning light*1
	Malfunction indicator light*1
	Low fuel level warning light *1
ABS (type A)  (type B)	Anti-lock brake system warning light *1
	SRS airbag warning light*1

A/T P	Unengaged "Park" warning light *1
A/T OIL TEMP	Automatic transmission fluid temperature warning light*1
	Low windshield washer fluid level light*1
	Turn signal indicator lights
	Headlight high beam indicator light
O/D OFF	Over-drive indicator light
ECT PWR	Driving pattern ("POWER" model) indicator light
PRN D 2 L	Automatic transmission indicator lights
	Four-wheel drive indicator light

RR DIFF LOCK	Driving pattern indicator light
CRUISE	Cruise control indicator light *2

*1: For details, see “Service reminder indicators and warning buzzers” in Chapter 1-5.

*2: If this light flashes, see “Cruise control” in Chapter 1-6.