

Scheduled Maintenance

Follow Schedule 1 if the vehicle is operated mainly where none of the following conditions applies. If any of them apply, follow Schedule 2 (Puerto Rico residents follow Schedule 2).

- Repeated short-distance driving
- Driving in dusty conditions
- Driving with an extended use of brakes
- Driving in areas where salt or other corrosive materials are being used
- Driving on rough or muddy roads
- Extended periods of idling or low-speed operation
- Driving for a prolonged period in cold temperatures or extremely humid climates

Maintenance

NOTE

After the described period, continue to follow the described maintenance at the recommended intervals.

I : Inspect and repair, clean, adjust, or replace if necessary

R : Replace

Schedule 1

MAINTENANCE INTERVALS MAINTENANCE ITEM	Number of months or miles (kilometers), whichever comes first								
	Months	6	12	18	24	30	36	42	48
	× 1000 miles	7.5	15	22.5	30	37.5	45	52.5	60
	(× 1000 km)	(12)	(24)	(36)	(48)	(60)	(72)	(84)	(96)
Engine valve clearance									I
Engine oil		R	R	R	R	R	R	R	R
Engine oil filter		R	R	R	R	R	R	R	R
Drive belts (tension)					I				I

I : Inspect and repair, clean, adjust, or replace if necessary

Schedule 1 (Cont'd)

MAINTENANCE INTERVALS MAINTENANCE ITEM		Number of months or miles (kilometers), whichever comes first								
		Months	6	12	18	24	30	36	42	48
		× 1000 miles	7.5	15	22.5	30	37.5	45	52.5	60
		(× 1000 km)	(12)	(24)	(36)	(48)	(60)	(72)	(84)	(96)
Engine timing belt	2.0-liter engine	*1Replace every 60,000 miles (96,000 km)								
		*2. *5Inspect for 60,000 miles (96,000 km), 90,000 miles (144,000 km) Replace every 105,000 miles (168,000 km)								

*1 Vehicles not covered under *2 below.

*2 If your vehicle was initially registered in one of these listed states, the scheduled maintenance services set forth in this section apply to it:
California, New York, Massachusetts, Connecticut, Vermont, New Jersey, Rhode Island, Delaware, Maryland, New Hampshire, Pennsylvania, Virginia, Maine, Washington DC.

*5 According to state and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended time or mileage (kilometrage) period to ensure long-term reliability.

Maintenance

Schedule 1 (Cont'd)

I : Inspect and repair, clean, adjust, or replace if necessary (Air filter cannot be cleaned using the air-blow method.)

R : Replace

MAINTENANCE INTERVALS MAINTENANCE ITEM		Number of months or miles (kilometers), whichever comes first								
		Months	6	12	18	24	30	36	42	48
		× 1000 miles	7.5	15	22.5	30	37.5	45	52.5	60
		(× 1000 km)	(12)	(24)	(36)	(48)	(60)	(72)	(84)	(96)
Engine timing belt	2.5-liter engine	*3Replace every 60,000 miles (96,000 km)								
		*4, *5Inspect for 60,000 miles (96,000 km), 90,000 miles (144,000 km) Replace every 105,000 miles (168,000 km)								
Hoses and tubes for emission									I*5	
Air filter						R			R	
Spark plugs						R			R	
Idle speed						I*5			I*5	
Fuel lines and hoses						I*5			I*5	

^{*3} Vehicles not covered under ^{*4} below.

^{*4} If your vehicle was initially registered in one of these listed states, the scheduled maintenance services set forth in this section apply to it:
California, Massachusetts, Vermont, New York, Maine.

^{*5} According to state and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended time or mileage (kilometrage) period to ensure long-term reliability.

I : Inspect and repair, clean, adjust, or replace if necessary

L : Lubricate

Schedule 1 (Cont'd)

MAINTENANCE ITEM	MAINTENANCE INTERVALS	Number of months or miles (kilometers), whichever comes first								
		Months	6	12	18	24	30	36	42	48
		× 1000 miles	7.5	15	22.5	30	37.5	45	52.5	60
		(× 1000 km)	(12)	(24)	(36)	(48)	(60)	(72)	(84)	(96)
Cooling system					I				I	
Engine coolant		Replace at first 105,000 miles (168,000 km) or 60 months; after that, every 30,000 miles (48,000 km) or 24 months								
Brake lines, hoses and connections					I				I	
Drum brakes					I				I	
Disc brakes					I				I	
Steering operation and linkages					I				I	
Front suspension ball joints					I				I	
Driveshaft dust boots					I				I	
Bolts and nuts on chassis and body					I				I	
Exhaust system heat shields					I				I	
All locks and hinges		L	L	L	L	L	L	L	L	

Maintenance

I : Inspect and repair, clean, adjust, or replace if necessary

Schedule 1 (Cont'd)

MAINTENANCE INTERVALS MAINTENANCE ITEM	Number of months or miles (kilometers), whichever comes first								
	Months	6	12	18	24	30	36	42	48
	× 1000 miles	7.5	15	22.5	30	37.5	45	52.5	60
	(× 1000 km)	(12)	(24)	(36)	(48)	(60)	(72)	(84)	(96)
Air-conditioner refrigerant (if installed)			I		I		I		I
Air-conditioner compressor (if installed)			I		I		I		I
Cabin air filter (if installed)		Replace once a year or every 12,000 miles (20,000 km)							

I : Inspect and repair, clean, adjust, or replace if necessary
R : Replace

Schedule 2

MAINTENANCE INTERVALS MAINTENANCE ITEM		Number of months or miles (kilometers), whichever comes first												
		Months	4	8	12	16	20	24	28	32	36	40	44	48
		× 1000 miles	5	10	15	20	25	30	35	40	45	50	55	60
		(× 1000 km)	(8)	(16)	(24)	(32)	(40)	(48)	(56)	(64)	(72)	(80)	(88)	(96)
Engine valve clearance													I	
Engine oil	Except Puerto Rico	R	R	R	R	R	R	R	R	R	R	R	R	
	Puerto Rico	Replace every 3,000 miles (4,800 km) or 3 months												
Engine oil filter		R	R	R	R	R	R	R	R	R	R	R	R	
Drive belts (tension)							I						I	
Engine timing belt	2.0-liter engine	*1Replace every 60,000 miles (96,000 km)												
		*2, *5Inspect for 60,000 miles (96,000 km), 90,000 miles (144,000 km) Replace every 105,000 miles (168,000 km)												

*1 Vehicles not covered under *2 below.

*2 If your vehicle was initially registered in one of these listed states, the scheduled maintenance services set forth in this section apply to it:
California, New York, Massachusetts, Connecticut, Vermont, New Jersey, Rhode Island, Delaware, Maryland, New Hampshire, Pennsylvania, Virginia, Maine, Washington DC.

*5 According to state and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended time or mileage (kilometrage) period to ensure long-term reliability.

Maintenance

Schedule 2 (Cont'd)

I : Inspect and repair, clean, adjust, or replace if necessary (Air filter cannot be cleaned using the air-blow method.)

R : Replace

MAINTENANCE INTERVALS MAINTENANCE ITEM		Number of months or miles (kilometers), whichever comes first												
		Months	4	8	12	16	20	24	28	32	36	40	44	48
		× 1000 miles	5	10	15	20	25	30	35	40	45	50	55	60
		(× 1000 km)	(8)	(16)	(24)	(32)	(40)	(48)	(56)	(64)	(72)	(80)	(88)	(96)
Engine timing belt	2.5-liter engine	* ³ Replace every 60,000 miles (96,000 km)												
		* ⁴ , * ⁵ Inspect for 60,000 miles (96,000 km), 90,000 miles (144,000 km) Replace every 105,000 miles (168,000 km)												
Hoses and tubes for emission													I* ⁵	
Air filter				I* ⁵			R			I* ⁵			R	
Spark plugs							R						R	
Idle speed							I* ⁵						I* ⁵	
Fuel lines and hoses							I* ⁵						I* ⁵	

*³ Vehicles not covered under *⁴ below.

*⁴ If your vehicle was initially registered in one of these listed states, the scheduled maintenance services set forth in this section apply to it:
California, Massachusetts, Vermont, New York, Maine.

*⁵ According to state and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended time or mileage (kilometrage) period to ensure long-term reliability.

I : Inspect and repair, clean, adjust, or replace if necessary

Schedule 2 (Cont'd)

MAINTENANCE INTERVALS MAINTENANCE ITEM	Number of months or miles (kilometers), whichever comes first												
	Months	4	8	12	16	20	24	28	32	36	40	44	48
	× 1000 miles	5	10	15	20	25	30	35	40	45	50	55	60
	(× 1000 km)	(8)	(16)	(24)	(32)	(40)	(48)	(56)	(64)	(72)	(80)	(88)	(96)
Cooling system							I						I
Engine coolant	Replace at first 105,000 miles (168,000 km) or 60 months; after that, every 30,000 miles (48,000 km) or 24 months												
Engine coolant level		I	I	I	I	I	I	I	I	I	I	I	I
Function of all lights		I	I	I	I	I	I	I	I	I	I	I	I
Brake lines, hoses and connections							I						I
Brake and clutch fluid level		I	I	I	I	I	I	I	I	I	I	I	I
Drum brakes							I						I
Disc brakes				I			I			I			I
Tire inflation pressure and tire wear		I	I	I	I	I	I	I	I	I	I	I	I
Steering operation and linkages							I						I
Power steering fluid level		I	I	I	I	I	I	I	I	I	I	I	I

Maintenance

I : Inspect and repair, clean, adjust, or replace if necessary

L : Lubricate

Schedule 2 (Cont'd)

MAINTENANCE INTERVALS MAINTENANCE ITEM	Number of months or miles (kilometers), whichever comes first												
	Months	4	8	12	16	20	24	28	32	36	40	44	48
	× 1000 miles	5	10	15	20	25	30	35	40	45	50	55	60
	(× 1000 km)	(8)	(16)	(24)	(32)	(40)	(48)	(56)	(64)	(72)	(80)	(88)	(96)
Front suspension ball joints							I						I
Driveshaft dust boots							I						I
Bolts and nuts on chassis and body				I			I			I			I
Exhaust system heat shields							I						I
All locks and hinges		L	L	L	L	L	L	L	L	L	L	L	L
Washer fluid level		I	I	I	I	I	I	I	I	I	I	I	I
Air-conditioner refrigerant (if installed)				I			I			I			I
Air-conditioner compressor (if installed)				I			I			I			I
Cabin air filter (if installed)	Replace once a year or every 12,000 miles (20,000 km)												