

Scheduled Maintenance

The vehicle is mainly operated where none of the “unique driving conditions” apply. If any do apply, follow Schedule 2 (Puerto Rico residents follow Schedule 2).

- Repeated short-distance driving
- Driving in dusty conditions
- Driving with extended use of brakes
- Driving in areas where salt or other corrosive materials are used
- Driving on rough or muddy roads
- Extended periods of idling or low-speed operation
- Driving for long periods in cold temperatures or extremely humid climates

NOTE
After the described period, continue to follow the described maintenance at the recommended intervals.

Maintenance

I : Inspect and repair, clean, adjust, or replace if necessary. (Oil-permeated air filter cannot be cleaned using the air-blow method.)
R : Replace

Schedule 1

MAINTENANCE INTERVALS MAINTENANCE ITEM		Number of months or miles (km), whichever comes first								
		Months	6	12	18	24	30	36	42	48
		×1000 miles	7.5	15	22.5	30	37.5	45	52.5	60
		(×1000 km)	(12)	(24)	(36)	(48)	(60)	(72)	(84)	(96)
Engine valve clearance (Miller Cycle Engine V6 DOHC)										I
Engine oil			R	R	R	R	R	R	R	R
Engine oil filter			R	R	R	R	R	R	R	R
Drive belts (tension)	2.5 liter V6 DOHC				I					I
	Miller Cycle Engine V6 DOHC	Replace every 105,000 miles (168,000 km)								
Engine timing belt		*1 Replace every 60,000 miles (96,000 km)								
		*2, *3 Inspect for 60,000 miles (96,000 km), 90,000 miles (144,000 km) Replace every 105,000 miles (168,000 km)								
Hoses and tubes for emission										I*3
Air filter						R				R
Spark plugs	2.5 liter V6 DOHC	Replace every 30,000 miles (48,000 km)								
	Miller Cycle Engine V6 DOHC	Replace every 60,000 miles (96,000 km)								
Cooling system					I					I
Engine coolant		Replace at first 45,000 miles (72,000 km) or 36 months; after that, every 30,000 miles (48,000 km) or 24 months								

*1 Vehicles not covered under *2 below.

*2 If your vehicle was initially registered in one of these listed states, the scheduled maintenance services set forth in this section apply to it:
California, New York, Massachusetts, Connecticut, Vermont, New Jersey, Rhode Island, Delaware, Maryland, New Hampshire, Pennsylvania, Virginia, Maine, Washington DC.

*3 According to state and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended time or mileage (kilometrage) period to ensure long-term reliability.

Schedule 1 (Cont'd)

I : Inspect and repair, clean, adjust, or replace if necessary.

MAINTENANCE INTERVALS MAINTENANCE ITEM	Number of months or miles (km), whichever comes first								
	Months	6	12	18	24	30	36	42	48
	×1000 miles	7.5	15	22.5	30	37.5	45	52.5	60
	(×1000 km)	(12)	(24)	(36)	(48)	(60)	(72)	(84)	(96)
Idle speed					I*3				I*3
Fuel lines and hoses					I*3				I*3
Brake lines, hoses and connections					I				I
Disc brakes					I				I
Steering operation and linkages					I				I
Front and rear suspension ball joints					I				I
Drive shaft dust boots					I				I
Bolts and nuts on chassis and body					I				I
Body inspection (paint, corrosion)		I	I	I	I	I	I	I	I
Exhaust system heat shields					I				I
Air-conditioner compressor operation			I		I		I		I
Automatic transaxle fluid level					I				I

*3 According to state and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended time or mileage (kilometrage) period to ensure long-term reliability.

Maintenance

I : Inspect and repair, clean, adjust, or replace if necessary. (Oil-permeated air filter cannot be cleaned using the air-blow method.)
R : Replace

Schedule 2

MAINTENANCE INTERVALS MAINTENANCE ITEM		Number of months or miles (km), whichever comes first												
		Months	4	8	12	16	20	24	28	32	36	40	44	48
		×1000 miles	5	10	15	20	25	30	35	40	45	50	55	60
		(×1000 km)	(8)	(16)	(24)	(32)	(40)	(48)	(56)	(64)	(72)	(80)	(88)	(96)
Engine valve clearance (Miller Cycle Engine V6 DOHC)														I
Engine oil	Except Puerto Rico	R	R	R	R	R	R	R	R	R	R	R	R	R
	Puerto Rico	Replace every 3,000 miles (4,800 km) or 3 months												
Engine oil filter		R	R	R	R	R	R	R	R	R	R	R	R	R
Drive belts (tension)	2.5 liter V6 DOHC						I							I
	Miller Cycle Engine V6 DOHC	Replace every 105,000 miles (168,000 km)												
Engine timing belt		*1Replace every 60,000 miles (96,000 km)												
		*2, *3Inspect for 60,000 miles (96,000 km), 90,000 miles (144,000 km) Replace every 105,000 miles (168,000 km)												
Hoses and tubes for emission														I*3
Air filter				I*3			R			I*3				R
Spark plugs	2.5 liter V6 DOHC	Replace every 30,000 miles (48,000 km)												
	Miller Cycle Engine V6 DOHC	Replace every 60,000 miles (96,000 km)												
Cooling system							I							I
Engine coolant		Replace at first 45,000 miles (72,000 km) or 36 months; after that, every 30,000 miles (48,000 km) or 24 months												

*1 Vehicles not covered under *2 below.

*2 If your vehicle was initially registered in one of these listed states, the scheduled maintenance services set forth in this section apply to it:
 California, New York, Massachusetts, Connecticut, Vermont, New Jersey, Rhode Island, Delaware, Maryland, New Hampshire, Pennsylvania, Virginia, Maine, Washington DC.

*3 According to state and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended time or mileage (kilometrage) period to ensure long-term reliability.

Schedule 2 (Cont'd)

I : Inspect and repair, clean, adjust, or replace if necessary.

MAINTENANCE INTERVALS <
--

*3 According to state and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended time or mileage (kilometrage) period to ensure long-term reliability.