

Scheduled Maintenance

Follow Schedule 1 if the vehicle is operated mainly where none of the following conditions apply. If any do apply, follow Schedule 2 (Puerto Rico residents follow Schedule 2).

- Repeated short-distance driving
- Driving in dusty conditions
- Driving with an extended use of brakes
- Driving in areas where salt or other corrosive materials are being used
- Driving on rough or muddy roads
- Extended periods of idling or low-speed operation
- Driving for a prolonged period in cold temperatures or extremely humid climates

NOTE
After the described period, continue to follow the described maintenance at the recommended intervals.

Maintenance

I : Inspect and repair, clean, adjust, or replace if necessary. (Oil-permeated air filter cannot be cleaned using the air-blow method.)

R: Replace

Schedule 1

MAINTENANCE INTERVALS MAINTENANCE ITEM	Number of months or miles (kilometers), whichever comes first								
	Months	6	12	18	24	30	36	42	48
	× 1000 miles	7.5	15	22.5	30	37.5	45	52.5	60
	(× 1000 km)	(12)	(24)	(36)	(48)	(60)	(72)	(84)	(96)
Drive belts (tension)					I				I
Engine oil		R	R	R	R	R	R	R	R
Engine oil filter		R	R	R	R	R	R	R	R
Engine timing belt	*1Replace every 60,000 miles (96,000 km)								
	*2. *3Inspect for 60,000 miles (96,000 km), 90,000 miles (144,000 km) Replace every 105,000 miles (168,000 km)								
Engine valve clearance									I
Hoses and tubes for emission									I*3
Air filter					R				R
Spark plugs					R				R
Cooling system					I				I

*1 Vehicles not covered under *2 below.

*2 If your vehicle was initially registered in one of these listed states, the scheduled maintenance services set forth in this section apply to it:
California, New York, Massachusetts, Connecticut, Vermont, New Jersey, Rhode Island, Delaware, Maryland, New Hampshire, Pennsylvania, Virginia, Maine, Washington DC.

*3 According to state and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended time or mileage (kilometrage) period to ensure long-term reliability.

I : Inspect and repair, clean, adjust, or replace if necessary.
R : Replace **L** : Lubricate

Schedule 1 (Cont'd)

MAINTENANCE INTERVALS Number of months or miles (kilometers), whichever comes first									
	Months	6	12	18	24	30	36	42	48
	× 1000 miles	7.5	15	22.5	30	37.5	45	52.5	60
	(× 1000 km)	(12)	(24)	(36)	(48)	(60)	(72)	(84)	(96)
MAINTENANCE ITEM									
Engine coolant	Replace at first 45,000 miles (72,000 km) or 36 months; after that, every 30,000 miles (48,000 km) or 24 months								
Fuel filter									R* ³
Fuel lines and hoses					I* ³				I* ³
Idle speed					I* ³				I* ³
Brake lines, hoses and connections					I				I
Disc brakes					I				I
Steering operation and linkages					I				I
Front suspension ball joints					I				I
Drive shaft dust boots					I				I
Bolts and nuts on chassis and body					I				I
Exhaust system heat shields					I				I
All locks and hinges		L	L	L	L	L	L	L	L
Manual transmission oil									R
Rear differential oil									R
Air conditioner refrigerant (if installed)			I		I		I		I
Air conditioner compressor (if installed)			I		I		I		I

*3 According to state and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended time or mileage (kilometrage) period to ensure long-term reliability.

Maintenance

I : Inspect and repair, clean, adjust, or replace if necessary. (Oil-permeated air filter cannot be cleaned using the air-blow method.)

R: Replace

Schedule 2

MAINTENANCE INTERVALS 	
---	--

*1 Vehicles not covered under *2 below.

*2 If your vehicle was initially registered in one of these listed states, the scheduled maintenance services set forth in this section apply to it:
California, New York, Massachusetts, Connecticut, Vermont, New Jersey, Rhode Island, Delaware, Maryland, New Hampshire, Pennsylvania, Virginia, Maine, Washington DC.

*3 According to state and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended time or mileage (kilometrage) period to ensure long-term reliability.

I : Inspect and repair, clean, adjust, or replace if necessary.

R : Replace L: Lubricate

Schedule 2 (Cont'd)

MAINTENANCE INTERVALS MAINTENANCE ITEM	Number of months or miles (kilometers), whichever comes first												
	Months	4	8	12	16	20	24	28	32	36	40	44	48
	× 1000 miles	5	10	15	20	25	30	35	40	45	50	55	60
	(× 1000 km)	(8)	(16)	(24)	(32)	(40)	(48)	(56)	(64)	(72)	(80)	(88)	(96)
Engine coolant	Replace at first 45,000 miles (72,000 km) or 36 months; after that, every 30,000 miles (48,000 km) or 24 months												
Engine coolant level	I	I	I	I	I	I	I	I	I	I	I	I	I
Fuel filter													R*3
Fuel lines and hoses							I*3						I*3
Idle speed							I*3						I*3
Hoses and tubes for emission													I*3
Function of all lights	I	I	I	I	I	I	I	I	I	I	I	I	I
Brake lines, hoses and connections							I						I
Brake and clutch fluid level	I	I	I	I	I	I	I	I	I	I	I	I	I
Disc brakes			I				I			I			I
Tire inflation pressure and tire wear	I	I	I	I	I	I	I	I	I	I	I	I	I
Steering operation and linkages							I						I
Power steering fluid level	I	I	I	I	I	I	I	I	I	I	I	I	I
Front suspension ball joints							I						I
Bolts and nuts on chassis and body			I				I			I			I
Exhaust system heat shields							I						I
All locks and hinges	L	L	L	L	L	L	L	L	L	L	L	L	L

*3 According to state and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended time or mileage (kilometrage) period to ensure long-term reliability.

Maintenance

I : Inspect and repair, clean, adjust, or replace if necessary.

R : Replace

Schedule 2 (Cont'd)

MAINTENANCE INTERVALS MAINTENANCE ITEM	Number of months or miles (kilometers), whichever comes first												
	Months	4	8	12	16	20	24	28	32	36	40	44	48
	× 1000 miles	5	10	15	20	25	30	35	40	45	50	55	60
	(× 1000 km)	(8)	(16)	(24)	(32)	(40)	(48)	(56)	(64)	(72)	(80)	(88)	(96)
Manual transmission oil							R						R
Rear differential oil							R						R
Drive shaft dust boots							I						I
Washer fluid level	I	I	I	I	I	I	I	I	I	I	I	I	I
Air conditioner refrigerant (if installed)			I				I			I			I
Air conditioner compressor (if installed)			I				I			I			I