

MAINTENANCE SCHEDULE

NORMAL SERVICE INTERVALS

5,000 miles*	A
7,500 miles	A
15,000 miles	A
22,500 miles	A
30,000 miles	A B
37,500 miles	A
45,000 miles	A
52,500 miles	A
60,000 miles	A B C D
67,500 miles	A
75,000 miles	A
82,500 miles	A
95,000 miles	A B

Maintenance notes:

Rotate tires every 3,750 miles

A. Change: Engine oil/replace filter

B. Inspect: Drive belts, fuel lines and hoses, idle speed, brake lines and hoses, disc and drum brakes, steering operation and linkages, front suspension ball joints, driveshaft dust boots, chassis and body bolts, exhaust system and heat shields

Replace: Air filter, spark plugs (2.0L)

C. Inspect: Engine valve clearance, hoses and tubes for emission system

Replace: Spark plugs (2.5L)

D. Inspect: Engine timing belt

* Special operating conditions

† See Owner's Manual

This Quick Tips® guide is provided by MazdaTowN to make your Mazda ownership experience more convenient. It is not intended to replace your Owner's Manual.

If you have any questions about your vehicle, you are invited to contact your local dealer.

Or if you need additional help, feel free to call our

Customer Assistance Center at 1-800-222-5500

Monday through Friday,

9 am-4:45 pm, Pacific

9 am-5:45 pm, Eastern/Central



©2000 Calcar, Quick Tips® is a trademark of Calcar, made in USA. 7/00 46.8M GL Mazda North American Operations reserves the right to change product specifications at any time without incurring obligations.

 **Tip: For additional service intervals and complete details, see Owner's Manual**

626

Quick Tips®

Reference

Guide for

Controls and

 
 
Functions



2001



DRIVER'S VIEW

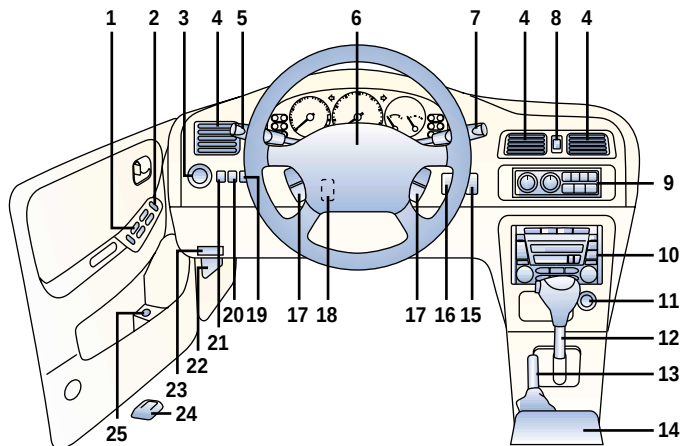

Key

Operates ignition and all locks



Tip: Use key number plate to purchase new key; store in safe place

Immobilizer system

Prevents engine from running unless coded key used, see Owner's Manual



Remote keyless entry system, see Locks

1. **Power window switches,** see Switches
2. **Power door locks,** see Locks
3. **Dual power mirrors,** see Switches
4. **Air vents**
5. **Turn signal/lighting control lever,** see Driver Controls
6. **Horn/Air bag**
7. **Wiper/washer control lever,** see Driver Controls
8. **Swing**
Press to activate/deactivate center air vent oscillation
9. **Climate control panel,** see Climate Controls
10. **Audio system,** see Audio System
11. **Accessory socket***
12. **Gearshift lever (A/T)*,** see Transmission
13. **Parking brake lever,** see Console/Trunk
14. **Console,** see Console/Trunk
15.  **Rear window defogger***
Press on/off; shuts off with ignition; also operates heated side mirrors*
16.  **Hazard warning switch**
Press on/off
17. **Cruise control,** see Driver Controls
18. **Tilt steering wheel lever**
Pull lever down to unlock column, position wheel, push lever up to lock

 


Tip: If lever does not lock move wheel up/down slightly until lever clicks into recess

19.  **Traction Control System*,** see Under Hood
20.  **Instrument panel lighting**
To brighten/dim turn thumb-wheel up/down
21.  **Fog lights***
Press on/off
22. **Fuse panel**
23.  **Hood release handle**
24.  **Remote fuel-door release**
25.  **Remote trunk-lid release**
Push to open trunk

*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features

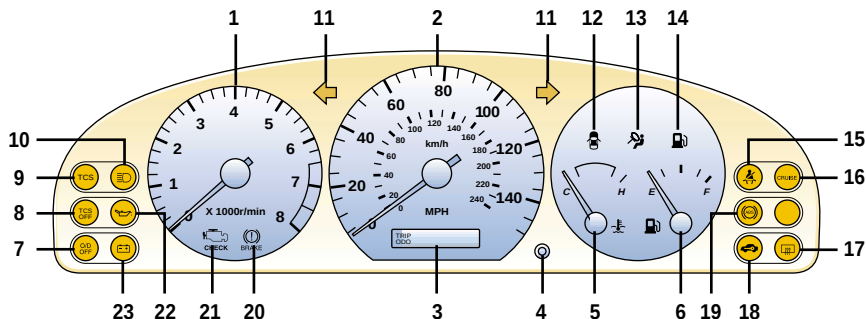


*Denotes optional equipment

GAUGES

1. **Tachometer**
2. **Speedometer**
3. **Odometer/trip odometer**
4. **Odometer/trip odometer selector**
Press to select among trip A, trip B, and odometer
Press and hold to reset selected trip meter
5. **Engine coolant temperature gauge**
If above normal range, stop vehicle and turn off engine, check coolant level when safe
6. **Fuel gauge**

WARNING LIGHTS

 7. **Overdrive indicator***, see Transmission
8. **Traction Control System***, System turned off manually or malfunctioning, dealer inspection required
9. **TCS Traction Control System***, Light flashes when in use; dealer inspection required if light remains on
10. **High beams on**
11. **Turn signals/hazard warning on**
12. **Door ajar**
13. **Air bag readiness**
Air bag malfunction, dealer inspection required
14. **Low fuel**
15. **Always fasten safety belts**
16. **Cruise control on**
17. **Rear window defogger on**
18. **Immobilizer system on**, see Driver's View
19. **Anti-lock Brake System (ABS)***
ABS malfunction, normal brakes only, dealer inspection required
20. **Brake system**
Parking brake on/low fluid level
21. **Check engine**
Dealer inspection required
22. **Engine oil pressure warning light**
23. **Charging system warning light**
Dealer inspection required

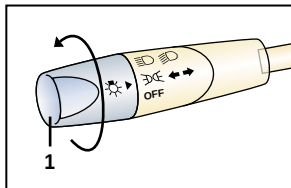

Turn signal/lighting control lever

OFF = Lights off

 
☰ = Tail, parking and dashboard lights on: Rotate knob (1) to first notch

☷ = Tail, parking, dashboard and headlights on: Rotate knob (1) to second notch

High beams on/off: Push forward/pull back to detent

To flash high beams: Pull back slightly and release

Turn signals right/left: move lever up/down

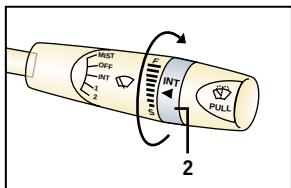

Wiper/washer control lever

Intermittent wiper:

One click down

 
To change interval speed: Rotate inner ring (2)

Normal wiper speed: Two clicks down

Fast wiper speed: Three clicks down

Single wipe: Push stalk up

Washer: Pull stalk back

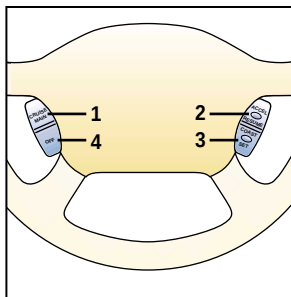

Cruise control

Operates above 25 mph

To activate: Press and release CRUISE MAIN (1)

To set speed: Press and release SET/COAST (3) at desired

 
To accelerate: Press and hold RESUME/ACCEL (2); incremental acceleration: Press and release (2), each tap = plus 1mph

To decelerate: Press and hold SET/COAST (3), release at desired speed; or tap brake pedal, press and release (3) at desired speed; incremental deceleration: Press and release (3), each tap = minus 1 mph

To cancel: Tap brake pedal, clutch pedal (manual transaxle) or press OFF button (4)

Return to preset speed (after braking): Press and release RESUME/ACCEL button (2)

SWITCHES

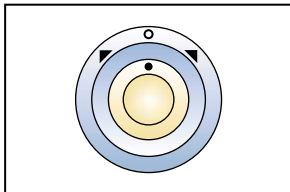


Dual power mirrors

Ignition switch must be in ACC or ON position
Switch is on left side of dash

To adjust left/right mirror:
Rotate dash knob left/right,
tilt knob in direction of desired
mirror movement

  **Tip:** To lock mirrors in place, rotate knob to center position

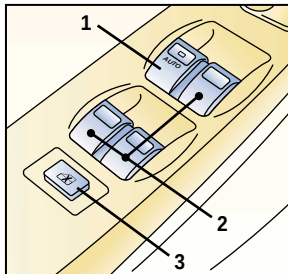

Power window switches

Ignition switch must be in ON position

All windows controlled from the driver's armrest; passenger doors have separate switches

1. Driver's window

 
One-touch-down: Push down firmly and release, window goes down all the way; pull switch back briefly to stop; press lightly and hold for normal operation

2. Passenger window switches

Push down and hold to open, pull back and hold to close

3. Power window lockout switch

Press down until click, only driver's window operates; press again and passenger windows function again

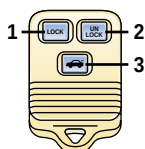

Remote keyless entry system

Functions only with ignition in OFF position

To lock doors:

Press LOCK (1); pressing again within 5 seconds causes doors to relock and horn to beep

To unlock: Press UNLOCK (2) for driver's door; press again within 5 seconds to unlock other doors

To open trunk: Press  (3)



Power door locks

5. Master front door lock switches

To lock/unlock all doors:

 
Press left/right side of switch

To lock doors without key:

With door open, press left side of door switch, exit car, close doors

To unlock: Use key to unlock driver's front door, open door and press right side of switch to unlock other three doors

 **Tip:** Doors can be locked with key in ignition (chime sounds to alert you to key in ignition)




Manual door locks

4. Lock tabs

To lock: Press front of tab toward door handle

 To unlock: Pull front of tab away from door handle

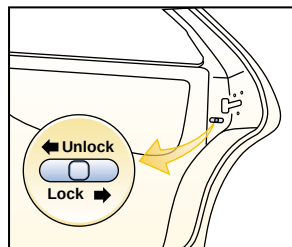

Childproof locks

Located at the edge of rear doors

 
To activate: Push tab toward LOCK; door opens from outside only

To cancel: Push tab toward UNLOCK

*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features

INTERIOR LIGHTS

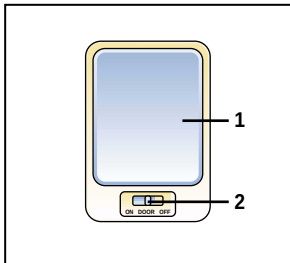

1. Interior light
2. Interior light switch

 
ON = light always on

DOOR = light on when door open

OFF = light always off

Illuminated visor mirrors

Mirrors lighted when covers open, off when closed

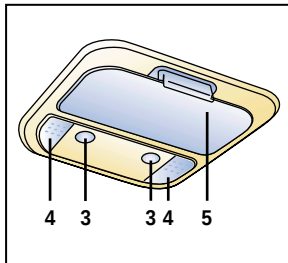


3. Map/reading light
4. Map/reading light switch

Press on/off

5. Storage

 Press lip forward to open

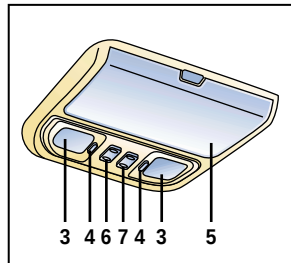

6. Sunroof tilt switch*

Press rear of switch to tilt rear of sunroof

 
Press front of switch to close

7. Sunroof slide switch*

Press rear of switch to open sunroof

Press front of switch to close

*Denotes optional equipment

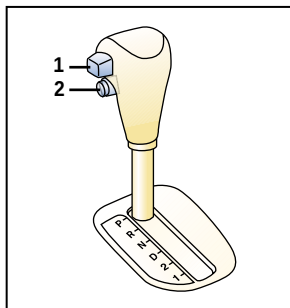

Automatic transmission*

P = Park

To move gearshift from Park: Press firmly on brake pedal, then press release button (1) on gearshift

R = Reverse

N = Neutral No gear engaged

D (Overdrive)
For normal driving: Shifts through four forward gears automatically



Tip: Torque converter lock-up improves fuel economy and can feel like an additional gear change

D (Overdrive Off)

Press (2) to disengage/engage overdrive

 
Provides extra power and increased engine braking, stops 3rd-4th gear cycling

2 = Second

Provides extra power and increased engine braking
Use to reduce wheel spin when starting on slippery surfaces

1 = Low

Use for engine braking when second gear is not sufficient

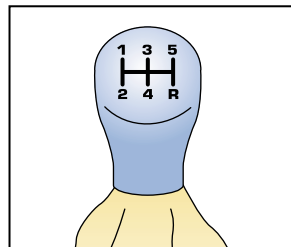

Manual transmission*

Depress clutch pedal to start engine and change gears



WARNINGS: Do not shift into 1st above 20 mph or clutch failure could occur

Resting your foot on clutch pedal while driving and using the clutch to hold your vehicle at a stand still while waiting on a hill may reduce clutch life

Manual controls

1. Fore-aft adjustment

Lift lever and hold, slide seat, release lever

2. Raise/lower front of seat

Rotate knob

3. Seat back angle

To adjust: Lift and hold lever, lean forward or backward, release lever

4. Head restraint

To raise/lower: Pull up/push in release button (5) and push down

⚠️ WARNINGS: Always wear your safety belt and properly secure children 12 and under in the rear seat

If you choose to install a forward-facing child safety seat in the front seating positions, move vehicle seat as far back as possible

Air bag is supplemental and does not replace safety belt usage

Do not adjust seat while driving



Power driver's seat*

6. Raise/lower front of seat

Pull/push front of switch vertically

Fore/aft adjustment

Slide switch horizontally

Raise/lower rear of seat

 
 
Pull/push rear of switch vertically

Raise/lower seat cushion

Pull/push center of switch vertically

💡 Tip: Side-impact air bags* deploy from outboard side of driver and front passenger seat backs


Folding rear seat backs, see Console/Trunk

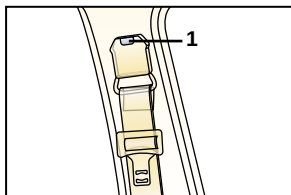

Shoulder belt height adjustment

To raise/lower belt: Push release button (1) and slide to desired location

 ⚠️ WARNING: Make sure adjuster locks in one of its positions

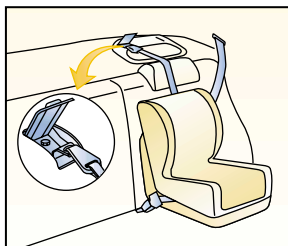

Child-restraint seat

Use dual locking mode retractor safety belt; see Owner's Manual for proper installation and child-restraint seat tether instructions

⚠️ WARNINGS: Children less than 4 years old and under 40 pounds should always use a child safety seat

Do not place rear-facing child safety seat in front seat

Dual locking mode lap/shoulder belt retractor (front passenger and rear safety belts only)

Emergency locking mode: Belt locks only on hard braking/cornering or impacts of about 5 mph or more

Automatic locking mode: Must be used when installing child-restraint seat

To activate: Pull webbing fully out of retractor until click is heard; belt will only tighten

To disengage: Unbuckle belt and allow webbing to retract fully

*Denotes optional equipment

CLIMATE CONTROLS

1. Fan control

Rotate knob between ○ (OFF) and 4 (HIGH)

2. Temperature control

Cooler/warmer = rotate knob counterclockwise/clockwise

3. = air to dash

4. = air to dash and floor

 
5. = air to floor

6. = air to floor and windshield

7. = air to windshield (defrost)

8. A/C* = air conditioner Press to turn on/off

9. = recirculated air Press on/off; use for maximum heating/cooling or to keep outside odors out

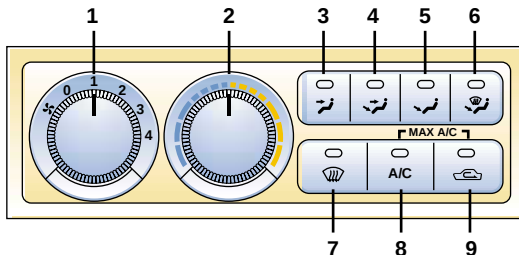

Warning: Do not use  position in cold weather, windows may fog and hamper vision

 
Oscillating center air vents, see Driver's View

Control positions for maximum defrost

Fan to maximum, temperature to maximum hot,  selected

Tips: To help prevent windshield fogging in humid weather, select  before starting engine

To prevent moisture buildup, never drive with system off
Objects placed under the front seats may interfere with air flow to the rear

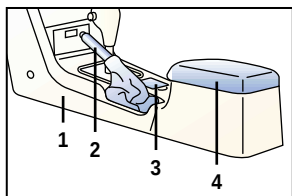

1. Console

 
2. Parking-brake lever

To engage: Pull up

To release: Pull up slightly while depressing button at front of lever, lower hand brake lever

3. Cup holder

4. Storage bin

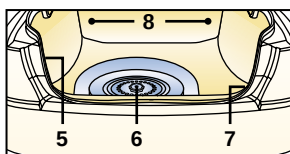

Trunk

To open: Use key or remote keyless entry fob

Remote trunk release,

see Driver's View

5. Trunk security switch

OFF = trunk only opens with primary key

 = trunk unlocked; normal operation

6. Spare tire

Stored under panel in trunk

Temporary spare tire

Do not exceed 50 mph

To change flat tire: Follow instructions in Owner's Manual

7. Jack

Stored behind right rear panel

 
8. Rear seatback lock

To disable/enable folding seats move knob to lock/unlock

Split rear folding seatback*

To fold: unfasten the lap portion of the rear center seat belt pull release knob, push seat back down

To return and lock: Push seat back firmly until latched, re-attach center belt



Interior luggage compartment release*

Allows you to escape should you become locked in trunk

To open: Pull "T" handle; "T" handle will glow if it has been exposed to light

*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features

1. Power/Volume

Press to turn on/off; rotate to increase/decrease volume

2. Memory preset buttons

To set: Tune to station, press and hold until beep is heard

3. SEEK/TRACK/APC

 
Radio: Press Δ / ∇ to automatically seek higher/lower frequency

CD: Press Δ / ∇ to select next/previous track

Tape: Press APC button Δ / ∇ to automatically advance tape to beginning of next selection/replay selection, to stop this operation; press button again

4. Load*

Single CD loading: Press button, WAIT will appear; when IN appears and CD door opens, load CD

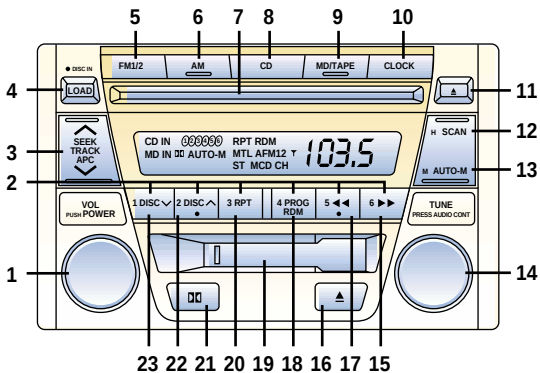

AM/FM Radio with Cassette Tape*/Mini-disc* and Compact Disc Player/Changer*

Multiple CD loading: Press and hold LOAD until beep is heard; when IN is displayed load CD; when IN displays again load next CD

5. FM1/2

Press to select between FM1/FM2 station preset buttons (2)

6. AM

Press to select AM frequency band

7. CD Slot

8. CD

Press to play CD

9. MD/Tape

Press to play Mini-disc Player*/cassette tape

10. Clock

To set: Press (10) and hold until display blinks and then press Minutes (13)/Hours (12) to advance; press (10) again to set

11. CD eject

12. Scan

Press to briefly sample next listenable selections; functions in all modes

13. Auto-Memory

Radio: Press and hold until it beeps, system automatically scans and temporarily stores 6 strong stations in each band; press again to cancel

14. Tuning/Audio Control

Tune: Rotate counterclockwise/clockwise for lower frequency/higher frequency
Audio control: Press to select BASS/MID/TREBLE/FADE/BALANCE: rotate right/left to adjust selected feature

15. Fast forward/Rewind

Press to fast forward

16. Eject Cassette Tape

17. Reverse/Rewind

Press to rewind tape

18. Program Random

Press to enable/cancel random play

19. Cassette*/Mini-disc* door

Press to replay current CD/tape selection

20. Repeat

Press to activate/deactivate

21. Dolby®

Reduces tape noise/hiss
Press to activate/deactivate

22. Disc up Δ

Press to skip forward to beginning of next CD

23. Disc down ∇

Press to skip back to beginning of previous CD

*Denotes optional equipment

1. Windshield washer reservoir

Fill with windshield washer fluid

2. Power steering fluid reservoir

Check with engine off and at normal temperature, fill to MAX mark


3. Engine oil dipstick

Check with engine off and at operating temperature; fluid level should be between F and L marks on dipstick


4. Engine oil filler cap

SAE 5W-30/10W-30 depending on temperature

 5. Air filter

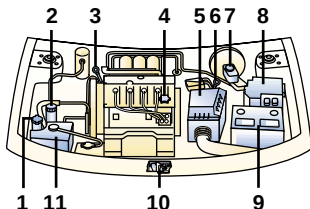

 2.0-liter 4-cylinder

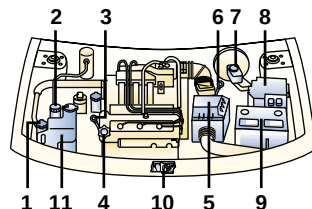

2.5-liter V6

6. Automatic transmission fluid dipstick*

Check with engine on at operating temperature; fluid level should be within cross-hatched area/between top two notches on dipstick

7. Brake/Clutch* fluid reservoir

Fill to MAX mark with DOT 3 fluid; check with cap on

8. Fuse block

9. Battery

10. Hood latch

Push hood latch to the left, open hood

11. Engine coolant reservoir

Level should be between F and L lines when cold

⚠ WARNING: Never remove coolant reserve tank cap while engine is running or hot; remove only when safe

Break-in period

First 600 miles: Drive at varying road and engine speeds; avoid full throttle, rapid acceleration or kick-down of transmission. Do not use special "break-in" oils

💡 Tip: Follow same procedures with overhauled engine or when brakes are replaced

Anti-lock Braking System (ABS)*

ABS automatically reduces hydraulic pressure to any wheel on the verge of locking up. You may feel a slight pulsing of the brake pedal and hear a clicking noise; this tells you the ABS is functioning properly; increase pressure on pedal for maximum braking

💡 Tips: Maintain constant pressure on the brake pedal. Do not pump the brakes

ABS self test*

A self-diagnostic test is performed when starting; you may feel some brake pedal pulsation and hear some noise, this is normal

Traction Control System*

Automatically applies and releases brakes to prevent excessive wheel spin at all speeds, especially when accelerating on slippery surfaces

Tire economy and tips

Check pressure at least monthly when tires are cold. Maintain correct front-end alignment and tire balance; rotate tires at the mileage shown in the Maintenance Guide; see Owner's Manual for rotation chart

 
Tire pressure

Decal on the edge of the driver's door provides tire pressure information

Snow chains

Install only on front tires; install as tightly as possible and retighten periodically

⚠ WARNING: Use only SAE Class "S" chains

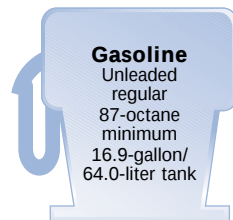

*Denotes optional equipment