

Scheduled Maintenance

Follow Schedule 1 if the vehicle is operated mainly where none of the following conditions applies. If any of them apply, follow Schedule 2 (Puerto Rico residents follow Schedule 2).

- Repeated short-distance driving
- Driving in dusty conditions
- Driving with an extended use of brakes
- Driving in areas where salt or other corrosive materials are being used
- Driving on rough or muddy roads
- Extended periods of idling or low-speed operation
- Driving for a prolonged period in cold temperatures or extremely humid climates

Maintenance

NOTE

After the described period, continue to follow the described maintenance at the recommended intervals.

I : Inspect and repair, clean, adjust, or replace if necessary

R : Replace

Schedule 1

MAINTENANCE INTERVALS MAINTENANCE ITEM	Number of months or miles (kilometers), whichever comes first								
	Months	6	12	18	24	30	36	42	48
	× 1000 km	12	24	36	48	60	72	84	96
	(× 1000 miles)	(7.5)	(15)	(22.5)	(30)	(37.5)	(45)	(52.5)	(60)
Engine valve clearance									I
Engine oil		R	R	R	R	R	R	R	R
Engine oil filter		R	R	R	R	R	R	R	R
Drive belts (tension)					I				I
Engine timing belt		Inspect for 96,000 km (60,000 miles) Replace every 168,000 km (105,000 miles)							

I : Inspect and repair, clean, adjust, or replace if necessary
(Oil-permeated air filter cannot be cleaned using the air-blow method.)

R : Replace

Schedule 1 (Cont'd)

MAINTENANCE INTERVALS MAINTENANCE ITEM		Number of months or miles (kilometers), whichever comes first								
		Months	6	12	18	24	30	36	42	48
		× 1000 km	12	24	36	48	60	72	84	96
		(× 1000 miles)	(7.5)	(15)	(22.5)	(30)	(37.5)	(45)	(52.5)	(60)
Hoses and tubes for emission									I*1	
Air filter					R				R	
Spark plugs	2.0-liter engine				R				R	
	2.5-liter engine	Replace every 96,000 km (60,000 miles)								
Idle speed					I				I	
Fuel lines and hoses					I*1				I*1	
Cooling system					I				I	
Engine coolant		Replace at first 168,000 km (105,000 miles) or 60 months; after that, every 48,000 km (30,000 miles) or 24 months								
Brake lines, hoses and connections					I				I	

*1 According to state and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended time or kilometrage (mileage) period to ensure long-term reliability.

Maintenance

I : Inspect and repair, clean, adjust, or replace if necessary

L : Lubricate

Schedule 1 (Cont'd)

MAINTENANCE INTERVALS MAINTENANCE ITEM	Number of months or miles (kilometers), whichever comes first								
	Months	6	12	18	24	30	36	42	48
	× 1000 km	12	24	36	48	60	72	84	96
	(× 1000 miles)	(7.5)	(15)	(22.5)	(30)	(37.5)	(45)	(52.5)	(60)
Drum brakes					I				I
Disc brakes					I				I
Steering operation and linkages					I				I
Front suspension ball joints					I				I
Driveshaft dust boots					I				I
Bolts and nuts on chassis and body					I				I
Exhaust system heat shields					I				I
All locks and hinges		L	L	L	L	L	L	L	L
Air-conditioner refrigerant (if installed)			I		I		I		I
Air-conditioner compressor (if installed)			I		I		I		I

I : Inspect and repair, clean, adjust, or replace if necessary

R : Replace

Schedule 2

MAINTENANCE INTERVALS MAINTENANCE ITEM		Number of months or miles (kilometers), whichever comes first												
		Months	4	8	12	16	20	24	28	32	36	40	44	48
		× 1000 km	8	16	24	32	40	48	56	64	72	80	88	96
		(× 1000 miles)	(5)	(10)	(15)	(20)	(25)	(30)	(35)	(40)	(45)	(50)	(55)	(60)
Engine valve clearance													I	
Engine oil	Except Puerto Rico	R	R	R	R	R	R	R	R	R	R	R	R	
	Puerto Rico	Replace every 5,000 km (3,000 miles) or 3 months												
Engine oil filter		R	R	R	R	R	R	R	R	R	R	R	R	
Drive belts (tension)							I						I	
Engine timing belt		*2Inspect for 96,000 km (60,000 miles) Replace every 168,000 km (105,000 miles)												
Hoses and tubes for emission													I*1	
Air filter				I*1			R			I*1			R	

*1 According to state and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended time or kilometrage (mileage) period to ensure long-term reliability.

*2 If the vehicle is operated in cold districts {below -18°C (0°F)}, replace the timing belt at 96,000 km (60,000 miles).

Maintenance

I : Inspect and repair, clean, adjust, or replace if necessary
(Oil-permeated air filter cannot be cleaned using the air-blow method.)

R : Replace

Schedule 2 (Cont'd)

MAINTENANCE INTERVALS MAINTENANCE ITEM		Number of months or miles (kilometers), whichever comes first												
		Months	4	8	12	16	20	24	28	32	36	40	44	48
		× 1000 km	8	16	24	32	40	48	56	64	72	80	88	96
		(× 1000 miles)	(5)	(10)	(15)	(20)	(25)	(30)	(35)	(40)	(45)	(50)	(55)	(60)
Spark plugs	2.0-liter engine						R						R	
	2.5-liter engine	Replace every 96,000 km (60,000 miles)												
Idle speed							I						I	
Fuel lines and hoses							I*1						I*1	
Cooling system							I						I	
Engine coolant		Replace at first 168,000 km (105,000 miles) or 60 months; after that, every 48,000 km (30,000 miles) or 24 months												
Engine coolant level		I	I	I	I	I	I	I	I	I	I	I	I	
Function of all lights		I	I	I	I	I	I	I	I	I	I	I	I	
Brake lines, hoses and connections							I						I	

*1 According to state and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended time or kilometrage (mileage) period to ensure long-term reliability.

I : Inspect and repair, clean, adjust, or replace if necessary

L : Lubricate

Schedule 2 (Cont'd)

MAINTENANCE INTERVALS MAINTENANCE ITEM	Number of months or miles (kilometers), whichever comes first												
	Months	4	8	12	16	20	24	28	32	36	40	44	48
	× 1000 km	8	16	24	32	40	48	56	64	72	80	88	96
	(× 1000 miles)	(5)	(10)	(15)	(20)	(25)	(30)	(35)	(40)	(45)	(50)	(55)	(60)
Brake and clutch fluid level		I	I	I	I	I	I	I	I	I	I	I	I
Drum brakes							I						I
Disc brakes				I			I			I			I
Tire inflation pressure and tire wear		I	I	I	I	I	I	I	I	I	I	I	I
Steering operation and linkages							I						I
Power steering fluid level		I	I	I	I	I	I	I	I	I	I	I	I
Front suspension ball joints							I						I
Driveshaft dust boots							I						I
Bolts and nuts on chassis and body				I			I			I			I
Exhaust system heat shields							I						I
All locks and hinges		L	L	L	L	L	L	L	L	L	L	L	L

Maintenance

I : Inspect and repair, clean, adjust, or replace if necessary

Schedule 2 (Cont'd)

MAINTENANCE INTERVALS MAINTENANCE ITEM	Number of months or miles (kilometers), whichever comes first												
	Months	4	8	12	16	20	24	28	32	36	40	44	48
	× 1000 km	8	16	24	32	40	48	56	64	72	80	88	96
	(× 1000 miles)	(5)	(10)	(15)	(20)	(25)	(30)	(35)	(40)	(45)	(50)	(55)	(60)
Washer fluid level		I	I	I	I	I	I	I	I	I	I	I	I
Air-conditioner refrigerant (if installed)				I			I			I			I
Air-conditioner compressor (if installed)				I			I			I			I