

MAINTENANCE SCHEDULE

NORMAL SERVICE INTERVALS

5,000 miles*	A
7,500 miles	A
15,000 miles	A
22,500 miles	A
30,000 miles	A B
37,500 miles	A
45,000 miles	A C
52,500 miles	A
60,000 miles	A B D
67,500 miles	A
75,000 miles	A C
82,500 miles	A
90,000 miles	A B

Maintenance notes:

Rotate tires every 3,750 miles
Replace cabin air filter once a year or every 12,000 miles†

A. Change: Engine oil/replace filter

B. Inspect: Drive belts, fuel lines and hoses, idle speed, brakelines, hoses and connections, disc and drum brakes, steering operation and linkages, front suspension ball joints, driveshaft dust boots, chassis and body bolts, exhaust system and heat shields

Replace: Air filter, brake fluid

Lubricate: All locks and hinges

C. Change: Engine coolant

D. Inspect: PVC valve, hoses and tubes for emission system

Replace: Spark plugs

* Special operating conditions

† See Owner's Manual

This Quick Tips® guide is provided by MazdaTown to make your Mazda ownership experience more convenient. It is not intended to replace your Owner's Manual.

If you have any questions about your vehicle, you are invited to contact your local dealer.

Or if you need additional help, feel free to call our

Customer Assistance Center
at **1-800-222-5500**

Monday through Friday,
8 am-5 pm



©2001 Calcar. Quick Tips® is a trademark of Calcar, made in USA 7/00 46M GL. Mazda North American Operations reserves the right to change product specifications at any time without incurring obligations.

 **Tip:** For additional service intervals and complete details, see Owner's Manual

2001



MPV

Quick Tips®

Reference

 
 
Guide for

Controls and

Functions



DRIVER'S VIEW

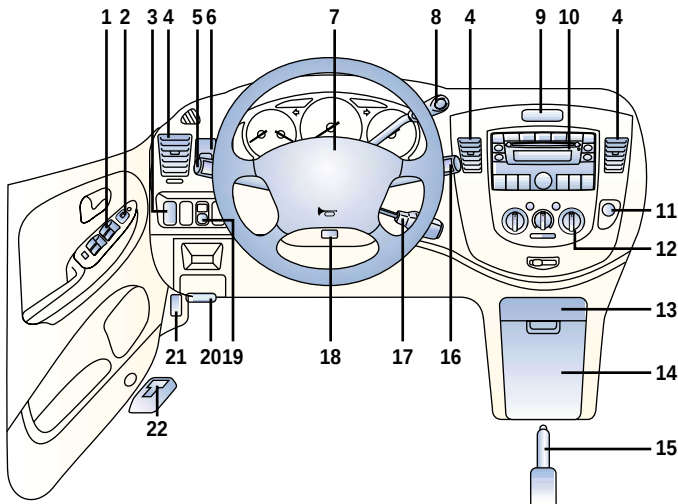

Key
Operates ignition and all locks

Tip: Use key number plate to purchase a new key; store in safe place separate from vehicle


Immobilizer system*
Prevents engine from starting unless coded key used; see Owner's Manual

Remote Keyless Entry System*,
see Locks

- 1. Power window switches*,**
see Switches/Locks
- 2. Power door locks*,**
see Locks
- 3. Fog lights***
Press on/off; functions only with headlight low beams on
- 4. Air vents**
- 5. Turn signal/lighting control lever,**
see Driver Controls
- 6. Power outside mirror switch*,** see Switches
- 7. Horn and driver's air bag**
- 8. Gearshift lever,**
see Transaxle
- 9. Hazard warning switch**
Push on/off
- 10. Audio system,**
see Audio System
- 11. Lighter**
- 12. Climate control panel,**
see Climate Controls
- 13. Cupholder/ashtray**
- 14. Front console**
- 15. Parking brake lever**
- 16. Wiper/washer lever,**
see Driver Controls
- 17. Cruise control lever*,**
see Driver Controls
- 18. Tilt steering wheel lever**
Pull lever down, position wheel; push lever up
- 19. Instrument panel lighting**
Turn thumb-wheel up/down to increase/decrease intensity
- 20. Hood release handle**
- 21. Fuse panel**
- 22. Remote fuel door release**

*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features

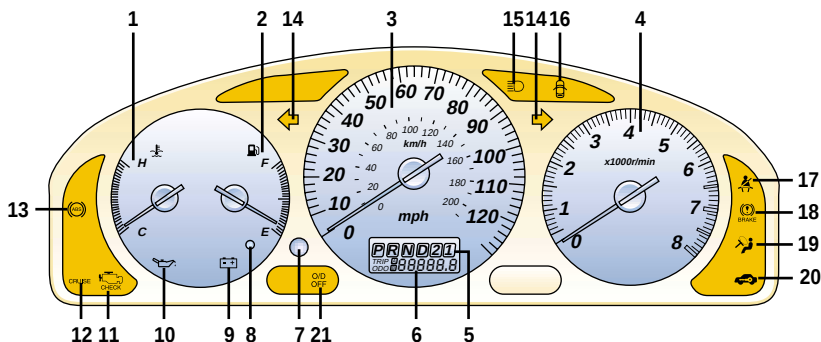


GAUGES

- 1. Coolant temperature gauge**
If above normal range, stop vehicle and turn off engine; check coolant level when safe
- 2. Fuel gauge**
18.5-gallon/70-liter tank
- 3. Speedometer**
- 4. Tachometer**
- 5. Gear indicator**
- 6. Odometer/trip meter**
- 7. Odometer/trip meter select button**
Press to select odometer, trip A or trip B
Press and hold to reset selected trip odometer
- 8. Low fuel level**

WARNING LIGHTS

- 9. Charging system warning light**
Dealer inspection required
- 10. Low engine oil pressure warning light**
Stop vehicle and turn off engine; check oil level
- 11. Check engine**
Possible faulty emission control, dealer inspection required, or fuel filler cap not tight
- 12. CRUISE Cruise control***
- 13. Anti-lock Brake System (ABS)***
ABS malfunction, normal brakes only, dealer inspection required
- 14. Turn signals/hazard warning on**
- 15. High beams on**
- 16. Door ajar**
- 17. Always fasten safety belts**
- 18. Brake system**
Parking brake on/low fluid level
- 19. Air bag readiness**
Air bag malfunction, dealer inspection required
- 20. Immobilizer system/security light***
- 21. Overdrive off indicator, see Transaxle**
Lights when the overdrive button is in the off position

*Denotes optional equipment

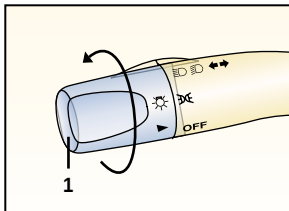

Turn signal/lighting control lever

OFF = Lights off


☞☜ = Tail, parking and dashboard lights on: Rotate knob (1) to first notch

☞☜☞☜ = Tail, parking, dashboard and head lights on: Rotate knob (1) to second notch

High beams on/off: Push lever forward to detent/pull back to detent

To flash high beams: Pull lever back slightly and release

Turn signals right/left: Move lever up/down

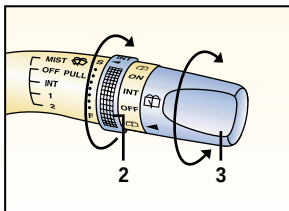

Wiper/washer control lever

To activate interval wipers:

Push lever down to first detent and rotate knob (2) to desired speed

To activate wiper normal or low speed: Push down to second detent

To activate high speed: Push lever down to third detent


To activate washer: Pull lever back

To activate mist: Push lever up and release

To activate rear interval wiper: Rotate knob (3) up to INT

To activate rear normal speed wiper: Rotate knob (3) up to ON

To activate rear washer: Rotate knob (3) to and release

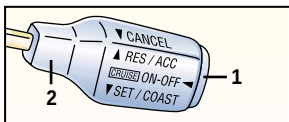

Cruise control*

Operates above 25 mph

Press and release main switch (1)

To set speed: Accelerate to desired speed and move lever (2) down and release

To decelerate: Move lever (2) down and release at desired speed; or tap brake pedal


Move lever (2) down at desired speed

Incremental deceleration: Move lever (2) down and release; each tap = minus 1 mph

Incremental acceleration: Move lever up and release; each tap = plus 1 mph

To cancel: Tap brake pedal, pull lever (2) back or press main switch (1) again

Return to preset speed (after braking): Move lever (2) up and release

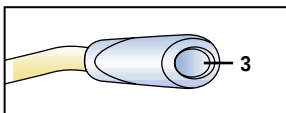

Automatic transaxle

P = Park

To move gearshift from Park: Press firmly on brake pedal

R = Reverse

N = Neutral

No gear engaged

D (Overdrive)

For normal driving: Shifts through four forward gears automatically

Tip: Torque converter lock-up improves fuel economy and can feel like an additional gear

D (Overdrive Off)

Press overdrive off switch (3) to disengage/engage overdrive; indicator light on instrument panel will illuminate; shifts through three forward gears automatically

Provides extra power and increased engine braking; stops 3rd-4th gear cycling in stop/go driving


2 = Second

Provides extra power and increased engine braking Use to reduce wheel spin when starting on slippery surfaces

1 = First

Use for engine braking when 2nd is not sufficient

*Denotes optional equipment

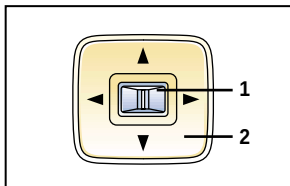


Power remote outside mirrors*

Operates only with ignition on

To adjust left/right mirror:

Slide selector switch (1) left/right, press perimeter switch (2) in direction of desired mirror movement

 **Tip:** To lock mirrors in place, move switch to center position

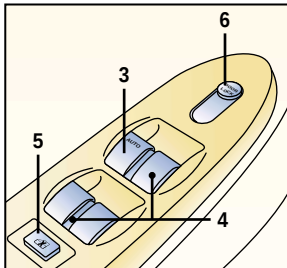

Power windows*

Operate only with ignition on

All windows controlled from driver's door; passenger doors have separate switches

Driver's window: "One-touch" down: Press switch (3) and release, window goes down all the way, lift switch to close

Passenger window switches (4): Push/lift switch to open/close

Power window lock switch (5)

Push switch, only driver's window functions; press again, all windows operate


Master front door lock switches

To lock/unlock all doors: Press front/rear of switch (6)

To lock doors without key: With door open, press front of switch (6), exit vehicle, close doors

To lock/unlock with key: Turn key in driver's door clockwise/ counterclockwise

 **Tip:** Doors can be locked with key in ignition (chime sounds to alert you key is in ignition)

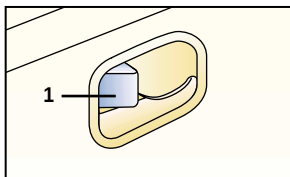

Door lock tabs

1. Front door lock tabs


To lock: Press front of lock tab

To unlock: Pull lock tab out

2. Sliding door lock tabs

To lock: Push tab down

To unlock: Pull tab up

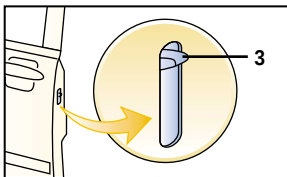


Childproof locks

Located at the edge of rear doors

To activate: Push tab (3) down; door opens from outside only

To cancel: Pull tab up

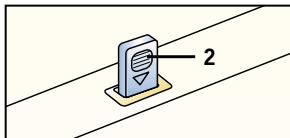

Remote Keyless Entry System*

Functions only with ignition in OFF position

To lock doors: Press LOCK

button (4); pressing again within 5 seconds causes doors to relock and horn to beep

To unlock: Press UNLOCK button (5) for driver's door; press again within 5 seconds to unlock other doors

Panic alarm: Press ! button (6); horn sounds, headlights/hazard warning lamps flash; press (6) again to stop or turn ignition to ON position

*Denotes optional equipment

Manual seat controls

1. Fore-aft adjustment

Lift lever, slide seat

2. Head restraint

To raise/lower:

Pull up/push stop-catch (5) and push down


3. Seat back angle

To adjust:

Lift and hold lever, lean forward or backward, release lever

4. Seat tilt (Driver's only)*

Rotate front/rear dial to change angle of seat front/rear

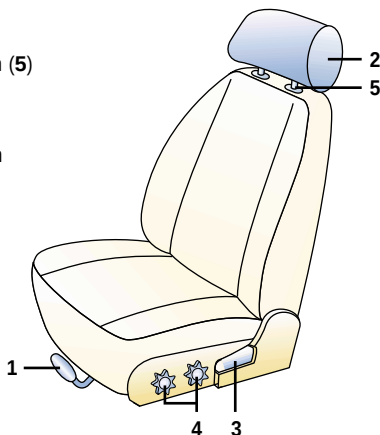

⚠ WARNINGS: Do not adjust seats while driving


Do not place rear-facing child safety seat in front seat

Safety belts must always be worn when vehicle is in motion

Air bag is supplemental and does not replace safety belt usage

Always wear your safety belt and properly secure children 12 and under in the rear seat
See Owner's Manual for all important child safety seat information

*Denotes optional equipment

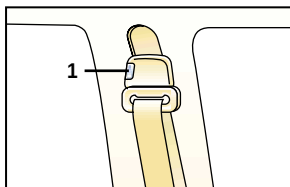

Shoulder belt height adjustment

To raise/lower belt: Push button (1) and move belt to desired position

⚠ WARNING: Make sure adjuster locks in position

For special rear seat operations, see Owner's Manual


Dual locking mode lap/shoulder belt retractor (Front passenger and rear retractable safety belts only)

Emergency locking mode: Belt locks only on hard braking/cornering or impacts of about 5 mph or more

Automatic locking mode: Must be used when installing child safety seat

To activate: Pull webbing fully out of retractor until click is heard; belt will only tighten

To disengage: Unbuckle belt and allow webbing to retract fully

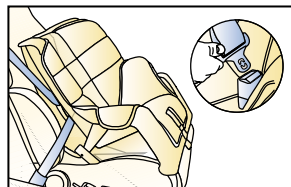


Child safety seat

To install: Use dual locking mode retractor safety belt; see Owner's Manual for seating positions, proper installation and child seat tether instructions

⚠ WARNINGS: Read all information and warnings in Owner's Manual and attached to seat before using child safety seat or built-in child seat

Children less than 4 years old and under 40 pounds should always use a safety seat

CLIMATE CONTROLS

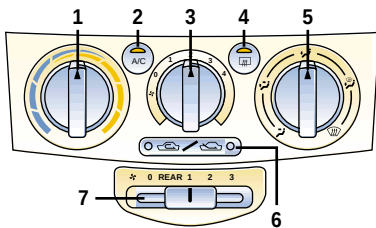

1. Temperature control

Rotate knob to blue for cool/red for warm
Control positions for maximum defrost
 Fan to maximum, temperature to maximum hot, air flow selector knob to

2. Air Conditioning

Press on/off

3. Fan control

Rotate knob

4. Rear window defrost

Press on/off, shuts off with ignition or cycles off/on after 20 minutes

5. Air flow selections

- = air to dash
- = air to dash and floor
- = air to floor
- = air to floor and windshield
- = air to windshield

6. Air intake selection switch

Press / for cooling with inside/outside air

7. Rear air conditioning switch*

0 = fan off

REAR = select fan speed from rear control

1 = low


2 = medium

3 = high

Tips: To help prevent windshield fogging in humid weather, select before starting engine


To prevent moisture buildup, never drive with system off

Objects placed under the front seats may interfere with air flow to the rear

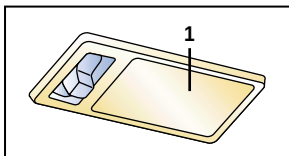

1. Liftgate light

OFF = Light always off
 ON = Light on if door open

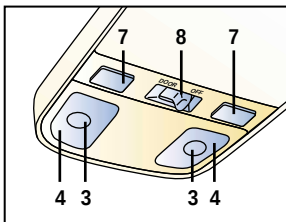

3. Map lights

On/off: Press switches (7)


4. Interior lights

Slide switch (8)

OFF = Lights always off

DOOR = Lights on if door open

Rotate switch (9) clockwise/counterclockwise for DOOR/OFF

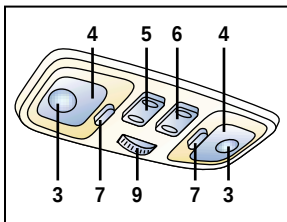


5. Sunroof tilt switch*

To tilt/close: Press and hold rear/front of switch

6. Sunroof slide switch*

To open: Press and hold rear of switch until panel is in desired position

To close: Press and hold front of switch

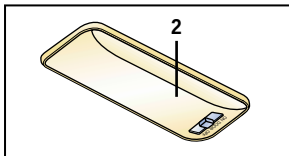


2. Rear interior light

ON = Light always on
 DOOR = Light on if door open
 OFF = Light always off

*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features

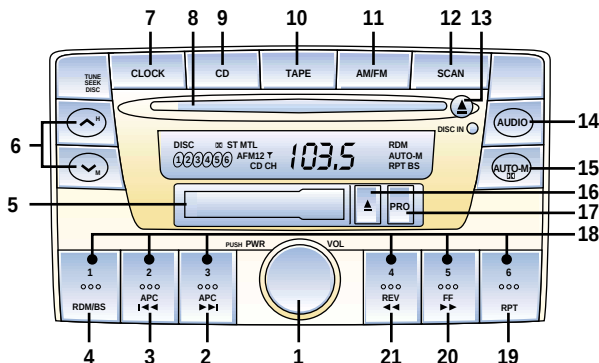

**AM/FM Radio with Cassette and CD Player*
(CD Changer* Compatible)**

1. Power/Volume

Press to turn on/off; rotate to increase/decrease volume

2. APC ►►►

Press to forward to next CD track

3. APC ◄◄◄

Press to go back to current CD track

4. RDM/BS

CD: Press for random play
Tape: Press to skip long silent intervals

5. Cassette door

6. Tune/Seek/Disc

Radio: Press $\wedge$ / $\vee$ to select frequency up/down
Seek: Press and hold $\wedge$ / $\vee$ until beep is heard, tuner automatically seeks higher/lower frequency
CD Changer*: Press $\wedge$ / $\vee$ for next/previous CD

7. Clock

To set: Press CLOCK until beep is heard; press (6) $\wedge$ / $\vee$ to set hours/minutes

8. CD slot

9. CD:

Press to play CD

10. Tape:

Press to play tape

11. AM/FM1/FM2

Press to alternate among AM/FM1/FM2 frequency bands

12. Scan

Press to briefly sample next listenable selections, press again to cancel; functions in all modes

13. CD Eject

14. Audio

To select BASS/TREBLE/FADE/BALANCE: Press audio (14); rotate power/volume knob (1) right/left to increase/decrease level

15. AUTO-M

Radio: Automatically selects up to 6 strong radio stations
To set: Select AM/FM; press and hold AUTO-M until beep is heard; press again to deactivate
Tape: Press to reduce noise and hiss; press again to deactivate

16. Cassette eject

17. PRO

Press to play opposite side of tape

18. Memory presets 1-6

To set: Press and hold until beep is heard

19. RPT

Press to replay current CD/tape selection


20. FF

Press to fast forward CD/tape tracks

21. REW

Press to reverse through CD/tape tracks

*Denotes optional equipment

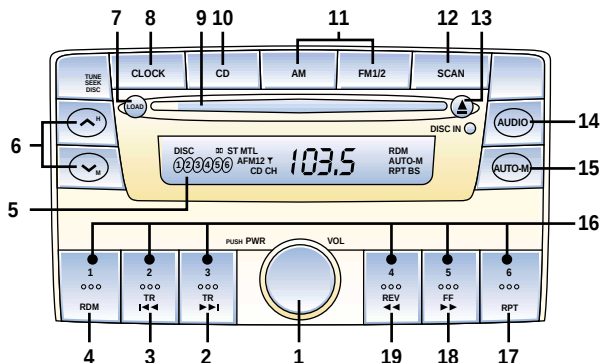

**AM/FM Radio with Single CD Player* (CD Changer* Compatible)/
AM/FM Radio with In-Dash 6 CD Changer***

1. Power/Volume

Press to turn on/off; rotate to increase/decrease volume

2. TR ►►►

Press to forward to next CD track

3. TR ◄◄◄

Press to go back to current CD track

4. RDM

Press for random CD selections; press again to disengage

5. Display

6. Tune/Seek/Disc

Radio: Press $\wedge$ / $\vee$ to select frequency up/down
CD Changer*: Press $\wedge$ / $\vee$ for next/previous CD

Seek: Press and hold $\wedge$ / $\vee$ until beep is heard, tuner automatically seeks higher/ lower frequency

7. Load*

Press button: WAIT will appear, when IN appears and CD door opens; load CD

Multiple CD loading

Press and hold LOAD until beep is heard; when IN is displayed, load CD; when IN displays again, load next CD

8. Clock

Press CLOCK until beep is heard; press (6) $\wedge$ / $\vee$ to set hours/minutes

9. CD slot

10. CD:

Press to play CD

11. AM/FM1/FM2

Press to select AM/FM1/FM2 frequency bands

12. Scan

Press to briefly sample next listenable sections, press again to cancel; functions in all modes

13. CD Eject

14. Audio

To select BASS/TREBLE/FADE/ BALANCE: Press audio (14); rotate power/volume knob (1) right/left to increase/decrease level

15. AUTO-M

Automatically selects up to 6 strong radio stations
To set: Select AM/FM; press and hold AUTO-M until beep is heard; press again to deactivate

16. Memory presets 1-6

To set: Press and hold until beep is heard

17. RPT

Press to replay current CD selection

18. FF


Press to fast forward CD tracks

19. REV

Press to reverse through CD tracks

*Denotes optional equipment

2.5-liter 24V V6

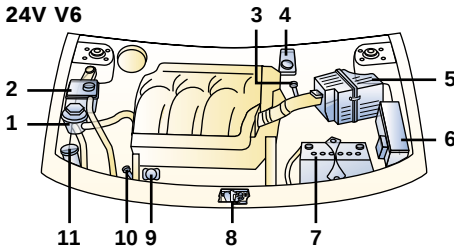

1. Power steering fluid reservoir

Check with engine off; fill to MAX mark

2. Engine coolant reservoir

Level should be between F and L when cold

⚠ WARNING: Never remove coolant reserve tank cap while engine is running or hot; remove only when safe

3. Automatic transaxle fluid dipstick

Check with engine on at operating temperature; fluid level should be within v-notches on dipstick

4. Brake fluid reservoir

Level should be kept at the MAX mark on reservoir; fill with DOT 3 fluid from a sealed container

5. Air filter

6. Power distribution box (fuses and relays)

7. Battery

8. Hood latch

Pull hood latch up, open hood

9. Engine oil filler cap

SAE 5W-30 recommended for all temperatures

10. Engine oil dipstick

Check with engine off and at operating temperature; do not fill above MAX line

11. Windshield washer reservoir

Fill with windshield washer fluid

Break-in period

First 600 miles: Avoid heavy braking and acceleration; drive at varying road and engine speeds

💡 Tip: Follow same procedures with overhauled engine or when brakes are replaced

Anti-lock Brake System (ABS)*

When brake pedal is pressed, ABS automatically reduces hydraulic pressure to any wheel on the verge of locking up

You may feel a slight pulsing of the brake pedal and hear a clicking noise; this tells you the ABS is functioning properly; increase pressure on pedal for maximum braking

**💡 Tips: Maintain constant pressure on the brake pedal
Do not pump the brakes**

Tire economy and tips

Check pressure at least monthly when tires are cold

Maintain correct front-end alignment and tire balance; rotate tires at 3,750-mile intervals; see Owner's Manual for rotation chart


Tire pressure

Decal on the edge of the driver's door provides tire pressure information

Tire chains*

Tire chains can damage aluminum wheels; use on steel wheels only

💡 Tip: Use only SAE class "S" chains, install only on rear tires; install as tightly as possible and retighten periodically

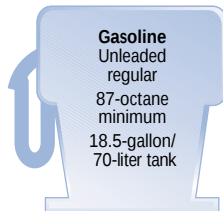

*Denotes optional equipment