

Scheduled Maintenance (Except Chile)

Follow Schedule 1 if the vehicle is operated mainly where none of the following conditions apply. If any do apply, follow Schedule 2 (Puerto Rico residents follow Schedule 2).

- Repeated short-distance driving
- Driving in dusty conditions
- Driving with extended use of brakes
- Driving in areas where salt or other corrosive materials are used
- Driving on rough or muddy roads
- Extended periods of idling or low-speed operation
- Driving for long periods in cold temperatures or extremely humid climates

NOTE
After the described period, continue to follow the described maintenance at the recommended intervals.

Maintenance

I : Inspect and repair, clean, adjust, or replace if necessary. (Oil-permeated air filter cannot be cleaned using the air-blow method.)

R: Replace

Schedule 1

MAINTENANCE INTERVAL MAINTENANCE ITEM	Number of months or kilometers (miles), whichever comes first								
	Months	6	12	18	24	30	36	42	48
	×1000 km	12	24	36	48	60	72	84	96
	(×1000 miles)	(7.5)	(15)	(22.5)	(30)	(37.5)	(45)	(52.5)	(60)
Engine valve clearance									I
Engine timing belt		Inspect at 96,000 km (60,000 miles) Replace every 168,000 km (105,000 miles)							
Drive belts (tension)					I				I
Engine oil		R	R	R	R	R	R	R	R
Engine oil filter		R	R	R	R	R	R	R	R
Cooling system					I				I
Engine coolant		Replace at first 72,000 km (45,000 miles) or 36 months ; after that, every 48,000 km (30,000 miles) or 24 months							
Idle speed					I				I
Air filter					R				R
Fuel lines and hoses*1					I				I
Hoses and tubes for emission*1									I
Spark plugs					R				R
Brake lines, hoses and connections					I				I
Disc brakes					I				I
Drum brakes					I				I

*1: According to state and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended time or kilometrage (mileage) period to ensure long-term reliability.

Schedule 1 (Cont'd)

I : Inspect and repair, clean, adjust, or replace if necessary.

L : Lubricate

MAINTENANCE INTERVAL MAINTENANCE ITEM	Number of months or kilometers (miles), whichever comes first								
	Months	6	12	18	24	30	36	42	48
	×1000 km	12	24	36	48	60	72	84	96
	(×1000 miles)	(7.5)	(15)	(22.5)	(30)	(37.5)	(45)	(52.5)	(60)
Steering operation and linkages					I				I
Front suspension ball joints					I				I
Driveshaft dust boots					I				I
Bolts and nuts on chassis and body					I				I
Exhaust system heat shields					I				I
All locks and hinges		L	L	L	L	L	L	L	L
Refrigerant amount (if installed)			I		I		I		I
Compressor operation (if installed)			I		I		I		I

Maintenance

I : Inspect and repair, clean, adjust, or replace if necessary. (Oil-permeated air filter cannot be cleaned using the air-blow method.)

R: Replace

Schedule 2

MAINTENANCE INTERVAL MAINTENANCE ITEM		Number of months or kilometers (miles), whichever comes first												
		Months	4	8	12	16	20	24	28	32	36	40	44	48
		×1000 km	8	16	24	32	40	48	56	64	72	80	88	96
		(×1000 miles)	(5)	(10)	(15)	(20)	(25)	(30)	(35)	(40)	(45)	(50)	(55)	(60)
Engine valve clearance													I	
Engine timing belt*2		Inspect at 96,000 km (60,000 miles) Replace every 168,000 km (10,500 miles)												
Drive belts (tension)							I						I	
Engine oil	Except Puerto Rico	R	R	R	R	R	R	R	R	R	R	R	R	
	Puerto Rico	Replace every 5,000 km (3,000 miles) or 3 months												
Engine oil filter		R	R	R	R	R	R	R	R	R	R	R	R	
Cooling system							I						I	
Engine coolant		Replace at first 72,000 km (45,000 miles) or 36 months ; after that, every 48,000 km (30,000 miles) or 24 months												
Engine coolant level		I	I	I	I	I	I	I	I	I	I	I	I	
Idle speed							I						I	
Air filter				I *1			R			I *1			R	
Fuel lines and hoses*1							I						I	
Hoses and tubes for emission*1													I	
Spark plugs							R						R	

*1: According to state and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended time or kilometrage (mileage) period to ensure long-term reliability.

*2: If the vehicle is operated in cold districts { below -18 degrees C (0 degrees F) }, replace the timing belt at 96,000 km (60,000 miles).

Schedule 2 (Cont'd)

I : Inspect and repair, clean, adjust, or replace if necessary.

L : Lubricate

MAINTENANCE INTERVAL MAINTENANCE ITEM		Number of months or kilometers (miles), whichever comes first												
		Months	4	8	12	16	20	24	28	32	36	40	44	48
		×1000 km	8	16	24	32	40	48	56	64	72	80	88	96
		(×1000 miles)	(5)	(10)	(15)	(20)	(25)	(30)	(35)	(40)	(45)	(50)	(55)	(60)
Function of all lights		I	I	I	I	I	I	I	I	I	I	I	I	
Brake lines, hoses and connections							I						I	
Brake and clutch fluid level		I	I	I	I	I	I	I	I	I	I	I	I	
Disc brakes				I			I			I			I	
Drum brakes							I						I	
Tire inflation pressure and tire wear		I	I	I	I	I	I	I	I	I	I	I	I	
Steering operation and linkages							I						I	
Power steering fluid level		I	I	I	I	I	I	I	I	I	I	I	I	
Front suspension ball joints							I						I	
Driveshaft dust boots							I						I	
Bolts and nuts on chassis and body				I			I			I			I	
Exhaust system heat shields							I						I	
All locks and hinges		L	L	L	L	L	L	L	L	L	L	L	L	
Washer fluid level		I	I	I	I	I	I	I	I	I	I	I	I	
Refrigerant amount (if installed)				I			I			I			I	
Compressor operation (if installed)				I			I			I			I	