

PASSPORT

T O P E R F O R M A N C E



2003 Prius
Scheduled Maintenance Guide

Safety Precautions

Your Toyota Prius has both high-voltage DC and AC systems as well as a 12-volt system. Both DC and AC high voltage are very dangerous and can cause personal injury, severe burns, electric shock and even fatal injury.

To avoid personal injury, please follow all caution labels attached to high-voltage parts. Do not touch or attempt to remove or replace any high-voltage (orange-colored) wiring and connectors. Do not touch the service plug located in the driver's side trim of the trunk.

If an accident occurs, do not touch any high-voltage wiring, connectors or parts such as the inverter unit or hybrid vehicle battery assembly.

Do not touch the potassium hydroxide electrolyte that might spill or leak from the hybrid vehicle battery as the result of an accident. If potassium hydroxide electrolyte gets on your skin or in your eyes, neutralize it immediately with a saturated boric acid solution (ratio: 80 grams boric acid to two liters water). Seek immediate medical attention.

If a vehicle fire occurs, extinguish it with a Class D powder-type fire extinguisher.

Complimentary Maintenance

Toyota provides five complimentary maintenance services for your Prius, to be performed at the first 7,500-mile/6-month maintenance intervals. If you drive your Prius under special operating conditions (see page 14), you are responsible for the cost of additional required maintenance.

To obtain your complimentary maintenance services, take your vehicle to an authorized Toyota dealership. To locate your nearest authorized Toyota dealership, contact the Toyota Customer Assistance Center at (800) 331-4331 or log on to www.toyota.com.

Regular maintenance is essential to obtaining the highest level of performance from your Toyota. It can also enhance your vehicle's resale value. This booklet is designed to help you make sure your vehicle receives proper and timely maintenance. It includes factory-recommended maintenance guidelines along with information on the extensive maintenance and repair support available through Toyota and your dealership.

With proper maintenance and care, your vehicle will run better, last longer and deliver more economical performance. Follow the recommendations in this *Scheduled Maintenance Guide* and you'll enjoy reliability and peace of mind from your Toyota for many years to come.

Documenting Your Investment

To help you verify that you've invested in proper maintenance, each maintenance log in this booklet includes space for your Toyota dealership to certify that you obtained Genuine Toyota Service for your vehicle. The dealership will mark the dealer service verification area with the following stamp (which may be customized with the dealership's name):



Additional Maintenance

In addition to scheduled maintenance, your Toyota requires ongoing general maintenance such as fluid checks and visual inspections. These procedures are explained in the "Vehicle Maintenance and Care" section of the *Owner's Manual*. Be sure to perform these procedures regularly to ensure the most trouble-free operation of your vehicle.

Maintenance Records

Maintaining your vehicle according to the recommendations in this booklet is required to ensure that your warranty coverage remains intact. You should keep detailed records of vehicle maintenance, including date of service, mileage at time of service and a description of service and/or parts installation performed. The scheduled maintenance log in this booklet can help you document this information. If you sell your vehicle, be sure to give your maintenance records to the new owner.

Toyota will not deny a warranty claim solely because you do not have records to show that you maintained your vehicle. However, damage or failures caused by lack of proper maintenance are not covered under warranty.

Maintenance Providers

Maintenance and repair services may be performed by you or by any automotive service provider you choose. Toyota will not deny a warranty claim solely because you used a service provider other than a Toyota dealership for maintenance and repairs. However, damage or failures caused by improper maintenance or repairs are not covered under warranty.

Dealer-Recommended Maintenance

Your dealer may recommend more frequent maintenance intervals or more maintenance services than those listed in the scheduled maintenance log. These additional services are not required to maintain your warranty coverage. Ask your dealer for an explanation of any recommended maintenance not included in the scheduled maintenance log.

For a complete description of Toyota warranty coverages, see the booklet entitled *2003 Prius Owner's Warranty Information* located in your vehicle's glove box.

TABLE OF CONTENTS

TOYOTA MAINTENANCE AND REPAIR SUPPORT

Toyota Dealership Service	2
Toyota Express Lube	3
Genuine Toyota Parts and Accessories	4
Lifetime Guarantee Replacement Parts	6
Toyota Parts Centers	7
Collision Repair Parts	8
Do-It-Yourself Products	10
Toyota Service Manuals	12
Vehicle Service Agreements	13

GENERAL MAINTENANCE INFORMATION

Determining Your Vehicle's Maintenance Needs	14
Explanation of Maintenance Items	16
Vehicle Identification	19

SCHEDULED MAINTENANCE LOG

Following the Charts	21
2003 Prius	22



To ensure that your vehicle receives first-quality service and factory-authorized parts, Toyota recommends having maintenance performed by an authorized Toyota dealership.

Technicians at authorized Toyota dealerships are specially trained to maintain and repair your vehicle. They stay current on the latest service information through Toyota technical bulletins, service publications and training courses. Many are also certified through the Toyota Certification Program, which requires completion of Toyota's specialized, state-of-the-art training as well as rigorous exams through both Toyota and the National Institute for Automotive Service Excellence (ASE). Feel free to ask any authorized Toyota dealership to show you its technicians' credentials.

You can be confident you're getting the best possible service for your vehicle when you take it to an authorized Toyota dealership. Why trust your investment to anything but a team of highly qualified specialists?

To locate your nearest authorized Toyota dealership, contact the Toyota Customer Assistance Center at (800) 331-4331 or log on to www.toyota.com.



With Toyota Express Lube, you get the convenience of a quick-lube shop and the quality and expertise you count on when you go to a Toyota dealership. You also get the Express Lube guarantee: in 29 minutes or less from the time of write-up, a complete oil-and-filter change using Genuine Toyota Parts along with a multi-point inspection, or the next one is free.



You never need an appointment to use Express Lube at a Toyota dealership. You'll be waited on promptly and your oil-and-filter change will be done while you wait. Express Lube also delivers outstanding value, since the service is priced very competitively with franchised quick-lube centers.

More than 625 Toyota dealerships now offer Express Lube service. Call (800)331-4331 for the Express Lube location nearest you.



Genuine Toyota Parts

To safeguard the quality, reliability and value of your vehicle, Toyota recommends using only Genuine Toyota Parts for maintenance and repairs. Like all Toyota products, Genuine Toyota Parts are built to the highest standards of quality and performance. They are also designed to fit your vehicle's exact specifications.

Your Toyota dealership maintains an extensive inventory of Genuine Toyota Parts to meet your vehicle service needs. And because it is linked electronically to Toyota's Parts Distribution Centers, the dealership has quick access to any parts it may not have in stock.



When installed by a Toyota dealership, Genuine Toyota Parts (with the exception of batteries) are warranted for 12 months from date of installation, regardless of mileage, or the remainder of any applicable New Vehicle Limited Warranty, whichever provides greater coverage. Selected Toyota replacement parts are covered by a lifetime warranty (see page 6). Non-Genuine Toyota Parts — and any damage or failures resulting from their use — are not covered by any Toyota warranty.

Genuine Toyota Remanufactured Parts

Toyota also offers the highest level of quality, fit and performance in selected remanufactured parts. These parts enable you to economically maintain and repair your vehicle with Genuine Toyota quality. They also feature the same warranty coverage as new Genuine Toyota Parts. Available parts range from alternators to water pumps; ask your Toyota dealership for a complete list of remanufactured product offerings.

For all your maintenance and repair needs, insist on the quality and peace of mind you only get with Genuine Toyota Parts.



Genuine Toyota Accessories

When you want to personalize your Toyota Prius, be sure to do it without sacrificing Toyota quality and performance. How? By choosing Genuine Toyota Accessories.

Only Genuine Toyota Accessories are designed and manufactured specifically for Toyota vehicles. In addition, they undergo rigorous testing to ensure first-rate quality, precise fit and long-term durability. Aftermarket accessories don't always meet these same high standards.

The quality of Genuine Toyota Accessories is also backed by the integrity of a Toyota warranty. Coverage is for 12 months from date of purchase, regardless of mileage. If an accessory is installed during the New Vehicle Limited Warranty period (36 months/36,000 miles), coverage is for the remainder of that period. See your dealer for details. And remember that Genuine Toyota Accessories can only be purchased from an authorized Toyota dealership.



Toyota's confidence in its products and commitment to customer satisfaction are demonstrated by outstanding warranty coverage — including a lifetime guarantee on replacement mufflers, exhaust pipes, shock absorbers, struts and strut cartridges. When purchased at and installed by a Toyota dealership, these Genuine Toyota Parts are guaranteed to the original purchaser for the life of the vehicle. This includes coverage for parts and labor.

Compare the guarantees offered on these parts by aftermarket repair shops; many don't offer the extensive coverage Toyota does. And remember that only Genuine Toyota Parts are manufactured to your vehicle's exact specifications. So don't compromise: When replacement time comes, count on your Toyota dealer for quality, performance and the peace of mind that comes with a factory-backed lifetime guarantee.



For complete details of the Toyota Lifetime Guarantee, see an authorized Toyota dealer.

If you plan to perform your own maintenance or repairs on your Toyota, be sure to check out your nearby Toyota Parts Center (TPC). More than 535 Toyota dealerships now have a TPC, which is an in-dealership parts store offering a wide selection of automotive products. All TPCs feature a complete line of Genuine Toyota maintenance parts and car-care products for do-it-yourselfers.

In addition to Toyota maintenance and repair products, TPCs offer free technical advice to Toyota owners who want to service their own vehicles. You'll also find model-specific parts application guides and how-to brochures covering most common maintenance jobs. Both are provided to customers free of charge.

Toyota Parts Centers are open during regular dealership hours; many also have extended evening and weekend hours. If you're a do-it-yourselfer, stop by and experience the service, selection and value offered by your local TPC.



Insist on Genuine Toyota Quality

If you're involved in a collision, you want your vehicle to be returned to its pre-accident condition when repaired. To maintain your Toyota's value, it's important to make sure it is repaired with Genuine Toyota Parts. Some repair shops and insurance companies may suggest using imitation or used salvage parts to save money. However, these parts do not meet Toyota's high standards for quality, fit and corrosion resistance. In addition, imitation and used salvage parts are not covered by any Toyota warranty (see box below).

To maintain the appearance, performance and safety of your Toyota, we recommend that only Genuine Toyota Parts be used for collision repairs. Protect your investment – insist on Genuine Toyota quality.

Toyota warranty coverage remains intact when vehicle repairs are completed with Genuine Toyota Parts. Toyota warranties do not cover imitation or used salvage parts or any damage or failures caused by the use of such parts.

In Case of Accident, Be an Informed Owner

Toyota believes customers have the right to choose the types of parts used in the repair of their vehicles. That's why Toyota supports full disclosure by repair shops and insurance companies regarding parts used for collision repair. The following information is provided to help you understand the differences in the types of parts that could be used in the repair of your vehicle.

General Information

"Collision repair parts" or "replacement crash parts" are the parts typically replaced during the repair of a vehicle that has been damaged in a collision. These parts include exterior sheet metal such as fenders, hoods, doors and related components; and plastic components such as bumper covers and lamp assemblies.

Warranty Coverage

Warranties for collision repair parts are provided by the manufacturer or distributor of the parts. Warranty coverage varies. Your insurance company or collision repair facility should provide you with written warranty statements for all parts used in the repair of your vehicle.

Types of Collision Repair Parts

New original-equipment manufacturer (OEM): Parts that are made by the vehicle manufacturer or one of its licensees and distributed through its normal channels. These parts maintain the manufacturer's vehicle warranty.

Aftermarket or imitation: Parts that are made by companies other than the vehicle manufacturer or its licensees.

Recycled or used salvage: Used parts and assemblies that have been removed from another vehicle. There are no systems in place to regulate the quality or safety of these parts.

Remanufactured: Parts that have been returned to like-new condition through repair, refurbishing or rebuilding.

Due to the critical nature of Supplemental Restraint Systems (also known as air bags), Toyota does not support the use of imitation or used parts for their repair. Only new Genuine Toyota Parts should be used to repair or replace Supplemental Restraint Systems.

When it's time to replace key wear items on your vehicle, don't settle for less than Genuine Toyota Parts. Available exclusively through Toyota dealerships, Genuine Toyota Parts meet the highest standards of quality and performance and are built to exact factory specifications. Here are a few of your vehicle's components that are particularly subject to wear and some benefits of replacing them with Genuine Toyota Parts.

Genuine Toyota Iridium Spark Plugs*

- Specially designed to work with your vehicle's ignition system.
- Feature a smaller center electrode than conventional plugs, which translates into better performance.
- Made with iridium for maximum durability.

Genuine Toyota Brake Pads

- Friction materials selected for optimum performance when matched with Toyota brake drums or rotors.
- Precision-machined backing plates allow pads to move freely within the calipers for smooth, efficient braking.

Genuine Toyota Wiper Inserts

- Cut to match the exact length and shape of your vehicle's wiper blades for a proper and secure fit.
- Constructed of compression-molded natural rubber — not synthetic — for superior wiping performance.



* Always use the right spark plugs for your engine. The wrong plugs can have a negative impact on fuel economy and overall engine performance.

Genuine Toyota Chemicals

Toyota offers a complete line of products to help you keep your Toyota looking and running like new. To safeguard your vehicle's appearance, you'll find everything from fabric spot remover and glass cleaner to liquid car wash and touch-up paint. When it's time to get under the hood (or under the car), products such as fuel injector cleaner, brake fluid and silicone spray will help you get the job done. All of these products are formulated specifically for use with Toyota vehicles, so you can be confident you're giving your vehicle the best care possible, inside and out.

Genuine Toyota Antifreeze Coolant

Genuine Toyota Long Life Antifreeze Coolant is the same high-quality, factory-fill product found in all new Toyotas. It provides maximum protection and durability without the use of harmful silicates. And because it's compatible with non-metallic materials, it helps extend the life of water-pump seals. Don't trust your engine to anything less than the best: Genuine Toyota Long Life Antifreeze Coolant.

Genuine Toyota Motor Oil

Your Toyota's engine features highly advanced technology to help ensure superior performance, reliability and fuel economy. Genuine Toyota Motor Oil is formulated with a special combination of lube-base stocks and an additive blend to maximize the benefits of this technology. Make sure you're getting the most out of your engine by always putting the best into it: Genuine Toyota Motor Oil.



If you'll be doing some of your own maintenance and repair work on your vehicle, a Toyota service manual will be one of your most valuable tools. Toyota offers three types of manuals to assist do-it-yourselfers. To order any of the following manuals, call Toyota's service publications department at (800)622-2033.

Vehicle Repair Manual

This is the same manual used by professional technicians in Toyota dealerships throughout the United States. It is fully illustrated and includes maintenance and repair procedures for all vehicle mechanical systems. It also includes instructions for vehicle tune-ups.

Electrical Systems Manual

This manual provides detailed wiring diagrams for each electrical system in your vehicle, along with troubleshooting tips and repair procedures.

Automatic Transmission/Transaxle Repair Manual

This manual includes complete procedures for overhauling the automatic transmission/transaxle of your vehicle.

For information on basic do-it-yourself maintenance items, see the "Maintenance Requirements" and "General Maintenance" sections of your *Owner's Manual*.



Toyota Extra Care Vehicle Service Agreements enhance the scope and/or length of coverage of your vehicle's factory warranty, or provide protection if the original warranty has expired.¹ Toyota Extra Care provides for the repair or replacement of covered components that have mechanical failures and protects you from rising repair costs in the future. In addition, many plans include benefits such as towing, substitute transportation and travel protection with lodging and meals.

Because they are factory-backed, Toyota Extra Care Vehicle Service Agreements are accepted at Toyota dealerships throughout the United States and Canada. That means repairs are made only by factory-trained service technicians using Genuine Toyota Parts.

Toyota Financial Services offers a variety of Toyota Extra Care plans, each with a number of time and mileage options.² Your Toyota dealer can help you select the coverage that best meets your needs.



¹ Vehicle service agreements are offered by Toyota Motor Insurance Services, Inc., administered by Toyota Motor Services Company in certain states. In Florida, offered by Toyota Motor Insurance Company.

² Prius is eligible for Platinum and Toyota Certified plans only.

Toyota Financial Services is a service mark of Toyota Motor Insurance Services, Inc.

Determining the Proper Maintenance Interval

Depending on your circumstances, you should obtain maintenance for your Toyota every 5,000 miles or every 7,500 miles. Follow these guidelines to determine which interval to use.

5,000-Mile Intervals

Use 5,000-mile intervals if you primarily operate your vehicle under any of the following conditions:

- Driving on unpaved or dusty roads.
- Repeated trips of less than five miles in temperatures below freezing.

7,500-Mile Intervals

Use 7,500-mile intervals if you primarily operate your vehicle under conditions other than those listed above.

Note: If you drive your vehicle under any of the special operating conditions noted below, you may need to perform specific services at 5,000-mile intervals. See the 5,000-mile maintenance charts for details.

Special Operating Conditions

In addition to standard maintenance items, the scheduled maintenance log indicates services that should be performed on vehicles that are driven under especially demanding conditions. Specific conditions require specific services, as indicated on the following page. The scheduled maintenance log indicates at which mileage/ time intervals each service should be performed.

You should perform these additional maintenance services if you drive primarily under any of the conditions noted. If you drive only occasionally under these conditions, it is not necessary to perform the additional services.

Driving on Rough, Muddy or Snow-Melted Roads

- Rotate tires
- Inspect ball joints and dust cover
- Inspect brake linings/drums and brake pads/discs
- Inspect drive shaft boots
- Inspect nuts and bolts on chassis and body
- Inspect steering linkage

Driving on Unpaved or Dusty Roads

- Inspect brake linings/drums and brake pads/discs
- Inspect or change engine air filter
- Replace air conditioning filter

Extensive Idling or Low-Speed Driving for Long Distances

- Inspect brake linings/drums and brake pads/discs

The following descriptions are provided to give you a better understanding of the maintenance items that should be performed on your vehicle. The scheduled maintenance log indicates at which mileage/time intervals each item should be performed. Please note that many maintenance items should be performed only by a qualified technician.

For further information on maintenance items you can perform yourself, see the "Vehicle Maintenance and Care" and "Do-It-Yourself Maintenance" sections of your *Owner's Manual*.

WARNING: Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. *Wash hands after handling.*

ALSO: See safety precautions on the inside front cover of this booklet pertaining to your vehicle's electrical and battery systems.

Air Conditioning Filter

Replace every 22,500 miles/18 months or as directed for special operating conditions. Refer to the *Owner's Manual* for service details.

Automatic Transmission Fluid or Manual Transmission Oil

Replace at specified intervals. When performing inspections, check each component for signs of leakage. If you discover any leakage, have it repaired by a qualified technician immediately.

Ball Joints and Dust Covers

Check the suspension and steering linkage ball joints for looseness and damage. Check all dust covers for deterioration and damage. Replace any deteriorated or damaged parts. A qualified technician should perform these operations.

Brake Lines and Hoses

Visually inspect for proper installation. Check for chafing, cracks, deterioration and signs of leakage. Replace any deteriorated or damaged parts. A qualified technician should perform these operations.

Brake Linings/Drums and Brake Pads/Discs

Check the brake linings (shoes) and drums for scoring, burning, fluid leakage, broken parts and excessive wear. Check the pads for excessive wear and the discs for runout, excessive wear and fluid leakage. Replace any deteriorated or damaged parts. A qualified technician should perform these operations.

Differential Oil

Replace at specified intervals. When performing inspections, check each component for signs of leakage. If you discover any leakage, have it repaired by a qualified technician immediately.

Drive Belts

Inspect for cracks, excessive wear and oiliness. Check the belt tension and adjust if necessary. Replace the belts if they are damaged.

Drive Shaft Boots

Check the drive shaft boots and clamps for cracks, deterioration and damage. Replace any deteriorated or damaged parts and, if necessary, repack the grease. A qualified technician should perform these operations.

Engine Air Filter

Replace at specified intervals. When performing inspections, check for damage, excessive wear and oiliness, and replace if necessary.

Engine Coolant

Drain and flush the cooling system and refill with an ethylene-glycol type coolant. Inspect the radiator and condenser for leaves, dirt and insects and clean if necessary. Inspect hose connections for tightness and condition. A qualified technician should perform these operations.

Engine Oil and Oil Filter

Replace the oil filter and drain and refill the engine oil. For recommended oil grade and viscosity, refer to the *Owner's Manual*.

Engine Valve Clearance

Inspect for excessive lifter noise and engine vibration and adjust if necessary. A qualified technician should perform this operation.

Exhaust Pipes and Mountings

Visually inspect the exhaust pipes, muffler and hangers for cracks, deterioration and damage. Start the engine and listen carefully for any exhaust gas leakage. Tighten connections or replace parts as necessary.

Fuel Lines and Connections, Fuel Tank Band and Fuel Tank Vapor Vent System Hoses

Visually inspect for corrosion, damage, cracks and loose or leaking connections. Tighten connections or replace parts as necessary.

Fuel Tank Cap Gasket

Visually inspect for cracks, deterioration and damage and replace if necessary.

Inverter Coolant

Drain and flush the cooling system with an ethylene-glycol type coolant. A qualified technician should perform this operation.

Nuts and Bolts on Chassis and Body

Re-tighten the seat-mounting bolts and front/rear suspension member retaining bolts to specified torque.

Spark Plugs

Replace at specified intervals. Install new plugs of the same type as originally equipped. A qualified technician should perform this operation.

Steering Gear Box

Inspect for signs of leakage. If you discover any leakage, have it repaired immediately by a qualified technician.

Steering Linkage and Boots

With the vehicle stopped, check for excessive freeplay in the steering wheel. Inspect the linkage for bending and damage and the dust boots for deterioration, cracks and damage. Replace any damaged parts. A qualified technician should perform these operations.

Tire Rotation

Tires should be rotated according to the instructions in the *Owner's Manual*. When rotating tires, check for damage and uneven wear. Replace if necessary.

Model _____

In-service date _____

Selling dealership _____

Key number _____

Body style _____

Mileage at delivery _____

Selling dealership phone number _____

Vehicle Identification Number _____

[illegible]

The scheduled maintenance log identifies the maintenance required at each mileage interval and corresponding time interval based on mileage of 1,250 miles per month. If you drive more than 1,250 miles per month, you should obtain maintenance at the indicated mileage interval rather than the indicated time interval.

If you choose 5,000-mile intervals, follow the instructions below the light blue bars, such as this one:

5,000 Miles or 4 Months

If you choose 7,500-mile intervals, follow the instructions below the dark blue bars, such as this one:

7,500 Miles or 6 Months

At 15,000-mile increments, the 5,000-mile and 7,500-mile intervals coincide. Therefore, the colored bars appear together, as in this example:

15,000 Miles or 12 Months

15,000 Miles or 12 Months

See page 14 to determine the proper maintenance interval for your vehicle.

5,000-Mile Maintenance Intervals

7,500-Mile Maintenance Intervals

To determine the appropriate maintenance interval for your vehicle, see page 14.

5,000 Miles or 4 Months

- ☐ Replace engine oil and oil filter
- Additional Maintenance Items for Special Operating Conditions:¹**
 - ☐ Inspect the following:
 - ☐ Ball joints and dust covers
 - ☐ Brake linings/drums and brake pads/discs
 - ☐ Drive shaft boots
 - ☐ Engine air filter
 - ☐ Nuts and bolts on chassis and body
 - ☐ Steering linkage and boots
 - ☐ Rotate tires

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

10,000 Miles or 8 Months

- ☐ Replace engine oil and oil filter
- Additional Maintenance Items for Special Operating Conditions:¹**
 - ☐ Inspect the following:
 - ☐ Ball joints and dust covers
 - ☐ Brake linings/drums and brake pads/discs
 - ☐ Drive shaft boots
 - ☐ Engine air filter
 - ☐ Nuts and bolts on chassis and body
 - ☐ Steering linkage and boots
 - ☐ Replace air conditioning filter
 - ☐ Rotate tires

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

7,500 Miles or 6 Months²

- ☐ Replace engine oil and oil filter
- ☐ Rotate tires

Note: If you drive your vehicle under any of the special operating conditions noted on pages 14–15, you may need to perform specific services at 5,000-mile intervals. See the 5,000-mile maintenance charts for details.

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

15,000 Miles or 12 Months²

15,000 Miles or 12 Months²

- ☐ Replace engine oil and oil filter
- ☐ Rotate tires
- ☐ Inspect the following:
 - ☐ Ball joints and dust covers
 - ☐ Brake lines and hoses
 - ☐ Brake linings/drums and brake pads/discs
 - ☐ Drive shaft boots
 - ☐ Exhaust pipes and mountings
 - ☐ Steering gear box
 - ☐ Steering linkage and boots

Additional Maintenance Items for Special Operating Conditions:¹

- ☐ Inspect engine air filter
- ☐ Inspect nuts and bolts on chassis and body

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

¹ Specific services apply to specific operating conditions. See pages 14–15 for details.

² Maintenance services specified at this interval are provided by Toyota at no charge, excluding items required for vehicles driven under special operating conditions. See inside front cover for details.

5,000-Mile Maintenance Intervals

7,500-Mile Maintenance Intervals

To determine the appropriate maintenance interval for your vehicle, see page 14.

20,000 Miles or 16 Months

- ☐ Replace engine oil and oil filter
- Additional Maintenance Items for Special Operating Conditions:¹**
 - ☐ Inspect the following:
 - ☐ Ball joints and dust covers
 - ☐ Brake linings/drums and brake pads/discs
 - ☐ Drive shaft boots
 - ☐ Engine air filter
 - ☐ Nuts and bolts on chassis and body
 - ☐ Steering linkage and boots
 - ☐ Replace air conditioning filter
 - ☐ Rotate tires

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

25,000 Miles or 20 Months

- ☐ Replace engine oil and oil filter
- Additional Maintenance Items for Special Operating Conditions:¹**
 - ☐ Inspect the following:
 - ☐ Ball joints and dust covers
 - ☐ Brake linings/drums and brake pads/discs
 - ☐ Drive shaft boots
 - ☐ Engine air filter
 - ☐ Nuts and bolts on chassis and body
 - ☐ Steering linkage and boots
 - ☐ Rotate tires

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

22,500 Miles or 18 Months²

- ☐ Replace air conditioning filter³
- ☐ Replace engine oil and oil filter
- ☐ Rotate tires

Note: If you drive your vehicle under any of the special operating conditions noted on pages 14–15, you may need to perform specific services at 5,000-mile intervals. See the 5,000-mile maintenance charts for details.

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

30,000 Miles or 24 Months²

30,000 Miles or 24 Months²

- ☐ Replace engine air filter
- ☐ Replace engine coolant
- ☐ Replace engine oil and oil filter
- ☐ Replace inverter coolant
- ☐ Rotate tires
- ☐ Inspect the following:
 - ☐ Ball joints and dust covers
 - ☐ Brake lines and hoses
 - ☐ Brake linings/drums and brake pads/discs
 - ☐ Differential oil
 - ☐ Drive shaft boots
 - ☐ Exhaust pipes and mountings
 - ☐ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
 - ☐ Fuel tank cap gasket
 - ☐ Radiator and condenser
 - ☐ Steering gear box
 - ☐ Steering linkage and boots
 - ☐ Transmission fluid

Additional Maintenance Items for Special Operating Conditions:¹

- ☐ Inspect nuts and bolts on chassis and body
- ☐ Replace air conditioning filter

DEALER SERVICE VERIFICATION:
DATE:
MILEAGE:
¹ Specific services apply to specific operating conditions. See pages 14–15 for details.

² Maintenance services specified at this interval are provided by Toyota at no charge, excluding items required for vehicles driven under special operating conditions. See inside front cover for details.

³ Do not replace if replaced at 20,000 miles/16 months.

5,000-Mile Maintenance Intervals

7,500-Mile Maintenance Intervals

To determine the appropriate maintenance interval for your vehicle, see page 14.

35,000 Miles or 28 Months

- ☐ Replace engine oil and oil filter

Additional Maintenance Items for Special Operating Conditions:¹

- ☐ Inspect the following:
- ☐ Ball joints and dust covers
 - ☐ Brake linings/drums and brake pads/discs
 - ☐ Drive shaft boots
 - ☐ Engine air filter
 - ☐ Nuts and bolts on chassis and body
 - ☐ Steering linkage and boots
- ☐ Rotate tires

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

40,000 Miles or 32 Months

- ☐ Replace engine oil and oil filter

Additional Maintenance Items for Special Operating Conditions:¹

- ☐ Inspect the following:
- ☐ Ball joints and dust covers
 - ☐ Brake linings/drums and brake pads/discs
 - ☐ Drive shaft boots
 - ☐ Engine air filter
 - ☐ Nuts and bolts on chassis and body
 - ☐ Steering linkage and boots
- ☐ Replace air conditioning filter
- ☐ Rotate tires

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

37,500 Miles or 30 Months²

- ☐ Replace engine oil and oil filter
- ☐ Rotate tires

Note: If you drive your vehicle under any of the special operating conditions noted on pages 14–15, you may need to perform specific services at 5,000-mile intervals. See the 5,000-mile maintenance charts for details.

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

45,000 Miles or 36 Months

45,000 Miles or 36 Months

- ☐ Replace air conditioning filter³
- ☐ Replace engine oil and oil filter
- ☐ Rotate tires
- ☐ Inspect the following:

☐ Ball joints and dust covers	☐ Exhaust pipes and mountings
☐ Brake lines and hoses	☐ Steering gear box
☐ Brake linings/drums and brake pads/discs	☐ Steering linkage and boots
☐ Drive shaft boots	

Additional Maintenance Items for Special Operating Conditions:¹

- ☐ Inspect engine air filter
- ☐ Inspect nuts and bolts on chassis and body

DEALER SERVICE VERIFICATION:
DATE:
MILEAGE:
¹ Specific services apply to specific operating conditions. See pages 14–15 for details.

² Maintenance services specified at this interval are provided by Toyota at no charge, excluding items required for vehicles driven under special operating conditions. See inside front cover for details.

³ Do not replace if replaced at 40,000 miles/32 months.

5,000-Mile Maintenance Intervals

7,500-Mile Maintenance Intervals

To determine the appropriate maintenance interval for your vehicle, see page 14.

50,000 Miles or 40 Months

- ☐ Replace engine oil and oil filter
- Additional Maintenance Items for Special Operating Conditions:¹**
 - ☐ Inspect the following:
 - ☐ Ball joints and dust covers
 - ☐ Brake linings/drums and brake pads/discs
 - ☐ Drive shaft boots
 - ☐ Engine air filter
 - ☐ Nuts and bolts on chassis and body
 - ☐ Steering linkage and boots
 - ☐ Replace air conditioning filter
 - ☐ Rotate tires

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

55,000 Miles or 44 Months

- ☐ Replace engine oil and oil filter
- Additional Maintenance Items for Special Operating Conditions:¹**
 - ☐ Inspect the following:
 - ☐ Ball joints and dust covers
 - ☐ Brake linings/drums and brake pads/discs
 - ☐ Drive shaft boots
 - ☐ Engine air filter
 - ☐ Nuts and bolts on chassis and body
 - ☐ Steering linkage and boots
 - ☐ Rotate tires

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

52,500 Miles or 42 Months

- ☐ Replace engine oil and oil filter
- ☐ Rotate tires

Note: If you drive your vehicle under any of the special operating conditions noted on pages 14–15, you may need to perform specific services at 5,000-mile intervals. See the 5,000-mile maintenance charts for details.

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

60,000 Miles or 48 Months

60,000 Miles or 48 Months

- ☐ Replace engine air filter
- ☐ Replace engine coolant
- ☐ Replace engine oil and oil filter
- ☐ Replace inverter coolant
- ☐ Replace spark plugs²
- ☐ Rotate tires
- ☐ Inspect the following:
 - ☐ Ball joints and dust covers
 - ☐ Brake lines and hoses
 - ☐ Brake linings/drums and brake pads/discs
 - ☐ Differential oil
 - ☐ Drive belts³
 - ☐ Drive shaft boots
 - ☐ Engine valve clearance
 - ☐ Exhaust pipes and mountings
 - ☐ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
 - ☐ Fuel tank cap gasket
 - ☐ Radiator and condenser
 - ☐ Steering gear box
 - ☐ Steering linkage and boots
 - ☐ Transmission fluid

Additional Maintenance Items for Special Operating Conditions:¹

- ☐ Inspect nuts and bolts on chassis and body
- ☐ Replace air conditioning filter

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

¹ Specific services apply to specific operating conditions. See pages 14–15 for details.

² Required under the terms of the Emission Control Warranty.

³ Initial inspection at 60,000 miles. Inspect every 15,000 miles thereafter.

5,000-Mile Maintenance Intervals

7,500-Mile Maintenance Intervals

To determine the appropriate maintenance interval for your vehicle, see page 14.

65,000 Miles or 52 Months

- ☐ Replace engine oil and oil filter

Additional Maintenance Items for Special Operating Conditions:¹

- ☐ Inspect the following:
 - ___ Ball joints and dust covers
 - ___ Brake linings/drums and brake pads/discs
 - ___ Drive shaft boots
 - ___ Engine air filter
 - ___ Nuts and bolts on chassis and body
 - ___ Steering linkage and boots
- ☐ Rotate tires

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

70,000 Miles or 56 Months

- ☐ Replace engine oil and oil filter

Additional Maintenance Items for Special Operating Conditions:¹

- ☐ Inspect the following:
 - ___ Ball joints and dust covers
 - ___ Brake linings/drums and brake pads/discs
 - ___ Drive shaft boots
 - ___ Engine air filter
 - ___ Nuts and bolts on chassis and body
 - ___ Steering linkage and boots
- ☐ Replace air conditioning filter
- ☐ Rotate tires

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

67,500 Miles or 54 Months

- ☐ Replace air conditioning filter²
- ☐ Replace engine oil and oil filter
- ☐ Rotate tires

Note: If you drive your vehicle under any of the special operating conditions noted on pages 14–15, you may need to perform specific services at 5,000-mile intervals. See the 5,000-mile maintenance charts for details.

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

75,000 Miles or 60 Months

75,000 Miles or 60 Months

- ☐ Replace engine oil and oil filter
- ☐ Rotate tires
- ☐ Inspect the following:
 - ☐ Ball joints and dust covers
 - ☐ Brake lines and hoses
 - ☐ Brake linings/drums and brake pads/discs
 - ☐ Drive belts
 - ☐ Drive shaft boots
 - ☐ Exhaust pipes and mountings
 - ☐ Steering gear box
 - ☐ Steering linkage and boots

Additional Maintenance Items for Special Operating Conditions:¹

- ☐ Inspect engine air filter
- ☐ Inspect nuts and bolts on chassis and body

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

¹ Specific services apply to specific operating conditions. See pages 14–15 for details.

² Do not replace if replaced at 70,000 miles/56 months.

5,000-Mile Maintenance Intervals

7,500-Mile Maintenance Intervals

To determine the appropriate maintenance interval for your vehicle, see page 14.

80,000 Miles or 64 Months

- ☐ Replace engine oil and oil filter
- Additional Maintenance Items for Special Operating Conditions:¹**
 - ☐ Inspect the following:
 - ___ Ball joints and dust covers
 - ___ Brake linings/drums and brake pads/discs
 - ___ Drive shaft boots
 - ___ Engine air filter
 - ___ Nuts and bolts on chassis and body
 - ___ Steering linkage and boots
 - ☐ Replace air conditioning filter
 - ☐ Rotate tires

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

85,000 Miles or 68 Months

- ☐ Replace engine oil and oil filter
- Additional Maintenance Items for Special Operating Conditions:¹**
 - ☐ Inspect the following:
 - ___ Ball joints and dust covers
 - ___ Brake linings/drums and brake pads/discs
 - ___ Drive shaft boots
 - ___ Engine air filter
 - ___ Nuts and bolts on chassis and body
 - ___ Steering linkage and boots
 - ☐ Rotate tires

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

82,500 Miles or 66 Months

- ☐ Replace engine oil and oil filter
- ☐ Rotate tires

Note: If you drive your vehicle under any of the special operating conditions noted on pages 14–15, you may need to perform specific services at 5,000-mile intervals. See the 5,000-mile maintenance charts for details.

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

90,000 Miles or 72 Months

90,000 Miles or 72 Months

- ☐ Replace air conditioning filter
- ☐ Replace engine air filter
- ☐ Replace engine coolant
- ☐ Replace engine oil and oil filter
- ☐ Replace inverter coolant
- ☐ Rotate tires
- ☐ Inspect the following:
 - ☐ Ball joints and dust covers
 - ☐ Brake lines and hoses
 - ☐ Brake linings/drums and brake pads/discs
 - ☐ Differential oil
 - ☐ Drive belts
 - ☐ Drive shaft boots
 - ☐ Exhaust pipes and mountings
 - ☐ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
 - ☐ Fuel tank cap gasket
 - ☐ Radiator and condenser
 - ☐ Steering gear box
 - ☐ Steering linkage and boots
 - ☐ Transmission fluid

Additional Maintenance Items for Special Operating Conditions:¹

- ☐ Inspect nuts and bolts on chassis and body

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

¹ Specific services apply to specific operating conditions. See pages 14–15 for details.

5,000-Mile Maintenance Intervals

7,500-Mile Maintenance Intervals

To determine the appropriate maintenance interval for your vehicle, see page 14.

95,000 Miles or 76 Months

- ☐ Replace engine oil and oil filter

Additional Maintenance Items for Special Operating Conditions:¹

- ☐ Inspect the following:
 - ___ Ball joints and dust covers
 - ___ Brake linings/drums and brake pads/discs
 - ___ Drive shaft boots
 - ___ Engine air filter
 - ___ Nuts and bolts on chassis and body
 - ___ Steering linkage and boots
- ☐ Rotate tires

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

100,000 Miles or 80 Months

- ☐ Replace engine oil and oil filter

Additional Maintenance Items for Special Operating Conditions:¹

- ☐ Inspect the following:
 - ___ Ball joints and dust covers
 - ___ Brake linings/drums and brake pads/discs
 - ___ Drive shaft boots
 - ___ Engine air filter
 - ___ Nuts and bolts on chassis and body
 - ___ Steering linkage and boots
- ☐ Replace air conditioning filter
- ☐ Rotate tires

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

97,500 Miles or 78 Months

- ☐ Replace engine oil and oil filter
- ☐ Rotate tires

Note: If you drive your vehicle under any of the special operating conditions noted on pages 14–15, you may need to perform specific services at 5,000-mile intervals. See the 5,000-mile maintenance charts for details.

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

105,000 Miles or 84 Months

105,000 Miles or 84 Months

- ☐ Replace engine oil and oil filter
- ☐ Rotate tires
- ☐ Inspect the following:
 - ☐ Ball joints and dust covers
 - ☐ Drive shaft boots
 - ☐ Brake lines and hoses
 - ☐ Exhaust pipes and mountings
 - ☐ Brake linings/drums and brake pads/discs
 - ☐ Steering gear box
 - ☐ Drive belts
 - ☐ Steering linkage and boots

Additional Maintenance Items for Special Operating Conditions:¹

- ☐ Inspect engine air filter
- ☐ Inspect nuts and bolts on chassis and body

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

¹ Specific services apply to specific operating conditions. See pages 14–15 for details.

5,000-Mile Maintenance Intervals

7,500-Mile Maintenance Intervals

To determine the appropriate maintenance interval for your vehicle, see page 14.

110,000 Miles or 88 Months

- ☐ Replace engine oil and oil filter

Additional Maintenance Items for Special Operating Conditions:¹

- ☐ Inspect the following:
 - ___ Ball joints and dust covers
 - ___ Brake linings/drums and brake pads/discs
 - ___ Drive shaft boots
 - ___ Engine air filter
 - ___ Nuts and bolts on chassis and body
 - ___ Steering linkage and boots
- ☐ Replace air conditioning filter
- ☐ Rotate tires

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

115,000 Miles or 92 Months

- ☐ Replace engine oil and oil filter

Additional Maintenance Items for Special Operating Conditions:¹

- ☐ Inspect the following:
 - ___ Ball joints and dust covers
 - ___ Brake linings/drums and brake pads/discs
 - ___ Drive shaft boots
 - ___ Engine air filter
 - ___ Nuts and bolts on chassis and body
 - ___ Steering linkage and boots
- ☐ Rotate tires

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

112,500 Miles or 90 Months

- ☐ Replace air conditioning filter²
- ☐ Replace engine oil and oil filter
- ☐ Rotate tires

Note: If you drive your vehicle under any of the special operating conditions noted on pages 14–15, you may need to perform specific services at 5,000-mile intervals. See the 5,000-mile maintenance charts for details.

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

120,000 Miles or 96 Months

120,000 Miles or 96 Months

- ☐ Replace engine air filter
- ☐ Replace engine coolant
- ☐ Replace engine oil and oil filter
- ☐ Replace inverter coolant
- ☐ Replace spark plugs³
- ☐ Rotate tires
- ☐ Inspect the following:
 - ☐ Ball joints and dust covers
 - ☐ Brake lines and hoses
 - ☐ Brake linings/drums and brake pads/discs
 - ☐ Differential oil
 - ☐ Drive belts
 - ☐ Drive shaft boots
 - ☐ Engine valve clearance
 - ☐ Exhaust pipes and mountings
 - ☐ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
 - ☐ Fuel tank cap gasket
 - ☐ Radiator and condenser
 - ☐ Steering gear box
 - ☐ Steering linkage and boots
 - ☐ Transmission fluid

Additional Maintenance Items for Special Operating Conditions:¹

- ☐ Inspect nuts and bolts on chassis and body
- ☐ Replace air conditioning filter

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

¹ Specific services apply to specific operating conditions. See pages 14–15 for details.

² Do not replace if replaced at 110,000 miles/88 months.

³ Required under the terms of the Emission Control Warranty.

[illegible]

