

Scheduled Maintenance

Scheduled Maintenance (Except MAZDASPEED Protégé)

Follow Schedule 1 if the vehicle is operated mainly where none of the following conditions apply.

If any do apply, follow Schedule 2 (Canada and Puerto Rico residents follow Schedule 2).

- Repeated short-distance driving
- Driving in dusty conditions
- Driving with extended use of brakes
- Driving in areas where salt or other corrosive materials are being used
- Driving on rough or muddy roads
- Extended periods of idling or low-speed operation
- Driving for long periods in cold temperatures or extremely humid climates

NOTE
After the prescribed period, continue to follow the described maintenance at the recommended intervals.

Scheduled Maintenance

▼ Schedule 1

I : Inspect and repair, clean, adjust, or replace if necessary.
(Oil-permeated air filter cannot be cleaned using the air-blow method.)

R : Replace

L : Lubricate

Maintenance Interval (Number of months or kilometers (miles), whichever comes first)	Months	6	12	18	24	30	36	42	48
	×1000 km	12	24	36	48	60	72	84	96
	×1000 miles	7.5	15	22.5	30	37.5	45	52.5	60

ENGINE

Engine valve clearance									I
Engine timing belt	Inspect at 96,000km (60,000 miles) Replace every 168,000 km (105,000 miles)								
Drive belts (tension)					I				I
Engine oil	R	R	R	R	R	R	R	R	R
Engine oil filter	R	R	R	R	R	R	R	R	R

COOLING SYSTEM

Cooling system				I					I
Engine coolant	Replace at first 72,000 km (45,000 miles) or 36 months ; after that, every 48,000 km (30,000 miles) or 24 months								

FUEL SYSTEM

Idle speed				I					I
Air filter				R					R
Fuel lines and hoses *1				I					I
Hoses and tubes for emission *1									I

IGNITION SYSTEM

Spark plugs				R					R
-------------	--	--	--	---	--	--	--	--	---

CHASSIS and BODY

Brake lines, hoses and connections				I					I
Disc brakes				I					I
Drum brakes				I					I
Steering operation and linkages				I					I
Front suspension ball joints				I					I
Driveshaft dust boots				I					I
Bolts and nuts on chassis and body				I					I
Exhaust system heat shields				I					I
All locks and hinges	L	L	L	L	L	L	L	L	L

AIR CONDITIONER SYSTEM (if equipped)

Refrigerant amount		I		I		I			I
Compressor operation		I		I		I			I

*1 According to state and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended time or mileage period to ensure long-term reliability.

Scheduled Maintenance

▼ Schedule 2

I : Inspect and repair, clean, adjust, or replace if necessary.
(Oil-permeated air filter cannot be cleaned using the air-blow method.)
R : Replace
L : Lubricate

Maintenance Interval (Number of months or kilometers (miles), whichever comes first)	Months	4	8	12	16	20	24	28	32	36	40	44	48
	×1000 km	8	16	24	32	40	48	56	64	72	80	88	96
	×1000 miles	5	10	15	20	25	30	35	40	45	50	55	60

ENGINE

Engine valve clearance													I
Engine timing belt *2	Inspect at 96,000 km (60,000 miles) Replace every 168,000 km (105,000 miles)												
Drive belts (tension)							I						I
Engine oil	Puerto Rico	Replace every 5,000 km (3,000 miles) or 3 months											
	Others	R	R	R	R	R	R	R	R	R	R	R	R
Engine oil filter		R	R	R	R	R	R	R	R	R	R	R	R

COOLING SYSTEM

Cooling system						I							I
Engine coolant	Replace at first 72,000 km (45,000 miles) or 36 months ; after that, every 48,000 km (30,000 miles) or 24 months												
Engine coolant level	I	I	I	I	I	I	I	I	I	I	I	I	I

FUEL SYSTEM

Idle speed						I							I
Air filter			I*1			R			I*1				R
Fuel lines and hoses *1						I							I
Hoses and tubes for emission *1													I

IGNITION SYSTEM

Spark plugs						R							R
-------------	--	--	--	--	--	---	--	--	--	--	--	--	---

ELECTRICAL SYSTEM

Function of all lights	I	I	I	I	I	I	I	I	I	I	I	I	I
------------------------	---	---	---	---	---	---	---	---	---	---	---	---	---

CHASSIS and BODY

Brake lines, hoses and connections						I							I
Brake and clutch fluid level	I	I	I	I	I	I	I	I	I	I	I	I	I
Disc brakes			I			I			I				I
Drum brakes						I							I
Tire inflation pressure and tire wear	I	I	I	I	I	I	I	I	I	I	I	I	I
Steering operation and linkages						I							I
Power steering fluid level	I	I	I	I	I	I	I	I	I	I	I	I	I
Front suspension ball joints						I							I
Driveshaft dust boots						I							I
Bolts and nuts on chassis and body			I						I				I
Exhaust system heat shields						I							I
All locks and hinges	L	L	L	L	L	L	L	L	L	L	L	L	L
Washer fluid level	I	I	I	I	I	I	I	I	I	I	I	I	I

AIR CONDITIONER SYSTEM (if equipped)

Refrigerant amount			I			I			I				I
Compressor operation			I			I			I				I

*1 According to state and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended time or mileage period to ensure long-term reliability

*2 If the vehicle is operated in cold districts { below -18 degrees C (0 degrees F) }, replace the timing belt at 96,000 km (60,000 miles).