

Mazda Drivers Assurance Plan

Check out www.mymazda.com, the website dedicated to you. Manage your maintenance records, receive valuable offers, see the latest accessories, and much more!

Mazda Roadside Assistance

Exhilaration, liberation and inspiration, are great reasons to drive a Mazda car, truck, SUV or minivan. In addition to all the other great standard features, you also get peace of mind, our Emergency Roadside Assistance Plan, it's just a phone call away, 24 hours a day, 365 days a year, call **1-800-866-1998**

Mazda "bumper-to-bumper" Limited Warranty

We design and build every Mazda to give you driving pleasure now and far down the road. We're so confident in our quality that we cover the entire vehicle against defects in materials and workmanship

for 48 months or 50,000 miles, whichever comes first

Mazda Service Transportation Solution

Being without your Mazda may put a crimp in your day, if you do ever have to take your Mazda in for repairs don't worry, you're covered. With the Mazda Transportation Solution, you will be given a loaner car at no charge when your Mazda vehicle is in for warranty repairs.

For all the details, see your Mazda Dealer

Unleaded Gasoline

91-octane only,
15.9-gallon/
60.0-liter tank

This Quick Tips® guide is provided by Mazda North American Operations to make your Mazda ownership experience more convenient. It is not intended to replace your Owner's Manual.

If you have any questions about your vehicle, you are invited to contact your local dealer.

Or if you need additional help, feel free to call our **Customer Assistance Center at 1-800-222-5500** Monday through Friday, 9 a.m.-4:45 p.m., Pacific 9 a.m.-5:45 p.m., Eastern/Central



mazda®

©2003 Calcar, Quick Tips® is a trademark of Calcar, made in USA 1/03 32.5M CG Mazda North American Operations reserves the right to change product specifications at any time without incurring obligations. 9999-95-079C-04QT

MAZDA RX-8

Quick Tips®

Reference

Guide for

 
Controls and

Functions

2004



mazda®

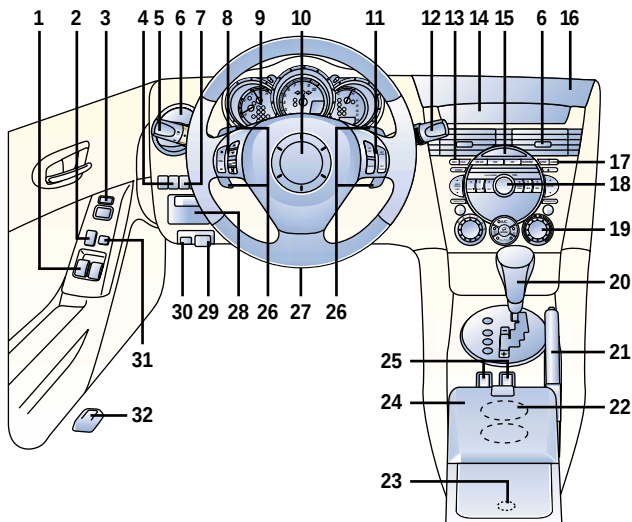

Getting Started

RX-8 Quick Tips® are designed to quickly familiarize you with some important features of your RX-8

This Driver's View tab is your index to the Quick Tips®, locate the item you would like to learn more about and then turn to the listed tab

Be sure to see the tab called Getting Started, this section contains important operating tips about your RX-8

Items identified with a Rotary Engine symbol  call out important information

1. Power window switches,
see Switches/Locks

2. Power door locks,
see Switches/Locks

3. Dual power mirrors,
see Switches/Locks

 **4. Instrument panel**

lighting, see Getting Started

5. Turn signal/lighting control lever,
see Driver Controls

6. Air vents

 **7. DSC Traction Control System*,**
see Getting Started

8. Audio control switches*,
see Driver Controls

 **9. Tire pressure monitoring system,**
see Getting Started

10. Horn/Air bag

11. Cruise control,
see Driver Controls

12. Wiper/washer control lever,
see Driver Controls

13. Clock, see Audio Systems

14. Information display,
see Owner's Manual

15.  Hazard warning switch, Press on/off

 **16. NAVI system***

System is used to locate street addresses, points of interest or cross streets: see your Owner's Manual for additional operating information

17. Ambient temperature display

18. Audio system,
see Audio Systems

19. Climate control panel,
see Climate Controls

20. Gearshift lever (A/T)*,
see Transmission

21. Parking brake lever,
see Console/Transmission

22. Cup holder

23. Accessory socket

24. Console,
see Console/Transmission

25. Seat warmer*,
see Console/Transmission

 **26. Steering paddle switches (A/T only)*,**
see Transmission

27. Tilt steering-wheel lever,
see Driver Controls

28. Storage

29.  Hood release handle

30.  Remote trunk-lid release
Push to open trunk; main switch in glove box must be ON

Remote trunk-lid release lock-out, see Trunk

 **31. Power window lock switch**

 **32.  Remote fuel-door release**

Use unleaded gasoline, 91-octane only

*Denotes optional equipment

 
Short trip driving procedure

Any trip that is too short for the engine to reach normal operating temperature; needle in middle of temperature gauge indicates normal temperature

The following procedure should be followed when moving vehicle a short distance**:

1. Start engine
2. Move vehicle
3. Warm engine for 5-minutes at idle
4. Raise engine speed to 3000 RPM for 10-seconds
5. Return to idle
6. Turn off engine

 **Tip: Warming up engine improves engine life**

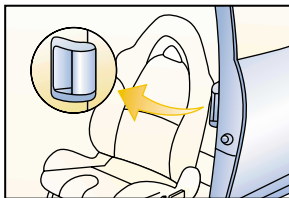

Rear doors

For a rear occupant to exit with a front passenger:

1. Front occupant must release seatbelt
2. Front occupant must open door
3. Open rear door

For a rear occupant to exit without a front occupant:

1. Release front seat to forward position
2. Unlock and open front door
3. Open rear door

 **Tips: Close rear door first, then front door; damage may occur otherwise**

To prevent alarm arming with passenger inside vehicle, driver must manually lock door by pressing lock knob

RX-8 rotary engine precautions

Check engine oil level when refueling

Rotary engine design uses an oil injection system in addition to lubrication of internal parts. It is important to maintain proper oil level

Engine oil level warning light

Indicates low engine oil if illuminated; pull over to a safe location; turn engine off and check engine oil level when engine is cool, add engine oil if necessary

Instant Mobility System emergency flat tire repair kit (IMS)

Temporary spare tire is not equipped with your Mazda, if tire repair is required, repair tire with emergency flat tire repair kit, see Owner's Manual

If a temporary spare tire is required, consult your Authorized Mazda Dealer

Traction Control System (TCS)* / Dynamic Stability Control (DSC)*

DSC light may occasionally flash while driving, this indicates that the DSC was performing a correction to help maintain your best vehicle control, if DSC light remains on, see your Mazda Dealer

If DSC light remains on after disconnecting battery or jump-starting, you will need to perform a Steering Angle Sensor calibration procedure, after battery power is restored: Ignition ON; turn steering wheel to full left lock position; then full right lock position; turn ignition OFF, then ON

Instrument panel lighting

With headlights on:
To brighten/dim turn thumbwheel up/down

Maximum illumination:
Rotate thumbwheel upward until click is heard; instrument cluster and information display illumination color goes from red to white

Headlights/parking lights OFF:
Instrument panel lighting defaults to maximum brightness

Headlights/parking lights ON:
Illumination changes brightness with dimmer switch adjustment

Tire pressure monitoring system

Warning light illuminates for a few seconds when ignition is on. If tire pressure is too high or low, or tire temperature is too high, warning light will illuminate

* Denotes optional equipment

** Moving vehicle at a car wash or moving vehicle to access another vehicle would be considered a short distance

GAUGES

1. Fuel gauge

2. Engine coolant temperature gauge

If above normal range, stop vehicle and turn off engine, check coolant level when safe

3. Speed unit selector

 
Select km/h or mph

4. Tachometer

5. Engine over-rev warning buzzer

The rotary engine design allows RPM ranges of up to 7000 RPM (A/T) and 9000 RPM (M/T), if you exceed a given RPM, a warning buzzer will remind you to up-shift to the next higher gear

Always obey all local speed limits and traffic signs

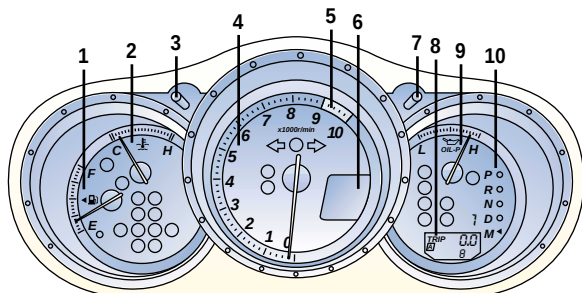

6. Speedometer

7. Odometer/trip odometer selector

Press to select among trip A, trip B, and odometer
Press and hold to reset selected trip meter

8. Odometer/trip odometer

9. Engine oil pressure gauge,

Indicates normal engine oil pressure when needle is halfway between L and H with engine running

10. Manual mode gear indicator (A/T only)*

Displays current gear of Sport AT during manual shift mode

WARNING LIGHTS

• Low fuel

• Turn signals/hazard warning on

• Anti-lock Brake System (ABS)*

ABS malfunction, normal brakes only, dealer inspection required

• CRUISE Cruise set, see Driver Controls

• AT Automatic transaxle indicator

Dealer inspection required if light remains on

• High beams on

• Charging system warning light

Dealer inspection required

• Tire pressure monitoring system, see Getting Started

• Lights on

• Traction Control System (TCS)* / Dynamic Stability Control (DSC)*, see Getting Started

• DSC Traction Control System* off, System turned off manually

• CRUISE MAIN Cruise control main power on, see Driver Controls

• BRAKE Brake system Parking brake on/low fluid level

• Check engine Dealer inspection required

• Immobilizer system, see Locks

• Engine oil level warning light, see Getting Started

• Power steering malfunction

Dealer inspection required if light remains on

• Air bag readiness

Front, side and curtain air bag malfunction; warning light constantly flashes or stays on or never comes on with ignition on, dealer inspection required

• Door ajar

 
• Always fasten safety belts

• Low washer fluid level*

• Engine coolant level

• Headlight auto leveling malfunction

*Denotes optional equipment

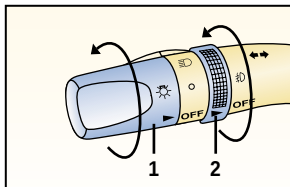

Turn signal/lighting control lever

OFF = Lights off

☞☜ = Tail, parking and dashboard lights on: Rotate knob (1) to first notch

☞☜ = Tail, parking, dashboard and headlights on: Rotate knob (1) to second notch


High beams on/off: Push forward/pull back to detent

To flash high beams: Pull back slightly and release

Turn signals right/left: move lever up/down

☞ = Fog lights on: Rotate (2); functions only with headlight low beams on

 **Tip: Headlights switch off, parking lights remain on, if lights are left on and switch is in lock position or key removed**

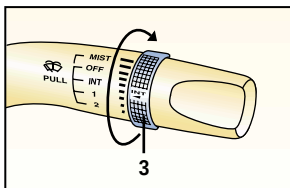 

Wiper/washer control lever

Intermittent wiper: One click down

 
To change interval speed: Rotate inner ring (3)

Normal wiper speed: Two clicks down

Fast wiper speed: Three clicks down

Single wipe: Push stalk up

Washer: Pull stalk back

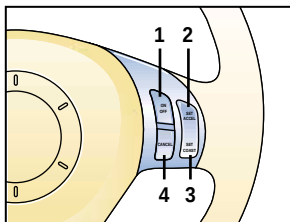

Cruise control

Operates above 25 mph

To activate: Press and release ON/OFF (1)

 
To set speed: Press and release SET/COAST (3) at desired speed

To accelerate: Press and hold RESUME/ACCEL (2); incremental acceleration: Press and release (2), each tap = plus 1mph

To decelerate: Press and hold SET/COAST (3), release at desired

speed; or tap brake pedal, press and release (3) at desired speed; incremental deceleration: Press and release (3), each tap = minus 1 mph

To cancel: Tap brake pedal, clutch pedal (manual transaxle) or press CANCEL button (4) or ON/OFF (1). Return to preset speed after CANCEL button or braking: Press and release RESUME/ACCEL button (2)

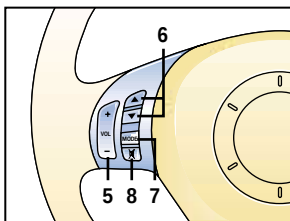

Steering-wheel audio controls

To increase/decrease volume: Press (5)

Radio: Press (6) to select preset stations

Cassette/CD/MD: Press (6) to select next selection/track

Press (7) to select AM, FM1, FM2, Tape, CD and MD mode


Press (8) to mute

Tilt steering-wheel lever

Pull lever located under steering-wheel down to unlock column, position tilt angle steering column position

 **WARNING: Do not adjust steering-wheel while driving, you can lose control of vehicle**

 *Denotes optional equipment

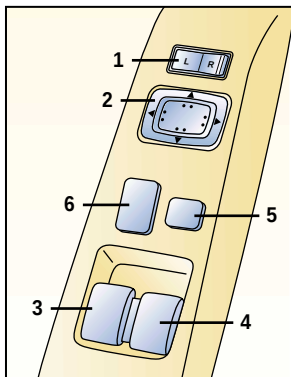

Dual power mirrors

Ignition switch must be in ACC or ON position

Switch is on driver's door

To adjust left/right mirror:

Press selector switch (1) left/right, press switch (2) in direction of desired movement

Tip: To lock mirrors in place, move selector to center position

Power window switches

Ignition switch must be in ON position

Front windows controlled from the driver's armrest; passenger door has a separate switch

Driver's window

One-touch-down: Push down AUTO switch (3) firmly and release, window goes down all the way; pull switch back briefly to stop; press lightly and hold for normal operation

Passenger window switch

Press button (4) down and hold to open; pull back and hold to close

Power window lockout switch

Press button (5) down until clicks, only driver's window operates; press again and passenger windows function again

Power door locks

 
Master front door lock switches

To lock/unlock all doors:

Press bottom/top of switch (6)

To lock doors without key: With door open, press bottom of door lock switch, exit car, close doors

To unlock: Use key to unlock driver's front door, rotate key to counter-clockwise position for more than one second to unlock other doors

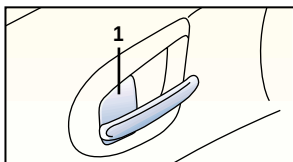


Manual door locks

Lock button

To lock: Press front of button (1) toward door handle

To unlock: Pull front of button away from door handle

 Tip: Doors can be locked with key in ignition (chime sounds to alert you to key in ignition)

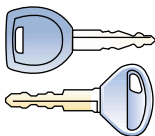


Key

Operates ignition and all locks

Tip: Use key number plate to purchase new key; store in safe place

Immobilizer system

 Prevents engine from running unless coded key used; see Owner's Manual

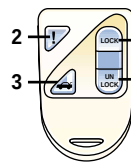

Remote keyless entry system

Functions only with ignition in OFF position

To lock doors: Press Lock button (4); pressing again within 5 seconds causes doors to relock and horn to beep

 
To unlock: Press ^{UN}Lock (5) for driver's door; press again within 5 seconds to unlock other doors

To open trunk: Press (3)

Panic alarm: Press ! (2); horn sounds and turn signals flash; to stop, press (2) again or turn ignition to ON position

If trunk fails to open: See Trunk Tab, then Remote trunk-lid release lock-out

*Denotes optional equipment

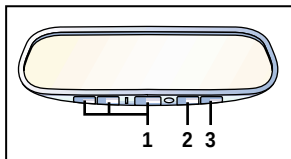

Homelink® Wireless Control System*

Located on rear view mirror

To program or reprogram: Ignition must be off; hold transmitter for the device to be programmed between 1-3 inches to Homelink®; press transmitter button and desired Homelink® button (1) simultaneously until Homelink® indicator light goes from slow to rapid flashing

Turn ignition on; verify device operation by pressing Homelink® button (1) that was just programmed; repeat procedure for other buttons

Rolling code synchronization procedure

Refer to your garage door opener or device instruction manual to confirm your system is equipped with a rolling code feature


 **Tip: This procedure is easier done with the assistance of another person**

 To synchronize: Press programming button on garage door opener motor; press and release the programmed Homelink® button 2 times within 30 seconds of pressing the garage door opening motor programming button

Some devices may require you to press and release a third time to complete programming procedure

Auto-dimming rear view mirror

Auto-dimming function changes are based on outside lighting conditions and if bright headlights are visible in rear view mirror
Press on (2), off (3)

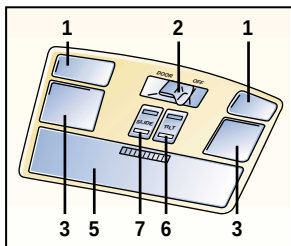

1. Map/reading light

Press on/off

2. Interior light switch

DOOR = light on when door open
ON = light always on
OFF = light always off

3. Front interior light

4. Rear interior light

5. Sunglass holder

Press concave lip then open

6. Sunroof tilt switch*

Press rear of switch to tilt rear of sunroof

Press front of switch to close

 
7. Sunroof slide switch*

Press rear of switch to open sunroof


Press front of switch to close

Illuminated visor mirrors

Mirrors lighted when covers open; off when closed

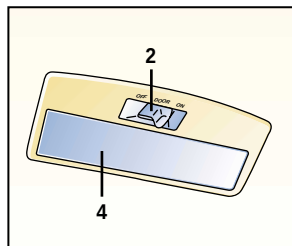

*Denotes optional equipment

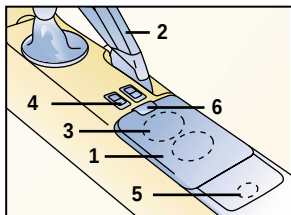 

1. Console

Press button (6) and slide cover rearward until it clicks

2. Parking-brake lever

To engage: Pull up

To release: Pull up slightly while depressing button at front of lever, lower hand brake lever

3. Cup holders

4. Seat warmer*

Press on/off switch; indicator light on when activated

5. Accessory socket



 
Manual transmission*

Depress clutch pedal to start engine and change gears, push shifter downward when selecting reverse gear



WARNINGS: Do not shift into 1st above 20 mph or clutch failure could occur


Resting your foot on clutch pedal while driving and using the clutch to hold your vehicle at a stand still while waiting on a hill may reduce clutch life

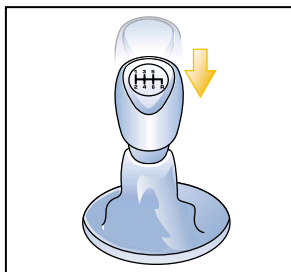

Tip: Torque converter lock-up improves fuel economy and can feel like an additional gear change



 WARNING: Placing shift lever in P position without setting parking brake may not hold vehicle, always set parking brake

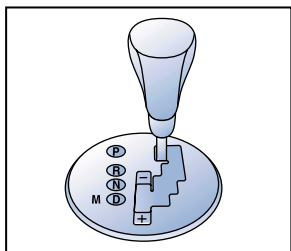

Automatic transmission*

P = Park

To move gearshift from Park: Press firmly on brake pedal, then move gearshift to gear selection

R = Reverse

N = Neutral No gear engaged

D (Overdrive)

For normal driving: Shifts through four forward gears automatically



 
Sport AT manual shift mode*

Move shift lever return from D to M; then M to D for automatic mode

M (Manual)

Manual gear selection is achieved by moving shifter back to upshift and forward to downshift

Shift and gear position indicator located in the instrument panel, M will be illuminated for manual mode, numeral for gear position will be shown next to shift position indicator

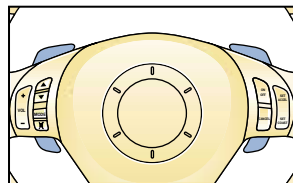

Steering shift switches (A/T only)*

Upshift/downshift; pull either switch up/down, see Owner's Manual

*Denotes optional equipment

Manual controls**1. Fore-aft adjustment**

 
Lift lever and hold, slide seat, release lever

2. Raise/lower seat

Pull/push lever and release

3. Seatback angle

To adjust: Lift and hold lever, lean forward or backward, release lever

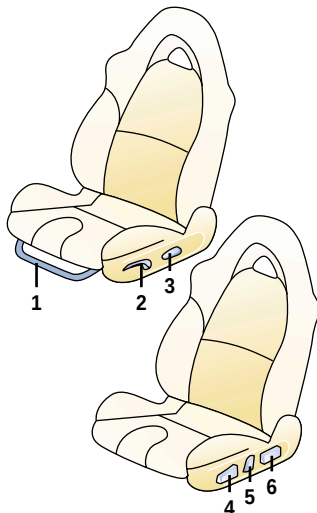

Tip: Side-impact air bags* deploy from outboard side of driver and front passenger seatbacks

Power driver's seat***4. Raise/lower front of seat cushion**

Pull/push front of switch vertically

Fore/aft adjustment

Slide switch horizontally

Raise/lower rear of seat cushion

Pull/push rear of switch vertically

5. Seatback angle

Press front/rear of switch

6. Lumbar adjustment*

Press front/rear of switch to increase/decrease firmness

 
Seat warmer*,
see Console/Transmission

WARNINGS: Do not adjust seats while driving, you can lose control of vehicle
Safety belts must always be worn when vehicle is in motion
Air bags are supplemental and do not replace safety belt usage

Always wear your safety belt and properly secure children 12 and under in the rear seat

Never place rear-facing infant-safety seat in front of any air bag, an infant is in serious danger of being injured or killed

If you choose to install a forward-facing child-safety seat in the front seating position, move vehicle seat as far back as possible

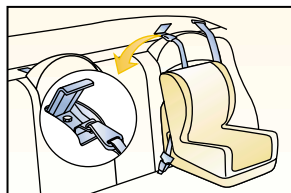 **Child-safety seat**

To install in rear outboard seats: Use dual locking mode retractor seat belts; see Owner's Manual for proper installation and child seat tether and LATCH system instructions

WARNING: Use age appropriate child restraints, see Owner's Manual and state or province laws

Dual locking mode lap/shoulder belt retractor (front passenger and rear safety belts only)

Emergency locking mode: Belt locks only on hard braking/ cornering or impacts of about 5 mph or more

Automatic locking mode: Must be used when installing child-safety seat

To activate: Pull webbing until fully extended from retractor until click is heard; belt will only tighten when released

To disengage: Unbuckle belt and allow webbing to retract fully

*Denotes optional equipment

1. Air flow selections

- = air to dash
- = air to dash and floor
- = air to floor
- = air to floor and windshield

2. Fan control

Rotate knob between 0 (OFF) and 4 (HIGH)

3. Temperature control

 
Cooler/warmer = rotate knob counterclockwise/clockwise

4. A/C = air conditioner

Press to turn on/off

5. Air intake control

- = recirculate inside air; use for maximum cooling
- = fresh air

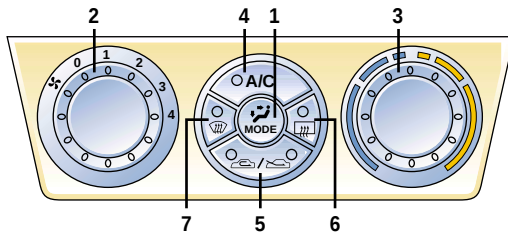

⚠ WARNING: Do not use position in cold weather, windows may fog and hamper vision

6. Rear window defogger

Press on/off; shuts off with ignition; also operates heated side mirrors*

 
Control positions for maximum defrost

Fan to maximum, temperature to maximum hot, selected

☀ Tips: To help prevent windshield fogging in humid weather, select before starting engine. To prevent moisture buildup, never drive with system off. Objects placed under the front seats may interfere with air flow to the rear

7. Front windshield defogger

A/C switches ON and air intake switches to fresh air

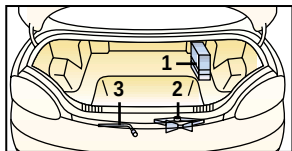

2. Jack/jack handle

3. Lug wrench

Tire economy and tips

Check pressure regularly when tires are cold, maintain correct front-end alignment and tire balance; rotate tires at the mileage shown in the Maintenance Guide; see Owner's Manual for rotation chart

Tire pressure

P225/55R16 94V,
P225/45R18 91W

Front/rear: 32psi cold

☀ Tips: Correct tire pressure ensures safe handling and ride comfort. If you experience pull/drift while driving, possible causes may be road crown, tire pressure, or wheel alignment.

The suspension is sport-tuned with firmer ride for optimum handling and response

Tire chains*†

Tire chains can damage aluminum wheels; use on steel wheels only

☀ Tips: Use only SAE class "S" chains, install only on rear tires; install as tightly as possible and retighten after driving 1/4-1/2 miles; chains may affect handling. Never exceed 30 mph with tire chains



Luggage compartment internal safety release

Allows you to escape should you become locked in trunk. Slide illuminated release lever in direction of arrow; lever will glow if it has been exposed to light. Located on interior trunk lid

 
* Denotes optional equipment

† See Owner's Manual

Trunk

To open: Use key, remote trunk-lid release or remote keyless entry fob

Remote trunk-lid release, see Driver's View



Remote trunk-lid release lock-out

Switch in ON position, remote trunk release functions normal; OFF position disables system; located in glove box

1. Instant Mobility System emergency flat tire repair kit (IMS)*, see Getting Started

1. Power/Volume

Press to turn on/off; rotate to increase/decrease volume

 **Tip: Press (8) and (9) together to turn radio on**

2. Repeat

Press to replay current CD/ tape selection

3. Disc up ^

Press to skip forward to beginning of next CD

4. Disc down v

Press to skip back to beginning of previous CD

5. Tune/Auto-Memory

Tune: Rotate counterclockwise/ clockwise for lower frequency/ higher frequency

Radio: Press and hold until a beep is heard; system automatically scans and temporarily stores six strong stations in each band; press again to cancel

6. SEEK/TRACK/APC

Radio: Press  /  to automatically seek higher/ lower frequency

CD: Press  /  to select next/previous track

 
Tape: Press  /  to automatically advance tape to beginning of next selection/ replay selection; to stop this operation, press button again

7. LOAD*

To load multiple discs: Press and hold LOAD (7) until beep is heard; insert CD when "In" is displayed

To eject disc: Press Eject (14)

To eject specific disc: Press and hold Eject (14) until beep is heard; within five seconds press the desired tray number 1-6 (15)

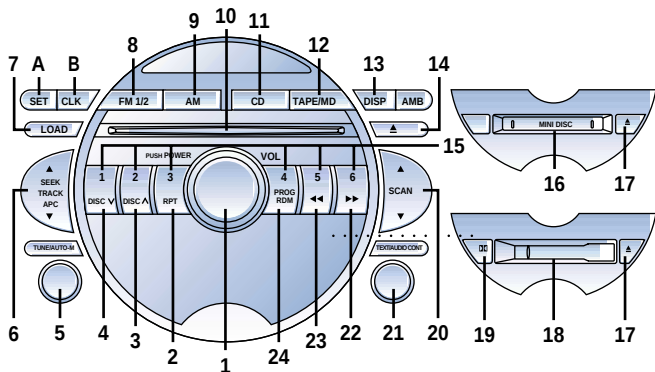

8. FM1/2

Press to select between FM1/FM2 station preset buttons (15)

9. AM

Press to select AM frequency band

10. CD slot

11. CD

Press to play CD

12. Tape*/MD*

Press to play Mini-disc Player/ cassette tape

13. DISP*

Press: Changes display during MD play

14. CD eject button

To set: Tune to station, press and hold until beep is heard

16. Mini Disc slot*

17. Eject button*

18. Cassette door*

19. Dolby® Noise Reduction*

Reduces tape noise and hiss; press to activate/deactivate

20. Scan

Press to briefly sample next listenable selections; functions in all modes

21. Text/Audio Control

Audio control: Press to select BASS/MID/TREBLE/FADE/ BALANCE/BEEP ON/ALC OFF/ ALC LEVEL 1, 2, 3/AUDIO PLT ON** ; rotate right/left to adjust selected feature

 **Tip: Automatic Level Control (ALC) automatically adjusts audio volume/quality depending on vehicle speed**

22. Fast forward ►►

Press to fast forward through a track

23. Reverse ◀◀

Press to reverse through a track

24. Program Random†

Press to enable/cancel



 
Clock

To set: With ignition in ACC or ON position, press (B) and hold until beep sounds; 12 hr/24 hr will be displayed; press (A) to select; press (B) again while selection is flashing: Hr ADJUST displays; press (A) to select hr; press (B) when done, do the same to set minutes

* Denotes optional equipment

** Bose audio system only

† For use with cassette tape player, MD player, or CD changer*

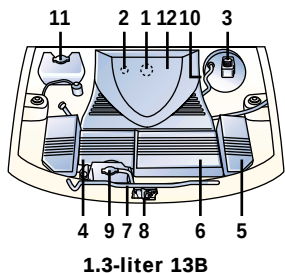

1. Engine oil filler cap

SAE 5W-20

Remove engine cover (12) to access engine oil dipstick and oil filler cap

2. Automatic transmission fluid dipstick*

Check with engine on at operating temperature; fluid level should be within cross-hatched area/between top two notches on dipstick

3. Brake/Clutch* fluid reservoir

Fill to MAX mark with DOT 3 fluid; check with cap on

4. Battery

5. Fuse block

6. Air filter

7. Hood support rod

8. Hood latch

Push hood latch to the left, open hood

9. Engine coolant reservoir

Level should be between F and L lines when cold

⚠ WARNING: Never remove coolant reserve tank cap while engine is running or hot; you could get burned

10. Engine oil dipstick

Check with engine off and at operating temperature; fluid level should be between F and L marks on dipstick

11. Windshield washer reservoir

Fill with windshield washer fluid

12. Engine cover

* Denotes optional equipment

† See Owner's Manual

Break-in period

First 600 miles: Drive at varying road and engine speeds; avoid full throttle, rapid acceleration or kick-down of transmission

Do not use special "break-in" oils

Anti-lock Braking System (ABS)*
ABS automatically reduces hydraulic pressure to any wheel on the verge of locking up. You may feel a slight pulsing of the brake pedal and hear a clicking noise; this tells you the ABS is functioning properly; increase pressure on pedal for maximum braking

☀ Tips: Maintain constant pressure on the brake pedal. Do not pump the brakes

ABS self test*

A self-diagnostic test is performed when starting; you may feel some brake pedal pulsation and hear some noise, this is normal

NORMAL SERVICE INTERVALS

7,500 miles	A
15,000 miles	A B E
22,500 miles	A
30,000 miles	A B C E
37,500 miles	A D
45,000 miles	A B
52,500 miles	A E
60,000 miles	A B C F
67,500 miles	A
75,000 miles	A
82,500 miles	A
90,000 miles	A

Unique driving conditions†

Every 5,000 miles change oil/filter, inspect coolant level, lights, brake/clutch fluid, tire pressure/wear, locks/hinges and washer fluid

Normal maintenance notes

Rotate tires every 7,500 miles or sooner if needed; replace cabin air filter every 25,000 miles or 24 months

A. Change: Engine oil/replace filter
Lube: Locks and hinges

B. Inspect: Disc brakes

C. Inspect: Drive belts, fuel lines, hoses, and connections, brake lines and hoses, steering operation and linkages, front and rear suspension ball joints, driveshaft dust boots, chassis and body bolts, exhaust system heat shields, cooling system, and bolts and nuts on seat

D. Replace: Air filter, spark plugs

E. Clean: Air filter

F. Replace: Manual transmission and rear differential oil, engine coolant