

Scheduled Maintenance

Scheduled Maintenance

Follow Schedule 1 if the vehicle is operated mainly where none of the following conditions apply.

If any do apply, follow Schedule 2 (Canada and Puerto Rico residents follow Schedule 2).

- Repeated short-distance driving
- Driving in dusty conditions
- Driving with extended use of brakes
- Driving in areas where salt or other corrosive materials are being used
- Driving on rough or muddy roads
- Extended periods of idling or low-speed operation
- Driving for long periods in cold temperatures or extremely humid climates

NOTE
After the prescribed period, continue to follow the described maintenance at the recommended intervals.

Scheduled Maintenance

▼ Schedule 1

I : Inspect and repair, clean, adjust, or replace if necessary.
R : Replace
L : Lubricate
C : Clean

Maintenance Interval (Number of months or kilometers (miles), whichever comes first)	Months	6	12	18	24	30	36	42	48
	×1000 km	12	24	36	48	60	72	84	96
	×1000 miles	7.5	15	22.5	30	37.5	45	52.5	60

ENGINE

Engine oil	R	R	R	R	R	R	R	R	R
Engine oil filter	R	R	R	R	R	R	R	R	R
Drive belt				I					I

AIR FILTER

Air filter		C		C	R		C		
------------	--	---	--	---	---	--	---	--	--

IGNITION SYSTEM

Spark plugs					R				
-------------	--	--	--	--	---	--	--	--	--

FUEL SYSTEM

Fuel filter	Replace every 160,000km (100,000miles)								
Fuel lines, hoses and connections *1				I					I

COOLING SYSTEM

Cooling system				I					I
Engine coolant	Replace at first 96,000km (60,000miles) or 48 months ; after that, every 24 months								

CHASSIS & BODY

Brake line, hoses and connection				I					I
Disk brakes		I		I			I		I
Tire (Rotation)	Rorate every 12,000km (7,500miles)								
Steering operation and linkages				I					I
Front and rear suspension and ball joints				I					I
Manual transmission oil									R
Rear differential oil									R
Driveshaft dust boots				I					I
Exhaust system and heat shields	Inspect every 72,000km (45,000miles) or 60 months								
All locks and hinges	L	L	L	L	L	L	L	L	L
Flat tire repair kit *2	Inspect every year								

AIR CONDITIONER SYSTEM

Cabin air filter (If installed)	Replace every 40,000km (25,000miles) or 24 months								
---------------------------------	---	--	--	--	--	--	--	--	--

*1 According to state / provincial and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended time or mileage / kilometer period to ensure long-term reliability.

*2 Check the tire repair fluid expiration date every year when performing the periodic maintenance. Replace the tire repair fluid bottle with new one before the expiration date.

Scheduled Maintenance

▼ Schedule 2

I : Inspect and repair, clean, adjust, or replace if necessary.

R : Replace

C : Clean

Maintenance Interval (Number of months or kilometers (miles), whichever comes first)	Months	4	8	12	16	20	24	28	32	36	40	44	48
	×1000 km	8	16	24	32	40	48	56	64	72	80	88	96
	×1000 miles	5	10	15	20	25	30	35	40	45	50	55	60

ENGINE

Engine oil	Puerto Rico	Replace every 5,000km (3,000miles) or 3 months											
	Others	R	R	R	R	R	R	R	R	R	R	R	R
Engine oil filter		R	R	R	R	R	R	R	R	R	R	R	R
Drive belt							I						I

AIR FILTER

Air filter			C			C	R			C			
------------	--	--	---	--	--	---	---	--	--	---	--	--	--

IGNITION SYSTEM

Spark plugs							R						
-------------	--	--	--	--	--	--	---	--	--	--	--	--	--

FUEL SYSTEM

Fuel filter	Replace every 160,000km (100,000miles)												
Fuel lines, hoses and connections*1						I							I

COOLING SYSTEM

Cooling system						I							I
Engine coolant	Replace at first 96,000km (60,000miles) or 48 months ; after that, every 24 months												
Engine coolant level	I	I	I	I	I	I	I	I	I	I	I	I	I

ELECTRICAL SYSTEM

Function of all lights	I	I	I	I	I	I	I	I	I	I	I	I	I
------------------------	---	---	---	---	---	---	---	---	---	---	---	---	---

*1 According to state / provincial and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended time or mileage / kilometer period to ensure long-term reliability.

Scheduled Maintenance

I : Inspect and repair, clean, adjust, or replace if necessary.
R : Replace
L : Lubricate

Maintenance Interval (Number of months or kilometers (miles), whichever comes first)	Months	4	8	12	16	20	24	28	32	36	40	44	48
	×1000 km	8	16	24	32	40	48	56	64	72	80	88	96
	×1000 miles	5	10	15	20	25	30	35	40	45	50	55	60

CHASSIS & BODY

Brake line, hoses and connection						I							I
Brake and clutch fluid level	I	I	I	I	I		I	I	I	I	I	I	
Brake fluid						R							R
Disk brakes			I			I			I				I
Tire (Rotation)	Rotate every 8,000km (5,000miles)												
Tire inflation pressure and tire wear	I	I	I	I	I	I	I	I	I	I	I	I	I
Steering operation and linkages						I							I
Front and rear suspension and ball joints						I							I
Manual transmission oil						R							R
Rear differential oil						R							R
Driveshaft dust boots						I							I
Exhaust system and heat shields	Inspect every 72,000km (45,000miles) or 60 months												
All locks and hinges	L	L	L	L	L	L	L	L	L	L	L	L	L
Washer fluid level	I	I	I	I	I	I	I	I	I	I	I	I	I
Flat tire repair kit *2	Inspect every year												

AIR CONDITIONER SYSTEM

Cabin air filter (If installed)	Replace every 40,000km (25,000miles) or 24 months
---------------------------------	---

*2 Check the tire repair fluid expiration date every year when performing the periodic maintenance. Replace the tire repair fluid bottle with new one before the expiration date.