

AM/FM Single CD stereo system

CIMS #
itdseq=1 com_sanyo.gt

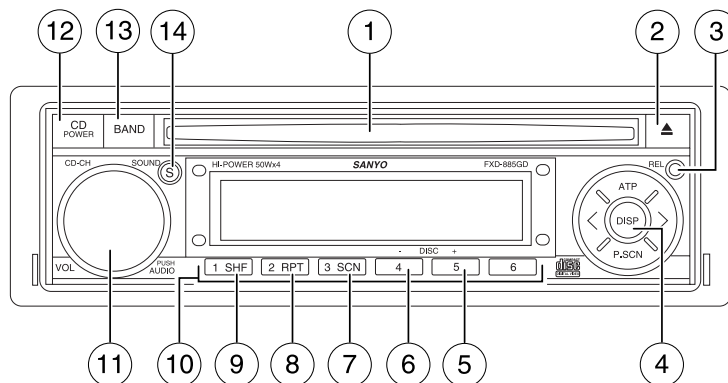


Figure: gtocf745_a

1. **CD slot:** Insert a CD, label side up.



Figure: gtocf760_a

2. **Eject:** Press to eject the CD.



Figure: gtocf746_a

3. **REL (Release):** This button is not operational on the Ford GT.



Figure: gtocf747_a

4. **Multipurpose control:** In radio mode for manual tuning, press and release ◀/▶ to go down/up the frequency band in individual increments. Press and hold ◀/▶ to go to the next listenable station down/up the frequency band.

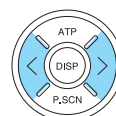


Figure: gtocf751_a

In CD mode, press ◀ to advance to the beginning of the current track. Press ◀ twice to advance to the beginning of the previous track. Press ▶ to advance to the beginning of the next track. Press and hold ◀/▶ for a quick search in either direction.

ATP (Automatic Travel Preset):

This feature Allows you to set the strongest local radio stations without losing your original manually set preset stations for AM/FM1/FM2.



Figure: gtocf749_a

To set the stations: Select the desired frequency band. Press and hold the ATP button until ATP appears in the display. When the stations are filled, the first station will begin to play.

To select a specific ATP station: Select the desired frequency band. If ATP does not appear in the display, indicating you are in ATP mode, press the ATP button. While ATP is displayed, select the desired station by pressing the corresponding memory preset (1–6).

P.SCN (Preset scan): This feature allows you to scan your manual preset stations and your auto travel preset stations. To scan your presets: Select the desired frequency band to scan your manual



Figure: gtocf750_a

presets in that frequency band. Press the ATP button to enter ATP mode and scan your Auto Travel Presets. Press P.SCN to hear a brief sampling of all available preset stations. To stop, press P.SCN again.

DISP (Display): Press and release DISP to toggle between clock and audio display.

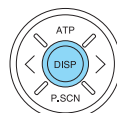


Figure: gtocf748_a

Setting the clock: Press and hold DISP until the time display blinks. To adjust the minutes, press ► repeatedly. Press and hold for a fast advance.

To adjust the hours, press ◀ repeatedly. Press and hold for a fast advance. Press DISP to start the clock.

Note: This audio system has a 24 hour clock.

Clock reset: You can advance your clock setting to the nearest half hour. Press DISP until the time flashes in the display. Press the memory preset 6 to advance to the nearest half hour.

5. **DISC + :** This button is not operational on the Ford GT.



Figure: gtocf752_a



6. **DISC** — : This button is not operational on the Ford GT.



Figure: gtocf753_a

7. **SCN(Scan)**: Press for a brief sampling of all listenable radio stations or CD tracks. Press again to stop.



Figure: gtocf754_a

8. **RPT (Repeat)**: Press to play the current track repeatedly. Press again to stop.



Figure: gtocf755_a

9. **SHF (Shuffle)**: Press to play all the tracks on the current CD in random order. Press again to stop.



Figure: gtocf761_a

10. **Memory presets**: To set a station, press BAND to select frequency band AM/FM1/FM2; tune to a station, press and hold a preset button until sound returns. You can save a total of 18 stations in your memory presets; six in AM, six in FM1, and six in FM2.



Figure: gtocf762_a

11. **Audio button**: Press repeatedly to cycle through the following modes:

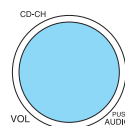


Figure: gtocf756_a

Bass: Turn the audio button left/right to decrease/increase the bass output.

Treble: Turn the audio button left/right to decrease/increase the treble output.

Balance: Turn the audio button left/right to shift the speaker sound between the left/right speakers.

Fade: Turn the audio button left/right to shift the speaker sound between the front/rear speakers.

Note: Using the fade feature to shift the sound to the rear speakers will result in no sound.

Volume: When no other mode is listed in the display (i.e. bass, treble) the audio control functions as a volume control. Turn the control to the left/right to decrease/increase the volume output.



12. **CD/POWER:** Press and hold to turn the system on/off. Press and release repeatedly to cycle through radio and CD player mode.



Figure: gtocf758_a

CD units are designed to play commercially pressed 4.75 in (12 cm) audio compact discs only. Due to technical incompatibility, certain recordable and re-recordable compact discs may not function correctly when used in Ford CD players. Irregular shaped CDs, CDs with a scratch protection film attached, and CDs with homemade paper (adhesive) labels should not be inserted into the CD player. The label may peel and cause the CD to become jammed. It is recommended that homemade CDs be identified with permanent felt tip marker rather than adhesive labels. Ballpoint pens may damage CDs. Please contact your dealer for further information.

13. **BAND:** Press repeatedly to cycle through AM/FM1/FM2 frequency bands.



Figure: gtocf759_a

14. **SOUND:** Press to change the sound effect of the current playing media from FLAT, JAZZ or ROCK modes. One of these modes will be selected at all times. These are equalizer settings that can be used to modify the sound. Press and hold SOUND to activate the enhanced bass mode. BASS will appear in the display. To cancel, press and hold again.



Figure: gtocf757_a

Beep Tones: Your audio system will automatically beep when a button is pushed. To turn off the beep tones:

1. Press and hold CD POWER until the system turns off.
2. With the ignition in the accessory position (ACC), press CD POWER and  on the audio control simultaneously until 'b-oF' is displayed. This will signify the tones have been turned off.
3. To turn the tones on again, repeat steps 1 and 2. 'b-oN' will be displayed when the tones are active again.

Troubleshooting

Symptoms	Possible Cause	Action
The disc cannot be inserted into the unit.	Another disc is already present in the system.	Remove the current disc and re-insert the desired disc.
The disc is ejected by the system.	The disc is either upside down, dirty or damaged.	Ensure that the disc is label side up, clean and undamaged.
No sound is heard when a disc is inserted.	The volume is either turned down or disc condensation has occurred.	Adjust the volume to the proper levels. If condensation has occurred, allow the system to sit idle for awhile before playing the disc again.
There is no power.	The vehicle ignition is turned off.	Turn the key to the accessory position (ACC) when the power is connected to the vehicle's accessory circuit but the engine does not operate.
No sound is heard from the radio.	The power is turned off or volume is turned down.	Press and hold the POWER button to turn the system on. Ensure that the volume is adjusted to the proper levels.
Automatic tuning is not available.	Signals are weak.	Select a radio station using manual tuning.



Symptoms	Possible Cause	Action
No sound is coming from any speakers.	Adjustment of the speaker levels.	To adjust the Balance levels, press the Audio control until BAL appears in the display. Press ◀/▶ to adjust sound between the left and right speakers. Ensure that the FADE feature has the speakers active in the front of the vehicle.

Error messages

Symptoms	Possible Cause	Action
E01	Abnormal CD system function.	Press the eject button. Turn the system power off and then on again. If this does not clear the code, contact your dealer.
E07	The disc is either dirty or upside down.	Clean the disc and insert the disc label side up.
E99	Internal connection check error.	Contact your dealer.
no CD	No disc in the system.	Insert the CD.

Refer to *General Audio Information* in the *Entertainment Chapter* of your Owner's Guide for cares, cleaning, reception and warranty information.