

Scheduled Maintenance

Follow Schedule 1 if the vehicle is operated mainly where none of the following conditions apply.

If any do apply, follow Schedule 2 (Canada and Puerto Rico residents follow Schedule 2).

- Repeated short-distance driving
- Driving in dusty conditions
- Driving with extended use of brakes
- Driving in areas where salt or other corrosive materials are being used
- Driving on rough or muddy roads
- Extended periods of idling or low-speed operation
- Driving for long periods in cold temperatures or extremely humid climates
- Towing a trailer

NOTE
After the prescribed period, continue to follow the described maintenance at the recommended intervals.

Scheduled Maintenance

▼ Schedule 1

Maintenance Interval		Number of months or kilometers (miles), whichever comes first								
		Months	6	12	18	24	30	36	42	48
		×1000 km	12	24	36	48	60	72	84	96
		×1000 miles	7.5	15	22.5	30	37.5	45	52.5	60
ENGINE										
Engine oil		R	R	R	R	R	R	R	R	
Engine oil filter		R	R	R	R	R	R	R	R	
Drive belts					I				I	
PCV valve* ¹									I	
IGNITION SYSTEM										
Spark plugs (Platinum tipped type)		Replace every 160,000 km (100,000 miles)								
FUEL SYSTEM										
Air filter						R				
Fuel lines and hoses* ¹					I				I	
COOLING SYSTEM										
Cooling system					I				I	
Engine coolant	FL22 type* ²	Replace at first 192,000 km (120,000 miles) or 120 months; after that, every 96,000 km (60,000 miles) or 60 months								
	Others	Replace at first 96,000 km (60,000 miles) or 48 months ; after that, every 24 months								
CHASSIS and BODY										
Brake lines, hoses and connections					I				I	
Disc brakes			I		I		I		I	
Drum brakes					I				I	
Tire (rotation)		Rotate every 12,000 km (7,500 miles)								
Steering operation and linkages					I				I	
Front suspension ball joints					I				I	
Driveshaft dust boots					I				I	
Exhaust system and heat shields		Inspect every 72,000 km (45,000 miles) or 60 months								
All locks and hinges		L	L	L	L	L	L	L	L	

Scheduled Maintenance

Maintenance Interval	Number of months or kilometers (miles), whichever comes first								
	Months	6	12	18	24	30	36	42	48
	×1000 km	12	24	36	48	60	72	84	96
	×1000 miles	7.5	15	22.5	30	37.5	45	52.5	60
AIR CONDITIONER SYSTEM (if equipped)									
Cabin air filter (if equipped)		Replace every 40,000 km (25,000 miles) or 24 months							

Chart symbols

I: Inspect and repair, clean, adjust, or replace if necessary.

R: Replace

L: Lubricate

Remarks

- *1 According to state/provincial and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended time or mileage/kilometer period to ensure long-term reliability.
- *2 Use FL22 type coolant in vehicles with the inscription “FL22” on the radiator cap itself or the surrounding area. Use FL22 when replacing the coolant.

Scheduled Maintenance

▼ Schedule 2

Maintenance Interval		Number of months or kilometers (miles), whichever comes first													
		Months	4	8	12	16	20	24	28	32	36	40	44	48	
		×1000 km	8	16	24	32	40	48	56	64	72	80	88	96	
		×1000 miles	5	10	15	20	25	30	35	40	45	50	55	60	
ENGINE															
Engine oil		Puerto Rico	Replace every 5,000 km (3,000 miles) or 3 months												
		Others	R	R	R	R	R	R	R	R	R	R	R	R	R
Engine oil filter			R	R	R	R	R	R	R	R	R	R	R	R	R
Drive belts								I							I
PCV valve* ¹															I
Hoses and tubes for emission (Puerto Rico)															I
IGNITION SYSTEM															
Spark plugs (Platinum tipped type)		U.S.A.	Replace every 96,000 km (60,000 miles)												
		Others* ²	Replace every 160,000 km (100,000 miles)												
FUEL SYSTEM															
Air filter		Puerto Rico						R							R
		Others							R						
Fuel lines and hoses* ¹								I							I
COOLING SYSTEM															
Cooling system								I							I
Engine coolant		FL22 type* ³	Replace at first 192,000 km (120,000 miles) or 120 months ; after that, every 96,000 km (60,000 miles) or 60 months												
		Others	Replace at first 96,000 km (60,000 miles) or 48 months ; after that, every 24 months												
Engine coolant level			I	I	I	I	I	I	I	I	I	I	I	I	I
ELECTRICAL SYSTEM															
Function of all lights			I	I	I	I	I	I	I	I	I	I	I	I	I

Scheduled Maintenance

Maintenance Interval	Number of months or kilometers (miles), whichever comes first													
	Months	4	8	12	16	20	24	28	32	36	40	44	48	
	×1000 km	8	16	24	32	40	48	56	64	72	80	88	96	
	×1000 miles	5	10	15	20	25	30	35	40	45	50	55	60	
CHASSIS and BODY														
Brake lines, hoses and connections						I							I	
Brake fluid level	I	I	I	I	I	I	I	I	I	I	I	I	I	
Disc brakes			I			I			I				I	
Drum brakes						I							I	
Tire (rotation)	Rotate every 8,000 km (5,000 miles)													
Tire inflation pressure and tire wear	I	I	I	I	I	I	I	I	I	I	I	I	I	
Steering operation and linkages						I							I	
Power steering fluid level	I	I	I	I	I	I	I	I	I	I	I	I	I	
Front suspension ball joints						I							I	
Driveshaft dust boots						I							I	
Exhaust system and heat shields	Inspect every 72,000 km (45,000 miles) or 60 months													
All locks and hinges	L	L	L	L	L	L	L	L	L	L	L	L	L	
Washer fluid level	I	I	I	I	I	I	I	I	I	I	I	I	I	
AIR CONDITIONER SYSTEM (if equipped)														
Cabin air filter (if equipped)	Replace every 40,000 km (25,000 miles) or 24 months													

Chart symbols

I: Inspect and repair, clean, adjust, or replace if necessary.

R: Replace

L: Lubricate

Remarks

- *1 According to state/provincial and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended time or mileage/kilometer period to ensure long-term reliability.
- *2 If the vehicle is operated under any of the following conditions, change the spark plugs every 96,000 km (60,000 miles) or shorter.
 - a) Repeated short-distance driving
 - b) Extended periods of idling or low-speed operation
 - c) Driving for long periods in cold temperatures or extremely humid climates
 - d) Towing a trailer
- *3 Use FL22 type coolant in vehicles with the inscription “FL22” on the radiator cap itself or the surrounding area. Use FL22 when replacing the coolant.