

2007 Tacoma 5,000 Miles - 6 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving on Dirt Roads or Dusty Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving on Salted Roads

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2007 Tacoma 10,000 Miles - 12 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving on Dirt Roads or Dusty Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving on Salted Roads

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2007 Tacoma 15,000 Miles - 18 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Visually inspect brake linings/drums and brake pads/discs
- q Inspect the following:
 - ___ Ball joints and dust covers
 - ___ Brake lines and hoses
 - ___ Drive shaft boots (4WD)
 - ___ Engine coolant²
 - ___ Exhaust pipes and mountings
 - ___ Front differential oil (4WD)
 - ___ Radiator, condenser and/or intercooler
 - ___ Rear differential oil
 - ___ Steering gear box
 - ___ Steering linkage and boots

Note: Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced air flow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Replace front differential oil (4WD)
- q Replace rear differential oil, including limited-slip
- q Tighten nuts and bolts on chassis

Driving on Dirt Roads or Dusty Roads

- q Inspect engine air filter
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2) See Maintenance Definitions (Engine Coolant) for details.

2007 Tacoma 20,000 Miles - 24 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Replace cabin air filter
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving on Dirt Roads or Dusty Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving on Salted Roads

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2007 Tacoma 25,000 Miles - 30 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving on Dirt Roads or Dusty Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving on Salted Roads

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2007 Tacoma 30,000 Miles - 36 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Lubricate propeller shaft (4WD)
- q Replace limited-slip differential oil, if equipped²
- q Replace spark plugs³
- q Re-torque propeller shaft bolt
- q Replace engine air filter
- q Inspect the following:
 - ___ Active height control gas chamber⁴
 - ___ Ball joints and dust covers
 - ___ Brake lines and hoses
 - ___ Brake linings/drums and brake pads/discs⁵
 - ___ Drive shaft boots (4WD)
 - ___ Engine coolant⁶
 - ___ Exhaust pipes and mountings
 - ___ Front differential oil
 - ___ Front differential oil (4WD)
 - ___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
 - ___ Fuel tank cap gasket
 - ___ Radiator, condenser and/or intercooler
 - ___ Rear differential oil
 - ___ Steering gear box
 - ___ Steering linkage and boots
 - ___ Transfer case oil (4WD)
 - ___ Transmission fluid or oil

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Replace front differential oil (4WD)
- q Replace manual transmission oil
- q Replace rear differential oil, including limited-slip
- q Replace transfer case oil (4WD)
- q Tighten nuts and bolts on chassis

Driving on Dirt Roads or Dusty Roads

- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 2) Applies to 4WD Tacoma and Tacoma PreRunner.
- 3) Applies to Tacoma with 1GR-FE. Required under the terms of the Emission Control Warranty.
- 4) If equipped with active height control. Initial inspection at 30,000 miles/36 months; inspect every 15,000 miles/18 months thereafter.
- 5) Inspect thickness measurement and disc runout.
- 6) See Maintenance Definitions (Engine Coolant) for details.

2007 Tacoma 35,000 Miles - 42 Months

- q Replace engine air filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving on Dirt Roads or Dusty Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving on Salted Roads

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2007 Tacoma 40,000 Miles - 48 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Replace cabin air filter
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving on Dirt Roads or Dusty Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving on Salted Roads

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2007 Tacoma 45,000 Miles - 54 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Visually inspect brake linings/drums and brake pads/discs
- q Inspect the following:
 - ___ Active height control gas chamber²
 - ___ Ball joints and dust covers
 - ___ Brake lines and hoses
 - ___ Drive shaft boots (4WD)
 - ___ Engine coolant³
 - ___ Exhaust pipes and mountings
 - ___ Front differential oil (4WD)
 - ___ Radiator, condenser and/or intercooler
 - ___ Rear differential oil
 - ___ Steering gear box
 - ___ Steering linkage and boots

Note: Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced air flow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Replace front differential oil (4WD)
- q Replace rear differential oil, including limited-slip
- q Tighten nuts and bolts on chassis

Driving on Dirt Roads or Dusty Roads

- q Inspect engine air filter
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 2) If equipped with active height control.
- 3) See Maintenance Definitions (Engine Coolant) for details.

2007 Tacoma 50,000 Miles - 60 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving on Dirt Roads or Dusty Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving on Salted Roads

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2007 Tacoma 55,000 Miles - 66 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving on Dirt Roads or Dusty Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving on Salted Roads

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2007 Tacoma 60,000 Miles - 72 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Replace limited-slip differential oil, if equipped (4WD and PreRunner)
- q Replace spark plugs²
- q Re-torque propeller shaft bolt
- q Replace engine air filter
- q Replace cabin air filter (if equipped)
- q Lubricate propeller shaft (4WD)
- q Inspect the following:
 - ___ Active height control gas chamber³
 - ___ Ball joints and dust covers
 - ___ Brake lines and hoses
 - ___ Brake linings/drums and brake pads/discs⁴
 - ___ Drive belts⁵
 - ___ Drive shaft boots (4WD)
 - ___ Engine coolant⁶
 - ___ Engine valve clearance (except Tacoma with 2TR-FE)
 - ___ Exhaust pipes and mountings
 - ___ Front differential oil (4WD)
 - ___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
 - ___ Fuel tank cap gasket
 - ___ Radiator, condenser and/or intercooler
 - ___ Rear differential oil
 - ___ Steering gear box
 - ___ Steering linkage and boots
 - ___ Transfer case oil (4WD)
 - ___ Transmission fluid or oil

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Replace front differential oil (4WD)
- q Replace rear differential oil, including limited-slip
- q Replace transfer case oil (4WD)
- q Replace transmission fluid or oil
- q Tighten nuts and bolts on chassis

Driving on Dirt Roads or Dusty Roads

- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 2) Applies to Tacoma with 1GR-FE. Required under the terms of the Emission Control Warranty.
- 3) If equipped with active height control.
- 4) Inspect thickness measurement and disc runout.
- 5) Initial inspection at 60,000 miles/72 months. Inspect every 15,000 miles/18 months thereafter.
- 6) See Maintenance Definitions (Engine Coolant) for details.

2007 Tacoma 65,000 Miles - 78 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving on Dirt Roads or Dusty Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving on Salted Roads

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2007 Tacoma 70,000 Miles - 84 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving on Dirt Roads or Dusty Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving on Salted Roads

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2007 Tacoma 75,000 Miles - 90 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Visually inspect brake linings/drums and brake pads/discs
- q Inspect the following:
 - ___ Active height control gas chamber²
 - ___ Ball joints and dust covers
 - ___ Brake lines and hoses
 - ___ Drive belts
 - ___ Drive shaft boots (4WD)
 - ___ Engine coolant³
 - ___ Exhaust pipes and mountings
 - ___ Front differential oil (4WD)
 - ___ Radiator, condenser and/or intercooler
 - ___ Rear differential oil
 - ___ Steering gear box
 - ___ Steering linkage and boots

Note: Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced air flow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Replace front differential oil (4WD)
- q Replace rear differential oil, including limited-slip
- q Tighten nuts and bolts on chassis

Driving on Dirt Roads or Dusty Roads

- q Inspect engine air filter
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 2) If equipped with active height control.
- 3) See Maintenance Definitions (Engine Coolant) for details.

2007 Tacoma 80,000 Miles - 96 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Replace cabin air filter
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving on Dirt Roads or Dusty Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving on Salted Roads

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2007 Tacoma 85,000 Miles - 102 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving on Dirt Roads or Dusty Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving on Salted Roads

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2007 Tacoma 90,000 Miles - 108 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Lubricate propeller shaft (4WD)
- q Replace limited-slip differential oil, if equipped (4WD and PreRunner)
- q Replace spark plugs²
- q Re-torque propeller shaft bolt
- q Replace engine air filter
- q Inspect the following:
 - ___ Active height control gas chamber³
 - ___ Ball joints and dust covers
 - ___ Brake lines and hoses
 - ___ Brake linings/drums and brake pads/discs⁴
 - ___ Drive belts
 - ___ Drive shaft boots (4WD)
 - ___ Engine coolant⁵
 - ___ Exhaust pipes and mountings
 - ___ Front differential oil (4WD)
 - ___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
 - ___ Fuel tank cap gasket
 - ___ Radiator, condenser and/or intercooler
 - ___ Rear differential oil
 - ___ Steering gear box
 - ___ Steering linkage and boots
 - ___ Transfer case oil (4WD)
 - ___ Transmission fluid or oil

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Replace front differential oil (4WD)
- q Replace manual transmission oil
- q Replace rear differential oil, including limited-slip
- q Replace transfer case oil (4WD)
- q Tighten nuts and bolts on chassis

Driving on Dirt Roads or Dusty Roads

- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 2) Applies to Tacoma with 1GR-FE. Required under the terms of the Emission Control Warranty.
- 3) If equipped with active height control.
- 4) Inspect thickness measurement and disc runout.
- 5) See Maintenance Definitions (Engine Coolant) for details.

2007 Tacoma 95,000 Miles - 114 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving on Dirt Roads or Dusty Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving on Salted Roads

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2007 Tacoma 100,000 Miles - 120 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Replace cabin air filter
- q Replace engine coolant²
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving on Dirt Roads or Dusty Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving on Salted Roads

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 2) Initial replacement at 100,000 miles/120 months. Replace every 50,000 miles/60 months thereafter. Refer to "Engine Coolant" in the "Explanation of Maintenance Items" section in the back of this guide for more details.

2007 Tacoma 105,000 Miles - 126 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Visually inspect brake linings/drums and brake pads/discs
- q Inspect the following:
 - ___ Active height control gas chamber²
 - ___ Ball joints and dust covers
 - ___ Brake lines and hoses
 - ___ Drive belts
 - ___ Drive shaft boots (4WD)
 - ___ Engine coolant³
 - ___ Exhaust pipes and mountings
 - ___ Front differential oil (4WD)
 - ___ Radiator, condenser and/or intercooler
 - ___ Rear differential oil
 - ___ Steering gear box
 - ___ Steering linkage and boots

Note: Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced air flow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Replace front differential oil (4WD)
- q Replace rear differential oil, including limited-slip
- q Tighten nuts and bolts on chassis

Driving on Dirt Roads or Dusty Roads

- q Inspect engine air filter
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 2) If equipped with active height control.
- 3) See Maintenance Definitions (Engine Coolant) for details.

2007 Tacoma 110,000 Miles - 132 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving on Dirt Roads or Dusty Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving on Salted Roads

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2007 Tacoma 115,000 Miles - 138 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving on Dirt Roads or Dusty Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving on Salted Roads

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2007 Tacoma 120,000 Miles - 144 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Replace limited-slip differential oil, if equipped (4WD and PreRunner)
- q Replace spark plugs²
- q Re-torque propeller shaft bolt
- q Replace engine air filter
- q Replace cabin air filter (if equipped)
- q Lubricate propeller shaft (4WD)
- q Inspect the following:
 - ___ Active height control gas chamber³
 - ___ Ball joints and dust covers
 - ___ Brake lines and hoses
 - ___ Brake linings/drums and brake pads/discs⁴
 - ___ Drive belts
 - ___ Drive shaft boots (4WD)
 - ___ Engine coolant⁵
 - ___ Engine valve clearance (except Tacoma with 2TR-FE)
 - ___ Exhaust pipes and mountings
 - ___ Front differential oil (4WD)
 - ___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
 - ___ Fuel tank cap gasket
 - ___ Radiator, condenser and/or intercooler
 - ___ Rear differential oil
 - ___ Steering gear box
 - ___ Steering linkage and boots
 - ___ Transfer case oil (4WD)
 - ___ Transmission fluid or oil

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Replace front differential oil (4WD)
- q Replace rear differential oil, including limited-slip
- q Replace transfer case oil (4WD)
- q Replace transmission fluid or oil
- q Tighten nuts and bolts on chassis

Driving on Dirt Roads or Dusty Roads

- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 2) Required under the terms of the Emission Control Warranty. For important model-specific information, see Maintenance Definitions (Spark Plugs) for details.
- 3) If equipped with active height control.
- 4) Inspect thickness measurement and disc runout.
- 5) See Maintenance Definitions (Engine Coolant) for details.