

## **Scheduled Maintenance (USA, Canada, and Puerto Rico)**

Follow Schedule 1 if the vehicle is operated mainly where none of the following conditions apply.

- Repeated short-distance driving
- Driving in dusty conditions
- Driving with extended use of brakes
- Driving in areas where salt or other corrosive materials are being used
- Driving on rough or muddy roads
- Extended periods of idling or low-speed operation
- Driving for long periods in cold temperatures or extremely humid climates
- Driving in extremely hot conditions
- Driving in mountainous conditions continually

If any do apply, follow Schedule 2 (Canada and Puerto Rico residents follow Schedule 2).

### ***NOTE***

*After the prescribed period, continue to follow the described maintenance at the recommended intervals.*

Maintenance and Care

Scheduled Maintenance

▼Schedule 1

| Maintenance Interval                                                |             | Number of months or kilometers (miles), whichever comes first                                                  |                                                                   |    |      |    |      |    |      |    |
|---------------------------------------------------------------------|-------------|----------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------|----|------|----|------|----|------|----|
|                                                                     |             | Months                                                                                                         | 6                                                                 | 12 | 18   | 24 | 30   | 36 | 42   | 48 |
|                                                                     |             | ×1000 km                                                                                                       | 12                                                                | 24 | 36   | 48 | 60   | 72 | 84   | 96 |
|                                                                     |             | ×1000 miles                                                                                                    | 7.5                                                               | 15 | 22.5 | 30 | 37.5 | 45 | 52.5 | 60 |
| ENGINE                                                              |             |                                                                                                                |                                                                   |    |      |    |      |    |      |    |
| Engine valve clearance                                              |             |                                                                                                                | Audible inspect every 120,000 km (75,000 miles), if noisy, adjust |    |      |    |      |    |      |    |
| Drive belts (tension)                                               |             |                                                                                                                |                                                                   |    |      |    | I    |    |      |    |
| Engine oil                                                          |             |                                                                                                                | R                                                                 | R  | R    | R  | R    | R  | R    |    |
| Engine oil filter                                                   |             |                                                                                                                | R                                                                 | R  | R    | R  | R    | R  | R    |    |
| COOLING SYSTEM                                                      |             |                                                                                                                |                                                                   |    |      |    |      |    |      |    |
| Cooling system                                                      |             |                                                                                                                |                                                                   |    |      | I  |      |    | I    |    |
| Engine coolant                                                      | FL22 type*1 | Replace at first 192,000 km (120,000 miles) or 10 years; after that, every 96,000 km (60,000 miles) or 5 years |                                                                   |    |      |    |      |    |      |    |
|                                                                     | Others      | Replace at first 96,000 km (60,000 miles) or 4 years; after that, every 2 years                                |                                                                   |    |      |    |      |    |      |    |
| FUEL SYSTEM                                                         |             |                                                                                                                |                                                                   |    |      |    |      |    |      |    |
| Air filter                                                          |             |                                                                                                                |                                                                   |    |      |    | R    |    |      |    |
| Fuel lines and hoses*2                                              |             |                                                                                                                |                                                                   |    |      | I  |      |    | I    |    |
| Hoses and tubes for emission*2                                      |             |                                                                                                                |                                                                   |    |      |    |      |    | I    |    |
| IGNITION SYSTEM                                                     |             |                                                                                                                |                                                                   |    |      |    |      |    |      |    |
| Spark plugs                                                         |             |                                                                                                                | Replace every 120,000 km (75,000 miles)                           |    |      |    |      |    |      |    |
| CHASSIS and BODY                                                    |             |                                                                                                                |                                                                   |    |      |    |      |    |      |    |
| Brake lines, hoses and connections                                  |             |                                                                                                                |                                                                   |    |      | I  |      |    | I    |    |
| Disc brakes                                                         |             |                                                                                                                |                                                                   | I  |      | I  |      | I  | I    |    |
| Tire (Rotation)                                                     |             |                                                                                                                | Rotate every 12,000 km (7,500 miles)                              |    |      |    |      |    |      |    |
| Steering operation and linkages                                     |             |                                                                                                                |                                                                   |    |      | I  |      |    | I    |    |
| Front and rear suspension, ball joints and wheel bearing axial play |             |                                                                                                                |                                                                   |    |      | I  |      |    | I    |    |
| Driveshaft dust boots                                               |             |                                                                                                                |                                                                   |    |      | I  |      |    | I    |    |
| Exhaust system and heat shields                                     |             |                                                                                                                | Inspect every 72,000 km (45,000 miles) or 5 years                 |    |      |    |      |    |      |    |
| All locks and hinges                                                |             |                                                                                                                | L                                                                 | L  | L    | L  | L    | L  | L    |    |
| Bolts and nuts on chassis and body                                  |             |                                                                                                                |                                                                   |    |      | T  |      |    | T    |    |

Maintenance and Care

## Scheduled Maintenance

---

| Maintenance Interval          | Number of months or kilometers (miles), whichever comes first |     |    |      |                                                   |      |    |      |    |
|-------------------------------|---------------------------------------------------------------|-----|----|------|---------------------------------------------------|------|----|------|----|
|                               | Months                                                        | 6   | 12 | 18   | 24                                                | 30   | 36 | 42   | 48 |
|                               | ×1000 km                                                      | 12  | 24 | 36   | 48                                                | 60   | 72 | 84   | 96 |
|                               | ×1000 miles                                                   | 7.5 | 15 | 22.5 | 30                                                | 37.5 | 45 | 52.5 | 60 |
| <b>AIR CONDITIONER SYSTEM</b> |                                                               |     |    |      |                                                   |      |    |      |    |
| Cabin air filter              |                                                               |     |    |      | Replace every 40,000 km (25,000 miles) or 2 years |      |    |      |    |

**Chart symbols:**

**I:** Inspect: Inspect and clean, repair, adjust, or replace if necessary.

**R:** Replace

**L:** Lubricate

**T:** Tighten

**Remarks:**

- \*1 Use FL22 type coolant in vehicles with the inscription “FL22” on the radiator cap itself or the surrounding area. Use FL22 when replacing the coolant.
- \*2 According to state/provincial and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended time or mileage/kilometer period to ensure long-term reliability.

Maintenance and Care

Scheduled Maintenance

▼Schedule 2

| Maintenance Interval               |             | Number of months or kilometers (miles), whichever comes first                                                  |   |    |    |    |    |    |    |    |    |    |    |    |
|------------------------------------|-------------|----------------------------------------------------------------------------------------------------------------|---|----|----|----|----|----|----|----|----|----|----|----|
|                                    |             | Months                                                                                                         | 4 | 8  | 12 | 16 | 20 | 24 | 28 | 32 | 36 | 40 | 44 | 48 |
|                                    |             | ×1000 km                                                                                                       | 8 | 16 | 24 | 32 | 40 | 48 | 56 | 64 | 72 | 80 | 88 | 96 |
|                                    |             | ×1000 miles                                                                                                    | 5 | 10 | 15 | 20 | 25 | 30 | 35 | 40 | 45 | 50 | 55 | 60 |
| ENGINE                             |             |                                                                                                                |   |    |    |    |    |    |    |    |    |    |    |    |
| Engine valve clearance             |             | Audible inspect every 120,000 km (75,000 miles), if noisy, adjust                                              |   |    |    |    |    |    |    |    |    |    |    |    |
| Drive belts (tension)              |             |                                                                                                                |   |    |    |    |    | I  |    |    |    |    |    |    |
| Engine oil                         | Puerto Rico | Replace every 5,000 km (3,000 miles) or 3 months                                                               |   |    |    |    |    |    |    |    |    |    |    |    |
|                                    | Others      | R                                                                                                              | R | R  | R  | R  | R  | R  | R  | R  | R  | R  | R  | R  |
| Engine oil filter                  |             | R                                                                                                              | R | R  | R  | R  | R  | R  | R  | R  | R  | R  | R  | R  |
| COOLING SYSTEM                     |             |                                                                                                                |   |    |    |    |    |    |    |    |    |    |    |    |
| Cooling system                     |             |                                                                                                                |   |    |    |    |    | I  |    |    |    |    |    | I  |
| Engine coolant                     | FL22 type*1 | Replace at first 192,000 km (120,000 miles) or 10 years; after that, every 96,000 km (60,000 miles) or 5 years |   |    |    |    |    |    |    |    |    |    |    |    |
|                                    | Others      | Replace at first 96,000 km (60,000 miles) or 4 years; after that, every 2 years                                |   |    |    |    |    |    |    |    |    |    |    |    |
| Engine coolant level               |             | I                                                                                                              | I | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  |
| FUEL SYSTEM                        |             |                                                                                                                |   |    |    |    |    |    |    |    |    |    |    |    |
| Air filter                         | Puerto Rico |                                                                                                                |   |    |    |    |    | R  |    |    |    |    |    | R  |
|                                    | Others      |                                                                                                                |   |    |    |    |    |    | R  |    |    |    |    |    |
| Fuel lines and hoses*2             |             |                                                                                                                |   |    |    |    |    | I  |    |    |    |    |    | I  |
| Hoses and tubes for emission*2     |             |                                                                                                                |   |    |    |    |    |    |    |    |    |    |    | I  |
| IGNITION SYSTEM                    |             |                                                                                                                |   |    |    |    |    |    |    |    |    |    |    |    |
| Spark plugs (without turbocharger) |             | Replace every 120,000 km (75,000 miles)                                                                        |   |    |    |    |    |    |    |    |    |    |    |    |
| Spark plugs (with turbocharger)    | USA         | Replace every 96,000 km (60,000 miles)                                                                         |   |    |    |    |    |    |    |    |    |    |    |    |
|                                    | Others*3    | Replace every 120,000 km (75,000 miles)                                                                        |   |    |    |    |    |    |    |    |    |    |    |    |
| ELECTRICAL SYSTEM                  |             |                                                                                                                |   |    |    |    |    |    |    |    |    |    |    |    |
| Function of all lights             |             | I                                                                                                              | I | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  |

Maintenance and Care

## Scheduled Maintenance

| Maintenance Interval                                                | Number of months or kilometers (miles), whichever comes first |   |    |    |    |    |    |    |    |    |    |    |    |
|---------------------------------------------------------------------|---------------------------------------------------------------|---|----|----|----|----|----|----|----|----|----|----|----|
|                                                                     | Months                                                        | 4 | 8  | 12 | 16 | 20 | 24 | 28 | 32 | 36 | 40 | 44 | 48 |
|                                                                     | ×1000 km                                                      | 8 | 16 | 24 | 32 | 40 | 48 | 56 | 64 | 72 | 80 | 88 | 96 |
|                                                                     | ×1000 miles                                                   | 5 | 10 | 15 | 20 | 25 | 30 | 35 | 40 | 45 | 50 | 55 | 60 |
| <b>CHASSIS and BODY</b>                                             |                                                               |   |    |    |    |    |    |    |    |    |    |    |    |
| Brake lines, hoses and connections                                  |                                                               |   |    |    |    |    | I  |    |    |    |    |    | I  |
| Brake and clutch fluid level                                        | I                                                             | I | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  |
| Disc brakes                                                         |                                                               |   | I  |    |    | I  |    |    | I  |    |    |    | I  |
| Tire (Rotation)                                                     | Rotate every 8,000 km (5,000 miles)                           |   |    |    |    |    |    |    |    |    |    |    |    |
| Tire inflation pressure and tire wear                               | I                                                             | I | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  |
| Steering operation and linkages                                     |                                                               |   |    |    |    | I  |    |    |    |    |    |    | I  |
| Power steering fluid level                                          | I                                                             | I | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  |
| Front and rear suspension, ball joints and wheel bearing axial play |                                                               |   |    |    |    | I  |    |    |    |    |    |    | I  |
| Driveshaft dust boots                                               |                                                               |   |    |    |    | I  |    |    |    |    |    |    | I  |
| Exhaust system and heat shields                                     | Inspect every 72,000 km (45,000 miles) or 5 years             |   |    |    |    |    |    |    |    |    |    |    |    |
| All locks and hinges                                                | L                                                             | L | L  | L  | L  | L  | L  | L  | L  | L  | L  | L  | L  |
| Washer fluid level                                                  | I                                                             | I | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  |
| Bolts and nuts on chassis and body                                  |                                                               |   |    |    |    | T  |    |    |    |    |    |    | T  |
| <b>AIR CONDITIONER SYSTEM</b>                                       |                                                               |   |    |    |    |    |    |    |    |    |    |    |    |
| Cabin air filter                                                    | Replace every 40,000 km (25,000 miles) or 2 years             |   |    |    |    |    |    |    |    |    |    |    |    |

### Chart symbols:

**I:** Inspect: Inspect and clean, repair, adjust, or replace if necessary.

**R:** Replace

**L:** Lubricate

**T:** Tighten

### Remarks:

- \*1 Use FL22 type coolant in vehicles with the inscription “FL22” on the radiator cap itself or the surrounding area. Use FL22 when replacing the coolant.
- \*2 According to state/provincial and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended time or mileage/kilometer period to ensure long-term reliability.
- \*3 If the vehicle is operated under any of the following conditions, replace the spark plugs at every 96,000 km (60,000 miles) or shorter.
  - a) Repeated short-distance driving
  - b) Extended periods of idling or low-speed operation
  - c) Driving for long periods in cold temperatures or extremely humid climates