



Ford Motor Company
Customer Relationship Center
P.O. Box 6248
Dearborn, MI 48121
1-800-392-3673 (FORD)
(TDD for the hearing impaired: 1-800-232-5952)

This Quick Reference Guide is not intended to replace your Owner's Guide which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your occupants. Please read your entire Owner's Guide carefully as you begin learning about your new vehicle and refer to the appropriate sections when questions arise.

All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Mercury dealer is the best source for the most current information.

For detailed operating and safety information, please consult your Owner's Guide.

May 2007
First Printing
Quick Reference Guide Mercury Milan
Litho in U.S.A.



8N7J 19G217 AA

Essential Information

Fuel Type and Tank Capacity

Your fuel tank can accommodate approximately 17.5 gallons (66.2L) of gasoline. Your vehicle is designed to use unleaded gasoline with an (R+M)/2 octane rating of 87. Using gasoline with a lower octane rating may degrade performance.

Tire Pressure

Your vehicle's tire pressure specifications are found on the vehicle's Safety Compliance Certification Label located on the driver's door jamb. Check your tires for proper air pressure monthly; check the air pressure in your spare tire every six months. Always use an accurate tire pressure gauge. Check the tire pressure when tires are cold, after the vehicle has been parked for at least three hours or has been driven less than three miles. (As you drive, the temperature in the tire warms up, increasing the tire pressure.) Improperly inflated tires can affect vehicle handling and can fail suddenly, resulting in a possible loss of vehicle control. As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS) that illuminates a low tire pressure warning light (⚠️) when one or more of your tires is significantly under-inflated. Refer to the Tires, Wheels and Loading chapter in the Owner's Guide for further information.

Fuses

If the vehicle's electrical components are not operating, a fuse may have blown. The fuse panel is located below the instrument panel on the driver's side; remove the cover to view the fuses. Additional fuses are located

in the power distribution box in the engine compartment. For more information regarding changing fuses, refer to the Roadside Emergencies chapter of your Owner's Guide.

Fuel Pump Shut-off Switch

The fuel pump shut-off switch stops the electric fuel pump from sending fuel to your engine when your vehicle has sustained a substantial jolt. The switch is located in the passenger's footwell, in the upper right corner. For more information regarding the fuel pump shut-off switch, refer to the Roadside Emergencies chapter of your Owner's Guide.

Location of Spare Tire and Tools

The spare tire and jack are located in the trunk below the carpeted floor panel. The necessary tools are contained in the tool bag. For complete details on how to change your tire, refer to the Roadside Emergencies chapter in your Owner's Guide.

Roadside Assistance

During your Mercury Milan's limited warranty period, the assurance and support of a 24-hour emergency roadside assistance program is included. Roadside assistance includes such services as fuel delivery, tire changes, jump starts, help when you are locked out of your vehicle, and towing. To receive roadside assistance in the United States, call **(800) 241-3673**. In Canada, call **(800) 665-2006**.

Climate Control

Electronic Automatic Temperature Control System (EATC) (if equipped)

1 AUTO

Press to activate automatic temperature control. The system will automatically determine fan speed, airflow location, A/C (on or off) and outside or recirculated air, to heat or cool the vehicle to reach the desired temperature. Press again to deactivate.

2 Manual Override Controls

Allows you to manually determine where airflow is directed. To return to fully automatic control, press AUTO.

🌀 – Distributes air through the windshield defroster ducts, demister outlets and the front and rear seat floor ducts.

🌀 – Distributes air through the front and rear floor ducts.

🌀 – Distributes air through the instrument panel registers and the front and rear floor ducts.

🌀 – Distributes air through the instrument panel registers.

3 EXT

Press to display the outside air temperature. Press again to display cabin temperature settings.

4 Defrost

Distributes outside air through the windshield defroster and demister vents. Can be used to clear thin ice or fog from the windshield.

5 Rear Window Defroster

Press to clear the rear window of thin ice and fog. Press again to deactivate. The defroster will turn off automatically after 10 minutes. If your vehicle is equipped with both a rear defroster and heated mirrors, the same button will activate both.

6 Recirculation Control (behind shifter in photo)

Press to recirculate cabin air. Recirculated air may reduce the amount of time needed to cool down the interior of the vehicle and may also help reduce undesirable outside odors from reaching the interior of the vehicle. To reduce window fogging, do not drive with 🌀 engaged and A/C off.

Driver/Passenger Heated Seats (if equipped)

Press 🪑 once for high heat (two lights), twice for low heat (one light) and a third time to deactivate (no lights).

For Maximum Cooling Performance

Press 🌀, A/C, 🪑 and set the temperature to 60 F (16 C) and the highest blower setting.



CENTER CONSOLE

Audio System

Premium/Audiophile AM/FM Stereo In-Dash Six CD/MP3 Satellite Compatible Sound System (if equipped)

A ON/OFF/Volume: Press to turn ON/OFF. Turn to increase/decrease volume. If the volume is set above a certain level and the ignition is turned off, the volume will come back on at a "nominal" listening level when the ignition switch is turned back on.

B SYNC: If your vehicle is equipped with SYNC™, press to access SYNC PHONE features. For further information please refer to your SYNC™ supplement. If your vehicle is not equipped with SYNC, the display will read NO PHONE.

C SHUFFLE: Pressing SHUFFLE will cause shuffle mode to engage and ON will appear in the display. Shuffle mode will begin after playing current track, otherwise hit SEEK to begin random play immediately. CD SHUF will appear in the display. To turn off shuffle mode, press SHUFFLE again. SHUFFLE OFF will appear in the display.

D SEEK: Press to access the previous (◀) or next (▶) strong radio station or CD track.

E TEXT/SCAN: Press and hold for a brief sampling of radio stations or CD tracks. Press again to stop. In CD/MP3 mode, press TEXT to display track title, artist name and disc title.

F Memory Presets: To set a station: Select frequency band AM/FM1/FM2; tune to a station, press and hold a preset button until sound returns. You can store up to 18 stations, six in AM, six in FM1 and six in FM2.

G Load: Press LOAD and a memory preset to load to a specific slot. Press and hold to autoload up to six CDs.

H MENU: Press repeatedly to cycle through:

Autoset: Allows you to set the strongest local radio stations without losing your original stored stations for AM/FM1/FM2. When the six strongest stations are filled, the station stored in preset 1 will begin playing. If there are less than six strong stations, the system will store the last one in the remaining presets. With AUTOSSET displayed, press ▲/▼ to turn off and return to your original stations.

Occupancy mode: (Available on Audiophile radios only) Use ▲/▼ to select and optimize sound for ALL SEATS, DRIVERS SEAT or REAR SEATS.

Speed sensitive volume: Radio volume automatically changes slightly with vehicle speed to compensate for road and wind

noise. Recommended level is 1-3. SPEED OFF turns the feature off and level 7 is the maximum setting.

RBDS – Radio Broadcast Data System (if equipped): In FM mode, this feature allows you to search categories of music. For further information, please refer to your Owner's Guide.

Compression: Brings soft and loud CD passages together for a more consistent listening level when in CD mode. Press MENU until compression status is displayed. Press OK to close and return to the main menu.

Track/Folder Mode: Available only on MP3 discs in CD mode.

Press ▲/▼ to toggle between Track and Folder mode.

In track mode, press ◀ SEEK ▶ to scroll through all tracks on the disc.

In folder mode, press ◀ SEEK ▶ to scroll through all tracks within the selected folder.

I Tune/Disc Selector: Press and release to manually advance up/down the radio frequency or to access the next/previous disc. Also used to make selections within the MENU function.

Satellite Radio Controls (if equipped):

J AUX: Press repeatedly to cycle through SAT1, SAT2, SAT3 (satellite radio mode if equipped), LINE IN (auxiliary audio mode) and SYNC (if equipped). Satellite radio is available only with a valid SIRIUS radio subscription. Check with your authorized dealer for availability. If your vehicle is equipped with SYNC, please refer to the SYNC supplement for further information. Once Satellite Radio mode is activated you may use the following functions:

Press MENU until CATEGORY MODE appears in the display. Press ▲/▼ to select from various categories of music (country, rock, etc.), then press and hold ◀ SEEK ▶ or TEXT/SCAN to search for channels playing that specific category of music.

Press ◀ SEEK ▶ to access the previous/next channels. Press and release TEXT/SCAN to display the current song title. Press again to scroll through current song title, artist, channel category and the SIRIUS long channel name. Press and hold for a brief sampling of the next channels. Press again to stop.



Crisp, tapered lines accentuate the bold stance of this sleek and modern sedan. Inside, available leather seating and satin aluminum finish accents create a comfortable yet stylish interior. The available Duratec V6 engine provides a head-turning combination of power and efficiency that will take you anywhere you want to go in style.

Mercury Milan is the perfect combination of sophistication and practicality. We invite you to explore this easy-to-use Quick Reference Guide to acquaint you with some of the features of your Mercury Milan. For more detailed information, refer to your Owner's Guide.

Use extreme caution with any device or feature that may take your attention off the road. Your primary concern is safe operation of your vehicle. Only use non-essential devices or features when it is safe to do so.



1 Headlamps, Fog Lamps (if equipped), and Panel Dimmer Control

Turn the control one position to the right to turn on the parking lamps . Turn the control one position to the left to activate the autolamp feature (if equipped), which automatically turns the exterior lamps on and off, based on available daylight. The system also keeps the lights on for a short time after the ignition is turned off. Pull the control out to activate the fog lamps (if equipped). The fog lamp indicator light will illuminate. The fog lamps will not operate when the control is turned off or when the high beams are on. Use the panel dimmer control to adjust the level of brightness on the instrument panel during parking lamp and headlamp operation. Move the control to the full upright position, past the detent, to turn on the interior lamps.



2 Traction Control™ Light

(if equipped) This light illuminates when the Traction Control™ is active. If the light remains on, have the system serviced immediately by an authorized dealer.



3 Throttle Control / Transmission Light

This light illuminates when a powertrain or AWD (if equipped) malfunction has been detected. Contact an authorized dealer as soon as possible.



4 Steering Wheel Controls (if equipped)

Your steering wheel controls allow you to set and adjust vehicle speed, as well as make adjustments in your audio and climate control systems. The appearance of your vehicle's speed control switches may vary according to your option package. To set the speed control, press and release ON. Accelerate to the desired speed.



Press and release SET (+). The speed control indicator light will illuminate in the cluster. Remove your foot from the accelerator. Once set, press and release SET (-) or (+) to decrease or increase the speed in small increments. Or, press and hold until you reach the desired speed. To disengage speed control but not erase the previous set speed, tap the brake pedal or clutch pedal (if equipped). Press RESUME to turn back on at previous speed. To disengage and erase the speed, press OFF.

Press – TEMP + to decrease/increase the cabin temperature.

Press – FAN + to decrease/increase fan speed.

Press – VOL + to decrease/increase audio volume.

Press MEDIA to select AM, FM1, FM2, CD or LINE IN (Auxiliary Input Jack).

Press to access the previous/next preset radio station or CD track.

5 Service Engine Soon Light

The Service Engine Soon light illuminates briefly when the ignition is turned on. If the light remains on or flashes after the engine is started, the On Board Diagnostics System (OBD-II) has detected a malfunction. Drive in a moderate fashion and have your vehicle serviced immediately by an authorized dealer.



6 Airbag Readiness Light

The airbag readiness light illuminates briefly when the ignition is turned on. If this light remains on or continues to flash after the engine is started, the supplemental restraint system has detected a malfunction. If a malfunction is detected, a chime will also sound. Have the system serviced immediately by an authorized dealer.



7 Anti-lock Brake System (ABS) Warning Light

The ABS light illuminates briefly when the ignition is turned on. If the ABS light remains on or flashes after the engine is started, have the system serviced immediately by your authorized dealer. Normal braking (without ABS) will still be functional unless the brake system warning light is also illuminated. **Note:** It is normal to feel a pedal pulsation or hear a slight noise when the ABS system is activated.



8 Tilt/Telescopic Steering Wheel Lever

Push the lever down to unlock the steering column. Move the steering wheel up or down and in or out to find the desired position. While holding the steering wheel in place, pull the lever up to lock the steering column. Do not adjust while vehicle is moving.



9 Check Fuel Cap Light

This icon illuminates when the fuel cap may not be properly installed. If you continue to drive with this light illuminated, the Service Engine Soon light may come on.



10 Brake System Warning Light

The brake system warning light illuminates briefly when the ignition is turned on. This light will remain on when the parking brake is applied and the ignition is on. If this light remains on after releasing the parking brake, this indicates a low brake fluid level or a brake system malfunction. Have the brake system inspected immediately by an authorized dealer.



11 In-Dash Clock

Press + to advance the time. Press – to reverse the time.



12 Hazard Flasher Control

Push in the flasher control and all front and rear direction signals will flash. Press the flasher control again to turn them off. Use it when your vehicle is stopped and is creating a safety hazard for other motorists.



13 Passenger Airbag Off


Your vehicle has a safety feature that automatically knows when to turn off the passenger airbag based on occupant's size and weight. When the system senses or light to medium



weight (such as a heavy binder or suitcase), in the front passenger seat, the PASS AIRBAG OFF indicator lamp will illuminate, signifying the passenger airbag is turned off. For further information on the front passenger sensing system, refer to your Owner's Guide.


Auxiliary Power Points

The auxiliary power points are located on the instrument panel and in the center console utility compartment. **Note:** Do not use the power point over the capacity of 12VDC/180W.

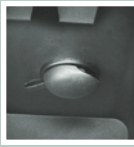


Auxiliary Input Jack (if equipped)

Your vehicle is equipped with an Auxiliary Input Jack **A** located inside the console bin. This allows you to plug and play auxiliary audio devices. Press the AUX button until LINE IN appears in the display, plug in your auxiliary audio device. For more detailed information, please refer to your Owner's Guide.

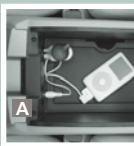

USB PORT (if equipped)

Your vehicle may be equipped with a USB port **B** inside your center console. This feature allows you to plug in media playing devices, memory sticks, and also to charge devices. For more detailed information, please refer to the SYNC™ supplement.

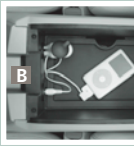


Power Outside Mirrors

Rotate the control clockwise to adjust the right mirror. Rotate the control counterclockwise to adjust the left mirror. Move the control in the direction you wish to tilt the mirror. Return the control to the center position to lock the mirrors in place.



Glove Box CD Storage

Your vehicle is equipped with a special area for your CD storage. It is located inside the glove box, to the right of the main bin.

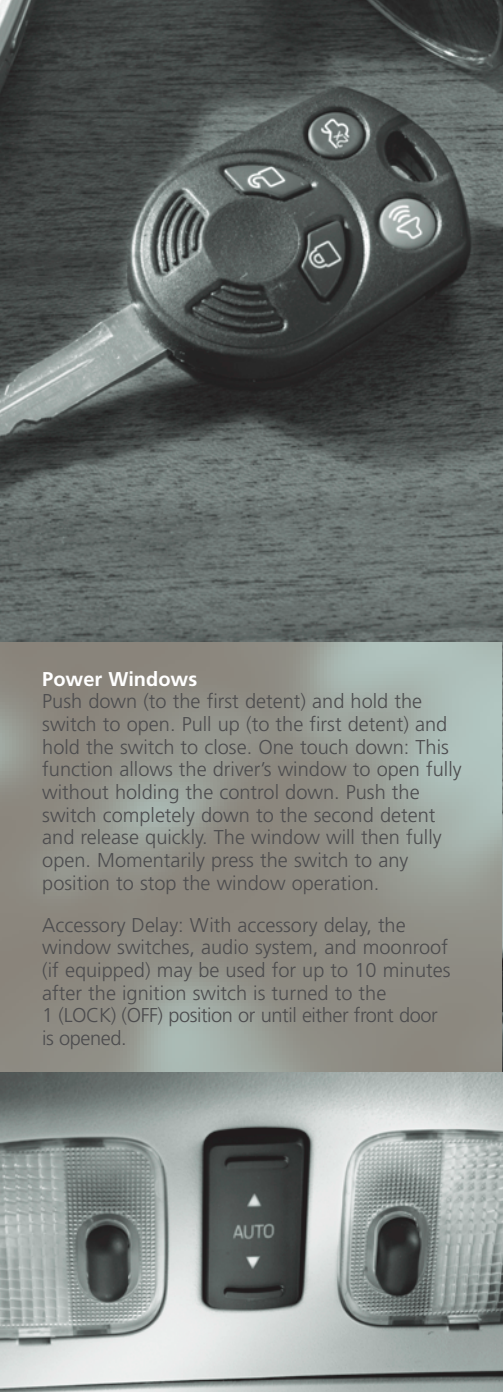

Integrated Keyhead/Keyfob Transmitter (IKT) and Remote Entry System Features

Your vehicle comes equipped with two specially programmed Integrated Keyhead Transmitters (IKTs). IKTs are both a programmed ignition key and a remote keyless entry transmitter. Handle the IKT carefully when starting the car to avoid accidentally pressing any of the remote entry buttons. Press once to unlock the driver's door. The interior lamps will illuminate. Press twice to unlock all the doors. Press once to lock all the doors and activate the perimeter alarm system (if equipped). Press twice to confirm all the doors and trunk are closed. Press and release to activate the panic alarm. (A short press and release can be used to deactivate the panic alarm.) Press twice within 3 seconds to open the trunk. Ensure that you keep the IKT adhesive security label in a safe place for future reference. Press twice within 3 seconds to activate the car finder feature; your horn will chirp and your turn signal lamps will flash. It is recommended that this method be used to locate your vehicle, rather than using the panic alarm.

Power Windows

Push down (to the first detent) and hold the switch to open. Pull up (to the first detent) and hold the switch to close. One touch down: This function allows the driver's window to open fully without holding the control down. Push the switch completely down to the second detent and release quickly. The window will then fully open. Momentarily press the switch to any position to stop the window operation.



Accessory Delay: With accessory delay, the window switches, audio system, and moonroof (if equipped) may be used for up to 10 minutes after the ignition switch is turned to the 1 (LOCK) (OFF) position or until either front door is opened.

Moon Roof (if equipped)

The moon roof is equipped with a one-touch, express opening, closing, and venting feature. An ambient lighting control switch is provided on the center console. Pressing this switch cycles thru and selects one of seven possible colors or may also be used to turn ambient lighting off. Ambient lighting turns on whenever the ignition switch is turned to the ON or Accessory position. Ambient Lighting stays on after the ignition is turned off, turning off after a door is opened or 10 minutes has elapsed.

Additional Features

Auto Dimming Rear View Mirror

The rear view mirror will automatically darken when the mirror detects bright lights behind the vehicle to help minimize glare.

Rear Seat Release

Both rear seats can be folded down for additional cargo space. Pull the release handles located inside the trunk to fold down the seat.

SecuriLock™

The SecuriLock™ passive anti-theft system is an engine immobilization system. This system is designed to help prevent the engine from being started unless a coded Integrated Keyhead Transmitter (IKT) programmed to your vehicle is used. Using the wrong type of coded key will prevent the vehicle from starting. The anti-theft indicator in the instrument cluster will flash to indicate the SecuriLock system is functioning and as a theft deterrent when the ignition is turned off.



Message Center

The message center displays important vehicle information through a constant monitoring of vehicle systems. The message center displays features such as trip odometer, compass (if equipped), distance to empty, average fuel economy, average speed, and a language selector. The message center also provides vehicle system checks and will notify you of potential vehicle problems with a display of system warnings.

INFO: Press to scroll through the following displays: Odometer, Trip Odometer A or B, Distance to Empty, Average Fuel Economy, Average Speed, Compass (if equipped), and Trip Elapsed Time 1 or 2.

RESET: Press and hold to select and reset functions shown in the Info (Information) and Setup Menu.

SETUP: Press to scroll through: System Check, Units (English/Metric), and Language (current language to be displayed), Easy entry/exit seat (if equipped) and Reverse Sensing System (Park Assist) (if equipped).

For further information, please refer to your Owner's Guide.

Visors

Your vehicle may have a slide on rod feature that provides additional sunlight coverage. Rotate the visor towards the side window and extend it rearward. **Note:** The visor must be retracted before moving it back into the normal position.