



Getting to Know Your 2009 TrailBlazer



Table of Contents

DRIVER INFORMATION

Instrument Panel	2
Instrument Panel Cluster	3
Driver Information Center	4

SAFETY & SECURITY

Programmable Automatic	
Door Locks	5
Remote Lock/Unlock Feedback ..	6
Remote Keyless Entry System ..	7
OnStar®	7
Content Theft-Deterrent System ..	8

COMFORT

Manual Dual-Zone Climate	
Controls	8
Automatic Dual-Zone Climate	
Controls	9

Electric Adjustable Pedals	10
Heated Seats	10
Memory Seat	10

ENTERTAINMENT

AM/FM Stereo	
with CD and RDS	11
Touch Screen Navigation	
Entertainment System	12
XM® Radio	12
Bluetooth® System	12

CONVENIENCE

Headlamp Controls	13
Automatic Headlamp System ..	13
Dome Lamp Override	14
Outside Rearview Mirrors	14

Universal Home Remote	14
Sun Visors	15
Sunroof	15
Luggage Carrier	15

PERFORMANCE & MAINTENANCE

Malfunction Indicator Lamp ..	16
Four-Wheel Drive	16
StabiliTrak® - Stability Control	
System	16
Tire Pressure Monitor	17
Tire Inflator Kit	17


OWNER INFORMATION

Roadside Assistance	20
My GMLink	20

Congratulations on your purchase of a Chevrolet TrailBlazer. Please read this information and your Owner Manual to ensure an outstanding ownership experience. Note that your vehicle may not include all the features described in this booklet. Keep this booklet with your Owner Manual for easy reference.

DRIVER INFORMATION

Instrument Panel

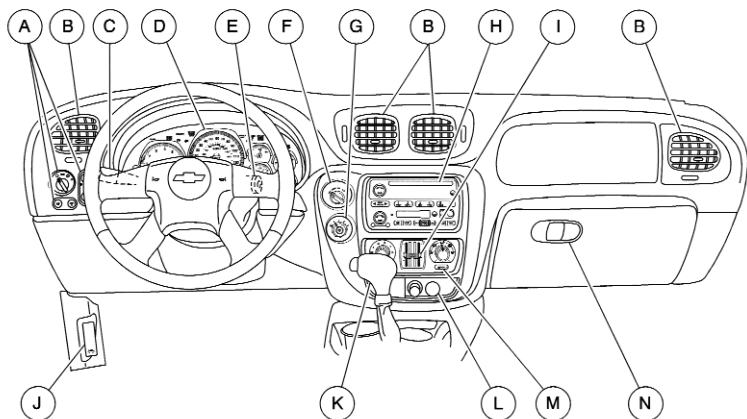


The main features of the instrument panel include:

- A. Exterior Lamp Controls
- B. Air Outlets
- C. Turn Signal/Multifunction Lever
- D. Instrument Panel Cluster
- E. Ignition Switch
- F. Transfer Case Controls or StabiliTrak Button (if equipped)

- G. Rear Window Washer/Wiper
- H. Audio System
- I. Climate Controls
- J. Hood Release
- K. Shift Lever
- L. Accessory Power Outlet
- M. Rear Window Defogger (if equipped)
- N. Glove Box

See Section 3 of your Owner Manual.

Instrument Panel Cluster

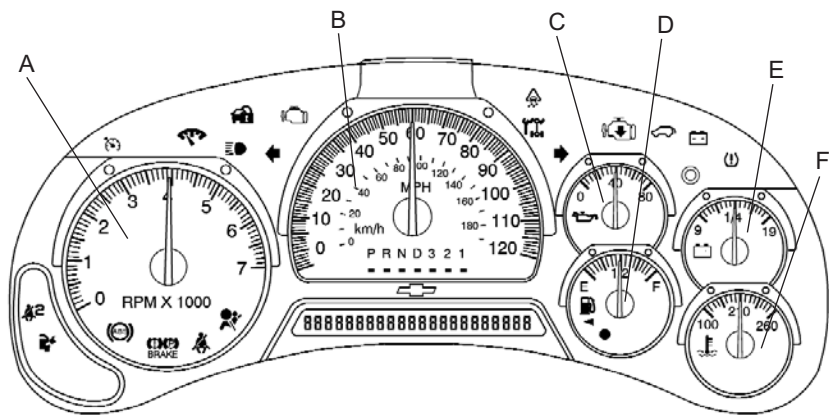

Your vehicle's instrument panel is equipped with this cluster or one very similar to it. The instrument panel cluster includes these key features:

- A. Tachometer
- B. Speedometer
- C. Engine Oil Pressure Gauge
- D. Fuel Gauge
- E. Voltmeter
- F. Engine Coolant Temperature Gauge

Note: The instrument panel cluster is designed to inform you about many important aspects of your vehicle's operation. It is important to read your Owner Manual and become familiar with the information being relayed to you by the lights, gauges and indicators, as well as what action can be taken to ensure safety and to prevent damage.

See Section 3 of your Owner Manual.

Driver Information Center (if equipped)



The Driver Information Center (DIC) display is located above the steering wheel on the instrument cluster, and can be programmed in three languages. The controls are located on the steering wheel.

Access trip information

- Press  to display the odometer, trip A, trip B, tire pressures, and timer.

Reset trip odometers to zero

- Press the reset stem located on the DIC cluster or use the Select button () on the steering wheel.



Access fuel information

- Press  to view range, fuel used, average fuel economy, and the GM Oil Life System™ status.

Reset fuel information

- Press the reset stem located on the DIC cluster or the Select button on the steering wheel.



Customize vehicle settings

- Press  once and current preferences will be displayed.
- Press  again to scroll through and customize menu features.
- Press  to select the desired customization choice for each menu feature. Press the  button to move on to the next feature.

Available Customization Features

Depending on the equipment ordered on your vehicle, you can customize a wide variety of preferences on the DIC. Only the features included on your vehicle will be displayed by the DIC. Customization features may include:

- Lock Doors
- Unlock Doors
- Lock Feedback
- Unlock Feedback
- Headlamp Display
- Perimeter Lights
- Easy Exit Seat
- Seat Recall
- Alarm Warning
- Display Language
- Display Units (English/Metric)

See Section 3 of your Owner Manual.

SAFETY & SECURITY

Programmable Automatic Door Locks

Your vehicle includes an automatic door lock/unlock system with a choice of four features, as well as automatic door lock-out prevention to prevent locking the keys in the vehicle. In the event the power door lock switch is activated when a door is open and the key is in the ignition, the driver door will unlock.

Locking options: The default setting for the programmable automatic door locks is to lock automatically when the transmission is shifted into gear. Locking options include:

Mode 1: All doors lock when the transmission is shifted into gear

Mode 2: All doors lock when vehicle speed is over 8 mph (13 km/h)

Unlocking options: Unlocking options include:

Mode 1: Driver's door unlocks when the transmission is placed into Park

Mode 2: All doors unlock when the transmission is shifted into Park

Mode 3: All doors unlock when the key is removed from the ignition

Mode 4: No automatic door unlock

Select and program functions (if vehicle is equipped with a Driver Information Center)

- Press the Customization button (i) on the Driver Information Center until Lock Doors or Unlock Doors appears on the display. Press the Select button (←) until the desired setting appears on the display and press i to select it.

Select and program functions (if not equipped with DIC)

1. With ignition off, pull the turn signal/multifunction lever toward you and hold it there while performing the next step.
2. Turn the ignition key to Run and Lock twice, ending in the Lock position, and release the turn signal lever; the lock switch locks/unlocks, the horn chirps twice and a 30-second timer begins.
3. To cycle through the locking/unlocking choices, press the power door lock switch to the Lock position to set locking preference and the Unlock position to set unlocking preference.

When the lock switch locks/unlocks and the horn chirps twice, you have left programming mode; if more time is needed, repeat the process above.

4. To exit the program mode manually, turn the ignition key to Run.

See Section 2 of your Owner Manual.

Remote Lock/Unlock Feedback (if equipped)

Program Remote Keyless Entry System lock/unlock feedback (horn, parking lamps, both or neither)

- Press the Customization button (i) on your steering wheel until Lock Feedback or Unlock Feedback appears on the display.
- Press the Select button (←) to scroll through the menu of choices. To program the lock/unlock feedback feature, press i when the desired menu option is displayed.

See Section 3 of your Owner Manual.

Remote Keyless Entry System (if equipped)



On equipped vehicles, the Remote Keyless Entry (RKE) System locks and unlocks the doors and liftglass from a range of three to 30 feet. At times the range may be shorter than usual, which is normal. If the transmitter does not seem to be working properly:

- Ensure that you are within transmitter range of the vehicle. Rainy and snowy weather can reduce transmitter range.
- Check to see whether other vehicles or obstacles are blocking the transmitter signal by stepping a few feet to the left or right, and holding the transmitter higher when pressing the button(s).
- Consider the length of time that the transmitter battery has been in service and replace it if necessary (the DIC will display KEY FOB # BATTERY LOW if the battery needs replacing). Use CR 2032 battery or equivalent.

See Section 2 of your Owner Manual.

OnStar® (if equipped)

Your vehicle may feature the OnStar Safe & Sound Plan or the uplevel OnStar Directions & Connections Plan, with one year of OnStar service from the date you purchased your new vehicle. With the help of OnStar Advisors, who are available 24 hours a day, 7 days a week, OnStar offers a wide variety of safety and driver assistance capabilities, including the following services:

- Driving Directions with Turn-by-Turn Navigation — OnStar Advisors can send a planned route to your vehicle and, as you approach a turn, instructions play over your vehicle speakers
- OnStar Vehicle Diagnostic e-mail
- Automatic Notification of Airbag Deployment
- Automatic Advanced Crash Notification
- Emergency Services
- Remote Door Unlock
- Stolen Vehicle Location Assistance
- Hands-Free Calling with 30 calling minutes
- Roadside Assistance
- Fuel Station Location
- Information & Connections services
- Virtual Advisor, GPS-based Traffic & Weather

For Remote Door Unlock or Stolen Vehicle Location Assistance, call 1-888-4-ONSTAR (1-888-466-7827).

Press the OnStar button to ask an OnStar Advisor about the service plan you have or to upgrade your plan. For more information, refer to your OnStar Owner's Guide or visit **onstar.com**.

See Section 2 of your Owner Manual.

Content Theft-Deterrent System (if equipped)

This feature has a Security light () located in the instrument panel cluster.

After closing all vehicle doors, the system can be activated in two ways:

- Press the Lock button on the Remote Keyless Entry key fob, or
- Press the power door Lock switch with the door open.

The alarm is not armed until the security light turns off (after a delay of approximately 30 seconds).

If the alarm is tripped, the horn sounds for 30 seconds, and the headlamps and parking lamps also flash for two minutes to get visual attention. The alarm sounds whenever a locked door is opened without the key or Remote Keyless Entry transmitter.

See Section 2 of your Owner Manual.

COMFORT

Manual Dual-Zone Climate Controls (if equipped)



Select airflow source

- Turn the Mode knob on the right of the climate control panel to the desired setting:

- () Instrument panel vents
- () Instrument panel vents and floor vents
- () Floor vents
- () Floor, windshield and side window vents
- () Windshield and side window vents

Raise or lower fan speed

- Turn the fan control knob () on the left of the climate control panel.

Adjust the dual temperature controls

- Use the lever on the left-hand side of the climate control panel to adjust the temperature on the driver's side of the vehicle.
- Use the right-hand lever to adjust the temperature on the front passenger's side of the vehicle and the temperature for the second row.

Cool the vehicle interior more quickly on very hot days

- Open the windows just long enough to let the hot air escape.
- Choose the coolest temperature setting.
- Activate the Recirculate () and A/C () buttons.
- Place the Mode knob in the Vent () mode.

Recirculate interior air and prevent outside air from entering your vehicle

- Press the Recirculate () button.

This feature can be activated while in the Vent or Bi-Level mode, but not in Defog, Defrost or Floor mode.

Turn on the rear window defogger

- Press the rear window defogger () button.
- The indicator light on the button will come on to let you know the rear window defogger is active.

See Section 3 of your Owner Manual.

Automatic Dual-Zone Climate Controls (if equipped)



Manually select desired airflow source

- Press and release the Mode () button until the desired source is indicated on the display. Mode selections include Vent, Bi-Level, Floor and Defog.

Manually raise or lower fan speed

- Press the upper or lower portion of the fan control () button.

Manually adjust the dual temperature controls

- Use the knob on the left-hand side of the climate control panel to adjust the temperature on the driver's side of the vehicle. Use the right-hand knob to adjust the temperature on the passenger's side of the vehicle as well as the second row.
- To match and link the passenger-side temperature to the driver's, press and hold the AUTO button for three seconds.

Recirculate interior air and prevent outside air from entering your vehicle

- Press the Recirculate () button.

This feature can be activated while in the Vent or Bi-Level mode, but not in Defog, Defrost or Floor mode.

Clear the windshield and front side windows of fog or frost more quickly

- Press the  button and adjust the fan speed.

Clear the rear glass of fog or frost more quickly, and activate the heated outside rearview mirrors (if equipped)

- Press the  button.
- The indicator light on the button will come on to let you know the rear window defogger is active.

Automatic Operation

In the automatic mode, the system will automatically control the inside temperature, air delivery mode and the fan speed to achieve your set temperature as quickly as possible.

1. Press the AUTO button.
2. Set the driver's and passenger's temperatures.

Rear Seat Controls (if equipped)

Rear seat comfort controls are located on the rear seat audio system display.

When the front climate control is set to Defrost, the rear controls do not function.

See Section 3 of your Owner Manual.

Electric Adjustable Pedals (if equipped)




Adjust brake and accelerator pedals to a comfortable setting

- Operate the pedal adjustment switch located on the steering column.

Note: The pedals cannot be positioned farther away from the driver than they are in their standard position. This feature can be programmed to work with the memory function (if equipped) on your vehicle. Adjustment of the powered pedals requires that the vehicle be in Park and the key be out of the ignition.

See Section 2 of your Owner Manual.

Heated Seats (if equipped)

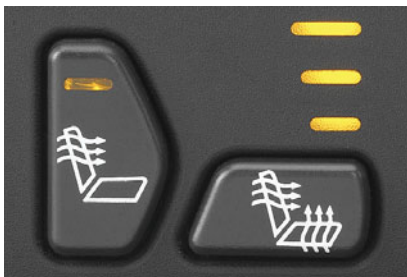

Activate heat for the seatback only

- Press the vertical switch located on the front door armrest until the switch light indicates the desired setting.

Activate heat for seatback and seat cushion

- Press the horizontal switch located on the front door armrest until the switch light indicates the desired setting.

Note: The engine must be running for the heated seat feature to work.

See Section 1 of your Owner Manual.

Memory Seat (if equipped)



The memory seat controls are located on the driver door. They program and recall driver seat position settings for up to two drivers.

Store the driver seat settings

1. Adjust the seat to the desired position.
2. Press and hold memory button #1 for three seconds until a chime sounds to indicate that the seat position is now stored.

Repeat the sequence using memory button #2 for a second driver.

See Section 1 of your Owner Manual.

ENTERTAINMENT

AM/FM Stereo with CD and RDS (if equipped)

Set the automatic volume (AUTO VOL) feature

1. Set the volume at the desired level.
2. Press the AUTO VOL button and select LOW, MEDIUM or HIGH. (Each higher setting will allow for more volume compensation at faster vehicle speeds.)

Select OFF if you prefer not to use AUTO VOL.

Set the clock

- Press and hold the HR button until the correct hour appears. AM or PM will appear on the radio display.
- Press and hold MN until the correct minute appears.

Set the time from an FM station broadcasting RDS information

- Press/hold HR and MN simultaneously for two seconds until UPDATED and the clock symbol appear on the display. If the time is not available, NO UPDAT will appear.

Program radio station presets

1. Turn the radio on.
2. Press BAND to select the band (AM, FM1, FM2, XM1 or XM2).
3. Tune to the desired station using the seek function or tune knob.
4. Press AUTO EQ or AUTO TONE (as applies to your radio) to select the sound equalization best suiting the type of station selected.
5. Press/hold a numbered pushbutton until a beep confirms storage of the station.

6. Repeat the previous steps for each pushbutton.

Radio Data System

Your radio's RDS mode allows you to:

- Seek only stations with your preferred programming type.
- Receive announcements of local and/or national emergencies.
- Receive and display messages from radio stations.

Toggle between the station frequency, station name, Program Type (PTY) and the name of the program if available

- Press INFO.

Display a station's INFO message when INFO appears on the display

- Press INFO to see the message. Once the complete message has been displayed, INFO disappears from the display.

Tune to an RDS broadcast of a selected PTY

1. Press the TYPE button to select the PTY you want to listen to.
2. Press the ◀ or ▶ button.

Switch to a station with a stronger signal and of the same PTY

- Press and hold the BAND button for two seconds to turn it on; repeat to turn it off.

Hear an ALERT! announcement

ALERT! will appear in the display when a local or national emergency announcement occurs. If a CD or cassette tape is playing, the announcement overrides it.

See Section 3 of your Owner Manual.

Touch Screen Navigation Entertainment System (if equipped)



Your vehicle's Navigation Entertainment System provides you with detailed maps of all major highways and roads throughout the United States. After you enter a destination, the system provides turn-by-turn instructions for reaching your destination. In addition, the system can help you locate banks, airports, restaurants, post offices, ATMs and more.

Note: See your Navigation Entertainment System Quick Reference Guide for operating instructions.

See Section 3 of your Owner Manual.

XM® Radio

XM Radio offers more than 170 channels of digital-quality sound that goes wherever you go — coast to coast. XM can display song title, artist and entertainment genre.

To access the XM bands, press the BAND button until XM1 or XM2 appears on the display.

After a free three-month trial period, activation and service subscription fees apply. XM service is based in the continental United States and Canada. For more information, visit XM online at www.XMradio.com or call 1-800-929-2100.

See Section 3 of your Owner Manual.

Bluetooth® System

The in-vehicle Bluetooth system allows users with a Bluetooth-enabled cell phone to make and receive hands-free phone calls utilizing the vehicle's audio system, microphone and controls. The Bluetooth-enabled cell phone must be paired with the in-vehicle Bluetooth system before it can be used in the vehicle.

Bluetooth Control

The Bluetooth button is located on the steering wheel:

«Z (Push to Talk): Press and hold for two seconds to answer incoming calls, to confirm system information, and to start voice recognition.

The system operates using voice recognition commands. To help increase accuracy, the system will play a short tone after prompting you for information or a command. Do not speak until after the tone.

Not all phones will support all functions. For more information, visit www.chevrolet.com/bluetooth.

For instructions on how to use the system, see Section 3 of your Owner Manual.

CONVENIENCE

Headlamp Controls



The exterior lamps knob is located on the instrument panel, to the left of the steering wheel.

Turn off the Daytime Running Lamps (DRLs) and automatic headlamps

- Move the knob to the Off (Ø) position.

Activate the automatic headlamp system

- Move the knob to the auto (☰●) position.
- All exterior lamps and the instrument panel/radio lights will illuminate when they are needed.

Manually illuminate the parking lamps, side-marker lamps, taillamps, instrument panel/radio lights and license plate lamps

- Move the knob to the parking lamps (☰☑) position.

Manually activate the headlamps, all exterior tail/side-marker lamps and the instrument panel/radio lights

- Move the knob to the headlamps (☰☑) position.


See Section 3 of your Owner Manual.

Automatic Headlamp System

During daytime driving, the Automatic Headlamp System may temporarily switch the headlamp and interior light systems, including the radio display, to the nighttime mode. This occurs when passing through darker conditions, such as under a bridge or overpass, or inside a parking garage. When you start the vehicle at night, the automatic headlamps will come on when the vehicle is shifted out of Park. The vehicle's light sensor is located on top of the instrument panel. To ensure proper system operation, avoid placing objects or stickers on or near the sensor.

See Section 3 of your Owner Manual.

Dome Lamp Override

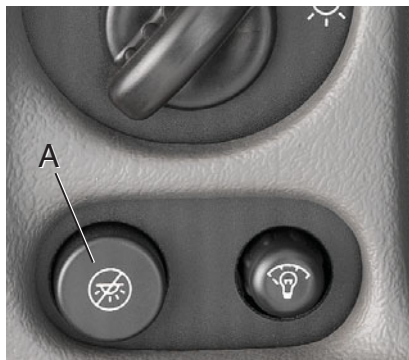

Disable the dome lamps when a door is opened

- Press the dome lamp override button (A) located below the exterior lamps knob.

The button also disables entry lighting until it is pushed again or the Remote Keyless Entry transmitter is used to unlock the vehicle.

See Section 3 of your Owner Manual.

Outside Rearview Mirrors

Adjust manual mirrors

- Adjust by hand until you can see a little of the side of your vehicle. Pull the mirrors toward the vehicle before entering a car wash to fold them to the side of the vehicle. Unfold them after exiting.

Adjust power mirrors (if equipped)

- Twist the control knob toward the mirror you want to adjust; move the knob in the direction you want the mirror to go; and, when both mirrors have been adjusted, twist the control knob to the center position.



Heated Mirrors (if equipped)

When you turn on the rear window defogger, a defogger also warms the outside mirrors to clear them of mist, ice or snow.

See Section 2 of your Owner Manual.

Universal Home Remote (if equipped)

The Universal Home Remote is a combined universal transmitter and receiver that can activate up to three devices, such as garage door openers, entry door locks, gates and security systems.

It's recommended that you read the instructions in your Owner Manual completely before attempting to program any of the three channels on the Universal Home Remote. The engine should be turned off when programming the remote.

Note: Do not use the Universal Home Remote with any garage door opener that does not have the “stop and reverse” feature or any opener manufactured before April 1, 1982.

See Section 2 of your Owner Manual.

Sun Visors

To block the sun's glare, pull the sun visor down. You can cover the driver or passenger front-side window by sliding the sun visor front-to-rear of the vehicle and vice versa.

Pull out the sun visor extender (if equipped) for additional window coverage.

See Section 2 of your Owner Manual.

Sunroof (if equipped)

To open or close your sunroof, the ignition must be on or Retained Accessory Power (RAP) must be active.

Open the sunroof

- Press and release the back portion of the button in the overhead console.

Close the sunroof

- Press and hold the front portion of the button.

Vent the sunroof

- Once the sunroof is closed, press the front portion of the button to open the sunroof to the vent position.

Note: In the closed position, the sunroof may not appear parallel to the vehicle headliner.

See Section 2 of your Owner Manual.

Luggage Carrier (if equipped)

Your vehicle's luggage carrier may have side rails attached to the roof and allows you to carry a load on top of your vehicle.

Some TrailBlazers are equipped with optional sliding crossrails and tie-down spots to secure cargo.

Adjust crossrails

1. Lift the lever on each side of the crossrail and slide it into position.
2. Secure the crossrail by pressing the levers on each side of the crossrail down into place.

Note: Never carry anything on the vehicle roof that is longer or wider than the luggage carrier itself. (Examples: plywood, paneling, a mattress.) The load could be violently torn off, causing you or other drivers to have a collision. Loading cargo that weighs more than 220 pounds (100 kg) on the luggage carrier may damage your vehicle.

Reduce wind noise when the luggage carrier is not in use

Position the rear crossrail at the rearmost position and the front crossrail above the rearmost portion of the rear door opening (above the C-pillar).

See Section 2 of your Owner Manual.


PERFORMANCE & MAINTENANCE

Malfunction Indicator Lamp (Service Engine Soon Lamp)

Located in the instrument panel cluster, this lamp illuminates under a variety of conditions when the On-Board Diagnostics II (OBD II) system detects a malfunction in the vehicle's emission controls. If it is lit steadily, check the gas cap to ensure that it is present and securely fastened. Turn the gas cap clockwise until a ratcheting sound is heard, signaling that it is secure. If this is the cause of the condition, and the cap is installed properly, this should turn the light off.

See Section 3 of your Owner Manual.

Four-Wheel Drive (if equipped)

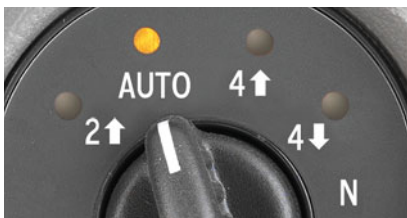

The Four-Wheel Drive system rotary controls are located on the instrument panel. Your vehicle will have one of the above transfer case knobs. Following are the four-wheel drive modes:

2↑ (Two-Wheel High): For most street and highway conditions

AUTO (Automatic Four-Wheel Drive):
For use when road conditions vary

4↑ (Four-Wheel High): When extra traction is required for driving on snow-covered roads and for most off-road conditions

4↓ (Four-Wheel Low): For extreme driving conditions only, including steep hills, deep sand, snow or mud

See your Owner Manual for instructions on how to place the transfer case in Neutral.

See Section 2 of your Owner Manual.

StabiliTrak® – Stability Control System

StabiliTrak combines antilock brake, traction control, and stability control systems that help the driver maintain directional control of the vehicle in most driving conditions.

When activated, the system will apply braking to individual wheels and may reduce engine power as necessary to help you maintain directional control of the vehicle. You may also hear a noise or vibration, or feel a reduction in acceleration, while the system is active. This is normal.

StabiliTrak is automatically turned on when the vehicle is started and does not require any driver input. It is recommended to leave the system on at all times for normal driving. It may be necessary to turn off the traction control portion of the system if the vehicle is stuck in sand, mud or snow.

To turn off the traction control portion of StabiliTrak, press and release the  (StabiliTrak) button located on the left

side of the transmission shift lever. A light on the instrument panel () will illuminate, confirming the traction control has been turned off. On vehicles with a Driver Information Center (DIC), the words TRACTION CONTROL OFF will be displayed on the DIC. Press the button again to turn the system back on.

To turn off StabiliTrak, which includes traction control and stability control functions, press and hold the button located on the left side of the shift lever for five seconds. The  light located on the instrument panel will turn on to confirm StabiliTrak is disabled. Vehicles with a DIC will have the words STABILITRAK OFF displayed on the DIC. Press the button again to turn the system back on.

See Section 4 of your Owner Manual.

Tire Pressure Monitor

The Tire Pressure Monitor alerts you when a significant reduction in pressure occurs in one or more of your vehicle's tires by illuminating the () (Low Tire Pressure) warning light on the instrument panel cluster. The low tire pressure warning light will remain on until you correct the tire pressure. A CHECK TIRE PRESSURE message will also appear on the DIC.

Correcting the Tire Pressure

When the low tire pressure warning light illuminates, you must inflate the tire to the proper tire pressure (just as you must refuel the vehicle when the low fuel warning light illuminates). The Tire and Loading Information label shows the correct tire pressure for the tires when they're cold. "Cold" means your vehicle

has been sitting for at least three hours or driven no more than one mile.

You can temporarily clear the DIC message by acknowledging it with your DIC controls. However, at the next vehicle start-up, the DIC message will reappear if the tire pressure has not been corrected.

During cooler conditions, the low tire pressure warning light may appear when the vehicle is first started and then turn off as you start to drive. This could be an early indicator that your tire pressures are getting low and the tires need to be inflated to the proper pressure.

Note: The Tire Pressure Monitor can alert you about low tire pressure, but it doesn't replace normal monthly tire maintenance.

See Section 5 of your Owner Manual.

Tire Inflator Kit (if equipped)



Your vehicle may not have a spare tire or a jack. In case of a flat tire, a tire inflator kit is provided to seal small punctures in the tread area of the tire. The kit is located in the storage compartment in the floor of the rear cargo area. Refer to the tire inflator kit instructions for complete operating information.

See Section 5 of your Owner Manual.

Notes

[illegible]

Notes

[illegible]

OWNER INFORMATION

Roadside Assistance

1-800-CHEV-USA
(1-800-243-8872)

TTY Users: 1-888-889-2438

As the proud owner of a new Chevrolet vehicle, you are automatically enrolled in the Chevrolet Roadside Assistance program. This value-added service is intended to provide you with peace of mind as you drive in the city or travel the open road.

Chevrolet's Roadside Assistance toll-free number is staffed by a team of technically trained advisors who are available 24 hours a day, 365 days a year. The advisors can provide minor repair information or make arrangements to tow your vehicle to the nearest Chevrolet dealer.

Chevrolet will provide the following services for 5 years/100,000 miles at no expense to you:

- Fuel delivery
- Lockout service (identification required)
- Tow to nearest dealership for warranty service
- Flat tire assistance
- Jump start

In many instances, mechanical failures are covered under Chevrolet's comprehensive warranty. However, when other services are utilized, an advisor will explain any payment obligations you might incur.

For prompt and efficient assistance when calling, please provide the following information:

- Location of the vehicle
- Telephone number and your location
- Vehicle model, year and color
- Vehicle mileage
- Vehicle Identification Number (VIN)
- Vehicle license plate number

Chevrolet reserves the right to limit services or reimbursement to an owner or driver when, in Chevrolet's judgment, the claims become excessive in frequency or type of occurrence.

Roadside Assistance and OnStar (if equipped)

If you have a current OnStar subscription, press the OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

My GMLink

The Chevrolet Owner Center at My GMLink is a complimentary service for Chevrolet owners, a one-stop resource to enhance your Chevrolet ownership experience. Exclusive member benefits include online service reminders, vehicle maintenance tips, online owner manual, special privileges and more. Sign up today at **www.mygmlink.com**.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on information available at the time of printing and is subject to change without notice. Copyright 2008 by GM Corp. All rights reserved.



25867425 A