

Quick Reference Guide
for the vehicle



The Ultimate
Driving Machine®

BMW M3



At a glance. The main functions of your BMW M3.

Contents

Your BMW M3 at a glance

Welcome on board

Your BMW M3 offers a wide range of equipment to make driving an enjoyable experience.

This Quick Reference Guide provides an initial overview. It contains information to enable you to become familiar with the basic functions of your BMW M3.

For your safety and the safety of others, please read the detailed Owner's Manual.

You will find additional information in other brochures in the vehicle.

BMW hopes you get off to a good start and that you enjoy your BMW M3.

Some illustrations show country-specific items or optional extras.

* Optional extras or country-specific items

4	Opening and closing
6	Seat and mirrors
9	Displays and controls
17	Safety
18	Driving
27	Technology
28	Radio/CD/Multimedia
30	iDrive
34	Navigation
36	Entertainment
38	Communication
40	Refueling
42	Service and Maintenance
44	24/7 Access
46	Trunk





4 Opening and closing

Remote control



Open

Unlocks the entire vehicle.

Close

Locks the entire vehicle.


Open trunk lid

Press and hold the button (for approx. 1 second), then release.

Panic Mode*



Press for at least 3 seconds.
Press any button to cancel.

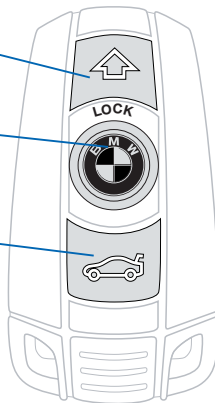

Convenient opening*

Press and hold the Open button to open the windows and the glass sunroof* or hardtop* after unlocking.

Convenient closing*

Convertible:
Using the remote control for Comfort Access*, press and hold the Close button to close the windows and hardtop after locking.

Opening and closing 5

Personal Profile and Comfort Access*

Personal Profile

Some of the vehicle's functions can be individually tailored and stored for several remote controls. Different settings are retrieved and implemented in the vehicle, depending on the remote control that is detected when unlocking the vehicle.

Keyless driving pleasure*


The Comfort Access system allows you to gain access to the vehicle and start the engine without holding the remote control. The remote control is automatically detected in the immediate vicinity or inside the vehicle.

Open

Take a firm hold of the door handle.

Close

Touch the panel with your fingers for approx. 1 second.

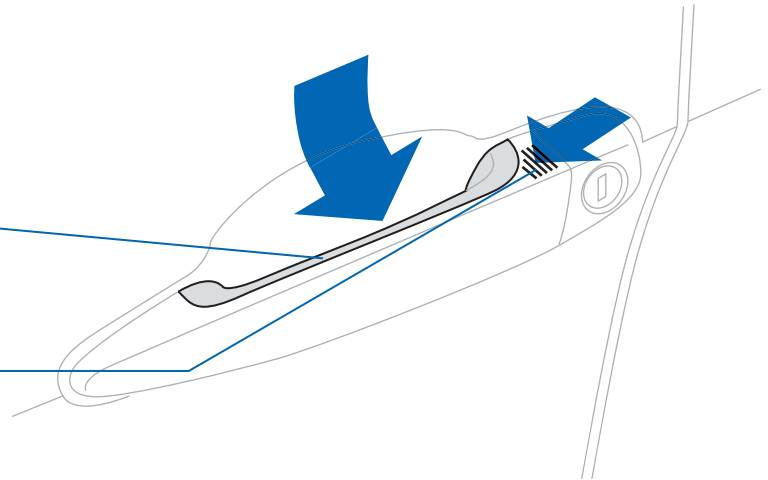

6 Seat and mirrors


Mirrors

Mirror adjustment

Folding mirrors in and out*

Mirror left/right, Automatic Curb Monitor*

Select mirror: left/right.
Automatic Curb Monitor on: switch in driver's mirror position.

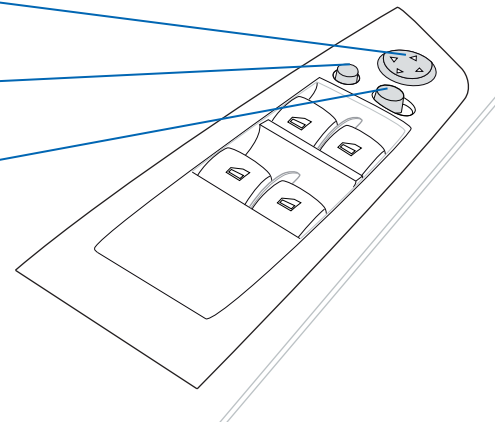



8 Seat and mirrors

Electric seat adjustment

MEMORY button

Memory buttons

Backrest angle

Forward/back, height, seat tilt

Lumbar support*


Backrest width*

Thigh support

Seat and mirror memory

You can store 2 different driver's seat and exterior mirror positions per remote control used.


1. Radio readiness or ignition on.
2. Adjust the seat and mirrors.
3. Press the MEMORY button; the LED lights up.
4. Press memory button 1 or 2.

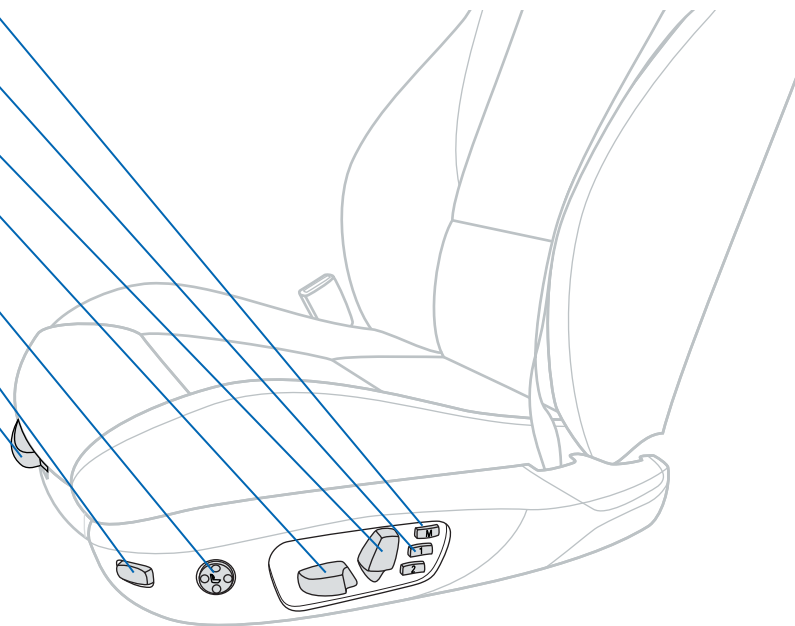




Adjusting the steering wheel

1. Move the lever down.
2. Adjust the steering wheel to the seating position in longitudinal direction and height.
3. Move the lever up.

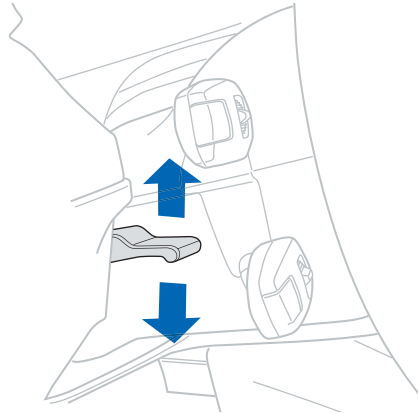

Displays and controls 11

Around the steering wheel

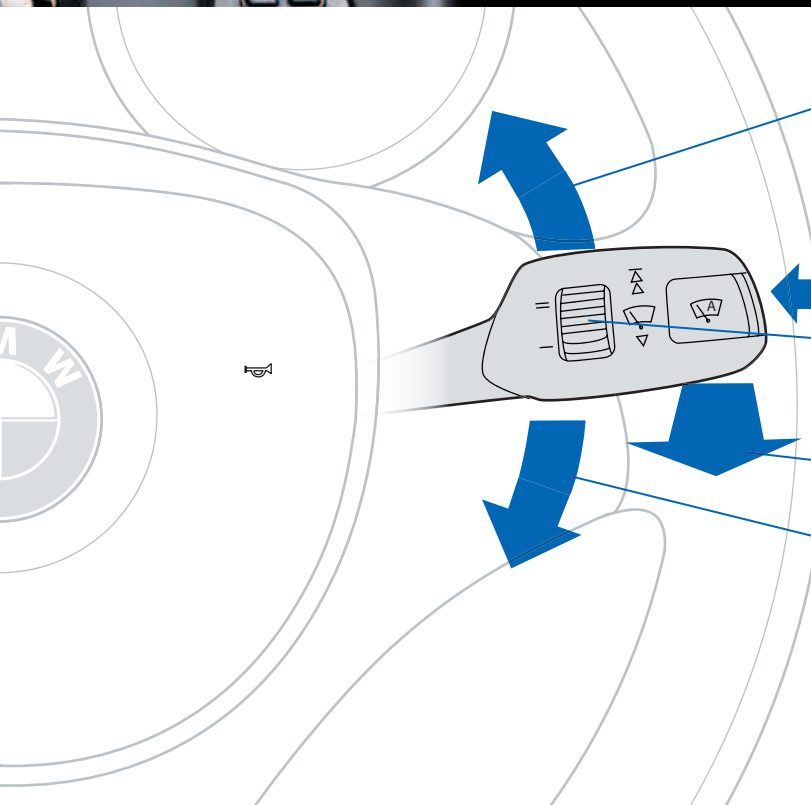

Switching on the wipers

Normal: push once.

Rapid: push twice.

Activating/deactivating intermittent operation or the rain sensor*

Press the button on the lever.

Interval or sensitivity of the rain sensor

Turn the thumbwheel.

Washing the windshield and headlamps

Pull the lever.

Switching off the wipers

From normal speed: push once.

From rapid speed: push twice.

Brief wipe

Push once.

12 Displays and controls

Around the center console

Control Display

Hazard warning flashers

Central locking


FTM Flat Tire Monitor*
TPM Tire Pressure Monitor*

Automatic climate control

Entertainment

Selector lever or gearshift

Controller with buttons

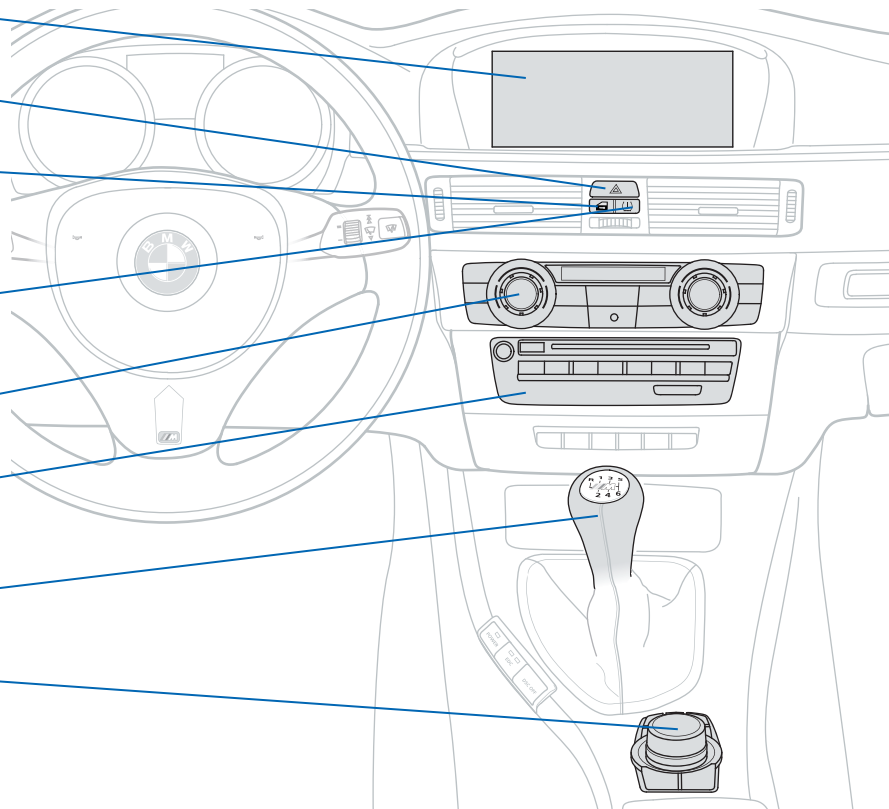

Displays and controls 13

Buttons in the center console



Park Distance Control PDC*

Sun blind*

Auto Start/Stop function*


Convertible: retractable hardtop

Open

Press the switch.

Close

Pull the switch.

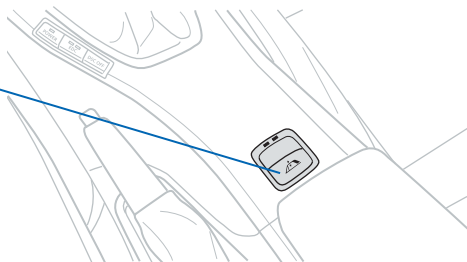

Only operate the hardtop when the vehicle is stationary.

Prior to opening and closing, verify that no objects are located on or next to the trunk cover and that the trunk lid is closed.

Refer to the information in the Owner's Manual.

14 Displays and controls

Automatic climate control

Fine adjustment, air temperature, upper body

Air volume, AUTO intensity, Automatic climate control off

AUTO program


Air distribution, windshield and side windows

Maximum cooling

Air distribution, upper body area


Seat heating*

Air distribution, foot area

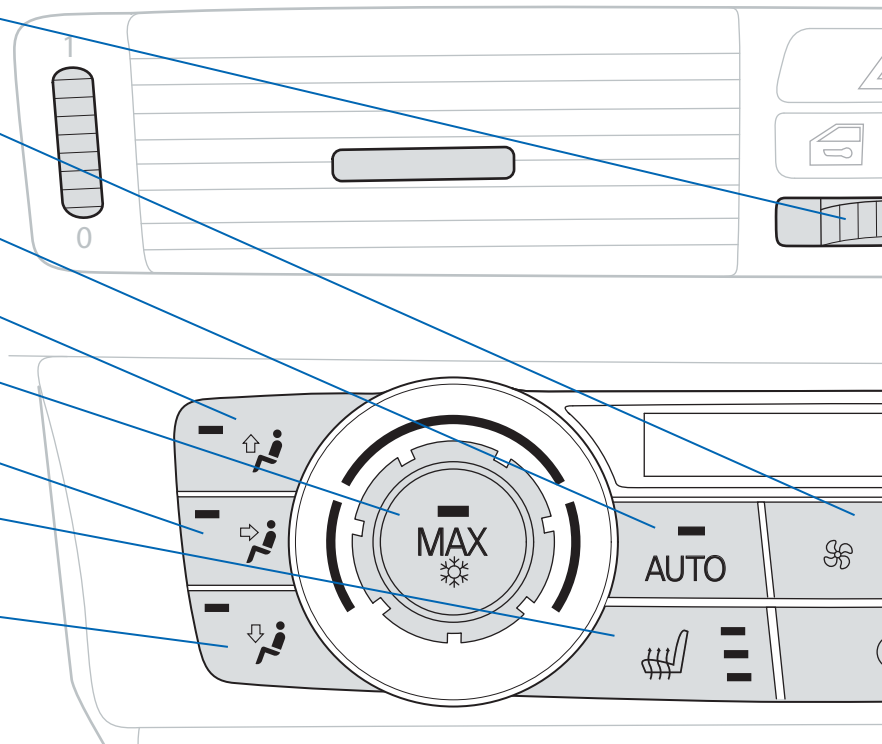

Displays and controls 15

Automatic climate control

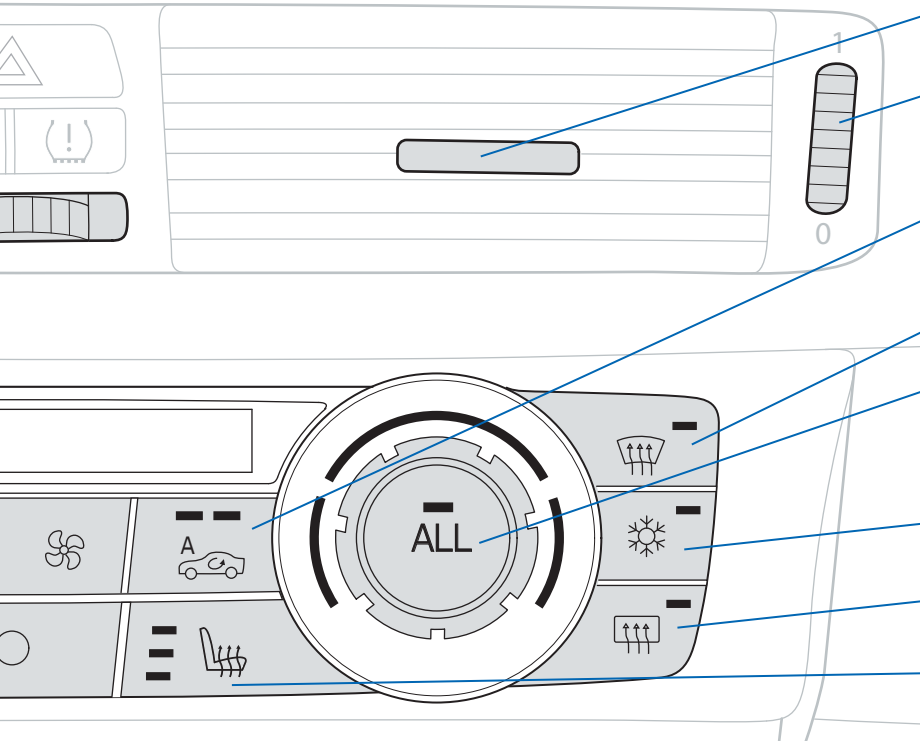

Changing the direction of the airflow

Opening and closing the air vents

Automatic recirculated-air control
Recirculated-air mode

Removing windshield ice and fog

ALL program
Driver's settings are transferred to the passenger side.

Air conditioning

Rear window defroster


Seat heating*

16 Displays and controls

Garage door opener

Garage door opener

1. The ignition is on.
2. Press both outer buttons, 1 and 3, for approx. 20 seconds until the LED flashes.
3. Hold the hand-held transmitter a distance of approx. 2 to 8 in/15 to 20 cm away from the memory buttons.
4. Simultaneously press the transmit button of the hand-held transmitter and the memory button of the universal remote control.
5. Release both buttons when the LED flashes rapidly.

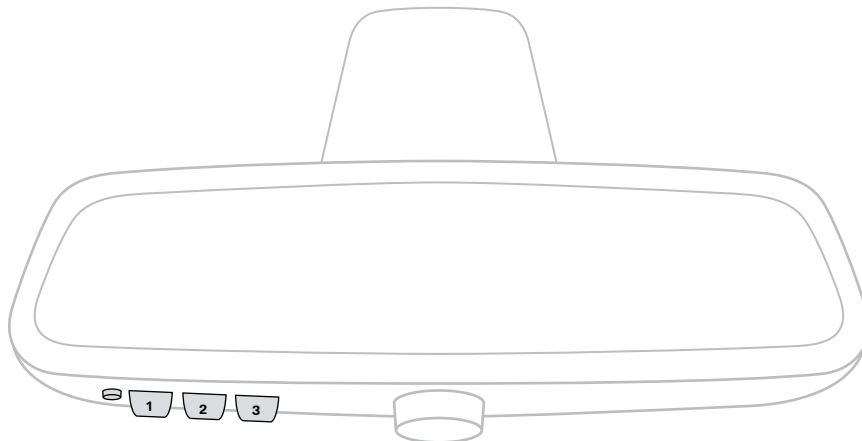


Refer to the following section in the Owner's Manual: Integrated universal remote control.

Transporting children safely

Sedan:

Securing rear doors and windows

Move the lever in the rear doors to its downward position. The door can only be opened from the outside.

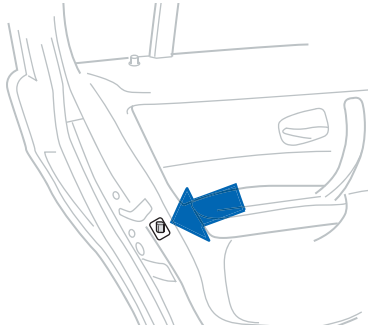

Child safety lock for rear side windows

Press the child safety lock for the rear side windows on the driver's side door when children are riding in the back. The LED lights up: operation of the rear windows is disabled.

Child restraint systems

Please observe the manufacturer's instructions for the child restraint systems concerning the selection, mounting and use of these systems; otherwise, the child's safety may be compromised.

LATCH child restraint fixing system

Before mounting the LATCH child restraint fixing system, pull the belt away from the child seat fastening area.

The inserts for the lower LATCH mountings are located in the space between the seat and the backrest.

Make sure that both lower LATCH mountings are firmly snapped in and that the child restraint system is leaning against the backrest.

Pass the upper strap* between the holders of the head rests and attach it to the fastening point* with the hook. Tighten the upper safety strap and move the head rest to its lowest position.

Refer to the following section in the Owner's Manual: Transporting children safely.

18 Driving

Engine Start/Stop



Switching the ignition on/off

Press the Start/Stop button without depressing the brake or the clutch.

Starting the engine

Press the Start/Stop button and depress the brake and, if necessary, the clutch.

Engine off/radio ready state

Press the Start/Stop button when the engine is running.

Auto Start/Stop function

Helps to save fuel and reduce emissions. It does this by automatically switching off the engine during stops. In certain conditions, for instance if the engine has not yet reached operating temperature, the engine will not be switched off.



Telltale lamp indicates that the Auto Start/Stop function is ready for automatic engine starting.

Turn off the engine

Manual transmission:

With the vehicle stationary, shift the transmission into neutral and release the clutch.

M Double-clutch transmission with Drivelogic:

With the vehicle stationary in mode D or S, keep the brake pedal depressed.

Starting the engine

Manual transmission:

With the transmission in neutral, depress the clutch pedal.

M Double-clutch transmission with Drivelogic:


In D or S mode, release the brake pedal.

Refer to the additional information in the Owner's Manual.

Manual transmission/Parking brake

Reverse

When pushing the gearshift to the left, overcome the resistance.

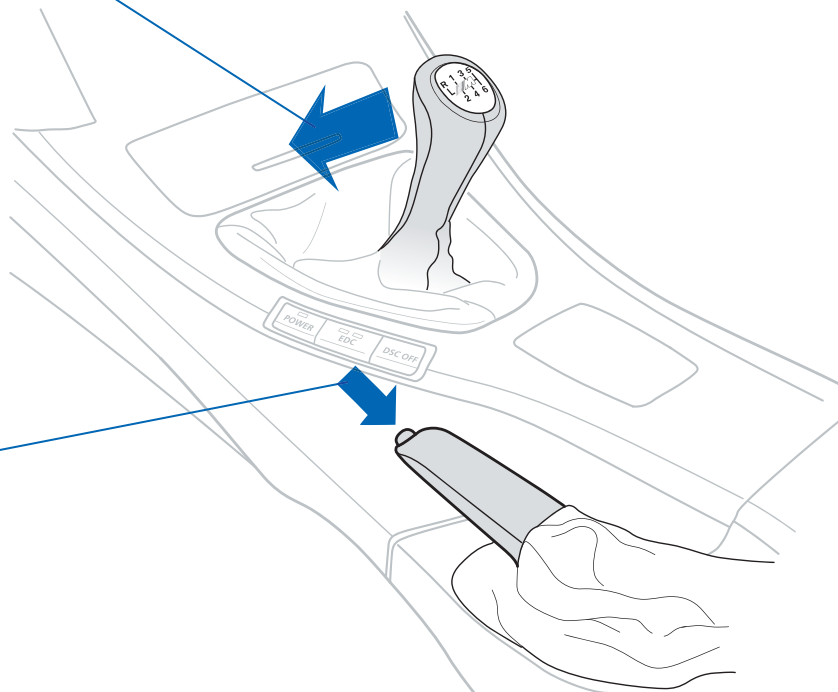**Releasing the parking brake**

Pull the lever slightly upward, press the button and move the lever down.

Setting the parking brake

Pull up the lever.

20 Driving

M Double-clutch transmission with Drivelogic*/Parking brake

Transmission positions

R: Reverse

●: Center position

N: Neutral, idling

+: manual upshifting

–: manual downshifting

D/S: change between the Drive mode and sequential mode

P: Parking position

Is automatically engaged when switching off the engine in gear position D/S or R or if you remove the remote control from the ignition in gear position N.

Drivelogic

Releasing the parking brake

Pull the lever slightly upward, press the button and move the lever down.


Setting the parking brake

Pull up the lever.

Before driving into a car wash, so that the vehicle can roll:

1. Put the remote control into the ignition
2. Depress the brake pedal
3. Engage N
4. Release the parking brake
5. Turn off the engine
6. Release the brake pedal

The vehicle can roll for approx. 30 minutes, provided that the remote control remains in the ignition.

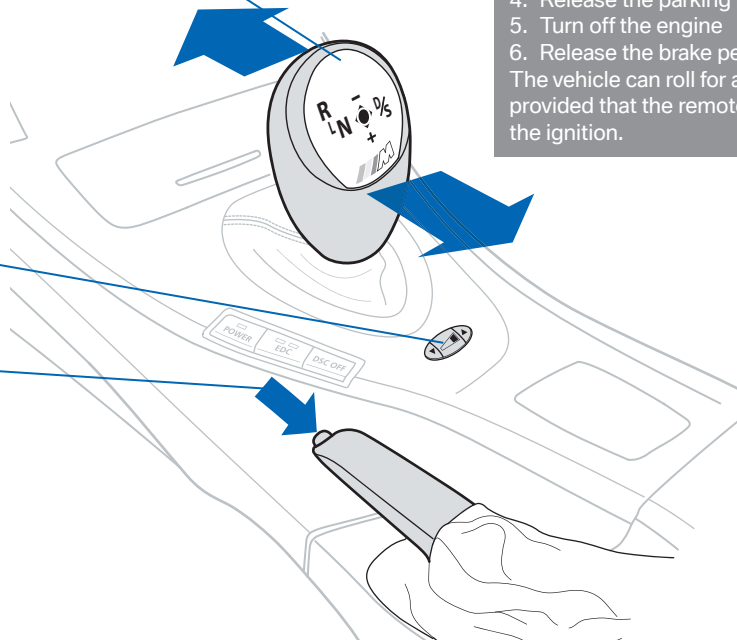

M Double-clutch transmission with Drivelogic*

**Sequential mode**

Shift via the shift levers or the selector lever while continuing to depress the accelerator. When accelerating, pull the selector lever back and push forward to switch back, i.e., pull the shift levers +/- on the steering wheel.

Switch from the sequential mode to the Drive mode: push the selector lever to the right in the D/S direction.

Drivelogic

Select the driving programs from 1, winter program/balanced, to 6, sporty.



Press the button left or right. The selected program is displayed on the instrument cluster.

Program 6 is only available in the sequential mode and when the DSC is switched off.

Shift lights

Yellow sequentially illuminating LEDs on the speedometer point to the imminent upshifting moment when approaching the maximum speed. Shift no later than when the red LEDs are illuminated.

The LEDs flash when reaching the approved maximum speed. Shift lights are only displayed in the sequential mode.

Upshift early while the engine is still cold.



22 Driving


Lamps

Parking lights/daytime running lights

Lamps off/daytime running lights

Automatic headlamp control*
Adaptive Light Control*
High-beam Assistant*
Welcome lights
Daytime running lights

Low beams
Welcome lights

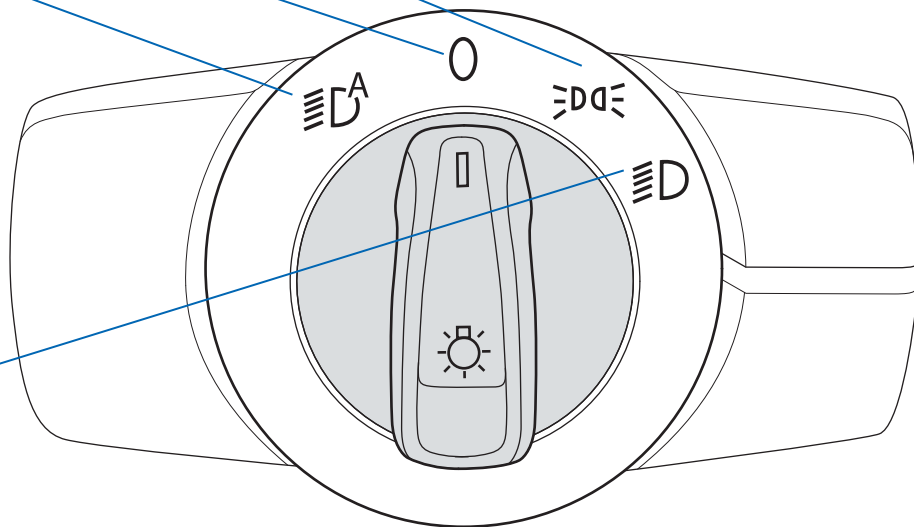



V8 High-performance engine

The high-speed V8 engine uses a maximum performance of 414 hp and a maximum torque of 295 lb ft/400 Nm from a 244 cu in/4 liter displacement. It is characterized by a spontaneous response and a very broad usable speed range. The maximum engine speed of 8,400 rpm is electronically limited.

Drivetrain

Special importance was placed on the direct connection of the engine with the drivetrain in your BMW M3. Based on the torsionally stiff design of the drivetrain, as customary in a sports car, the transmission of the torque is also acoustically confirmed. This may therefore result in clicking noises at load alterations. They do not affect the function or the service life of the components negatively.

Driving on a racetrack

Prior to taking the vehicle to a racetrack, BMW recommends the following:

- Participation in BMW driver training
- Have the vehicle checked at your BMW service center.

Racetrack driving results in increased wear and tear of components.

The standard brake pads and wear indicators are not designed for use on a racetrack. Your center will be most obliged to advise you.

When engine components are hot due to high power demands, engine management may reduce the output in order to protect the engine. After a cooling off period, the full engine power is at your disposal again.

24 Driving


Warm-up

Tachometer

The variable warning area limits the currently permitted engine speed depending on the engine oil temperature. Please avoid engine speeds in the yellow warning area.

Engine oil temperature

During the warm-up phase, the V8 high-performance engine may sound a bit rough with a momentarily higher idling speed. You must drive the vehicle with caution until the engine has reached its operating temperature. The engine oil temperature of an engine at operating temperature is 175 °F/80 °C to 250 °F/120 °C.

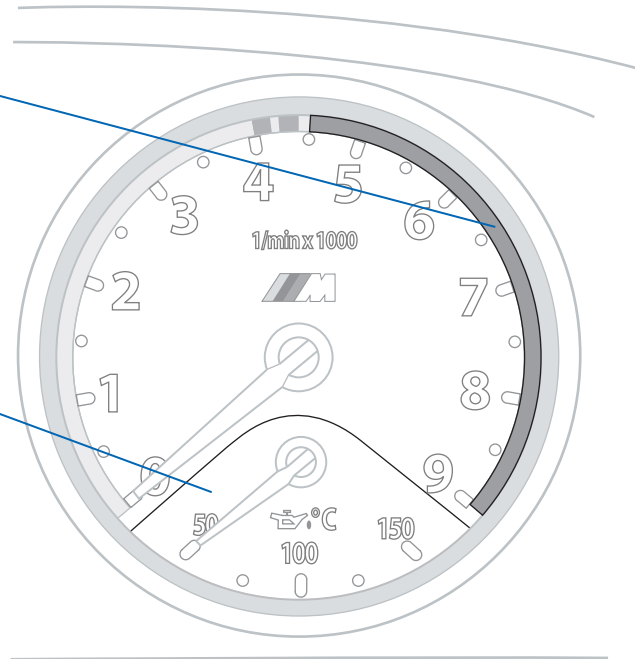



Break-in period

Up to 1,200 miles/2,000 km

Drive at alternating speeds and do not exceed 5,500/min or 105 mph/170 km/h. Always avoid a full-throttle position of the accelerator.

From 1,200 miles/2,000 km to 3,000 miles/5,000 km

Engine and vehicle speed may be gradually increased. Only briefly exceed the vehicle speed of 135 mph/220 km/h, for example, when passing.

New tires

The road-holding capabilities of new tires are not yet optimal. You should drive with restraint during the first 200 miles/300 km.

New brake system

Brake pads and rotors reach the most favorable wear and contact pattern at approx. 300 miles/500 km.

26 Driving

Driving dynamics systems

Electronic Damping Control EDC*

- Comfort: LED off.
- Normal: one LED lights up.
- Sport: both LEDs light up.

M Engine Dynamics Control POWER

Press the button to switch between the Normal and Sport programs.

When the Sport program is selected, the LED in the POWER button lights up.


Dynamic Stability Control DSC

Deactivate DSC

Press the DSC OFF button for more than approx. 1 second.

Activate DSC

Press the DSC OFF button again.

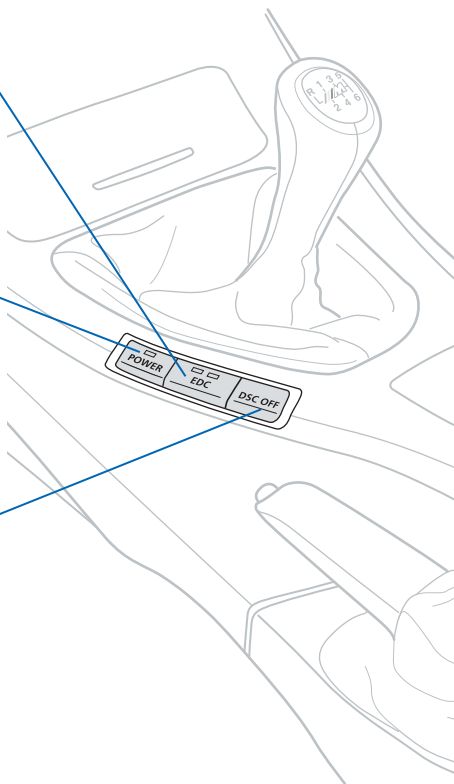

Dynamic Stability Control DSC

DSC optimizes the driving stability and traction. In addition, the system detects unstable driving conditions, such as over or understeering, and assists in keeping the vehicle on a safe course within physical limits through an active brake control on individual wheels.

Operation is via the DSC OFF button and the M Drive*.

M Dynamic Mode MDM*

The M Dynamic Mode is a mode of the Dynamic Stability Control, DSC, which enables driving on a dry road at a greater longitudinal and lateral acceleration; however, at a limited driving stability. The system only intervenes by stabilizing in the absolute limit zones. Additional steering corrections may be required in this driving condition.

Operation is via M Drive*.

Technology 27

M Drive*

M Drive


You can configure several individual settings for your vehicle on the control display with M Drive. The settings affect the engine features, the driving-dynamics control, the shock-absorber setting and the steering balance.

Activating/deactivating M Drive

All settings in M Drive are activated/deactivated when pressing the button.

Settings in M Drive

- "Drivelogic:"
Programs of the Electronic Damper Control, EDC*
- "EDC:"
Dynamic Stability Control and M Dynamic Mode
- "DSC:"
Programs of M Engine Dynamics Control
- "POWER:"
Programs of Servotronic
- "Shift lights:"*

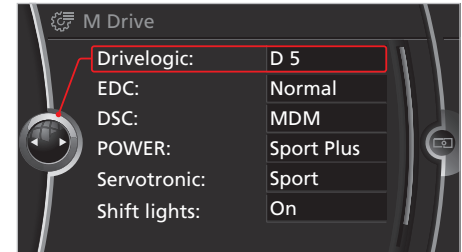

Configuring settings

1. "Settings"
2. "M Drive"
3. Select desired function:
 - "Drivelogic:"
 - "EDC:"
 - "DSC:"
 - "POWER:"
 - "Servotronic:"
 - "Shift lights:"
4. Select the desired setting.

28 Radio/CD/Multimedia Controls



CD/DVD player

Eject CD/DVD


On/off, volume control

Programmable memory keys

Changing the radio station waveband


Changing the audio and video sources

Changing station/track

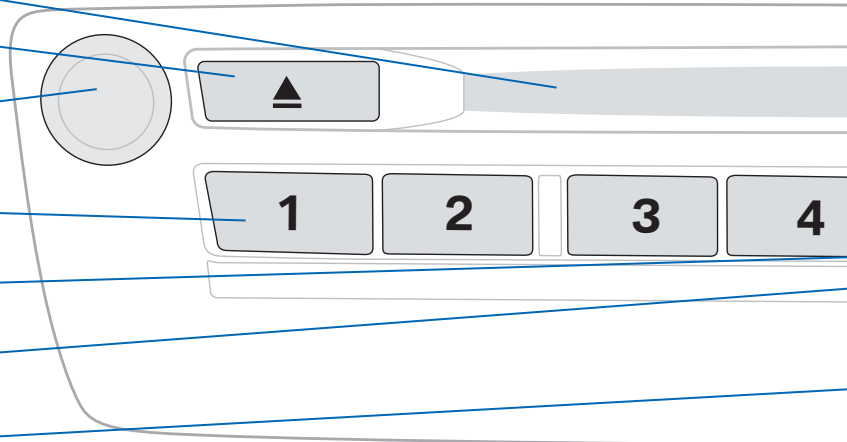

Radio/CD/Multimedia 29

Controls

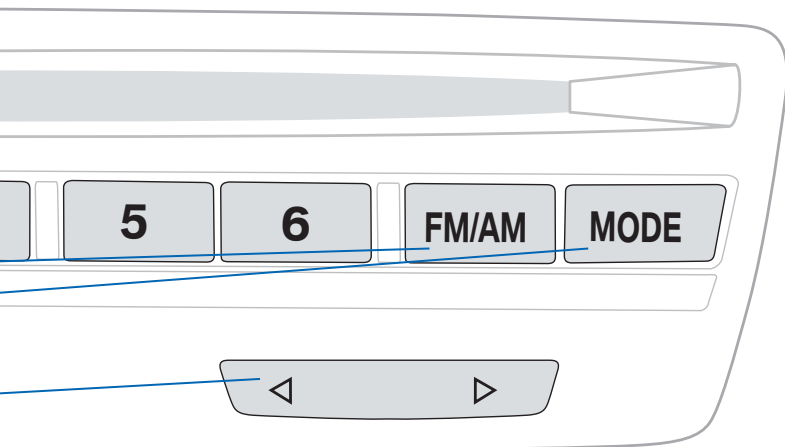

Programmable memory keys

iDrive functions can be stored on the programmable memory keys and called up directly, e.g., radio stations, navigation destinations, telephone numbers and jumps into the menu.

Storing functions

1. Select the function via iDrive.
2. Press the desired key for longer than two seconds.

Executing a function


Press the button.

The function is executed immediately. This means, for example, that the number is dialed when a phone number is selected.

30 iDrive Controller




Controller with buttons

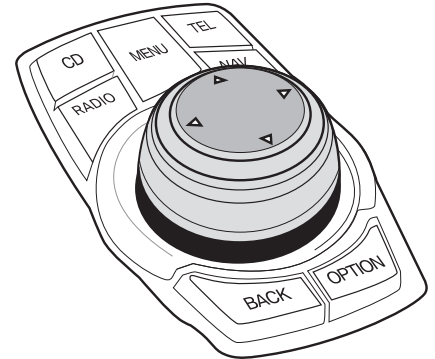


iDrive 31 Controller

Highlighting the menu item

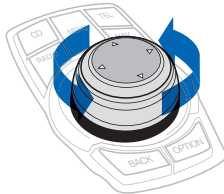


Turn the controller until the desired menu item is highlighted.

Opening the menu item



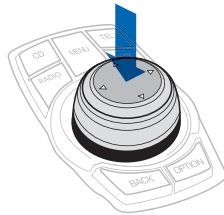


Press the controller.

Changing between panels

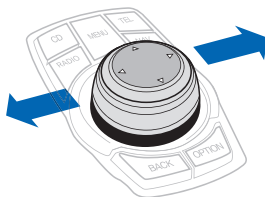

After selecting a menu item, such as "Radio", a new panel will be displayed. Panels can overlap. Move the controller either to the left or the right. The panel changes.

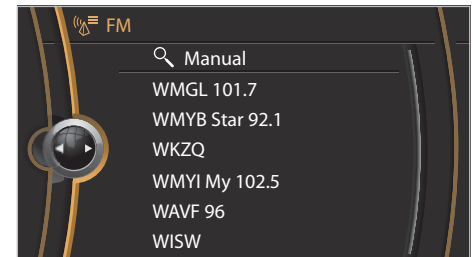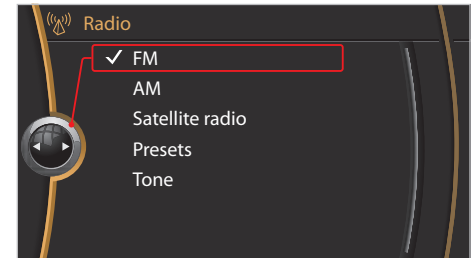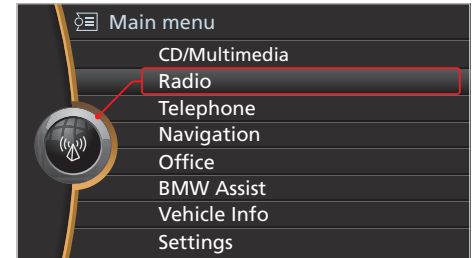


32 iDrive

Buttons on the controller

Opening the menus


Press the button on the controller.

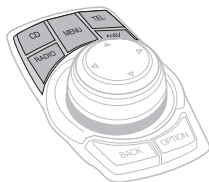

Accessing the Options menu

Press the OPTION button.


The OPTION menu consists of various sections: for instance screen settings such as "Split screen" and if necessary additional operating options for the selected menu, such as for "Radio".

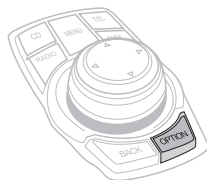


Calling up the previous view

Press the BACK button.

Opens the display that was last shown on the Control Display.

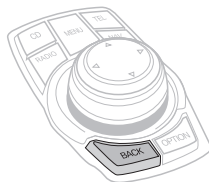

Split screen/Voice activation system*

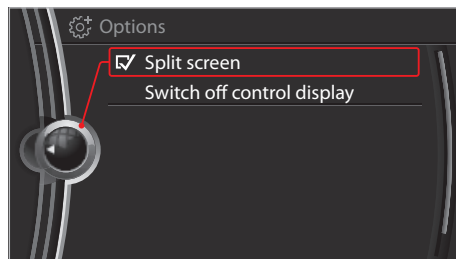**Split screen**


Additional information can be displayed on the right side of the split screen, information from the computer, for instance.

You can set which information is displayed.

Switching the split screen on/off

1. Call up "Options".
2. "Split screen"

The split screen is activated and the information remains displayed, even if another menu is selected.

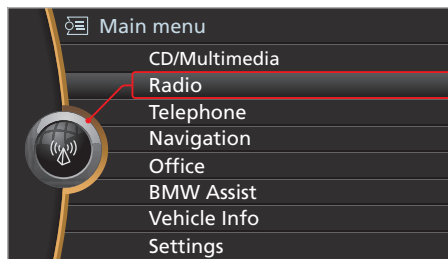
**Voice activation system***

The voice activation system allows you to operate certain features via a spoken command.

Most text which is displayed on the Control Display may be voice-activated.

Example: calling up the FM waveband

1. Press the button on the steering wheel.
2. Say >Radio<.

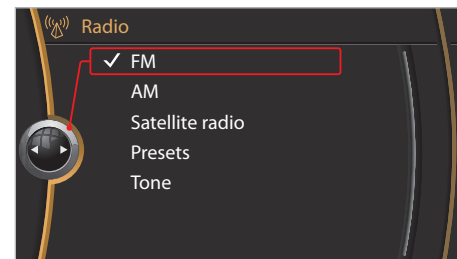

3. Say >F M<.

The list of available radio stations is displayed.

Having the possible commands read aloud




1. Press the button on the steering wheel.
2. Say >Voice commands<.

Tip

You can also call up the functions directly via so-called short commands, such as >Map perspective view<*, >Redial<. To give those commands, speak without hesitation, loudly and clearly. Avoid background noise, such as that caused by an open sunroof.

34 Navigation

Entering an address*

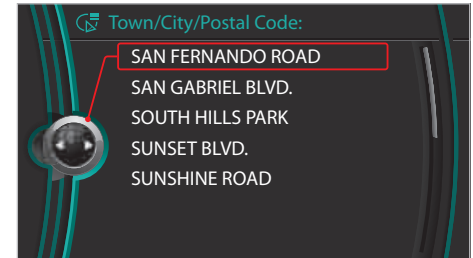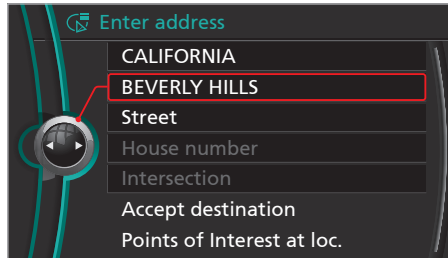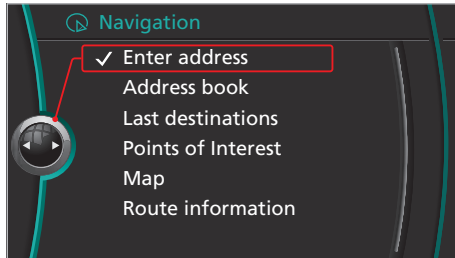

Entering a destination

1. "Navigation"
2. "Enter address"


3. Select "State/Province" or the displayed state or province.
4. Select "Town/City/Postal Code" or the displayed town/city/postal code.
5. Select the letters individually. The list gradually grows smaller each time you enter a new letter.

6. Move the controller to the right and select a town/city from the list.
7. Enter a street, as you did for the town/city.
8. If desired, select the building number or intersection.
9. "Accept destination"
10. "Start guidance"

Tip

You can also enter a destination using the voice activation system*. Town/city, street and building number can also be spoken in one command*.

Points of Interest/Map displays*

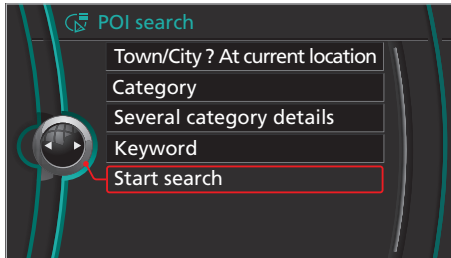


Points of Interest

Searching for specific destinations, for instance, points of interest, hotels, or gas stations:

1. "Navigation"
2. "Points of Interest"
3. Select search, such as "A-Z search"
4. Specify "Town/City", "Category" and, if necessary, "Several category details" and "Keyword".
5. "Start search"

A list of points of interest is displayed.

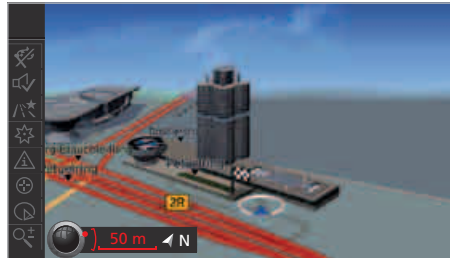

Map displays*

Various map types can be displayed in the Professional navigation system, i.e., perspective view in 3D*.


1. "Navigation"
2. "Map"
3. Call up "Options".
4. "Settings"
5. "Perspective view in 3D"

Adjusting the map zoom

1. If necessary, turn the controller to the left to change the map display.
2.  Select the symbol.
3. Turn the controller.

36 Entertainment

Tone/Radio stations

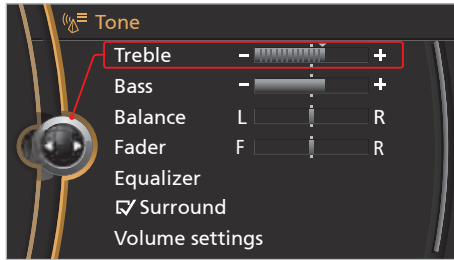

Adjusting the tone

1. "Radio" or "CD/Multimedia" or "Settings"
2. "Tone"
3. Select the desired tone settings.
4. Adjust: turn the controller.
5. Confirm: press the controller.



Selecting a radio station

1. "Radio"
2. "FM"



3. Select the desired station.

Tip

You can store your favorite radio stations with the programmable memory keys 1 to 6. Use the iDrive to select the radio station and hold the desired memory key down for several seconds.

Entertainment 37

Storing music*



Storing music

CD and DVD music tracks may be stored in a music collection in the vehicle.

1. Insert the CD/DVD into the CD/DVD player.
2. "CD/Multimedia"
3. "CD/DVD"
4.  Select the symbol for the CD/DVD player.

5. "Store in vehicle"

The music collection is displayed. The tracks are stored and played in sequence from the music collection.

Observe the following during the storage process:

Do not switch to the CD/DVD player, and do not remove the CD/DVD from the CD/DVD player, as this will interrupt the storage process.

Tip

You can only store CDs/DVDs from the CD/DVD player.



Additional information about how to store compressed audio files from CDs/DVDs or USB media can be found in the Owner's Manual.

Tip

While storing you can switch to audio sources other than the CD/DVD player without interrupting the storage process. Tracks from the current CD/DVD that have already been stored can be called up.

38 Communication

Mobile phone pairing*

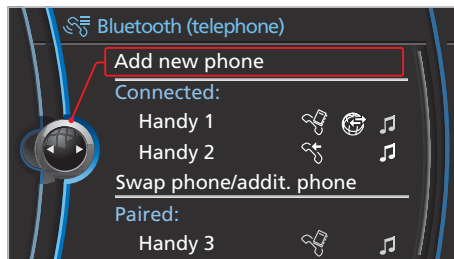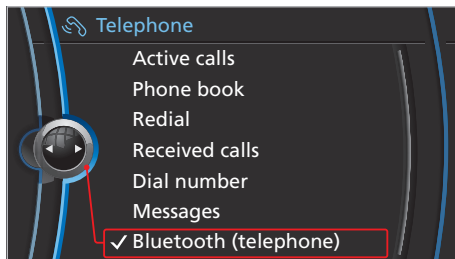

Pairing the mobile phone with the vehicle

1. Switch on the ignition.
2. Activate Bluetooth on the vehicle and the mobile phone.
3. If necessary, adjust the mobile phone according to the Bluetooth presettings, e.g., connection not visible, neither with confirmation nor on the mobile phone.
4. Think of a 4 to 16-digit passkey in order to enter it later. The passkey is only required once for the pairing procedure.
5. "Telephone"
6. "Bluetooth (telephone)"
7. "Add new phone"
The vehicle's Bluetooth name will be displayed on the Control Display.
8. Use the mobile phone to search for Bluetooth devices; check your mobile phone's operating instructions. The Bluetooth name of the vehicle also appears on the mobile phone display.
9. Select the Bluetooth name of the vehicle on the mobile phone.
The mobile phone's display or the iDrive will prompt you to enter the Bluetooth passkey.


10. Enter the passkey on the mobile phone and via the iDrive.

Tip

Please ask your BMW center which mobile phones with Bluetooth interface are supported by the mobile phone preparation package. Additional information may be obtained on the Internet at: www.bmwusa.com/bluetooth.

Communication 39

Using the phone*

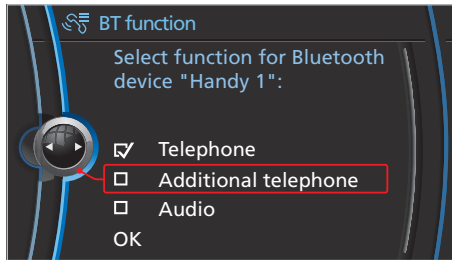

11. Select at least one function for which the mobile phone will be used.
12. "OK"

If pairing was successful, the mobile phone appears at the top of the list of mobile phones.




Dialing a number

1. "Telephone"
2. "Dial number"
3. Select the digits individually.
4. Select the symbol to establish the call.

Accepting a call

Press the button on the steering wheel.

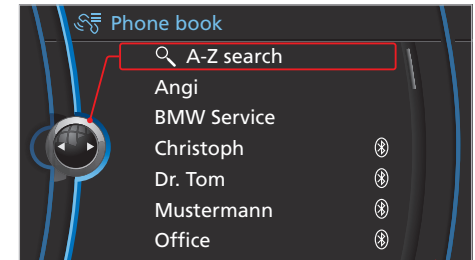

Selecting from the phone book

1. "Telephone"
2. "Phone book"
3. Select the desired entry.

Tip

Up to 3 mobile phones can be linked with the vehicle and used as a telephone, additional telephone or audio player. For more details, consult the Owner's Manual.

40 Refueling

Refueling/Oil level



Refueling

To open the fuel filler flap:
Lightly press the rear edge.

Fuel quality

BMW recommends using super premium
unleaded gasoline/AKI 93.

Minimum grade: AKI 91.

Electronic oil level check


The oil level is monitored electronically and shown
on the Control Display.

For recommended oil grades, refer to the Owner's
Manual.

Operation via iDrive:

1. "Vehicle Info"
2. "Vehicle status"
3. "Engine oil level"

Refer to the information in the Owner's Manual.

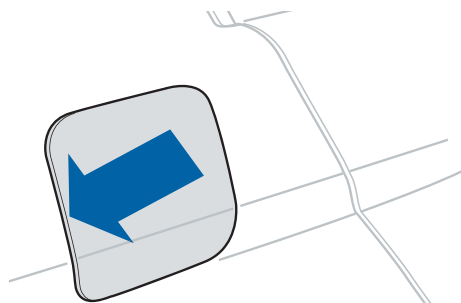

Refueling 41

Tire pressure

FTM Flat Tire Monitor*

The system identifies a loss of pressure by comparing the speeds of rotation of the individual wheels as the car is traveling.

The system must be initialized with the correct tire pressures in order for it to respond reliably in detecting a flat tire.

Operation via iDrive:

1. "Vehicle Info"
2. "Vehicle status"
3. "Reset"
4. Start the engine; do not drive away.
5. "Reset"
6. Drive away.

The FTM is not a replacement for carrying out tire pressure checks.

Tip

Check the tire pressures twice a month and reinitialize the system every time you correct the tire pressures and every time you change a tire or wheel.


TPM Tire Pressure Monitor*

Monitoring of the tire inflation pressure in the four mounted tires: the system signals when the tire inflation pressure has dropped considerably in one or more tires.

The system must have been reset when the inflation pressure was correct; otherwise, reliable signaling of a flat tire is not ensured.

Operation via iDrive:

1. "Vehicle Info"
2. "Vehicle status"
3. "Reset TPM"
4. Start the engine; do not drive away.
5. Start the initialization with "Reset TPM".
6. Drive away.

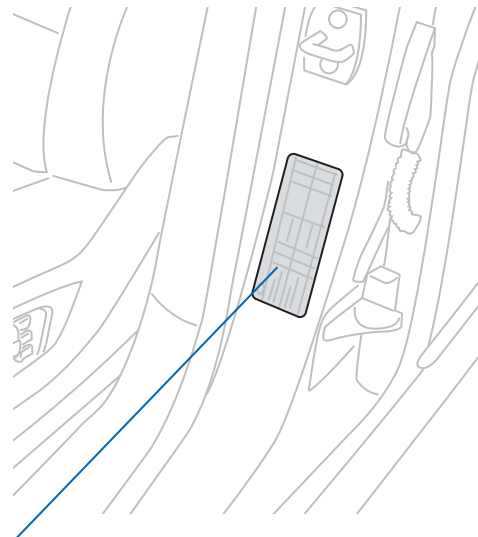


Tire pressure

Note the tire pressures in the Owner's Manual for speeds up to 100 mph or 160 km/h and maximum driving comfort and adjust, if necessary. These tire pressures may also be found on the door pillar when opening the driver's door.

42 Service and Maintenance

BMW Ultimate Service™

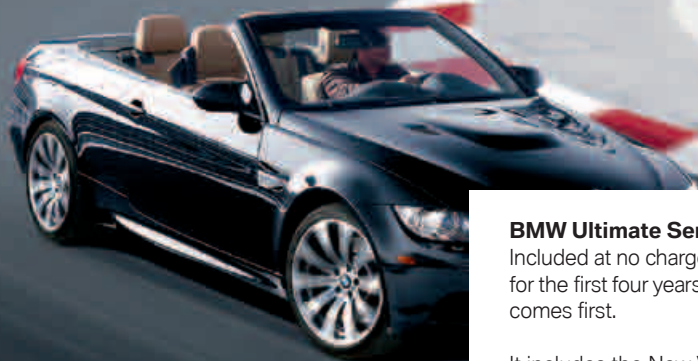

BMW Ultimate Service™

Included at no charge with all new BMW vehicles for the first four years or 50,000 miles, whichever comes first.

It includes the New Vehicle Limited Warranty and the BMW Maintenance Program, which cover all factory-recommended maintenance services and specific items that require replacement due to normal wear and tear.

Also included are four years of unlimited mileage Roadside Assistance, and, if the vehicle is equipped with the BMW Assist™ and Bluetooth® system*, a four-year, unlimited mileage subscription to the BMW Assist Safety Plan.

See www.bmwassist.com to learn more.

* The BMW Assist™ and Bluetooth® system is part of the Premium Package or available as an option for the M3.

Socket for Onboard Diagnostics OBD

On the driver's side is an OBD socket for testing components that are critical to exhaust emissions standards.


Emissions values

SERVICE
ENGINE
SOON

The warning lamp lights up.
The emission values are deteriorating. Have the vehicle checked as soon as possible.




Refer to the following section in the Owner's Manual.

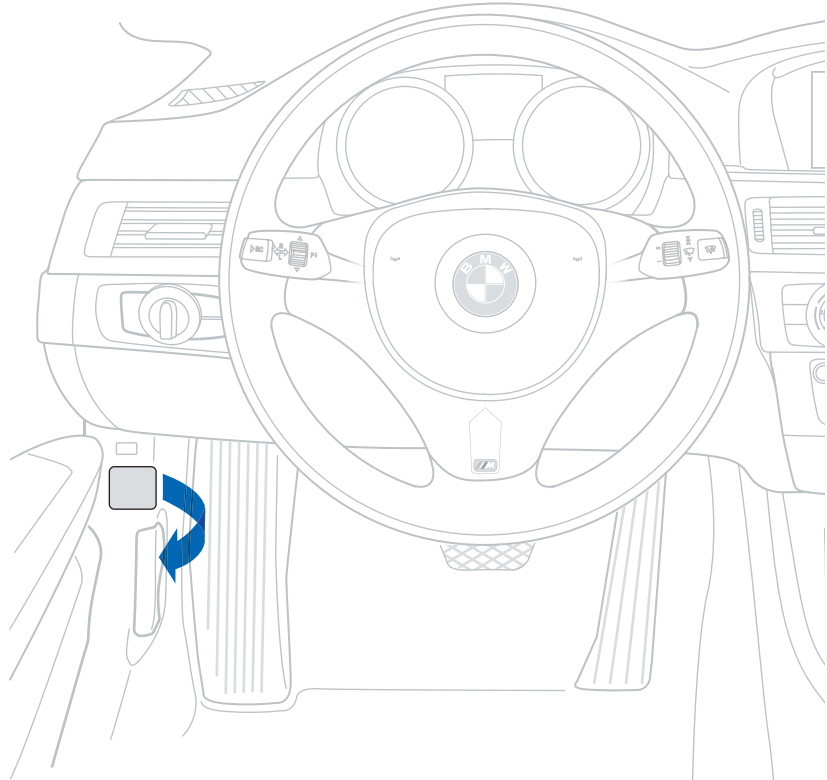

44 24/7 Access

BMW Assist™* and Bluetooth® system*

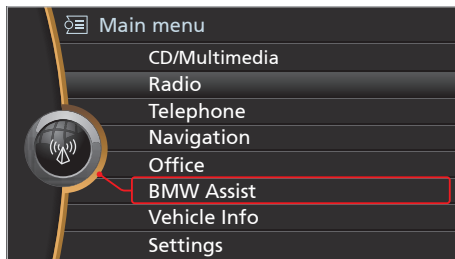


BMW Assist Safety Plan* **(included for four years)**

Combining GPS location technology with hands-free wireless communication, BMW Assist connects you with a trained response specialist 24/7 to help you with almost everything while on the road.

The BMW Assist Safety Plan provides:

- Automatic Collision Notification
- Emergency Request (SOS)
- Enhanced Roadside Assistance
- MyInfo
- Stolen Vehicle Recovery
- Door Unlock
- TeleService
- Customer Relations

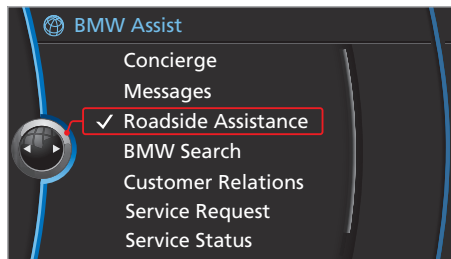

Easy Access

To initiate the services, just go to "BMW Assist" in the main menu and select the desired service, or push the SOS button on the overhead console.

What you need to do

You must complete, sign and submit a subscriber agreement with your salesperson. To decline services, you must complete, sign and submit a "Waiver and Release" document.

If neither action is taken, your BMW Assist services will be remotely deactivated approximately 60 days after you take delivery of your new vehicle.

Bluetooth hands-free calling

The BMW Assist system includes Bluetooth hands-free calling capability with speech recognition. See page 38 or visit www.bmwusa.com/bluetooth for BMW approved handsets and pairing instructions.

Tip

You can even find destinations in the comfort of your home or office, and send them via the Internet to your vehicle with the BMW Assist MyInfo service. Visit www.bmwassist.com/myinfo to learn more.

Tip

Upgrade to our optional Convenience Plan to receive directions, traffic and weather information, Critical Calling, Concierge services, online access to the Google Maps™ database, up-to-date fuel prices and stock indices in your BMW M3 with BMW Search. Push the SOS button, call toll-free 1-888-333-6118, or log on to www.bmwassist.com to learn more.

BMW Roadside Assistance

Can be contacted if assistance is needed in the event of a breakdown.

Telephone: (800) 332-BMW (4269)

For vehicles with the BMW Assist option:
Contacting Roadside Assistance through BMW Assist will also transmit vehicle and vehicle position data.

Towing

The only method approved for transporting your vehicle is using a commercial flatbed carrier truck, and securing the vehicle to the flatbed truck with four nylon wheel straps.

When pulling the vehicle onto a flatbed carrier truck, only use the screw-in tow-eye found in the trunk tool kit.

Refer to the detailed towing instructions in the Owner's Manual.

BMW Financial Services**

Offers monthly payments.

UltimatePay: one-time electronic payment service.

EasyPay: have your monthly payment debited automatically every month from the bank account you designate. Of course, you can also pay by mail.

Simply go to the BMW Financial Services section of the Owner's Circle at bmwusa.com and look under "Account Services".

** Subject to credit approval

My Account

Enables BMW owners to enjoy high performance in their vehicles - and in the ownership experience itself.

This secure owner's site is filled with important, convenient and timely information. Here is where your vehicle information and BMW Financial Service account history are kept and updated. You can see your monthly statements online, and even pay for them quickly and easily with the click of your mouse.

There is also a wide variety of informative features on interesting topics.

For example, refer to the Owner's Manual section, which also contains video reference guides. Or watch a video to learn how to pair your Bluetooth phone.

Simply go to bmwusa.com and hover over "My Account" in the site's top navigation.

46 Trunk

Warning triangle*, first aid kit*; Loading the Convertible

Warning triangle

The warning triangle is located in the trunk.

First aid kit


The first aid kit is located in the trunk.

Convertible:

The first aid kit is in a compartment under the front passenger seat.

Expanding the trunk capacity

With the hardtop closed:
Push the trunk partition upward.

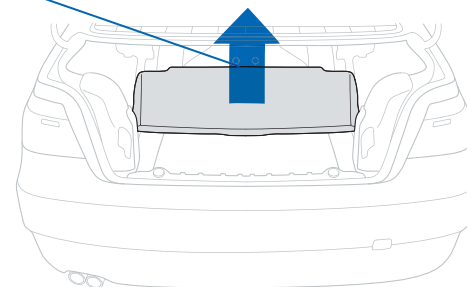

Convenient loading with the hardtop open*

1.  Briefly press the remote control button and press it again within one second and press and hold until the retractable hardtop stops in the intermediate position: the trunk lid opens slightly.
2. Open the trunk lid, push the trunk partition up and store the cargo in the trunk.
3. Push the trunk partition down until it locks in on both sides and close the trunk lid.
4.  Press and hold the button on the remote control to fold the retractable hardtop back in.

More about BMW

bmwusa.com
1-800-334-4BMW



**The Ultimate
Driving Machine®**

© 2010 Bayerische Motoren Werke
Aktiengesellschaft
Munich, Germany

Reprinting, including excerpts, only with the
written consent of BMW AG, Munich.

Order No. 01 40 2 605 446

US English VIII/10

Printed on environmentally friendly paper,
bleached without chlorine, suitable for recycling.

