

Quick Reference Guide
for the vehicle

BMW 5 Series
Gran Turismo



The Ultimate
Driving Machine®



At a glance. The main functions of your BMW 5 Series Gran Turismo.

Contents

Your BMW 5 Series Gran Turismo at a glance

Welcome on board

Your BMW 5 Series Gran Turismo offers a wide range of equipment to make driving an enjoyable experience.

This Quick Reference Guide provides an initial overview. It contains only the most important information to enable you to become familiar with the basic functions of your BMW 5 Series Gran Turismo.

For your safety and the safety of others, please read the Integrated Owner's Manual and the detailed Owner's Manual.

Any updates made after the editorial deadline for the Owner's Manuals are located in the appendix of this Quick Reference.

BMW hopes you get off to a good start and that you enjoy your BMW 5 Series Gran Turismo.

Some illustrations show country-specific items or optional extras.

* Optional extras or country-specific items

4	Opening and closing	40	Service and Maintenance
6	Seat, mirrors and steering wheel	41	24/7 Access
12	Safety	43	Appendix
13	Displays and controls		
20	Driving		
24	Radio/CD/Multimedia		
26	iDrive		
31	Integrated Owner's Manual		
32	Navigation*		
34	Entertainment		
36	Communication		
38	Refueling		



4 Opening and closing

Remote control



Open


Unlocks the entire vehicle.

Close

Locks the entire vehicle.

Open the small trunk lid

Press and hold the button for approx. 1 second.

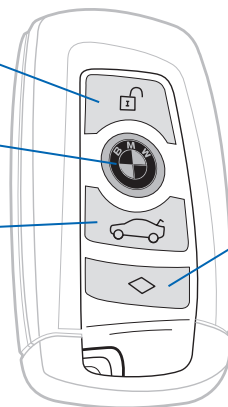

Convenient opening

Press and hold the Open button to open the windows and the glass sunroof* after unlocking.

Switch on headlamp courtesy delay feature

Briefly press the button.

Open the large trunk lid*

Press and hold the button for approx. 1 second.

Panic Mode*

Press and hold for at least 3 seconds.
Press any button to cancel.

Opening and closing 5

Personal Profile and Comfort Access*

Personal Profile

Some of the vehicle's functions can be individually tailored and stored for a maximum of three remote controls.

Different settings are retrieved and implemented in the vehicle, depending on the remote control that is detected when unlocking the vehicle.

Most personal settings can be imported/exported and thus transferred to another vehicle with the Personal Profile function.

Keyless driving pleasure


The Comfort Access* system allows you to gain access to the vehicle and start the engine without holding the remote control. The remote control is automatically detected in the immediate vicinity or inside the vehicle.

Open

Take a firm hold of the door handle.


Close*

Touch the panel with your fingers for approx. 1 second.

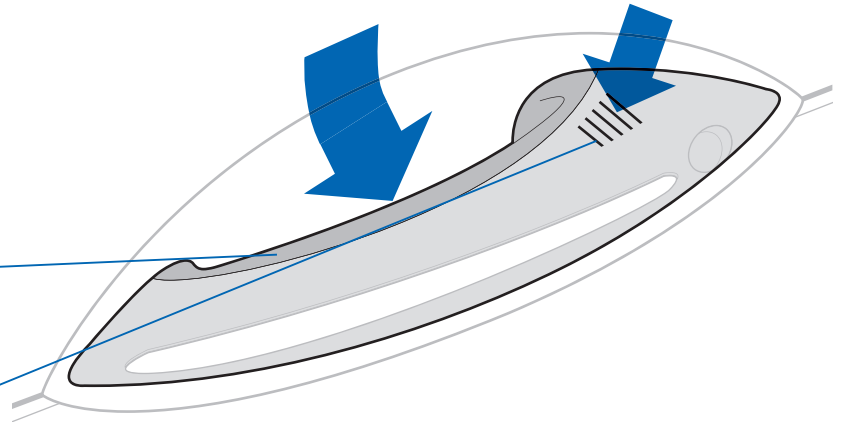

6 Seat, mirrors and steering wheel

Electric* seat adjustment

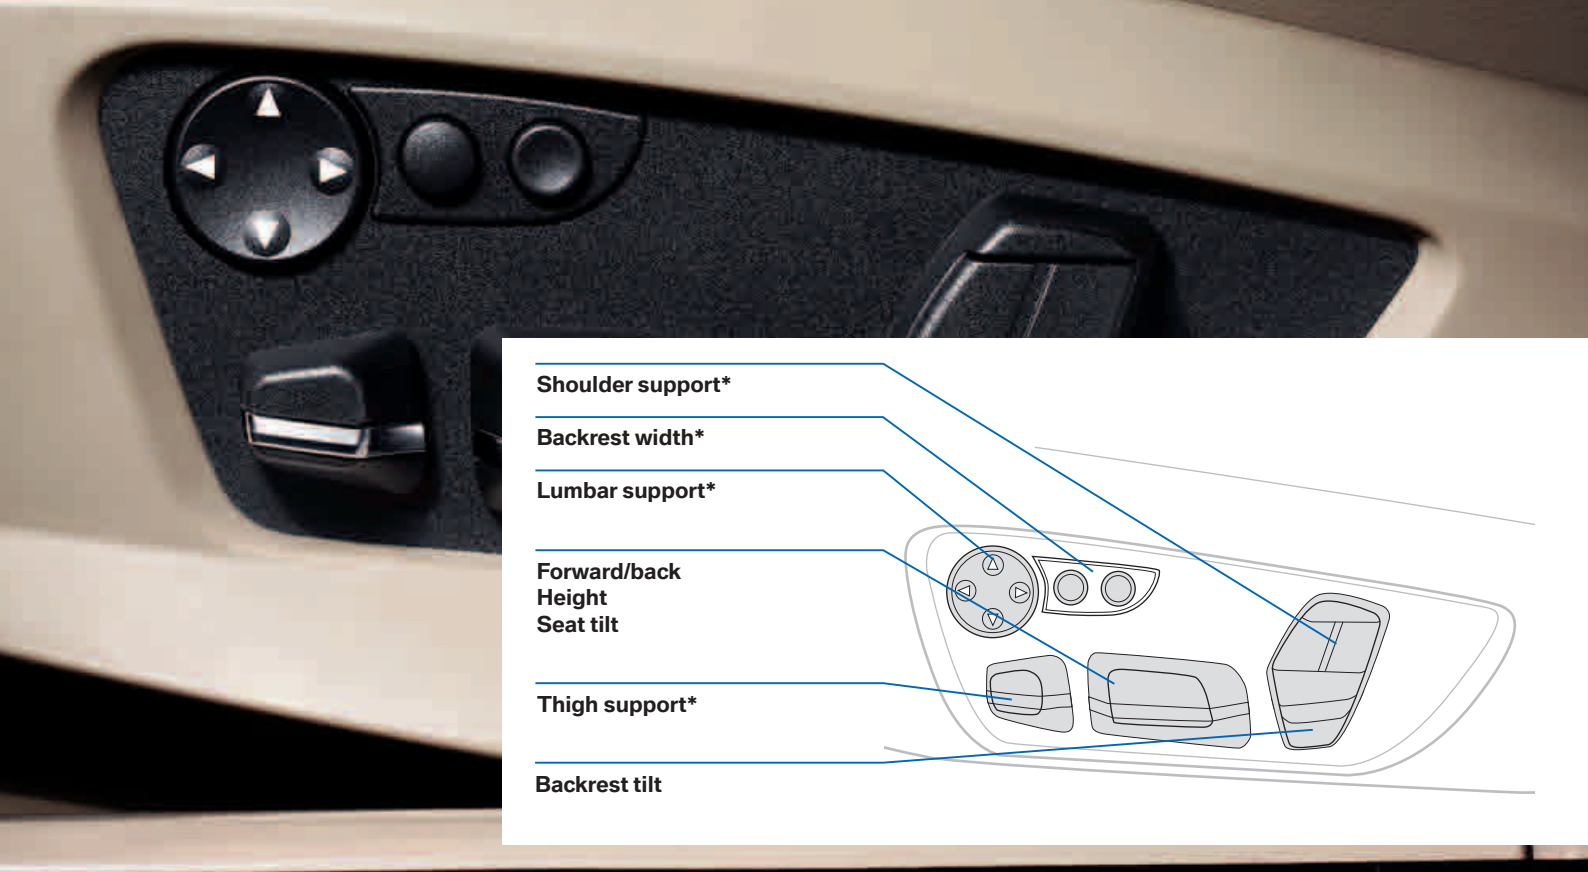

Seat, mirrors and steering wheel 7

Partially powered seat

Backrest


Height

Lumbar support*

Forward/back

Thigh support*

Seat tilt

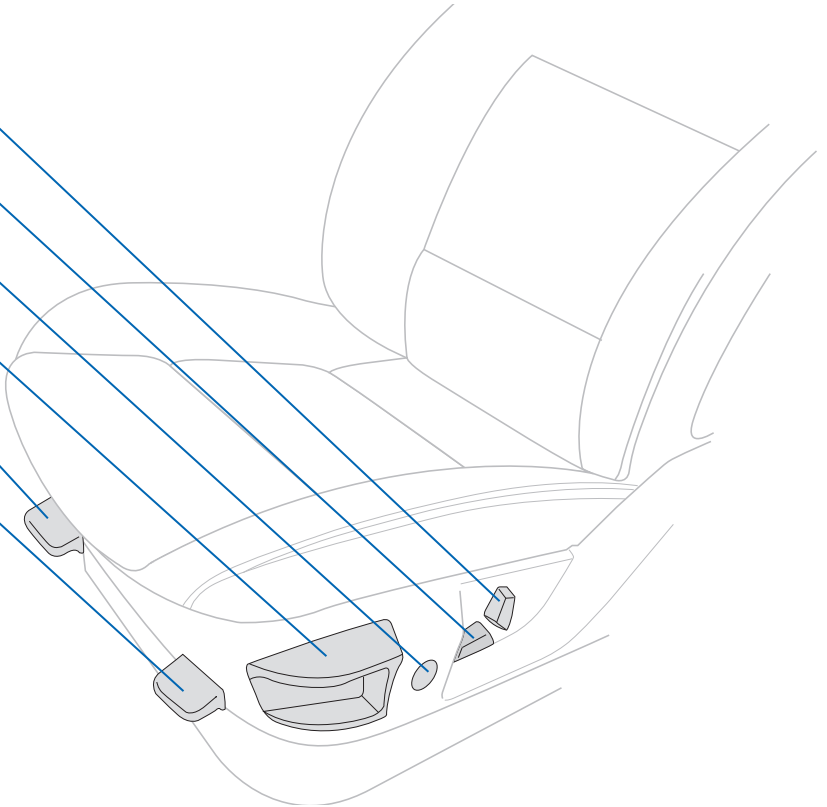


8 Seat, mirrors and steering wheel

Manually/electrically* adjustable rear seats

Adjusting manual seat

Backrest angle

Forward/back

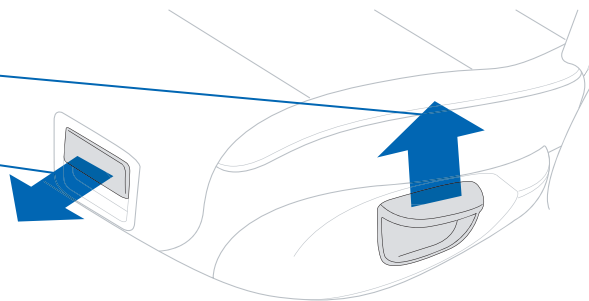


Adjusting the electric seat*

When the safety switch for the power windows is pressed, it is not possible to adjust the rear seats.

Backrest angle, head restraint, shoulder support*

Forward/back

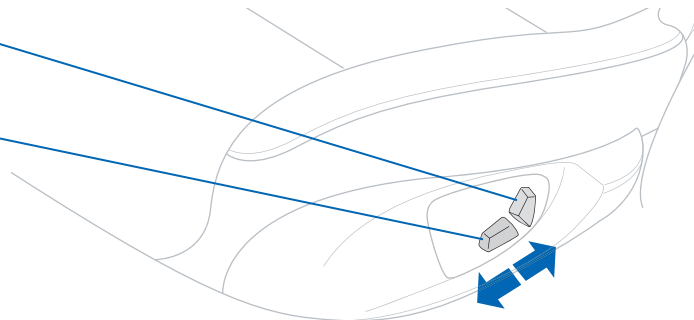

Tip

The trunk can be enlarged by folding down the rear seat backs.

Mirror adjustment

Folding mirrors in and out*

Mirror left/right, Automatic Curb Monitor*

Select mirror: left/right.

Automatic Curb Monitor on: switch in the driver's mirror position.


Seat, mirror and steering wheel memory*

You can store two different positions for the driver's seat, exterior mirrors and steering wheel for each remote control used.

- 1 . Ignition on.
- 2 . Set the seat, mirrors and steering wheel.
- 3 . Press the M button; the LED lights up.
- 4 . Press memory button 1 or 2.

Memory buttons

M button

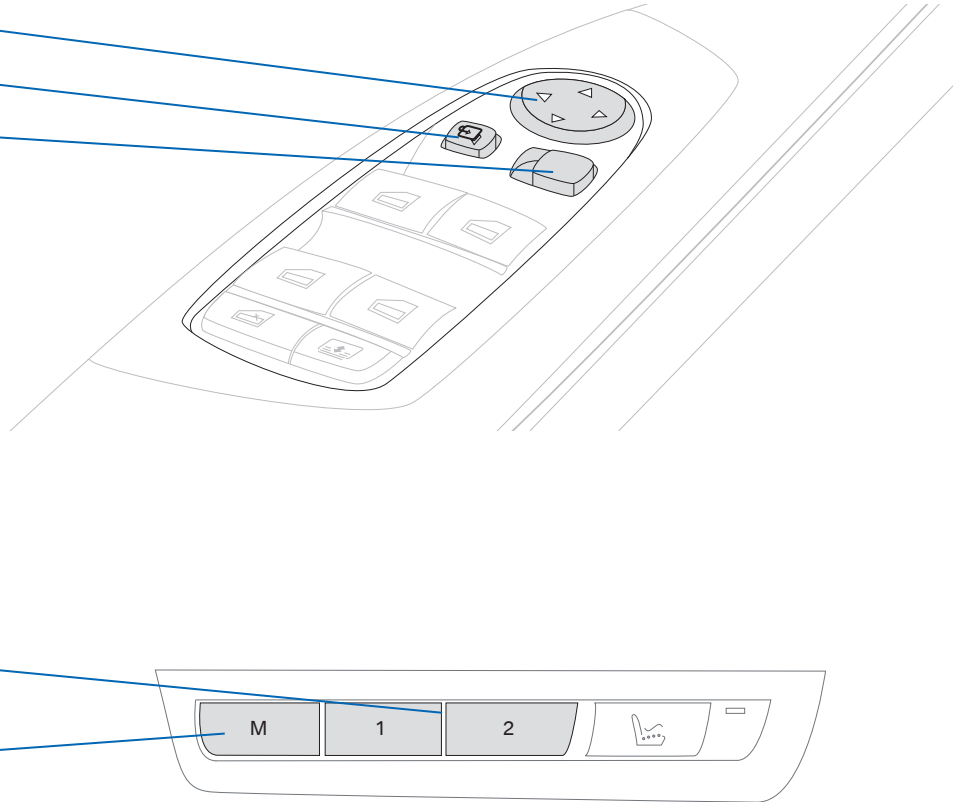

10 Seat, mirrors and steering wheel


Integrated universal remote control*

Fixed-code hand-held transmitters

- 1 . The ignition is on.
- 2 . Press both outer buttons, 1 and 3, for approx. 20 seconds, until the LED flashes.
- 3 . Hold the hand-held transmitter a distance of approx. 2 to 8 in/5 to 20 cm away from the memory buttons.
- 4 . Simultaneously press the transmit button of the hand-held transmitter and the memory button of the universal remote control. The LED flashes slowly.
- 5 . Release both buttons when the LED flashes rapidly.


Alternating-code hand-held transmitters

- 1 . Park vehicle within the range of the radio-remote controlled device.
- 2 . Program the universal remote control as described in the section entitled "Fixed-code hand-held transmitters".
- 3 . Press and hold the programmed button on the interior rear-view mirror for approx. 5 seconds until the device being adjusted is activated.
- 4 . Press button on the receiver of the device being adjusted.
- 5 . Within 30 seconds, press the programmed button on the interior rear-view mirror three times.

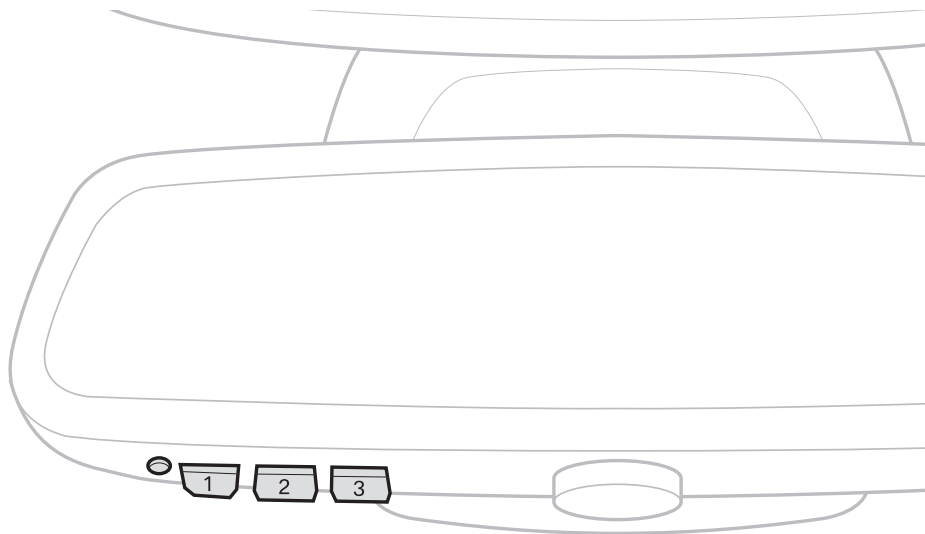


Seat, mirrors and steering wheel 11

Steering wheel

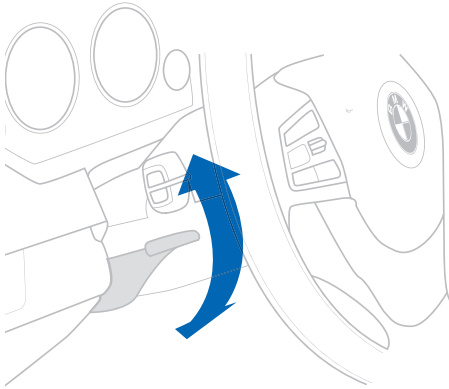

Manual steering wheel adjustment

- 1 . Move the lever down.
- 2 . The steering wheel to the seating position in longitudinal direction and height.
- 3 . Move the lever back up.

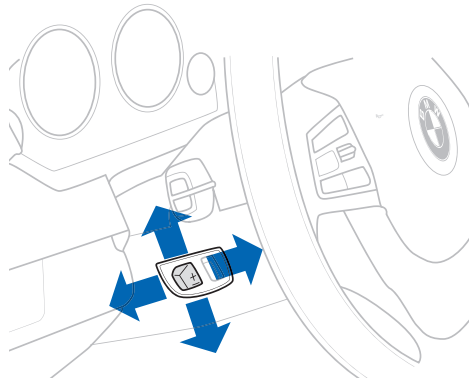

Electric* steering wheel adjustment


The steering wheel can be adjusted in four directions.

12 Safety

Transporting children safely

Locking doors and windows for the rear

Push the locking lever on the rear doors down. The door can now be opened from the outside only.

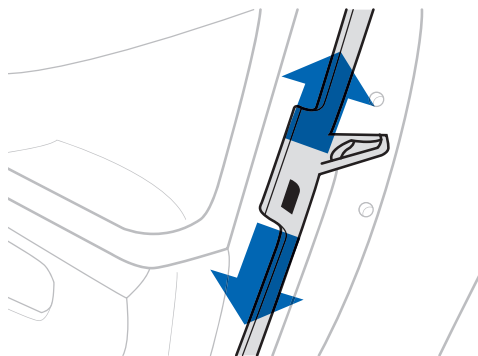

Safety switch for the rear

Press the button on the driver's door if children are being transported in the rear.

This locks various functions so that they cannot be operated from the rear.

Child restraint systems

To select, mount and use child restraint systems, observe the information provided by the system manufacturer; otherwise, the protective effect can be impaired.

LATCH child restraint fixing system

Before installing LATCH child restraint systems, pull the belt away from the region of the child restraint system.

Make sure that both lower LATCH anchors have properly engaged and that the child restraint system is resting snugly against the backrest.

Firmly press the installation guide into the gap between the seat upholstery and backrest. Continue to press until the two funnel-shaped guides snap into place in the LATCH support brackets. The installation guide can be removed simply by pulling.

Refer to the following section in the Owner's Manual: Transporting children safely.

Displays and controls 13

Around the steering wheel



14 Displays and controls

Around the steering wheel

Activating turn signals

Press the lever past the pressure point.

Canceling turn signals

Push the lever as far as the pressure point.

Signaling briefly/one-touch signaling

Push the lever up or down to the pressure point.

High beams

Push the lever forward.

Onboard computer

Press the upper button on the lever.


High-beam Assistant*

Press the lower button on the lever.

Headlamp flasher


Pull the lever.

Horn

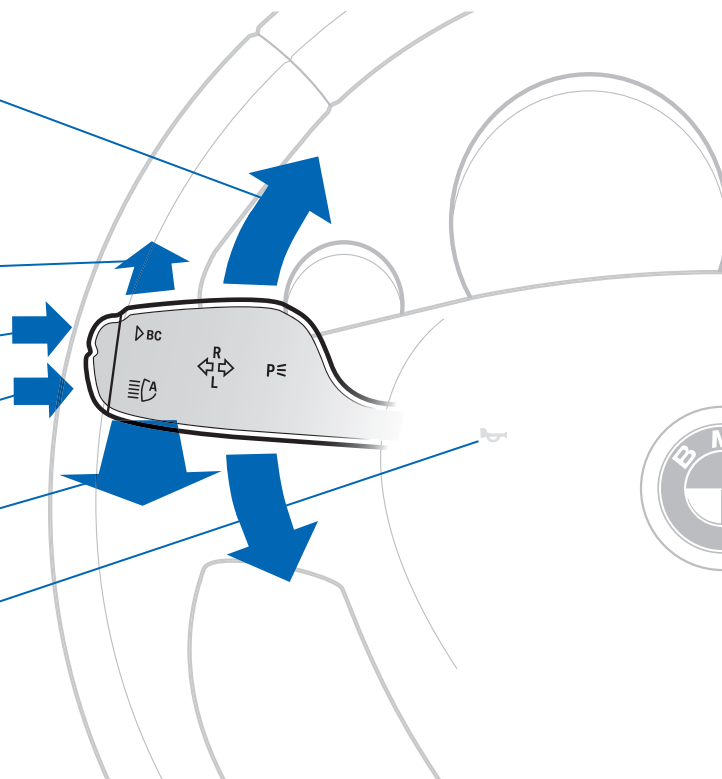

Displays and controls 15

Around the steering wheel

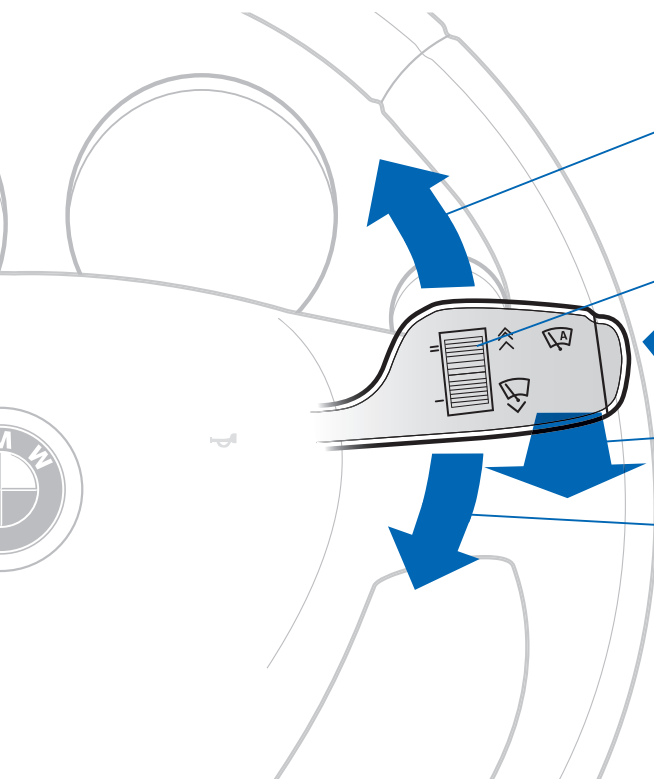

Switching on the wipers

Normal: push once.

Rapid: push twice.

Sensitivity of the rain sensor

Turn the thumbwheel.

Activating/deactivating the rain sensor*

Press the button on the lever.

Washing the windshield and headlamps*

Pull the lever.

Switching off the wipers

From normal speed: push once.

From rapid speed: push twice.

Brief wipe

Push once.

16 Displays and controls

Around the center console

Control Display

Hazard warning flashers


Central locking

Entertainment

Automatic climate control*

Selector lever

Controller with buttons

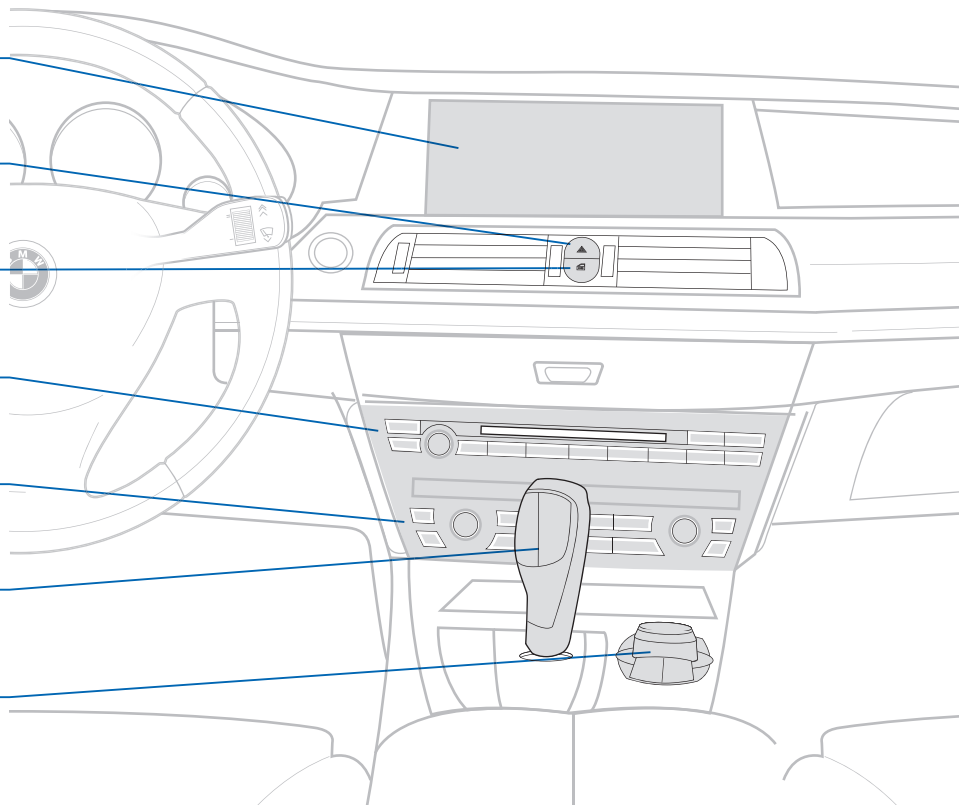



18 Displays and controls

Automatic climate control*

Blower fan speed, AUTO intensity, residual heat

Temperature

Active seat ventilation*

Air distribution

AUTO program


Seat heating*

ALL program

Driver's settings are transferred to the passenger side/rear*.


Rear window defroster

Air conditioning

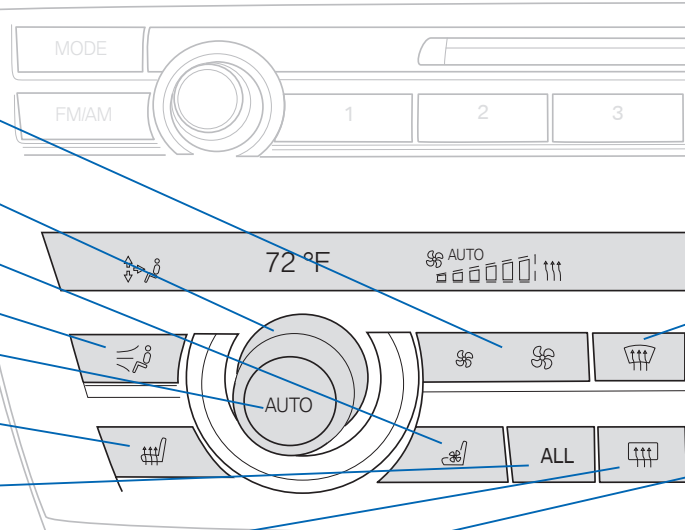

Displays and controls 19

Automatic climate control*

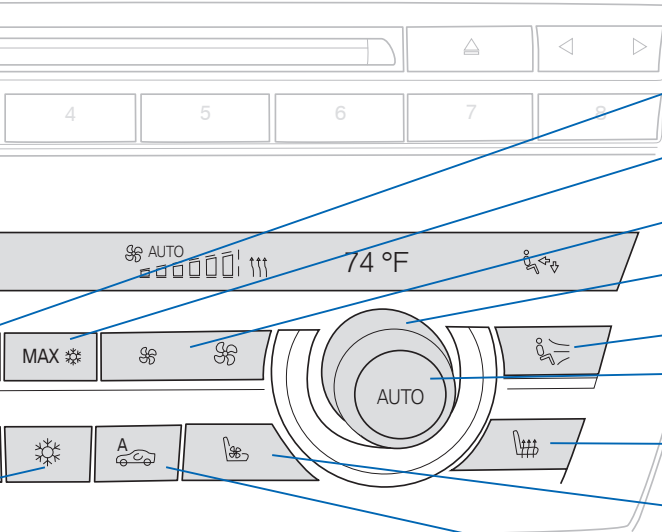

Windshield and front windows defroster

Maximum cooling

Blower fan speed, AUTO intensity

Temperature

Air distribution

AUTO program

Seat heating*

Active seat ventilation*

Automatic recirculated-air control
Recirculated-air mode

20 Driving

Start/Stop button



START
STOP
ENGINE

Switching the ignition on/off

Press the Start/Stop button without depressing the brake pedal.

Starting the engine

Press the Start/Stop button; while doing this, press the brake pedal.

Engine off/radio ready state

Press the Start/Stop button while the engine is running.

Automatic transmission/Parking brake

P button

Press the button to engage transmission position P.

Unlock button

To switch from P or into R:


- 1 . Depress the brake pedal while the engine is running.
- 2 . Press the Unlock button.
- 3 . Move the selector lever in the desired direction.

Applying the parking brake

Pull the switch; the LED lights up.

Releasing the parking brake

Press the switch with the brake pedal depressed or transmission position P engaged; the LED goes out.

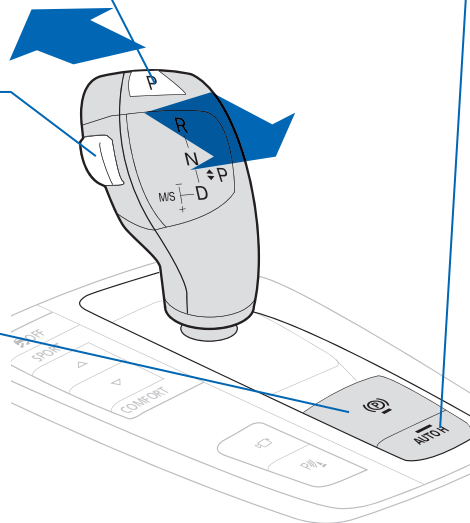**Automatic Hold**

Automatic application and release of the parking brake, in stop-and-go traffic, for instance.

Activate Automatic Hold:

Press the button; the LED lights up.

Deactivate Automatic Hold:

Press the button again; the LED goes out.

Tip

Before driving into a car wash, so that the vehicle can roll:

- 1 . Depress the brake pedal.
- 2 . Engage in position N.
- 3 . Release the parking brake or deactivate Automatic Hold.
- 4 . Switch off the engine.

The vehicle can roll for approx. 30 minutes, provided that the ignition is not switched off.

22 Driving

Lamps

Lamps off
Daytime running lights*

Automatic headlamp control
Adaptive Light Control*
High-beam Assistant*
Welcome lamps
Daytime running lights*


Fog lamps*

Rear fog lamps*

Parking lamps
Daytime running lights*

Low beams
Welcome lamps
High-beam assistant*

Instrument lighting

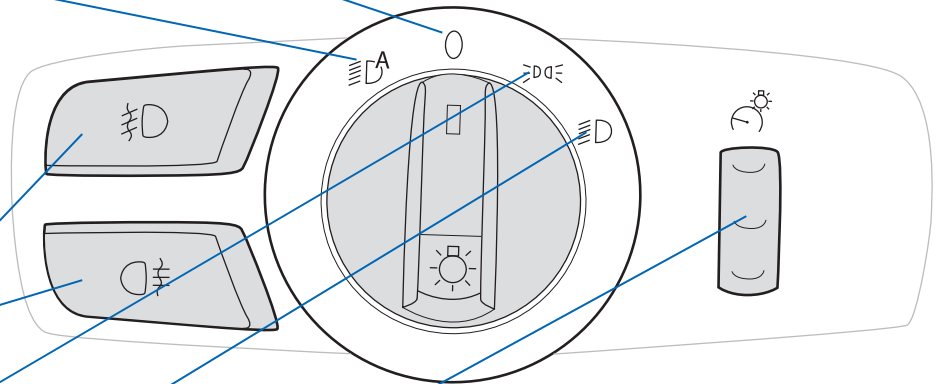

Driving stability control systems

Dynamic Stability Control DSC

DSC prevents traction loss in the driving wheels when driving away and accelerating. DSC also recognizes unstable vehicle conditions, such as fishtailing or nose-diving. Subject to physical limits, DSC helps to keep the vehicle on a steady course by reducing engine speed, and by applying brakes at individual wheels.

The program can be deactivated/activated via Dynamic Driving Control.

Dynamic Traction Control DTC

The DTC system with the TRACTION program is a variant of DSC that is optimized for forward momentum. The system ensures maximum forward momentum on special road conditions, such as unplowed snowy roads, but driving stability is limited.

The system and program can be deactivated/activated via Dynamic Driving Control.

Dynamic Damping Control*

This system can infinitely and independently adjust the suspension characteristics at all four wheels, depending on the road surface and the driving style. It gives the driver the ability to set the suspension for a more comfort-oriented setting or for more sporty driving. The settings can be selected via the Dynamic Driving Control switch.


Dynamic Driving Control*

This system is designed to allow the driver to alter the driving dynamics of the vehicle. Four preset programs can be selected; each affects the engine response settings, transmission shift characteristics, steering boost and suspension mode.

The selection is done by using the Up and Down switch of the Dynamic Driving Control unit on the center console.

Operating the programs

DSC OFF
TRACTION

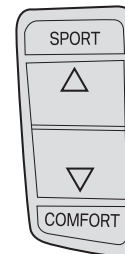

SPORT+
SPORT
NORMAL
COMFORT*


24 Radio/CD/Multimedia Controls


**On/Off
Volume control**

Switching audio and video sources

Radio
CD/DVD*
Music collection*
External audio devices


Changing the radio station waveband

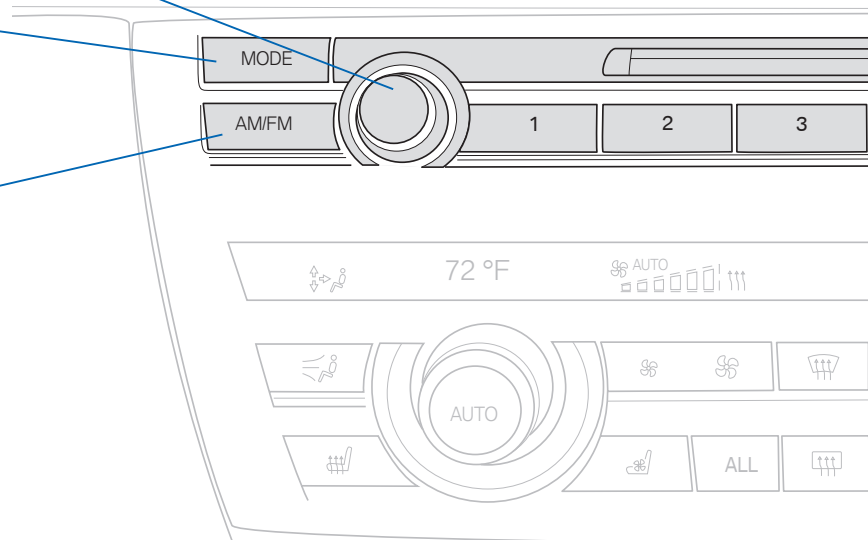

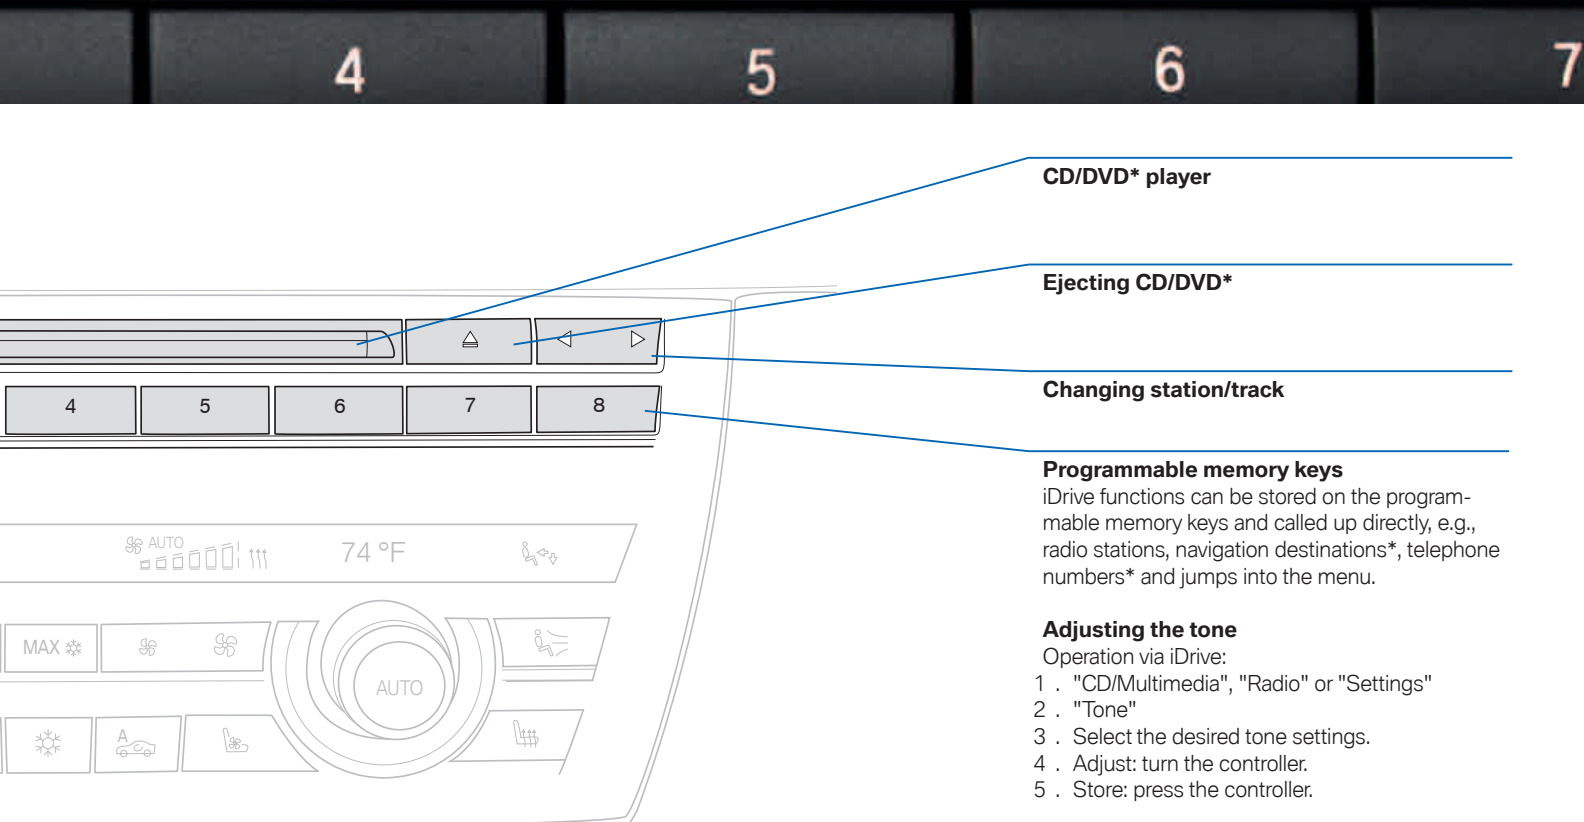


26 iDrive Controller

Controller with buttons

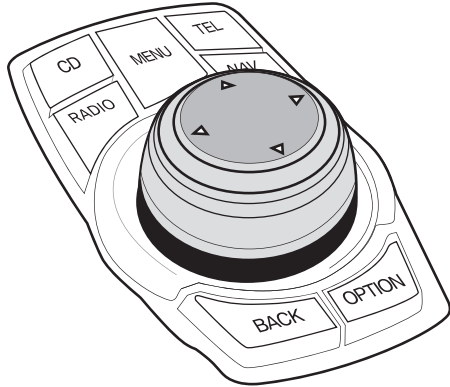


iDrive 27 Controller

Highlighting the menu item

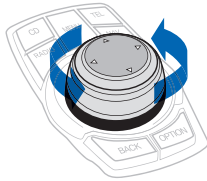


Turn the controller until the desired menu item is highlighted.

Opening the menu item


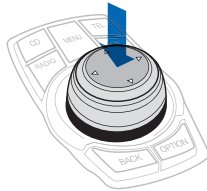


Press the controller.

Changing between panels

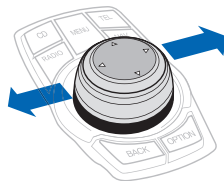


After selecting a menu item such as "Radio", a new panel is displayed. Panels can overlap. Move the controller either to the left or the right. The panel changes.

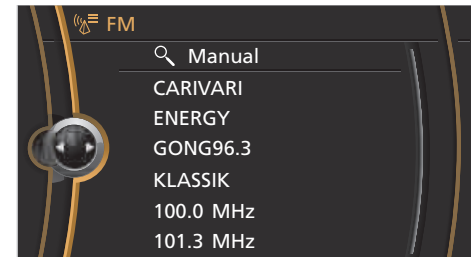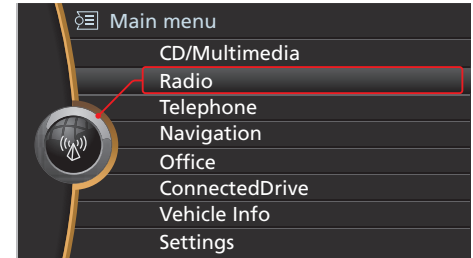

28 iDrive


Buttons on the controller

Opening the menus

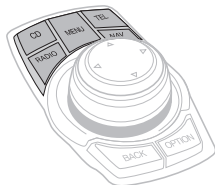

Press the button on the controller.


Opening the "Options" menu

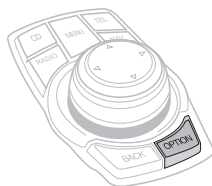

Press the OPTION button.

The "Options" menu consists of various sections: for instance screen settings such as "Split screen"*. This section remains unchanged. Operating options for the selected main menu, such as for "Radio". If necessary, additional operating options for the selected menu such as "Store station".


Calling up the previous view

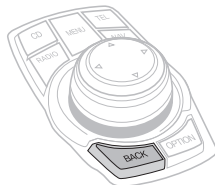

Press the BACK button.

Opens the display that was last shown on the Control Display.

Programmable memory keys

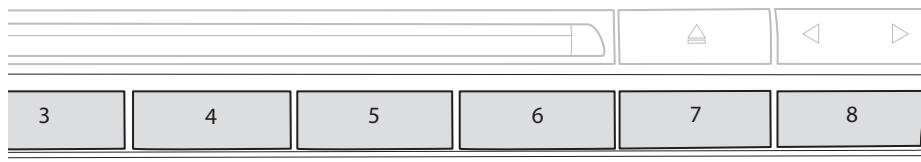

iDrive functions can be stored on the programmable memory keys and called up directly, for instance radio stations, navigation destinations*, phone numbers* and jumps into the menu.

Storing functions

- 1 . Highlight the function via the iDrive.
- 2 . Press the desired key for longer than two seconds.


Executing a function

Press the button.

The function is executed immediately. This means, for example, that the number is dialed when a phone number is selected.

Tip

You can also save content from the Integrated Owner's Manual to the programmable memory keys.

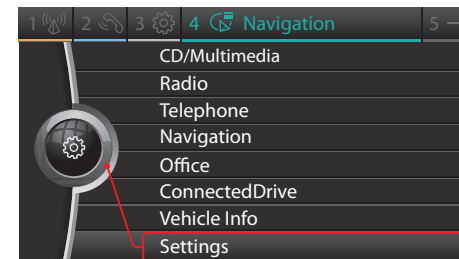

Displaying memory key assignments

Briefly touch the button.

The key assignment is displayed at the top edge of the screen.

Displaying brief information: press the button.


Displaying detailed info: press the button for an extended period.

Tip

You can save this function to the programmable memory keys for easy access to the Getting Help features. In the "Options" menu, select "Display Owner's Manual" and save to a programmable memory key.

30 iDrive

Split screen*/Voice activation system*

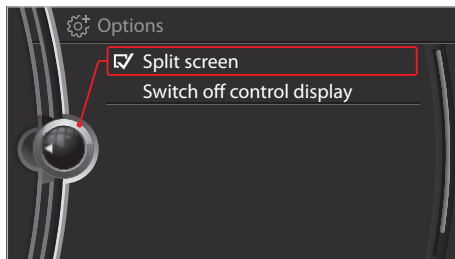


Split screen*

Additional information can be displayed on the right side of the split screen, information from the computer, for instance. You can set which information is displayed.

Switching the split screen* on/off

- 1 . Open "Options".
- 2 . "Split screen"

The split screen is activated and the information remains displayed, even if another menu is selected.

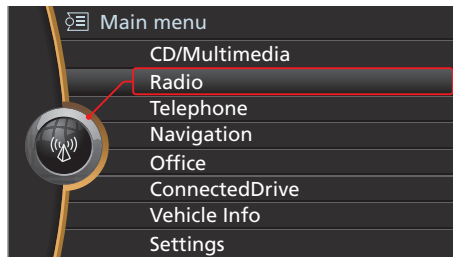


Voice activation system*

The voice activation system allows you to operate functions via a spoken command. Most text which is displayed on the Control Display may be voice-activated.

Example: calling up the FM waveband

- 1 . Press the button on the steering wheel.
- 2 . Wait for the signal.
- 3 . Say >Radio<.

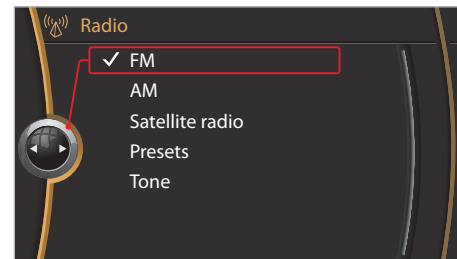

- 4 . Say >F M<.

The list of available radio stations is displayed.

Having the possible commands read aloud

- 1 . Press the button on the steering wheel.
- 2 . Say >Voice commands<.


Tip

You can also call up the functions directly via so-called short commands, for instance >Map perspective view<.

To give those commands, speak without hesitation, loudly and clearly. Avoid background noise such as that caused by open windows.

Integrated Owner's Manual 31

Operation via iDrive

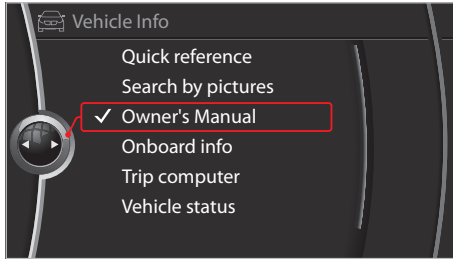


Integrated Owner's Manual

Your BMW 5 Series Gran Turismo comes with an Integrated Owner's Manual, which contains all of the information necessary for you to make the best use of your vehicle. For your safety, the Integrated Owner's Manual is only displayed when the vehicle is stationary.

Searching for information

Operation via iDrive:

- 1 . Call up main menu.
- 2 . "Vehicle Info"
- 3 . Select desired function:
 - "Quick reference"
 - "Search by pictures"
 - "Owner's Manual"

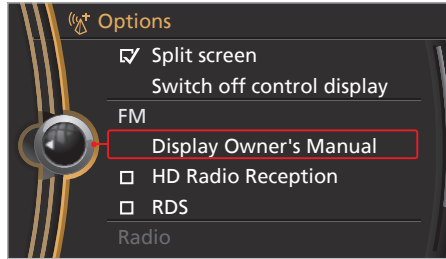


Getting help on selected menu items and screens

The Owner's Manual for the currently selected menu can be displayed.

Operation via iDrive:

- 1 . Open "Options".
- 2 . "Display Owner's Manual"

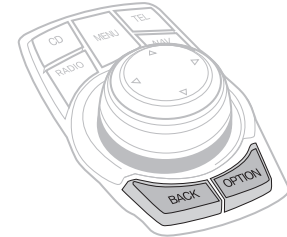

You can switch between the Integrated Owner's Manual and the currently selected menu by using the BACK and OPTION buttons. This is particularly helpful for functions with multiple operating steps.

Printed Owner's Manual




A printed Owner's Manual is contained in the vehicle document portfolio in the glove compartment or cargo area.

Tip

Complex principles are explained quickly via videos in the Integrated Owner's Manual.

32 Navigation*

Entering the address

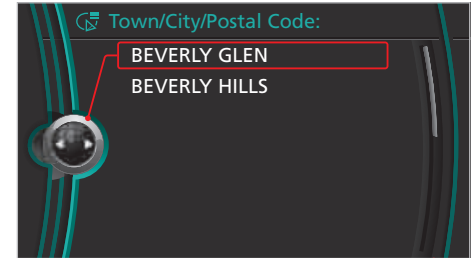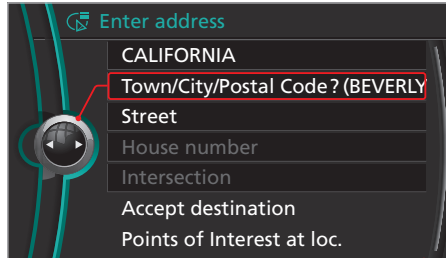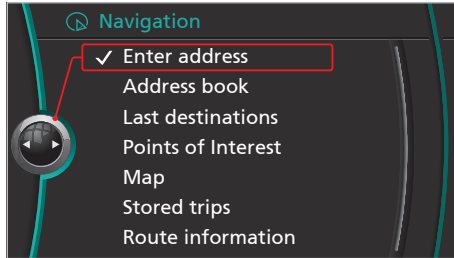

Entering a destination

- 1 . "Navigation"
- 2 . "Enter address"


- 3 . Select "State/Province" or the displayed state or province.
- 4 . Select "Town/City/Postal Code" or the displayed town/city/postal code.
- 5 . Select the letters individually. The list gradually grows smaller each time you enter a new letter.

- 6 . Move the controller to the right and select a town/city from the list.
- 7 . Enter a street, as you did for the town/city.
- 8 . If desired, select the building number or intersection.
- 9 . "Accept destination"
- 10 . "Start guidance"

Tip

You can also enter a destination using the voice activation system*. Town/city, street and building number can also be spoken in one sentence.

Points of Interest/Map displays*

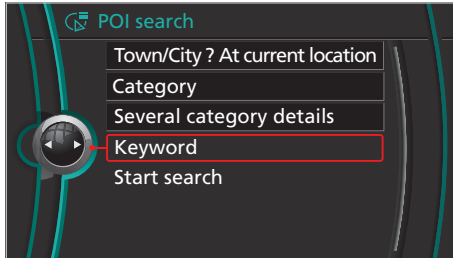


Points of Interest

Searching for specific destinations, for instance, points of interest, hotels, or gas stations:

- 1 . "Navigation"
- 2 . "Points of Interest"
- 3 . Select search, for instance "A-Z search"
- 4 . Specify "Town/City", "Category" and, if applicable, "Category details" and "Keyword".

A list of successful hits is displayed.

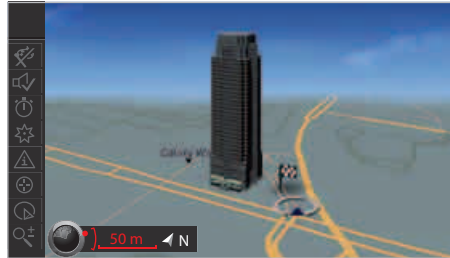

Map displays*

Several types of maps may be displayed, for instance perspective view in 3D*.


- 1 . "Navigation"
- 2 . "Map"
- 3 . Open "Options".
- 4 . "Settings"
- 5 . "Perspective view in 3D"

Adjusting the map zoom

- 1 . If necessary, turn the controller to the right to change the map display.
- 2 .  Select the symbol.
- 3 . Turn the controller.


34 Entertainment

Tone/Radio stations

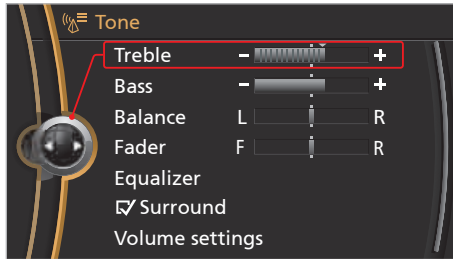


Adjusting the tone

- 1 . "CD/Multimedia", "Radio" or "Settings"
- 2 . "Tone"
- 3 . Select the desired tone settings.
- 4 . Adjust: turn the controller.
- 5 . Store: press the controller.

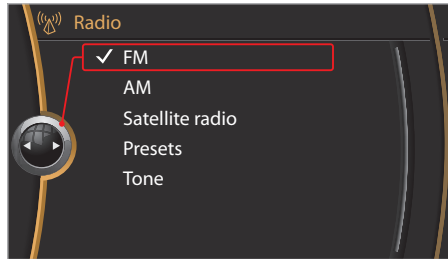

Selecting a radio station

- 1 . "Radio"
- 2 . "FM" or "AM"

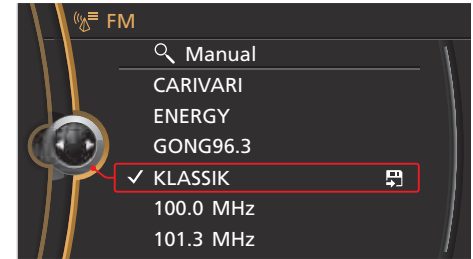

- 3 . Select the desired station.

Tip

You may store your favorite radio station with one of the programmable memory keys 1-8. Use the iDrive to select the radio station and hold the desired memory key down for several seconds.

Entertainment 35

Storing music*



Storing music

CD/DVD* and USB media music tracks may be stored in the vehicle in a music collection.

- 1 . Insert the CD/DVD* into the CD/DVD* player.
- 2 . "CD/Multimedia"
- 3 . "CD/DVD"
- 4 .  Select the symbol for the CD/DVD player.

5 . "Store in vehicle"

The music collection is displayed.

The tracks are stored and played in sequence from the music collection.

Observe the following during the storage process:

Do not switch to the CD/DVD player, and do not remove the CD/DVD from the CD/DVD player, as this will interrupt the storage process.

Tip



You can store music using the CD/DVD player and compressed audio files using the USB interface in the glove compartment. For further information, consult the Owner's Manual.

Tip

While storing, you can switch to audio sources other than the CD/DVD player without interrupting the storage process. Tracks from the current CD/DVD that have already been stored can be called up.

36 Communication

Mobile phone pairing*

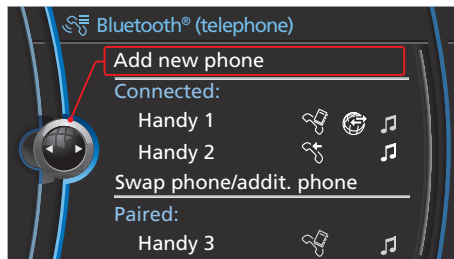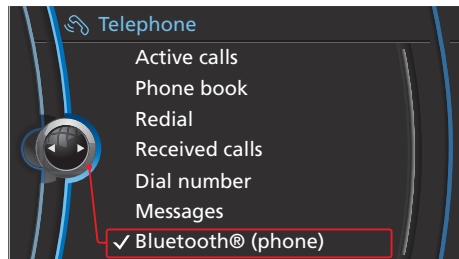

Pairing the mobile phone with the vehicle

- 1 . Switch on the ignition.
- 2 . Activate Bluetooth on the vehicle and the mobile phone.
- 3 . If necessary, adjust the mobile phone according to the Bluetooth presets, e.g., connection not visible, neither with confirmation nor on the mobile phone.
- 4 . Think of a 4 to 16-digit passkey in order to enter it later. The passkey is only required once for the pairing procedure.
- 5 . "Telephone"
- 6 . "Bluetooth® (phone)"

- 7 . "Add new phone"
The Bluetooth name of the vehicle appears on the Control Display.
- 8 . Use the mobile phone to search for Bluetooth devices; check your mobile phone's operating instructions. The Bluetooth name of the vehicle also appears on the mobile phone display.
- 9 . Select the Bluetooth name of the vehicle from the mobile phone. The mobile phone's display or the iDrive will prompt you to enter the Bluetooth passkey.

- 10 . Enter the passkey on the mobile phone and via the iDrive.



Tip

Please ask your BMW center which mobile phones with Bluetooth interface are supported by the mobile phone preparation package.

You can obtain additional information on the Internet at: www.bmwusa.com/bluetooth

Communication 37

Using the phone*

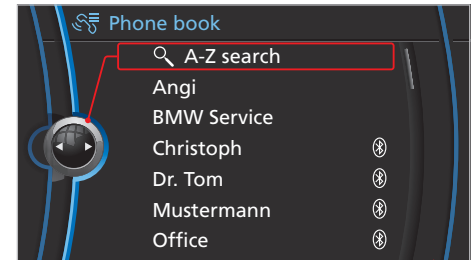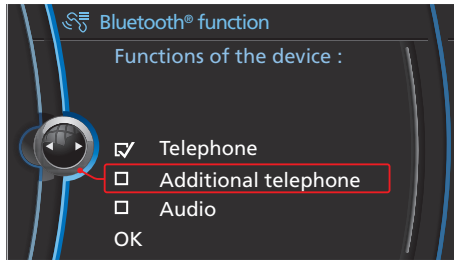

1. Select at least one function for which the mobile phone will be used.
- 1 2. "OK"

If pairing was successful, the mobile phone appears on the mobile phone list.

Dialing a number

- 1 . "Telephone"
- 2 . "Dial number"
- 3 . Select the digits individually.
- 4 .  Select the symbol to establish the call.

Accepting a call

 Press the button on the steering wheel.

Tip


Up to 3 mobile phones can be connected to the vehicle and used as a telephone, additional telephone or audio player. For more details, consult the printed Owner's Manual.

Selecting from the phone book

- 1 . "Telephone"
- 2 . "Phone book"
- 3 . Select the desired entry.

38 Refueling

Refueling/Oil level

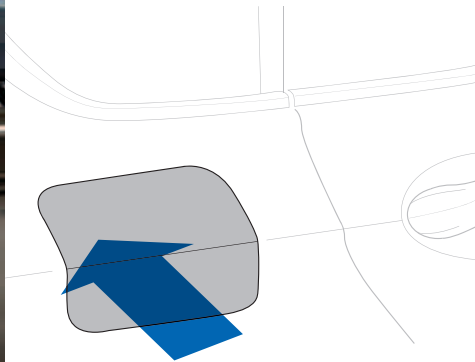

Refueling

To open the fuel filler flap:
Lightly press the rear edge.

Fuel quality

Gasoline:
BMW recommends using super premium
unleaded gasoline/AKI 91.
Minimum fuel grade: AKI 89.

Electronic oil level check

The oil level is monitored electronically and shown
on the Control Display.
For recommended oil grades, refer to the Owner's
Manual.

Operation via iDrive:

- 1 . "Vehicle Info"
- 2 . "Vehicle status"
- 3 . "Engine oil level"

Tip

Refer to the information in the Owner's
Manual.

FTM Flat Tire Monitor*

The system identifies a loss of pressure by comparing the speeds of rotation of the individual wheels as the car is traveling.

The system must be initialized with the correct tire pressures in order for it to reliably respond in detecting a flat tire.

Operation via iDrive:

- 1 . "Vehicle Info"
- 2 . "Vehicle status"
- 3 . $\langle \text{!} \rangle_{\text{INIT}}$ "Reset"
- 4 . Start the engine; do not drive away.
- 5 . "Reset"
- 6 . Drive away.

The FTM is not a replacement for carrying out tire pressure checks.


TPM Tire Pressure Monitor*

Monitoring of the tire inflation pressure in the four mounted tires: the system reports when the tire inflation pressure has dropped considerably in one or more tires.

The system must have been reset when the inflation pressure was correct; otherwise, reliable signaling of a flat tire is not ensured.

Operation via iDrive:

- 1 . "Vehicle Info"
- 2 . "Vehicle status"
- 3 . $\langle \text{!} \rangle_{\text{INIT}}$ "Reset"
- 4 . Start the engine; do not drive away.
- 5 . Start the initialization with "Reset".
- 6 . Drive away.

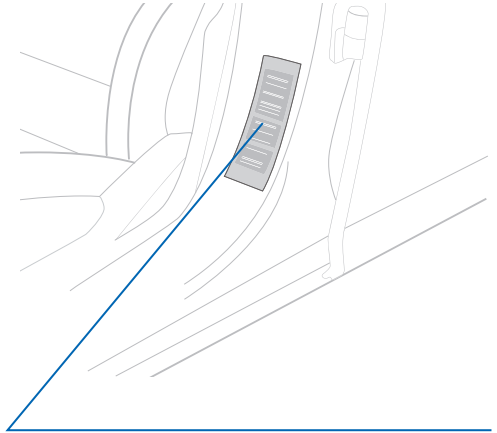

Tire pressure

The pressure values for approved tire sizes and speeds up to 100 mph/160 km/h can be found on the driver's door pillar.

If the tire's speed rating code is not listed, use the tire pressure for the corresponding size e.g., 255/50 R19.

Tip

Check the tire pressure twice a month and reinitialize the FTM/TPM after adjusting tire pressure and after changing a tire or wheel.

40 Service and Maintenance

OBD, Emissions values

 
Socket for Onboard Diagnostics OBD

On the driver's side is an OBD socket for testing components that are critical to exhaust composition.


SERVICE
ENGINE
SOON

Emissions values



The warning lamp lights up.
The emissions values are deteriorating. Have the vehicle checked as soon as possible.



Refer to the information in the Owner's Manual.

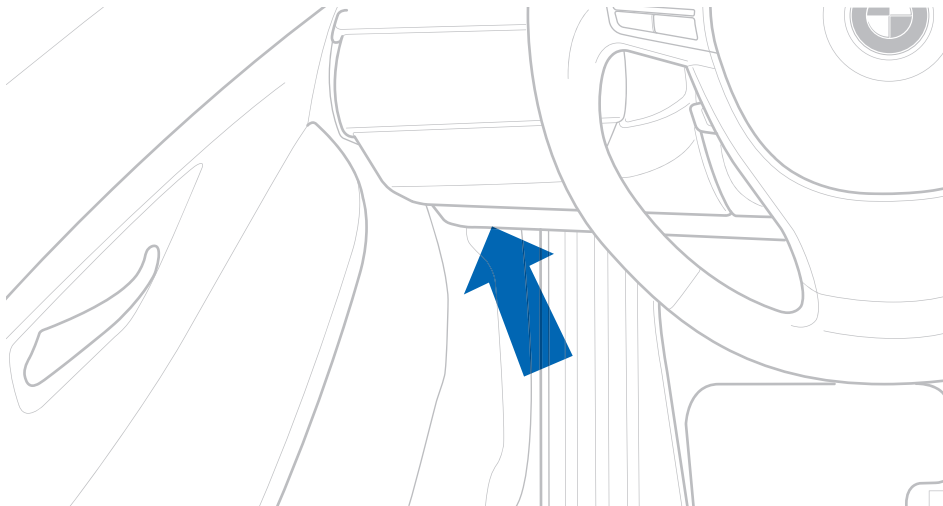

BMW Assist™ and Bluetooth® System

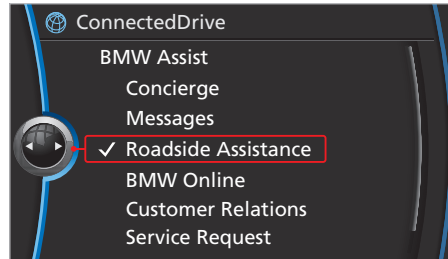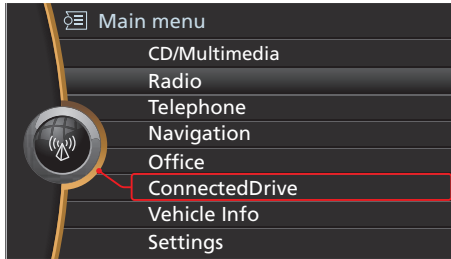

BMW Assist Safety Plan*

Combining GPS location technology with hands-free wireless communication, BMW Assist connects you with a trained response specialist 24/7 to help you with almost everything while on the road.

The BMW Assist Safety Plan provides:

- Automatic Collision Notification
- Emergency Request (SOS)
- Enhanced Roadside Assistance
- Stolen Vehicle Recovery
- My Info*
- Remote Door Unlock
- TeleService
- Customer Relations

Easy Access

To initiate the services, just go to "BMW Assist" in the main menu and select the desired service, or push the SOS button on the overhead console.

What You Need To Do

You must complete, sign and submit a subscriber agreement with your salesperson. To decline services, you must complete, sign and submit a "Waiver and Release" document. If neither action is taken, your BMW Assist services will be remotely deactivated approximately 60 days after you take delivery of your new vehicle.

Bluetooth hands-free calling

The BMW Assist system includes Bluetooth hands-free calling capability with speech recognition. See page 36 or visit www.bmwusa.com/bluetooth for BMW approved handsets and pairing instructions.

Tip

You may even prepare some services offered by BMW Assist in the comfort of your home and send them via the Internet to your vehicle.

Tip

Upgrade to our optional Convenience Plan to receive directions, traffic and weather information, Critical Calling, Concierge services, online access to the Google Maps™ database, news headlines, up-to-date fuel prices and stock indices in your BMW 5 Series Gran Turismo with BMW Search. Push the SOS button, call toll-free 1-888-333-6118, or log on to www.bmwassist.com to learn more.

42 24/7 Access

BMW Roadside Assistance

Can be contacted if assistance is needed in the event of a breakdown.

Telephone

USA: (800) 332-BMW (4269)

Canada: 1-800-267-8269

If possible, the vehicle and position data are transmitted in the process.

Towing

The only method approved for transporting vehicles with automatic transmission is using a commercial flatbed carrier truck, and securing the vehicle to the flatbed truck with four nylon wheel straps.

When pulling the vehicle onto a flatbed carrier truck, only use the screw-in tow-eye found in the trunk tool kit.

Refer to the detailed towing instructions in the Owner's Manual.

If applicable, you will find updates for the Integrated Owner's Manual and the printed Owner's Manual [here](#).

Tire pressure

The tire pressures can be found in the printed Owner's Manual.

More about BMW

www.bmw.com



The Ultimate
Driving Machine®

© 2011 Bayerische Motoren Werke

Aktiengesellschaft

Munich, Germany

Reprinting, including excerpts, only with the
written consent of BMW AG, Munich.

Order No. 01 40 2 607 185

US English II/11

Printed on environmentally friendly paper,
bleached without chlorine, suitable for recycling.

