

Quick Reference Guide
for the vehicle

BMW 6 Series



The Ultimate
Driving Machine®



At a glance. The main functions of your BMW 6 Series.

Contents

Your BMW 6 Series at a glance

Welcome on board

Your BMW 6 Series offers you a wide range of equipment to make driving an enjoyable experience.

This Quick Reference Guide contains only the most important information to enable you to become familiar with the basic functions of your BMW 6 Series.

For your own safety and the safety of others, please read the printed Owner's Manual for Vehicle.

Any updates made after the editorial deadline for the Owner's Manuals are located in the appendix of this Quick Reference Guide.

BMW hopes you get off to a good start and that you enjoy your BMW 6 Series.

Some figures show country-specific versions and optional extras.

* Optional extras or country-specific items

4	Opening and closing	34	Entertainment
7	Seat, mirrors, and steering wheel	36	Communication
11	Safety	38	Refueling
12	Displays and controls	40	Giving and receiving assistance
18	Driving	41	Service and maintenance
23	Radio/CD/Multimedia	42	24/7 Access
26	iDrive	44	Appendix
31	Integrated Owner's Manual		
32	Navigation*		



4 Opening and closing

Remote control



Opening

Unlocks the vehicle.

Closing

Locks the vehicle.

Opening the trunk lid


Press and hold.

Switching on the headlamp courtesy delay feature

Press briefly.

Panic mode*

Press the button for at least 3 seconds.
To switch off the alarm: press any button.

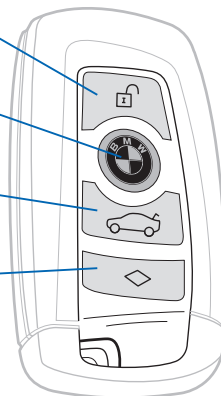

Convenient opening

Press and hold the Open button after unlocking.
Coupe: open the windows, glass sunroof*.
Convertible: open the windows, rear window.
With Comfort Access*, the convertible top in addition.

Convenient closing*

Press and hold the Close button.
Coupe: close the windows, glass sunroof*.
The exterior mirrors fold in*.
Convertible: close the windows, rear window.
With Comfort Access*, the convertible top in addition.

Personal Profile

Some of the vehicle's functions can be set to suit personal preferences and stored for several remote controls.

Different settings are retrieved and implemented in the vehicle, depending on the remote control that is detected when unlocking the vehicle.

Most personal settings can be imported/exported and thus transferred to another vehicle with the Personal Profile function.

The joy of driving without a remote control


The Comfort Access* system allows you to gain access to the vehicle and start the engine without holding the remote control. The remote control is automatically detected in the immediate vicinity or inside the vehicle.

Opening

Take a firm hold of the door handle.

Closing

Touch the panel with your fingers for approx. 1 second.

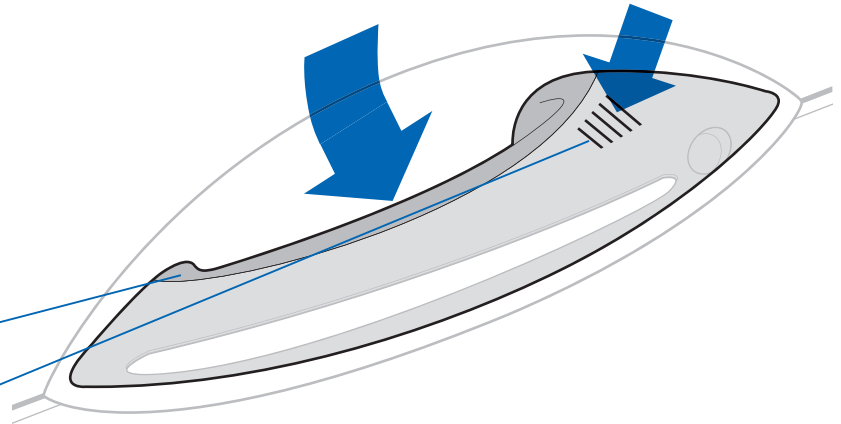

6 Opening and closing

Convertible: convertible top

Opening

Pull and hold the switch.

Closing


Press and hold the switch.

The left LED lights up green:
During opening or closing.

The right LED flashes red:
The procedure is not completed.

The right LED lights up red when the
switch is pushed:

The cargo area partition is folded up, the trunk
lid is not closed, or a malfunction has occurred.
The convertible top cannot be moved.

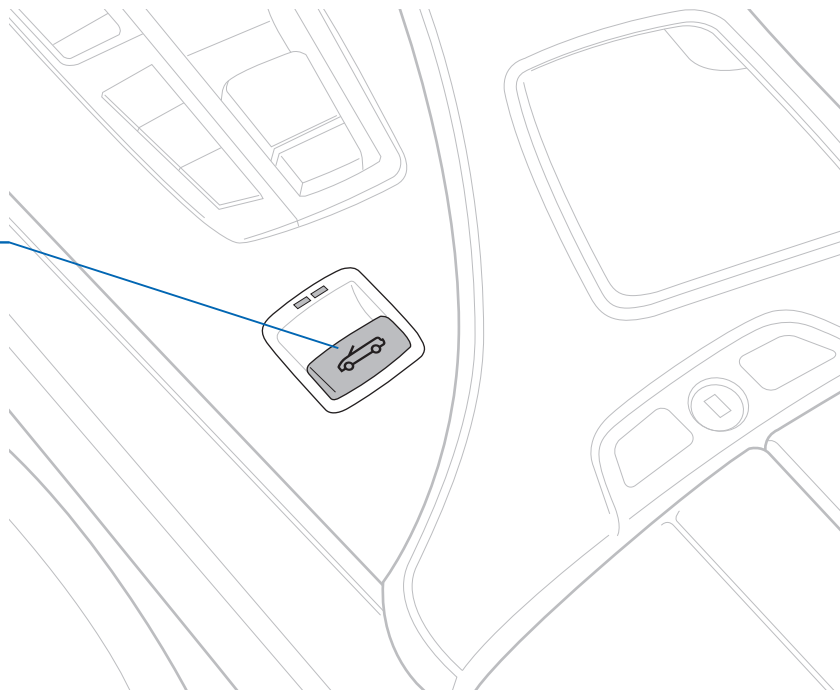



Backrest width*

Active seat*

Lumbar support*

Shoulder support*

Thigh support*


Forward/back

Height

Seat tilt*

Head restraint*

Backrest tilt

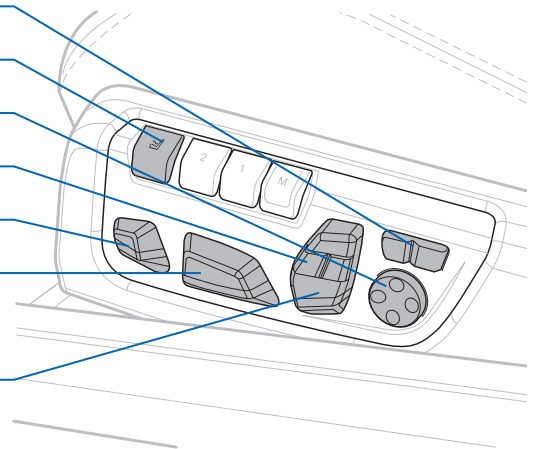

8 Seat, mirrors, and steering wheel

Mirrors


Mirror adjustment

Folding the mirrors in and out*

Mirror left/right, Automatic Curb Monitor*

To select the mirror: left/right.


Automatic Curb Monitor on: switch set to driver's side mirror.

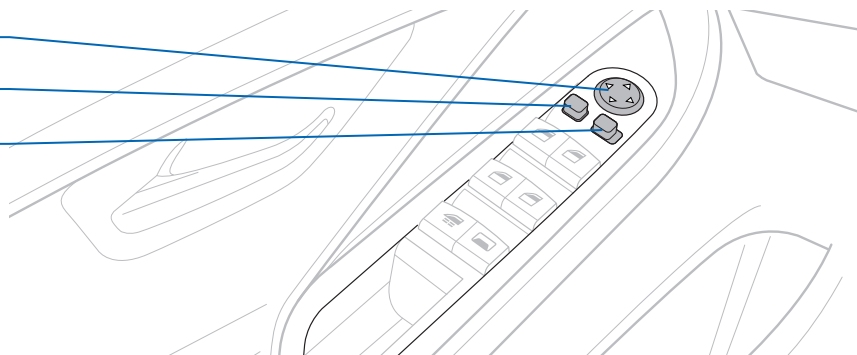

Seat, mirror, and steering wheel memory*

You can store and retrieve two different positions for the driver's seat, exterior mirrors, and steering wheel for each remote control used. The lumbar support setting is not stored.

1. Ignition on.
2. Set the seat, mirrors, and steering wheel.
3. Press the M button; the LED lights up.
4. Press memory button 1 or 2.

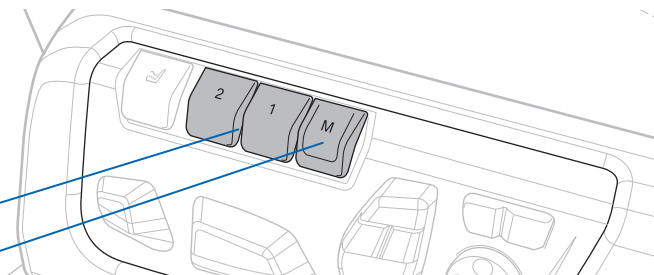


Memory buttons

M button

Steering wheel

Steering wheel adjustment

The steering wheel can be adjusted in four directions.

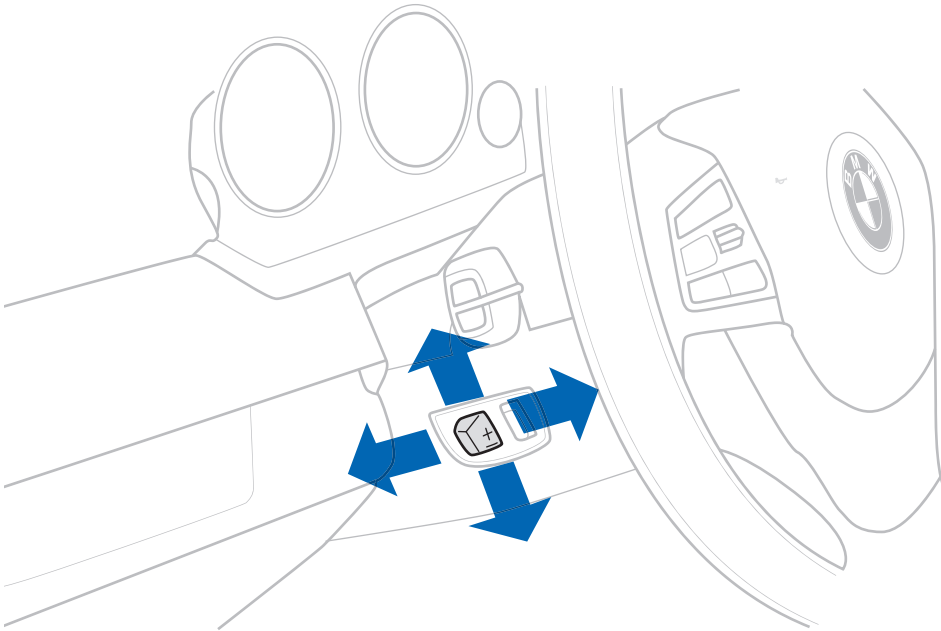

10 Seat, mirrors, and steering wheel


Integrated universal remote control*

Fixed-code hand-held transmitters

1. Switch on the ignition.
2. Press the two outer memory buttons 1 and 3 for approx. 20 seconds until the LED flashes.
3. Hold the hand-held transmitter 5 to 30 cm away from the memory buttons.
4. Simultaneously press the transmit button of the hand-held transmitter and the memory button of the integrated universal remote control – the LED flashes slowly.
5. Release both buttons when the LED flashes rapidly.

Alternating-code hand-held transmitters

1. Park the vehicle within range of the remote-controlled device.
2. Program the integrated universal remote control as described above under Fixed-code hand-held transmitters.
3. Press the button on the receiver of the device being set up. You have approx. 30 seconds for the next step.
4. Press the programmed memory button of the integrated universal remote control for approx. 3 seconds. Repeat this step up to three times if necessary.

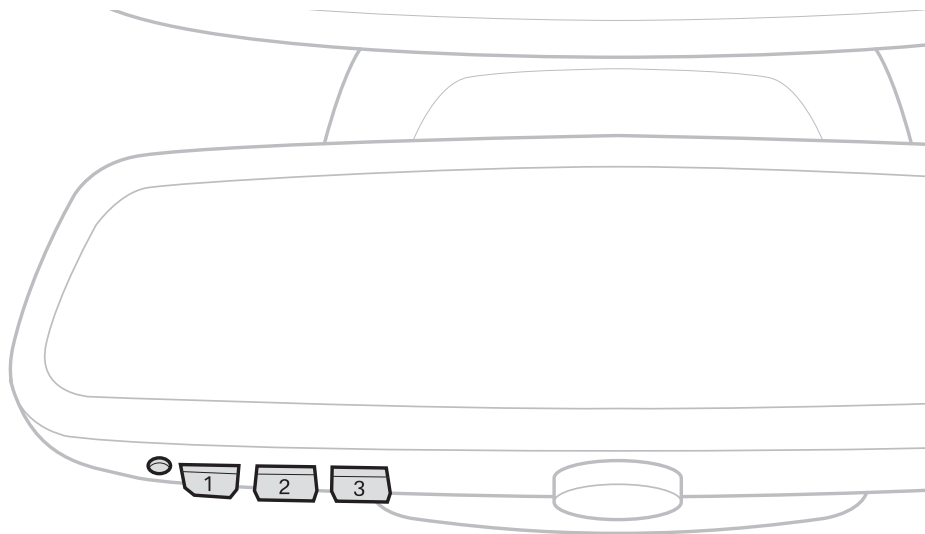

Note the additional information contained in the Owner's Manual for Vehicle.



LATCH child restraint fixing system

Before mounting the LATCH child restraint fixing system, pull the belt away from the child restraint fixing system.

Make sure that the lower LATCH anchors have properly engaged and that the child restraint fixing system is resting snugly against the backrest.

Firmly press the installation guide into the gap between the seat upholstery and backrest.

Continue to press until the two funnel-shaped guides snap into place in the LATCH support brackets. The installation guide can be removed simply by pulling.

Child restraint systems

To select, mount, and use child restraint systems, observe the information provided by the system manufacturer; otherwise, the protective effect can be impaired.

Refer to the following section in the Owner's Manual: transporting children safely.

12 Displays and controls

Around the steering wheel

Activating turn signals

Push the lever up or down beyond the resistance point.

Canceling turn signals

Push the lever as far as the pressure point.

Brief signaling/triple turn signal activation

Push the lever up or down to the pressure point.

High beams

Push the lever forward.

Computer

Press the upper button on the lever.


High-beam Assistant*

Press the lower button on the lever.

Headlamp flasher


Pull the lever.

Horn

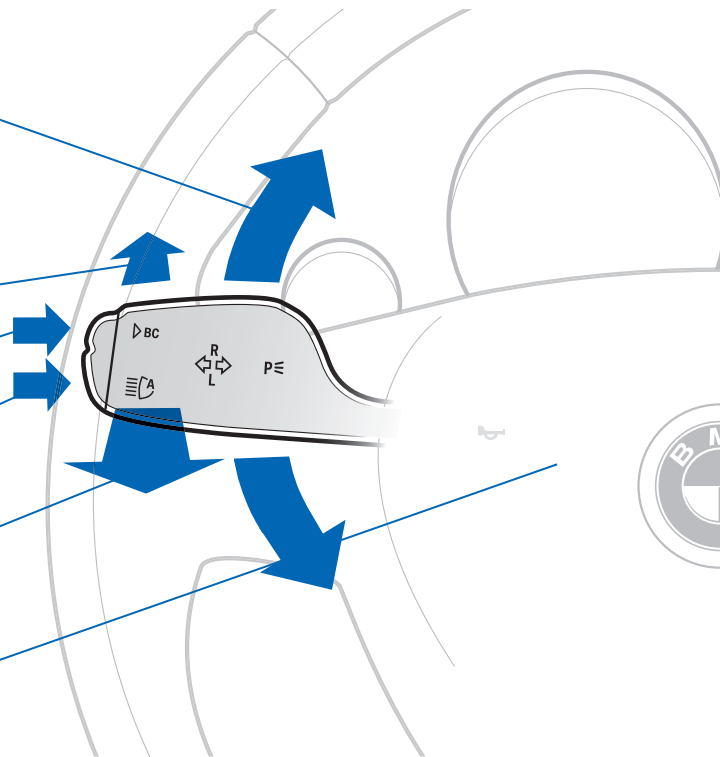

Displays and controls 13

Around the steering wheel

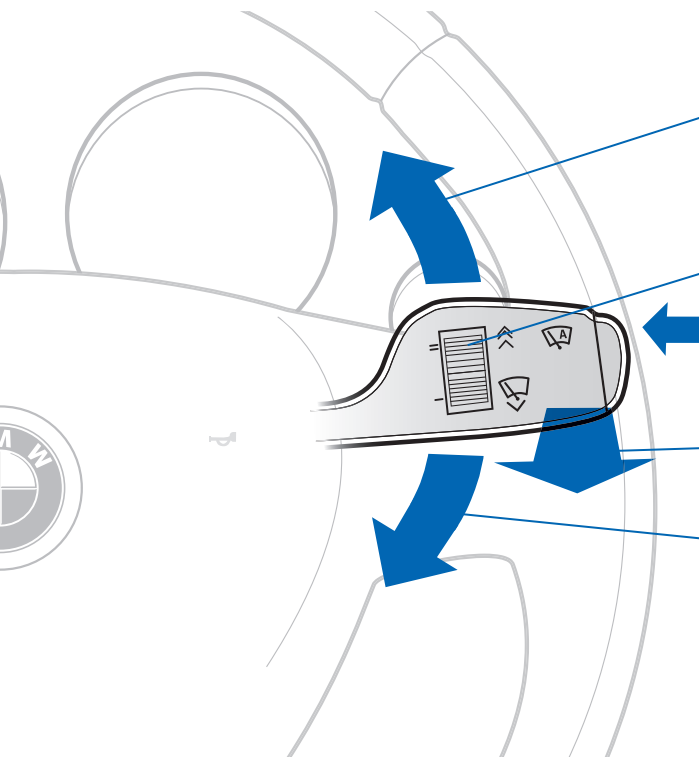

Switching on the wipers

Normal: press once.

Rapid: press twice.

Sensitivity of the rain sensor

Turn the thumbwheel.

Activating/deactivating the rain sensor

Press the button on the lever.

Cleaning the windshield and headlamps*

Pull the lever.

Switching off the wipers

From normal: press once.

From rapid: press twice.

Brief wipe

Press once.

14 Displays and controls

Around the center console

Control Display

Hazard warning flashers


Central locking

Entertainment

Automatic climate control

Selector lever or gearshift

Controller with buttons

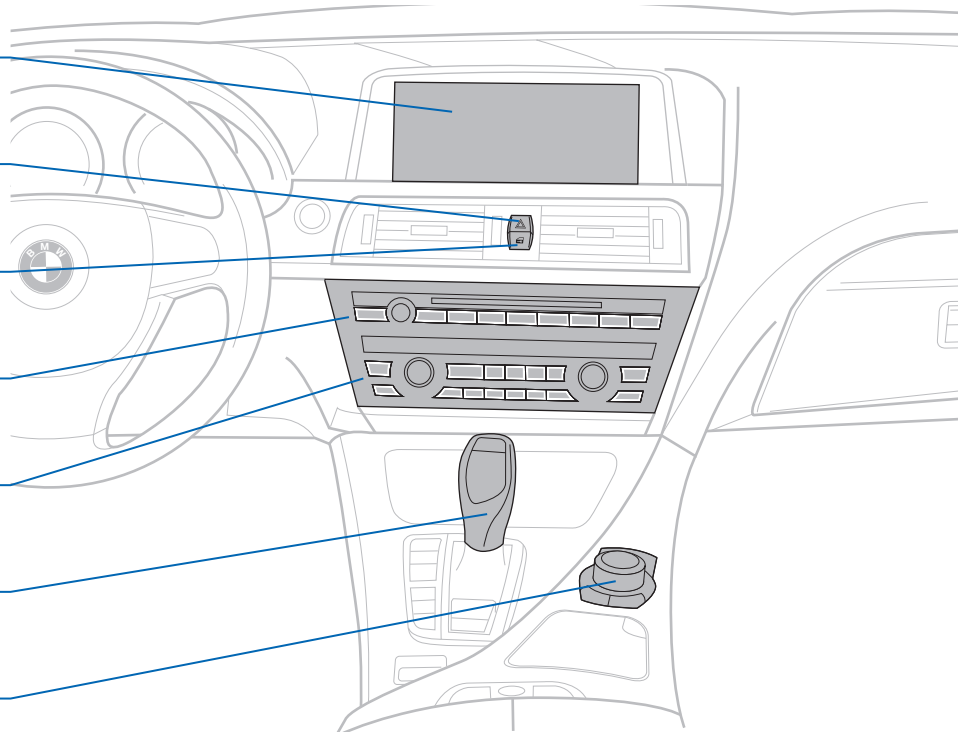

Displays and controls 15
Automatic climate control



16 Displays and controls

Automatic climate control

Air volume, AUTO intensity, residual heat

Temperature, left

Active seat ventilation*

Vent settings

AUTO program


Seat heating*

ALL program

Driver's settings are transferred to the passenger side.


Rear window defroster

Cooling function

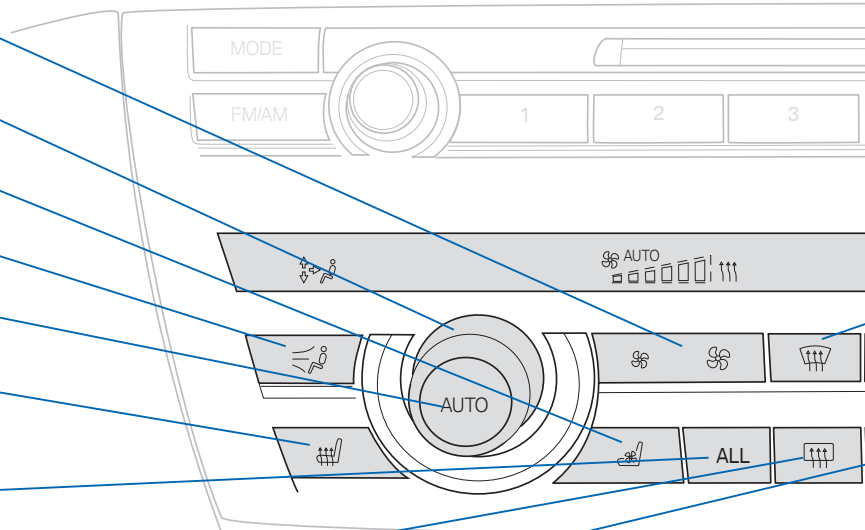

Displays and controls 17

Automatic climate control

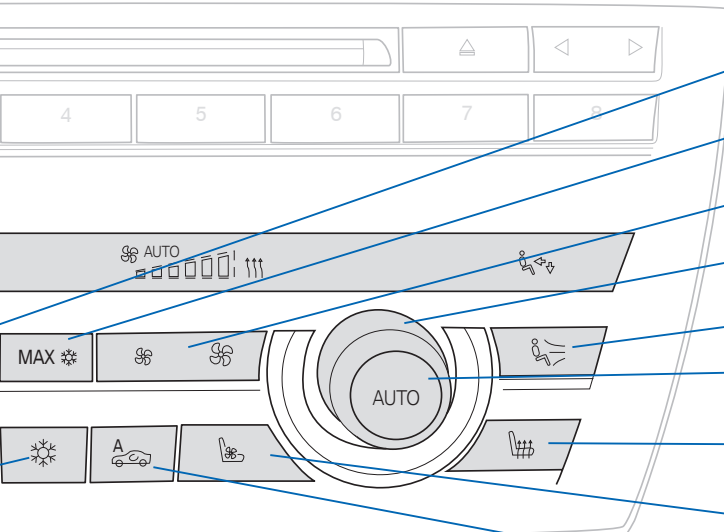

Defrosting windows, removing condensation

Maximum cooling

Air volume, AUTO intensity

Temperature, right

Vent settings

AUTO program

Seat heating*

Active seat ventilation*

Automatic recirculated-air control
Recirculated-air mode

18 Driving

Start/Stop button



START
STOP
ENGINE

Switching the ignition on/off

Press the Start/Stop button without depressing the brake pedal or the clutch.

Starting the engine

Press the Start/Stop button and depress the brake pedal and, if necessary, the clutch.

Engine off/radio ready state

Press the Start/Stop button while the engine is running.

Driving 19

Lamps

Lamps off
Daytime running lights*

Automatic headlamp control
Adaptive light control*
High-beam Assistant*
Welcome lamps
Daytime running lights*


Front fog lamps*

Rear fog lamps*

Parking lamps

Low beams
Welcome lamps
High-beam Assistant*

Instrument lighting

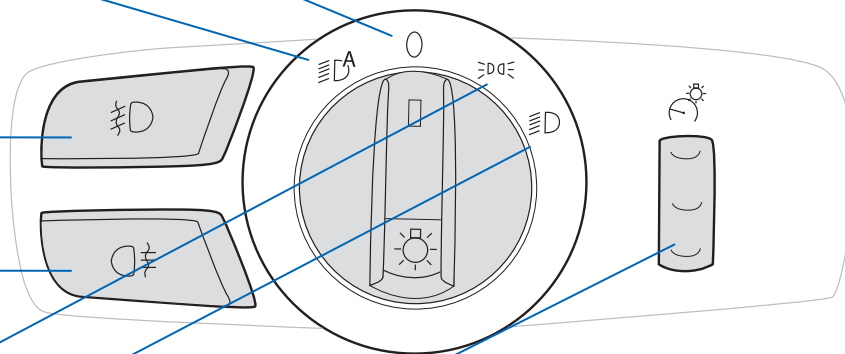

20 Driving

Automatic transmission*/parking brake

P button

Press the button to engage transmission position P.

Unlock button

To shift out of P or into R:


1. Depress the brake pedal while the engine is running.
2. Press the Unlock button.
3. Move the selector lever in the desired direction.

Applying the parking brake

Pull the switch; the LED lights up.

Releasing the parking brake

Press the switch with the brake pedal depressed or transmission position P engaged; the LED goes out.

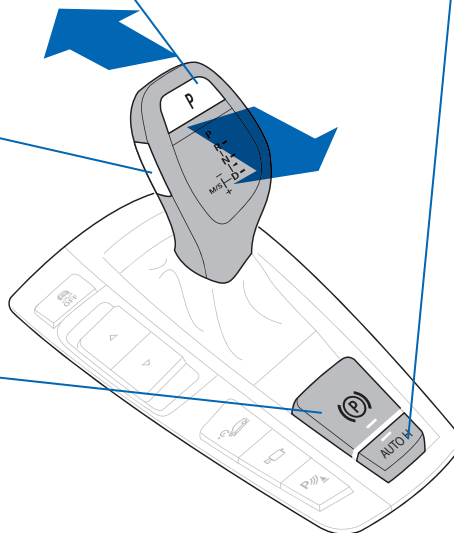

Automatic Hold

Automatic application and release of the parking brake, in stop-and-go traffic, for instance.

To activate Automatic Hold:

Press the button; the LED and AUTO H light up.

To deactivate Automatic Hold:

Press the button again; the LED and AUTO H go out.

Before driving into a car wash, do the following so that the vehicle can roll:

1. Depress the brake pedal.
2. Engage position N.
3. Release the parking brake.
4. Switch off the engine.

The vehicle can roll, provided that the ignition remains switched on.


Manual transmission/parking brake

Reverse gear

When the gearshift lever is pushed to the left, a slight resistance needs to be overcome.

5th/6th gear

Push the gearshift lever to the right.

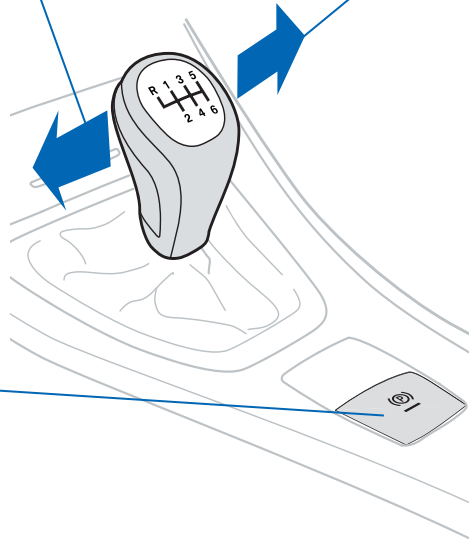

Applying the parking brake

Pull the switch; the LED lights up.

Releasing the parking brake

Press the switch with the brake pedal or clutch depressed; the LED goes out.

Before driving into a car wash, do the following so that the vehicle can roll:

1. Shift to neutral.
2. Release the parking brake.
3. Switch off the engine.
4. Switch on the ignition.

22 Driving

Driving stability control systems

Dynamic Stability Control DSC

DSC prevents traction loss in the driving wheels when driving away and accelerating. DSC also recognizes unstable vehicle conditions, such as fishtailing or nose-diving. Subject to physical limits, DSC helps to keep the vehicle on a steady course by reducing engine speed, and by applying brakes at individual wheels.

The program can be deactivated/activated using the Driving Experience Switch.

Dynamic Traction Control DTC

The DTC system with the TRACTION program is a variant of DSC that is optimized for forward momentum. The system ensures maximum forward momentum on special road conditions, such as unplowed snowy roads, but driving stability is limited.

The system and program can be deactivated/activated using the Driving Experience Switch.

Dynamic Damping Control*

This system reduces undesirable vehicle motion when using a dynamic driving style or traveling on uneven road surfaces.

The system enhances driving dynamics and comfort as required for the road surface and driving style.

Driving Experience Switch*


The Driving Experience Switch can be used to adjust the driving dynamics of the vehicle.

For this purpose, various programs are available for selection that are activated via the two buttons of the Driving Experience Switch and the DSC OFF button.

Operating the programs



DSC OFF
TRACTION

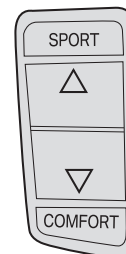

SPORT+
SPORT
COMFORT
COMFORT+*
ECO PRO*

Refer to the information in the Owner's Manual.

Radio/CD/Multimedia 23
Controls



24 Radio/CD/Multimedia

Controls


MODE

On/Off
Volume control

Changing entertainment sources


Radio
CD/DVD*
Music collection*
External audio devices

Changing the radio station waveband

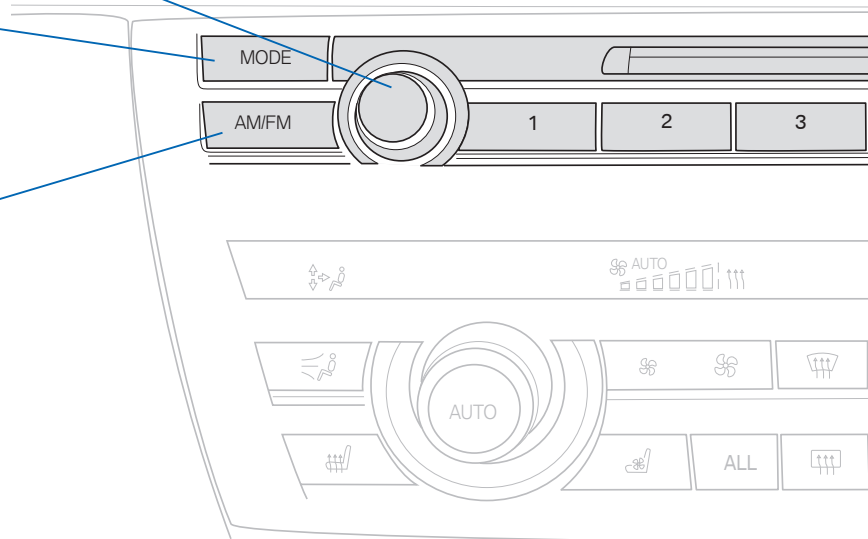


Radio/CD/Multimedia 25

Controls

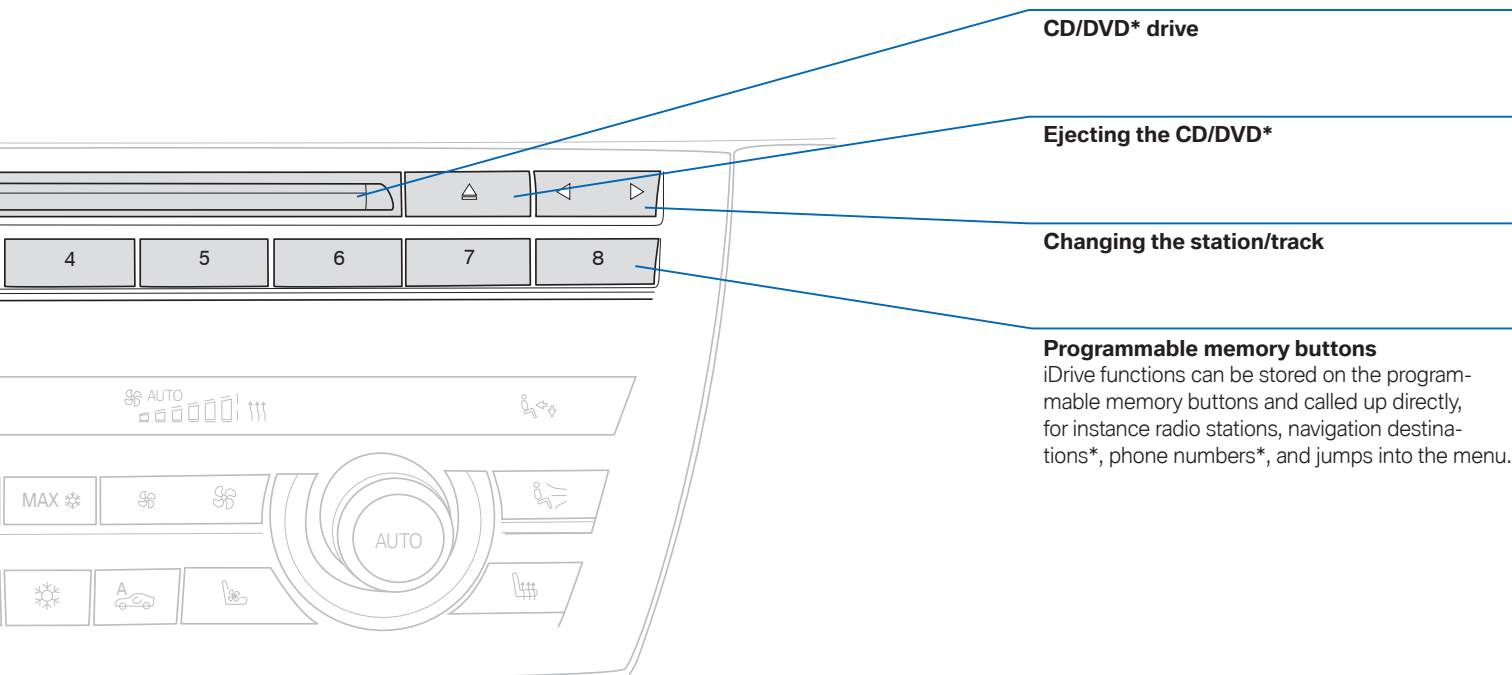


26 iDrive Controller

Controller with buttons

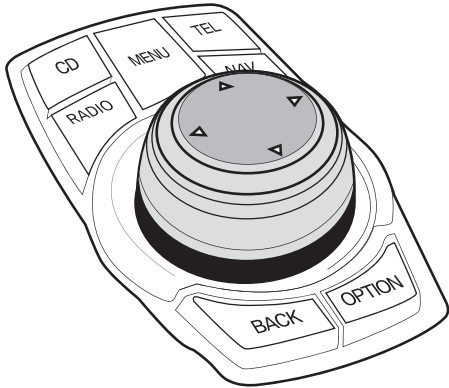


iDrive 27 Controller

Highlighting the menu item

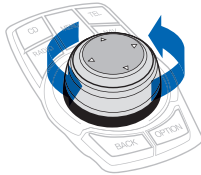


Turn the controller until the desired menu item is highlighted.

Opening the menu item



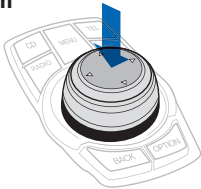


Press the controller.

Changing between panels

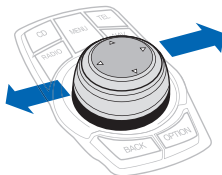


After a menu item such as "Radio" is selected, a new panel is displayed. Panels can overlap. Move the controller either to the left or the right. The panel changes.

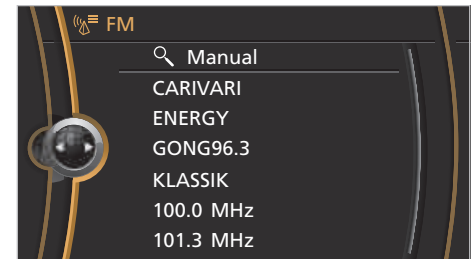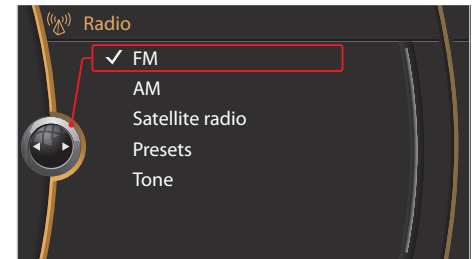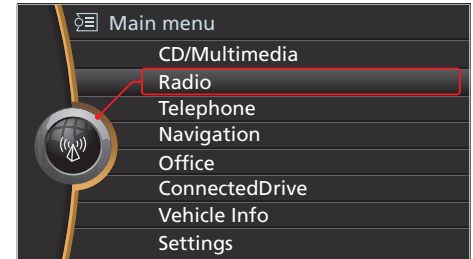

28 iDrive


Buttons on the controller

Opening the menus

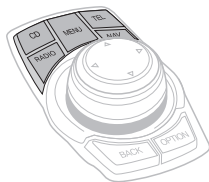

Press the button on the controller.

Opening the "Options" menu

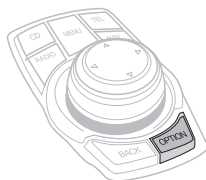


Press the OPTION button.

The "Options" menu consists of different areas:
Screen settings, for instance "Split screen"*.

This section remains unchanged. Operating
options for the selected main menu, such as
for "Radio".

If necessary, additional operating options for the
selected menu such as "Store station".


Calling up the previous view

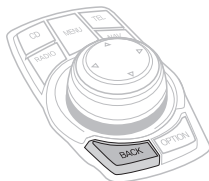

Press the BACK button.

Opens the display that was last shown on the
Control Display.

Programmable memory buttons

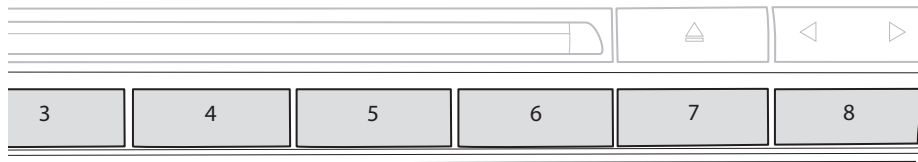

iDrive functions can be stored on the programmable memory buttons* and called up directly, for instance radio stations, navigation destinations*, phone numbers*, and jumps into the menu.

Without a navigation system, only radio stations can be stored on the buttons.

Saving a function


1. Highlight the function via the iDrive.
2. Press the desired button for longer than two seconds.

Executing a function

Press the button.

The function is executed immediately.

This means, for example, that the number is dialed when a phone number is selected.

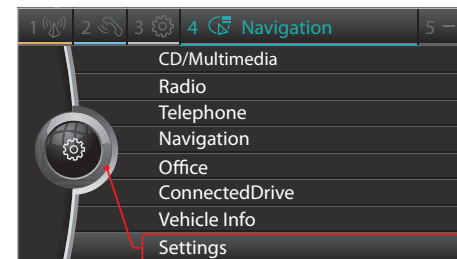

Displaying memory button assignments

Briefly touch the button.

The button assignment is displayed at the top edge of the screen.

To display short information: touch the button.

To display detailed information: touch the button for an extended period.

Tip


You can also save content from the Integrated Owner's Manual to the programmable memory buttons.

Tip

For easy access to the Getting Help features, you can save this function on the programmable memory buttons. In the "Options" menu, select "Display Owner's Manual" and save it to a programmable memory button.

30 iDrive

Split screen*/voice activation system*

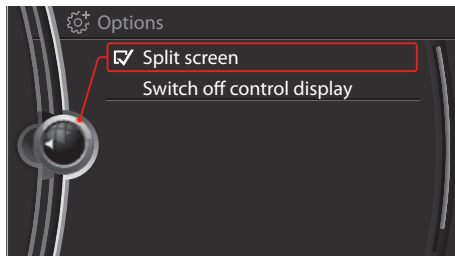


Split screen*

Additional information, such as information from the computer, can be displayed on the right side of the split screen. You can set which information is displayed.

Switching the split screen* on/off

1. Open "Options".
2. "Split screen"

The split screen is activated and the information remains displayed, even if another menu is selected.

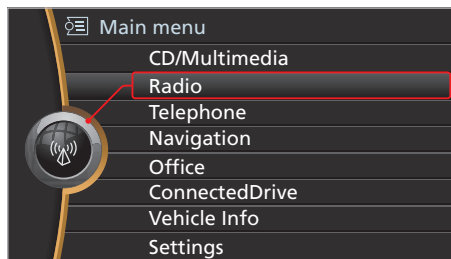


Voice activation system*

The voice activation system can be used to operate functions by means of spoken commands. Most menu items that are displayed on the Control Display may be voice-activated.

Example: opening the FM waveband

1. Press the button on the steering wheel.
2. Wait for the signal.
3. Say >Radio<.

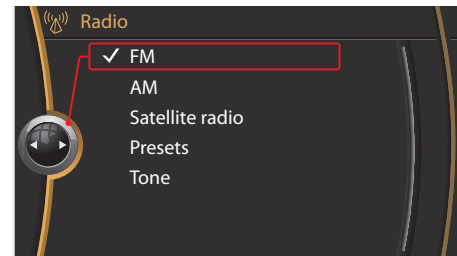

4. Say >F M<.

The list of available radio stations is displayed.

Having the possible commands read aloud


1. Press the button on the steering wheel.
2. Say >Voice commands<.

Tip

You can also call up the functions directly using so-called short commands, such as >Map perspective view<. To give these commands, speak without hesitation, loudly, and clearly. Avoid background noise such as that caused by open windows.

Integrated Owner's Manual 31

Operation via iDrive

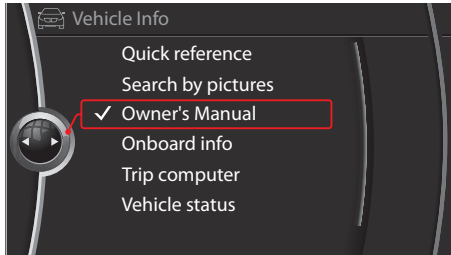


Integrated Owner's Manual

Your BMW 6 Series comes with an Integrated Owner's Manual, which contains all of the information necessary for you to make the best use of your vehicle. For your safety, the Integrated Owner's Manual is only displayed when the vehicle is stationary.

Searching for information


1. Open the main menu.
2. "Vehicle Info"
3. Select the desired function:
 - "Quick reference"
 - "Search by pictures"
 - "Owner's Manual"

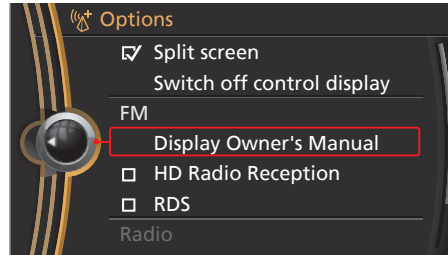

Getting help on selected menu items and screens

The Owner's Manual for the currently selected menu can be displayed.

1. Open "Options".
2. "Display Owner's Manual"

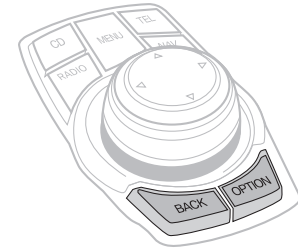

You can switch between the Integrated Owner's Manual and the currently selected menu by using the BACK and OPTION buttons. This is particularly helpful for functions with multiple operating steps.

Printed Owner's Manual




A printed Owner's Manual is contained in the vehicle document portfolio in the glove compartment or in the cargo area.

Tip

Complex principles are explained quickly via videos in the Integrated Owner's Manual.

32 Navigation*

Entering a destination

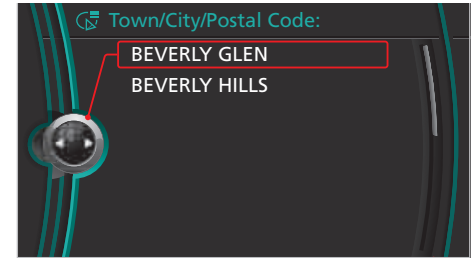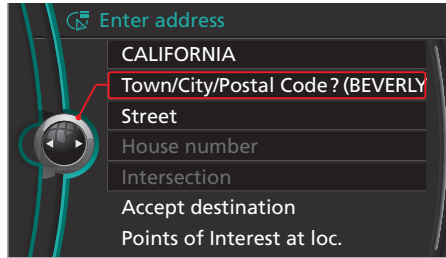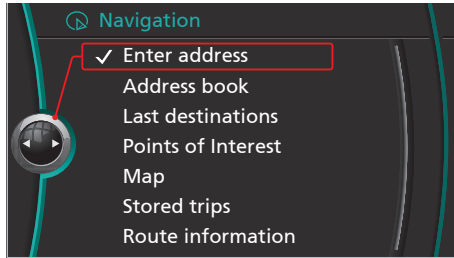

Entering a destination

1. "Navigation"
2. "Enter address"


3. Select "State/Province" or the displayed state or province.
4. Select "Town/City/Postal Code" or the displayed town/city/postal code.
5. Select the letters individually. The list grows smaller each time you enter a new letter.

6. Move the controller to the right and select a town/city from the list.
7. Enter a street in the same way that you entered the town/city.
8. If desired, select the building number or intersection.
9. "Accept destination"
10. "Start guidance"

Tip

You can also enter a destination using the voice activation system*. Town/city, street, and building number can also be spoken in one command*.


Points of interest/map view

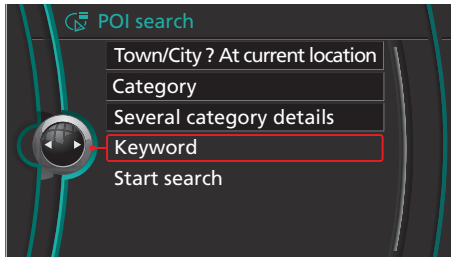**Points of interest**

To select points of interest, e.g., hotels or tourist attractions:

1. "Navigation"
2. "Points of Interest"
3. Select the type of search, for instance "A-Z search".
4. Specify the "Town/City", "Category" and, if necessary, "Category details" and "Keyword".

A list of the points of interest is displayed.

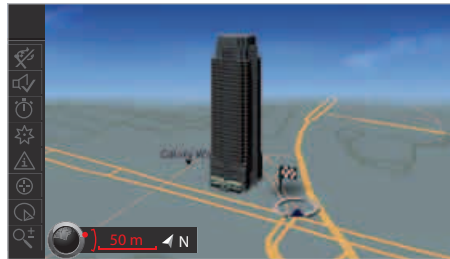**Map view**

Several types of map views may be displayed, such as a perspective view in 3D.


1. "Navigation"
2. "Map"
3. Open "Options".
4. "Settings"
5. "Perspective view in 3D"

Changing the scale

1. If necessary, move the controller to the right to change the map view.
2.  Select the symbol.
3. Turn the controller.

34 Entertainment

Tone/radio stations

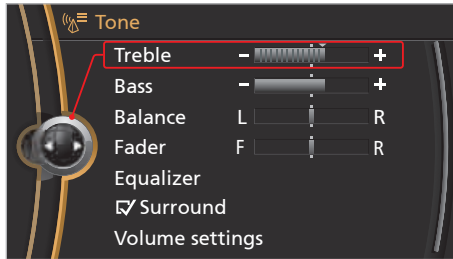


Adjusting the tone

1. "CD/Multimedia", "Radio" or "Settings"
2. "Tone"
3. Select the desired tone settings.
4. To adjust: turn the controller.
5. To store: press the controller.



Selecting a radio station

1. "Radio"
2. "FM" or "AM"

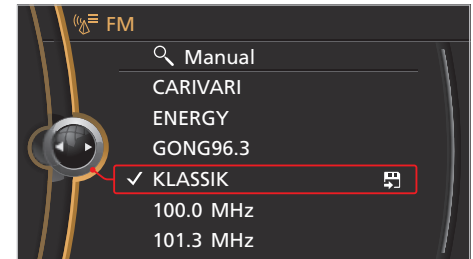

3. Select the desired station.

Tip

You can store your favorite radio stations on the programmable memory buttons 1-8. Use the iDrive to select the radio station and hold the desired memory button down for several seconds.

Entertainment 35

Music collection*




Storing music

Music tracks from CDs/DVDs* and USB media may be stored in a music collection in the vehicle.

1. Insert the CD/DVD* into the CD/DVD* drive.
2. "CD/Multimedia"
3. "CD/DVD"
4.  Select the symbol for the CD/DVD drive.

Tip

Music can be stored via the CD/DVD drive and compressed audio files can be stored via the USB interface in the glove compartment. Additional information can be found in the Owner's Manual for Vehicle.

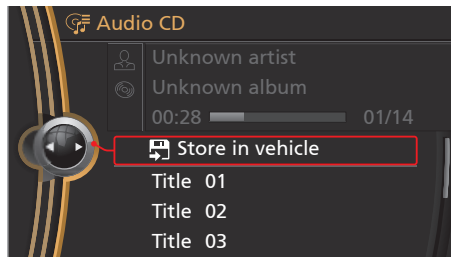

5. "Store in vehicle"

The music collection is displayed.

The tracks are stored and played in sequence from the music collection.

Observe the following during the storage process:



Do not switch to the CD/DVD drive and do not remove the CD/DVD from the CD/DVD drive as this will interrupt the storage process.

Tip

While storing, you can switch to audio sources other than the CD/DVD drive without interrupting the storage process. Tracks from the current CD/DVD that have already been stored can be called up.

36 Communication

Mobile phone pairing*

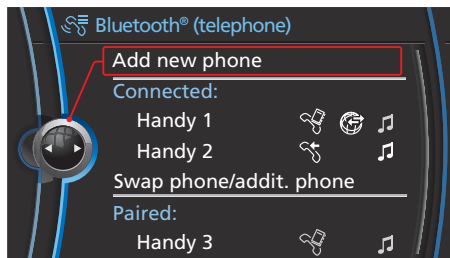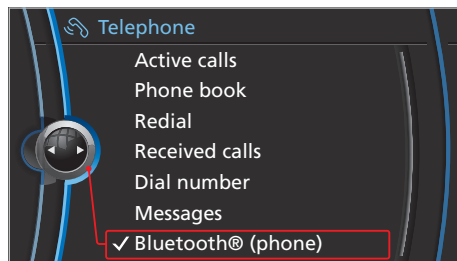

Pairing the mobile phone with the vehicle*

1. Switch on the ignition.
2. Activate Bluetooth on the vehicle and the mobile phone.
3. If necessary, adjust the mobile phone according to the Bluetooth presets, e.g., connection not visible, neither with confirmation nor on the mobile phone.
4. Think of a 4 to 16-digit passkey in order to enter it later. The passkey is only required once for the pairing procedure.
5. "Telephone"
6. "Bluetooth® (phone)"
7. "Add new phone"
The Bluetooth name of the vehicle appears on the Control Display.
8. Use the mobile phone to search for Bluetooth devices; check your mobile phone's operating instructions. The Bluetooth name of the vehicle also appears on the mobile phone display.
9. Select the Bluetooth name of the vehicle on the mobile phone.
The mobile phone's display or the iDrive will prompt you to enter the Bluetooth passkey.

10. Enter the passkey on the mobile phone and via the iDrive.


Tip

Please ask your BMW center which mobile phones with Bluetooth interface are supported by the mobile phone preparation package.

You can obtain additional information on the Internet at: www.bmwusa.com/bluetooth

Communication 37

Using the phone*

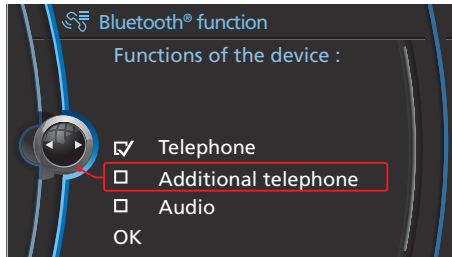

11. Select at least one function for which the mobile phone will be used.

12. "OK"

If pairing was successful, the mobile phone appears on the mobile phone list.




Dialing a number*

1. "Telephone"
2. "Dial number"
3. Select the digits individually.
4.  Select the symbol to establish the call.

Accepting a call*

-  Press the button on the steering wheel.

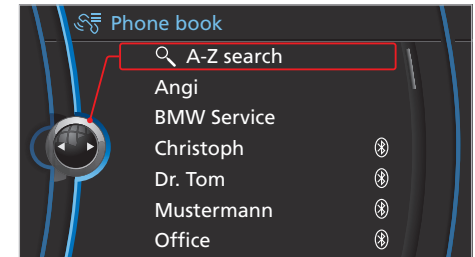

Dialing from the phone book*


1. "Telephone"
2. "Phone book"
3. Select the desired entry.

Tip

Up to four mobile phones can be connected to the vehicle and used as a telephone, additional telephone, or audio player. Additional information can be found in the Owner's Manual for Vehicle.

38 Refueling

Refueling/oil level

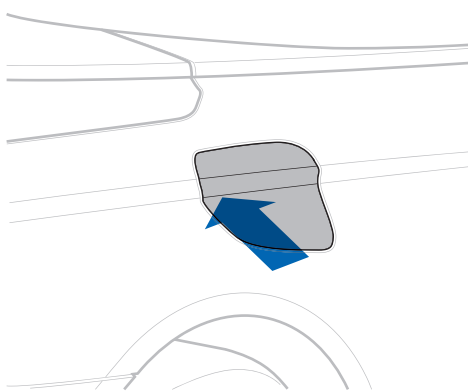

Refueling

To open the fuel filler flap:
Lightly press the rear edge.

Fuel quality

Lead-free gasoline without metal additives:
BMW recommends using super premium
gasoline/AKI 91.
Minimum grade: AKI 89.

Electronic engine oil level check

The oil level is monitored electronically and
shown on the Control Display.

1. "Vehicle Info"
2. "Vehicle status"
3. "Engine oil level"

For recommended oil grades, refer to the
Owner's Manual.

Note the additional information contained in
the Owner's Manual for Vehicle.

Flat Tire Monitor FTM*

The system detects a pressure loss in a tire by comparing the rotational speeds of the individual wheels while moving.

The system must have been initialized while the tire inflation pressure was correct; otherwise, reliable signaling of a flat tire is not ensured.

1. "Vehicle Info"
2. "Vehicle status"
3.  "Reset"
4. Start the engine - do not drive away.
5. Start the initialization with "Reset".
6. Drive away.


The FTM is not a substitute for carrying out tire pressure checks.

Tire Pressure Monitor TPM*

The tire inflation pressure is measured in the four mounted tires. The system notifies you if there is a significant loss of pressure in one or more tires.

The system must have been reset while the inflation pressure was correct; otherwise, reliable signaling of a flat tire is not ensured.

1. "Vehicle Info"
2. "Vehicle status"
3.  "Reset"
4. Start the engine - do not drive away.
5. Reset the tire pressure using "Reset".
6. Drive away.

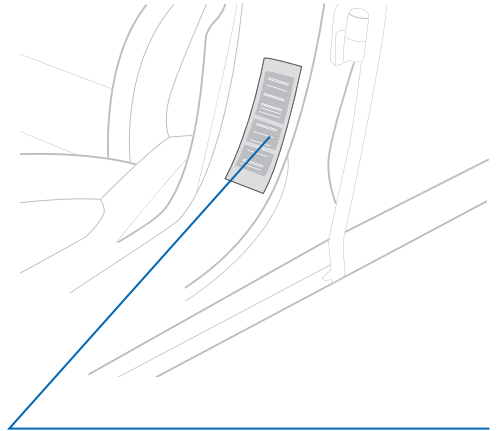

Tire pressure

The pressure values for approved tire sizes and speeds up to 100 mph/160 km/h can be found on the driver's door pillar.

If the tire's speed rating code is not listed, use the tire pressure for the corresponding size, e.g., 245/45 R18.


Check the tire pressure twice a month and reinitialize the FTM/TPM after adjusting the tire pressure and after changing a tire or wheel.

40 Giving and receiving assistance

Warning triangle*, first aid kit*


Warning triangle*, Convertible

The warning triangle is located under a cover on the left side of the cargo area. Press against the lower edge of the cover and remove it.

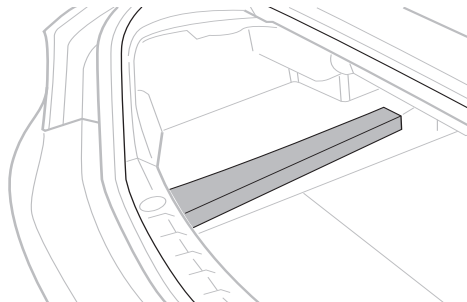


Warning triangle*, Coupe

The warning triangle is located on the inside of the trunk lid. Release the holders to remove it.

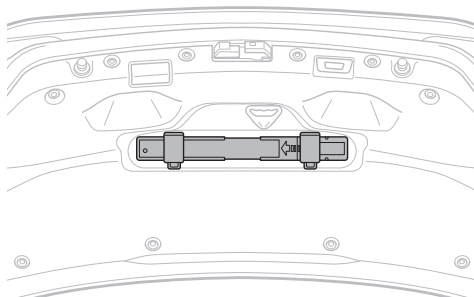

First aid kit*, Convertible/Coupe

The first aid kit is located in the insert in the rear seat backrest. Pull the release and remove the insert toward the front.

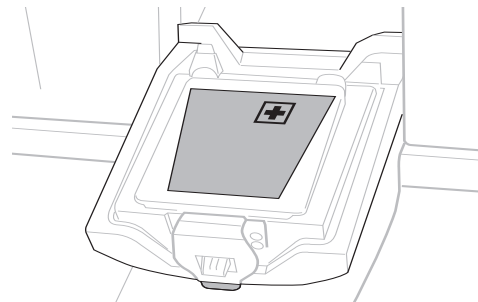



Socket for Onboard Diagnostics OBD

There is an OBD socket on the driver's side for checking the primary components in the vehicle emissions.

SERVICE
ENGINE
SOON

Emissions


 
The warning lamp lights up:
Emissions are deteriorating.
Have the vehicle checked as
soon as possible.

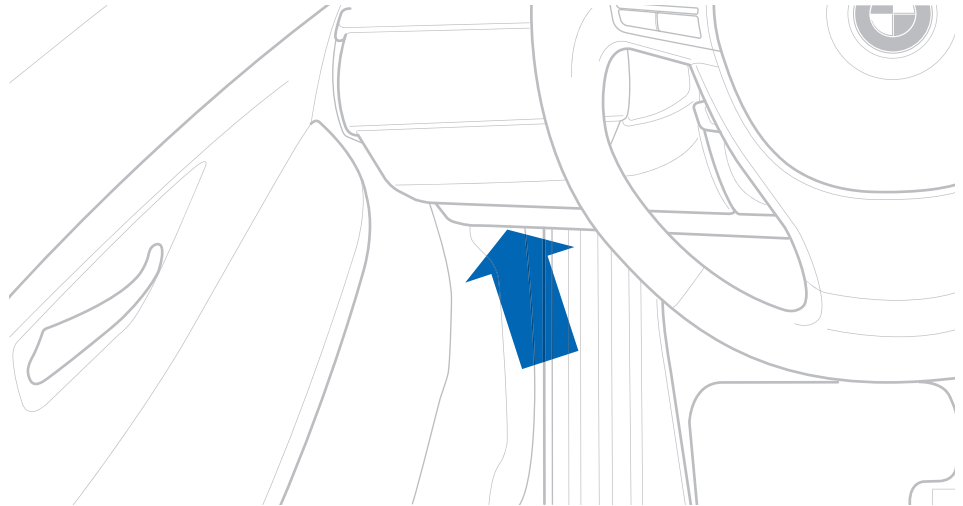

Note the additional information contained in
the Owner's Manual for Vehicle.

42 24/7 Access

BMW Assist™ and Bluetooth® system

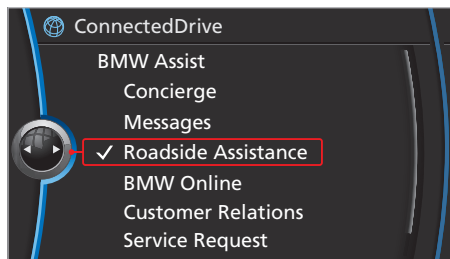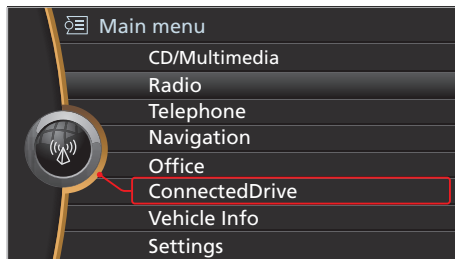

BMW Assist Safety Plan*

Combining GPS location technology with hands-free wireless communication, BMW Assist connects you with a trained response specialist 24/7 to help you with almost everything while on the road.

The BMW Assist Safety Plan provides:

- Automatic Collision Notification
- Emergency Request (SOS)
- Enhanced Roadside Assistance
- Stolen Vehicle Recovery
- My Info*
- Remote Door Unlock
- TeleService
- Customer Relations

Easy Access

To initiate the services, just go to "BMW Assist" in the main menu and select the desired service, or push the SOS button on the overhead console.

What you need to do

You must complete, sign, and submit a subscriber agreement with your salesperson. To decline services, you must complete, sign, and submit a "Waiver and Release" document. If neither action is taken, your BMW Assist services will be remotely deactivated approximately 60 days after you take delivery of your new vehicle.

Bluetooth hands-free calling

The BMW Assist system includes Bluetooth hands-free calling capability with speech recognition. See page 36 or visit www.bmwusa.com/bluetooth for BMW approved handsets and pairing instructions.

Tip

You may even prepare some services offered by BMW Assist in the comfort of your home and send them to your vehicle via the Internet.

Tip

Upgrade to our optional Convenience Plan to receive directions, traffic, and weather information, Critical Calling, Concierge services, online access to the Google Maps™ database, news headlines, up-to-date fuel prices, and stock indices in your BMW 6 Series with BMW Search. Push the SOS button, call toll-free 1-888-333-6118, or log on to www.bmwassist.com to learn more.



BMW Roadside Assistance

Can be contacted if assistance is needed in the event of a breakdown.

Telephone

USA: (800) 332-4BMW (4269)

Canada: 1-800-267-8269

If possible, the vehicle and position data are transmitted in the process.

Towing

The only method approved for transporting vehicles with automatic transmission is to use a commercial flatbed carrier truck and to secure the vehicle to the flatbed truck with four nylon wheel straps.

When pulling the vehicle onto a flatbed carrier truck, only use the screw-in tow fitting found in the tool kit.

Refer to the detailed towing instructions in the Owner's Manual.

44 Appendix

Any updates to the Owner's Manual for Vehicle can be found here.

More about BMW

bmwusa.com
www.bmw.ca



**The Ultimate
Driving Machine®**

© 2011 Bayerische Motoren Werke

Aktiengesellschaft

Munich, Germany

Reprinting, including excerpts, only with the
written consent of BMW AG, Munich.

Order No. 01 40 2 608 698

US English VI/11

Printed on environmentally friendly paper,
bleached without chlorine, suitable for recycling.

