

Quick reference guide
for the vehicle

BMW X5 M
BMW X6 M



The Ultimate
Driving Machine®



At a glance. The main functions of your BMW X5 M/BMW X6 M.

Contents

Your BMW X5 M / BMW X6 M in brief.

Welcome on board

Your BMW X5 M / BMW X6 M offers a wide range of equipment to make driving an enjoyable experience.

This Quick Reference Guide provides an initial overview. It contains information to enable you to become familiar with the basic functions of your BMW X5 M / BMW X6 M.

For your safety and the safety of others, please read the detailed Owner's Manual.

You will find additional information in other brochures in the vehicle.

BMW hopes you get off to a good start and that you enjoy your BMW X5 M/BMW X6 M.

- 4 Opening and closing
- 6 Seat and mirrors
- 9 Displays and controls
- 17 Safety
- 18 Driving
- 25 Technology
- 26 Radio/CD/Multimedia
- 28 iDrive
- 32 Navigation
- 34 Entertainment
- 36 Communication
- 38 Refueling
- 40 Service and Maintenance
- 42 24/7 Access
- 44 Helping and receiving assistance
- 45 Appendix

* Optional extras or country-specific items

Some illustrations show country-specific items or optional extras.





4 Opening and closing Remote control



Open

Unlocks the entire vehicle.

Close


Locks the entire vehicle.

Unlocking the tailgate

Automatic operation of the tailgate*:
Press the button longer and the tailgate opens.

Panic Mode*

Press for at least three seconds.
Press any button to cancel.

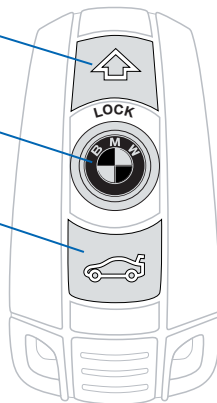

Convenient opening

Press and hold the Open button to open the windows and the glass sunroof* after unlocking.

Opening and closing 5 Personal Profile and Comfort Access*

Personal Profile

Some of the vehicle's functions can be individually tailored and stored for several remote controls.

Different settings are retrieved and implemented in the vehicle, depending on the remote control that is detected when unlocking the vehicle.

Keyless driving pleasure*


The Comfort Access system allows you to gain access to the vehicle and start the engine without holding the remote control. The remote control is automatically detected in the immediate vicinity of or inside the vehicle.

Open

Take a firm hold of the door handle.

Close

Touch the panel with your finger for approx. one second.

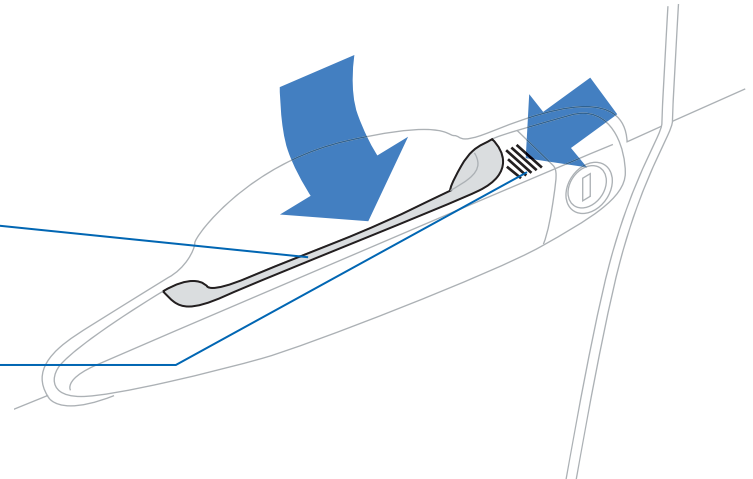

6 Seat and mirrors

Mirror adjustment






Mirror adjustment

Folding mirror in and out

Mirror left/right, Automatic Curb Monitor

Select mirror: left/right.

Automatic Curb Monitor on: switch in the driver's mirror position.

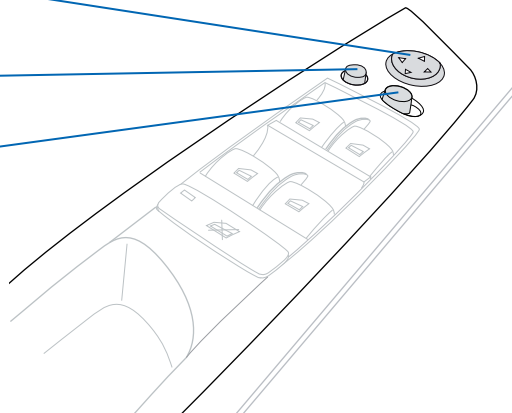

8 Seat and mirrors

Electric seat

MEMORY button

Memory buttons

Headrest/backrest angle

Shoulder support*

Backrest width*

Lumbar support*

Thigh support


Forward/back, height, seat tilt

Thigh support*

Seat and mirror memory


You can store two different driver's seat and exterior mirror positions per remote control in use.

1. Radio readiness or ignition on.
2. Adjust the seat and mirrors.
3. Press the MEMORY button; the LED lights up.
4. Press memory button 1 or 2.

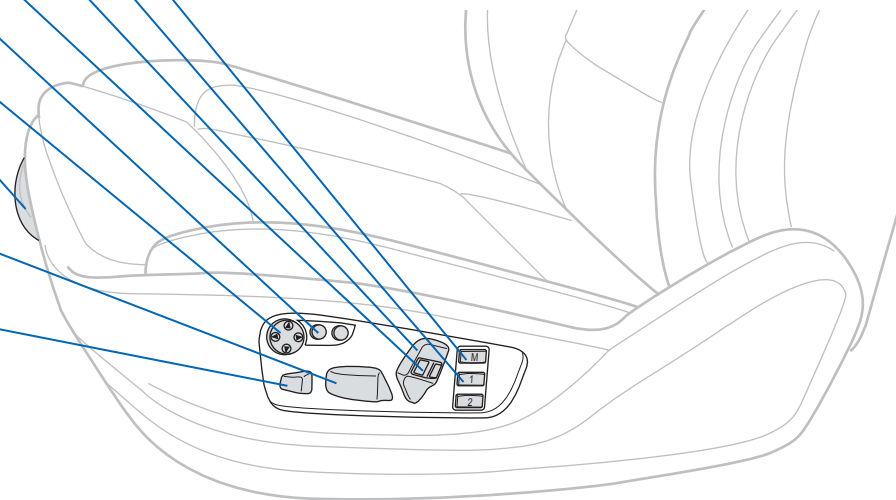

Displays and controls 9

Around the steering wheel

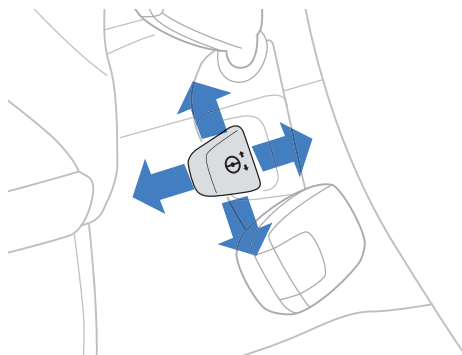

Electric steering wheel adjustment

The steering wheel can be adjusted in four directions.

10 Displays and controls

Around the steering wheel

Activating turn signals

Push the lever up or down past the pressure point.

Canceling turn signals

Push the lever to the point of resistance.

Signaling briefly/one-touch indicating

Push the lever up or down to the pressure point.

High beams

Push the lever forward.


Onboard computer

Press the button on the wiper lever.

Headlamp flasher


Pull the lever.

Horn

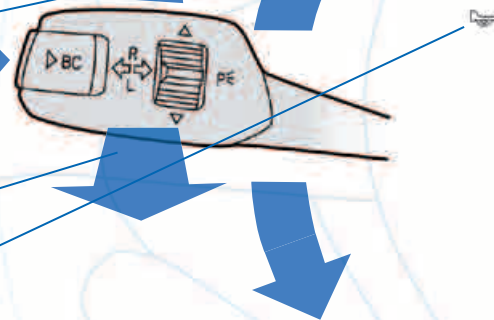


Displays and controls 11

Around the steering wheel

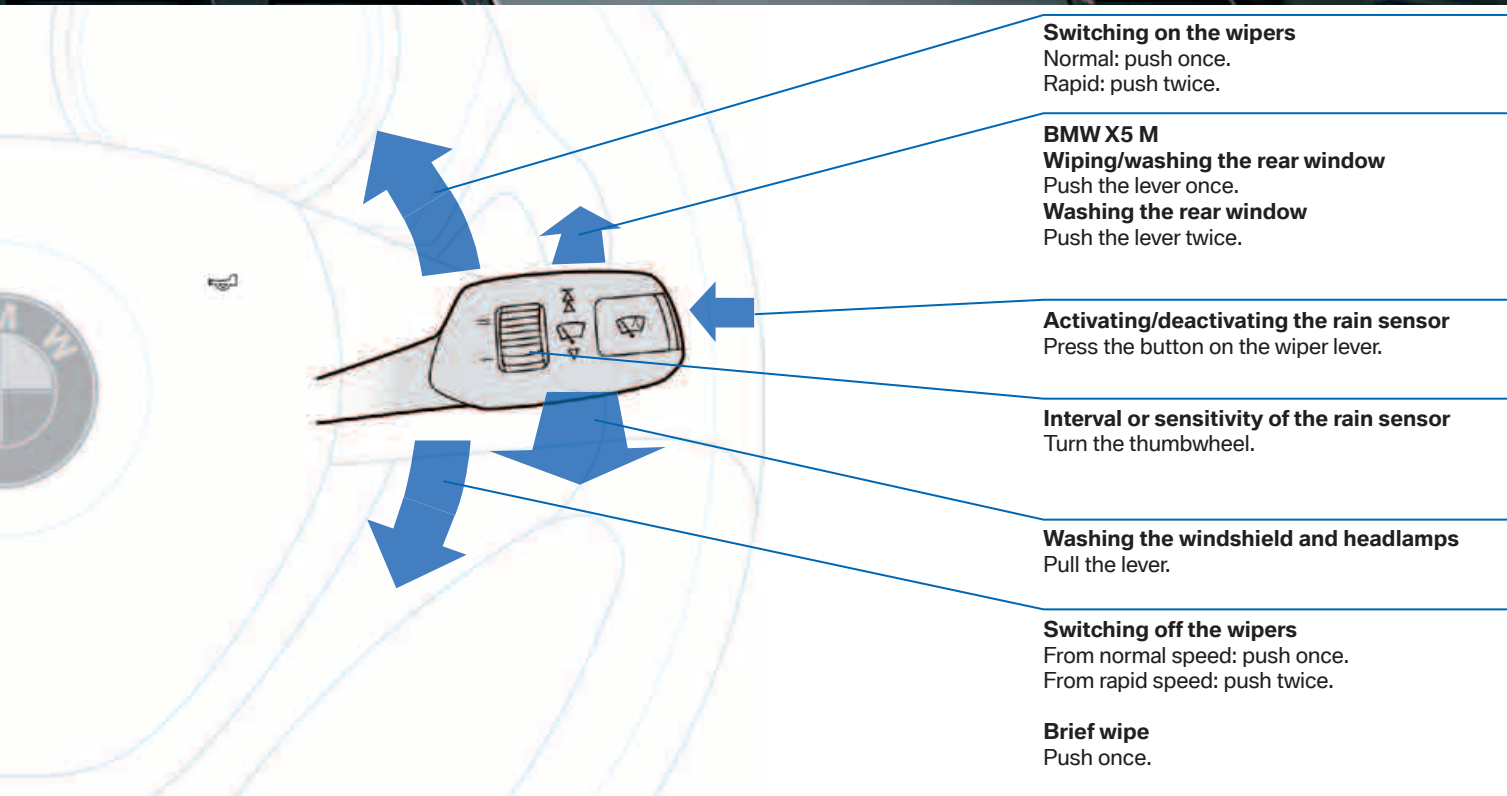

12 Displays and controls

Around the center console

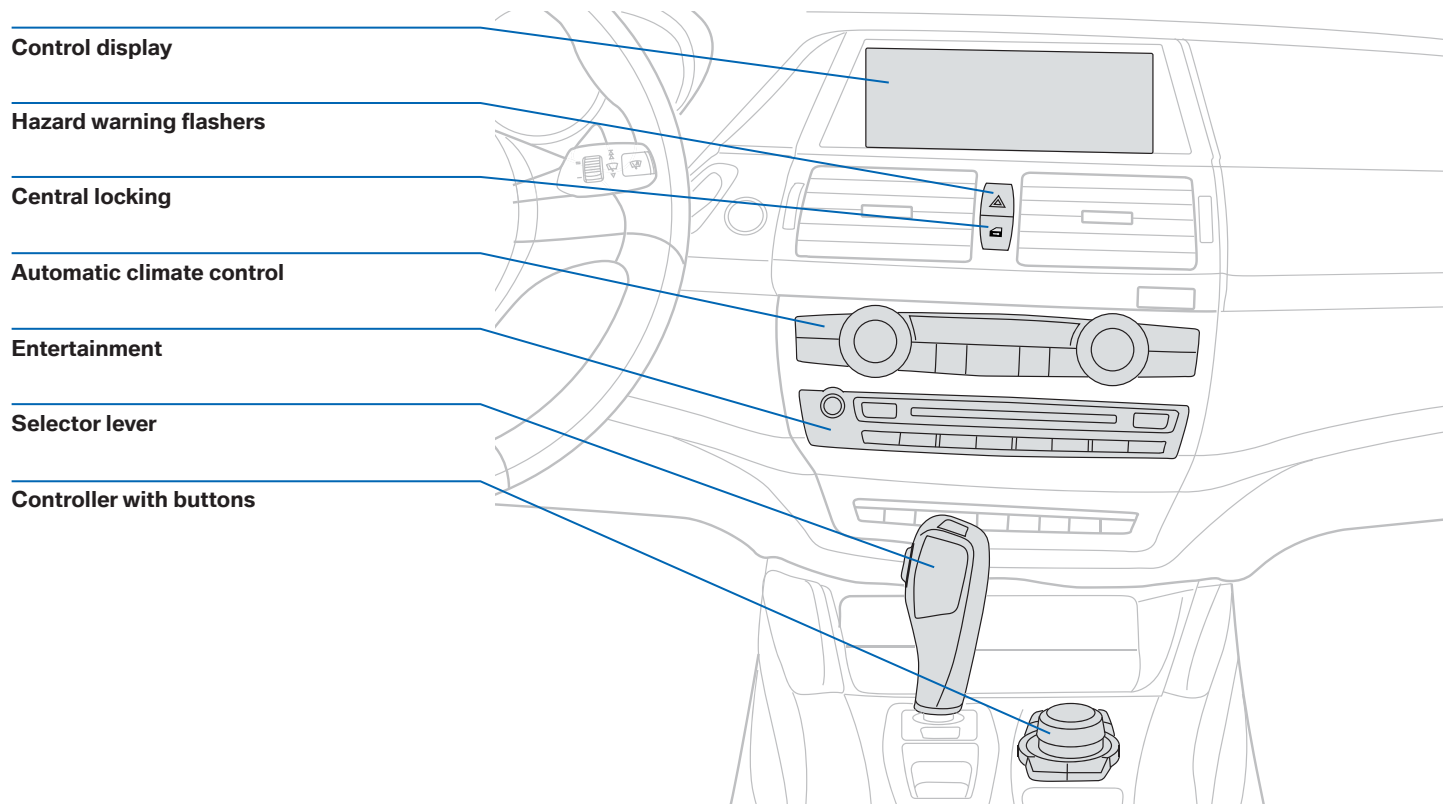

Displays and controls 13

Buttons in the center console

Dynamic Stability Control DSC
M Dynamic Mode

Park Distance Control PDC
Rear view camera with Top View*

Active seat*



Hill Descent Control HDC

Unlocking/opening the tailgate*

Side View*

14 Displays and controls

Automatic climate control with 2 adjustable zones

Change the direction of the airflow

Rear window defroster


Defrost windows, remove condensation

Temperature, driver's side


AUTO program

Seat heating and ventilation*, driver's side

Air distribution, driver's side

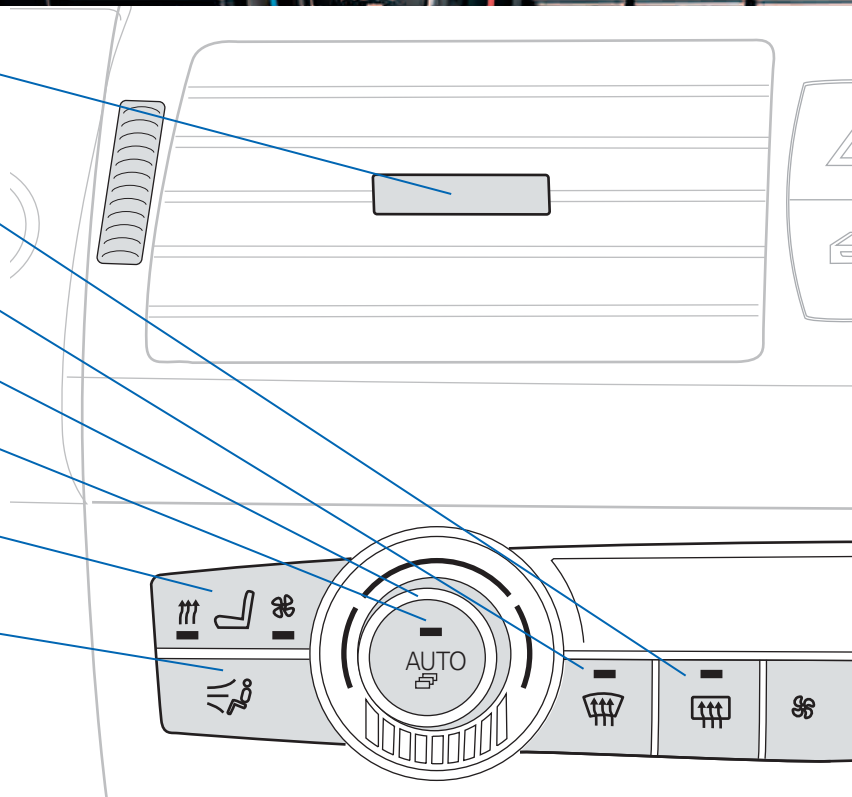

Automatic climate control with 2 adjustable zones

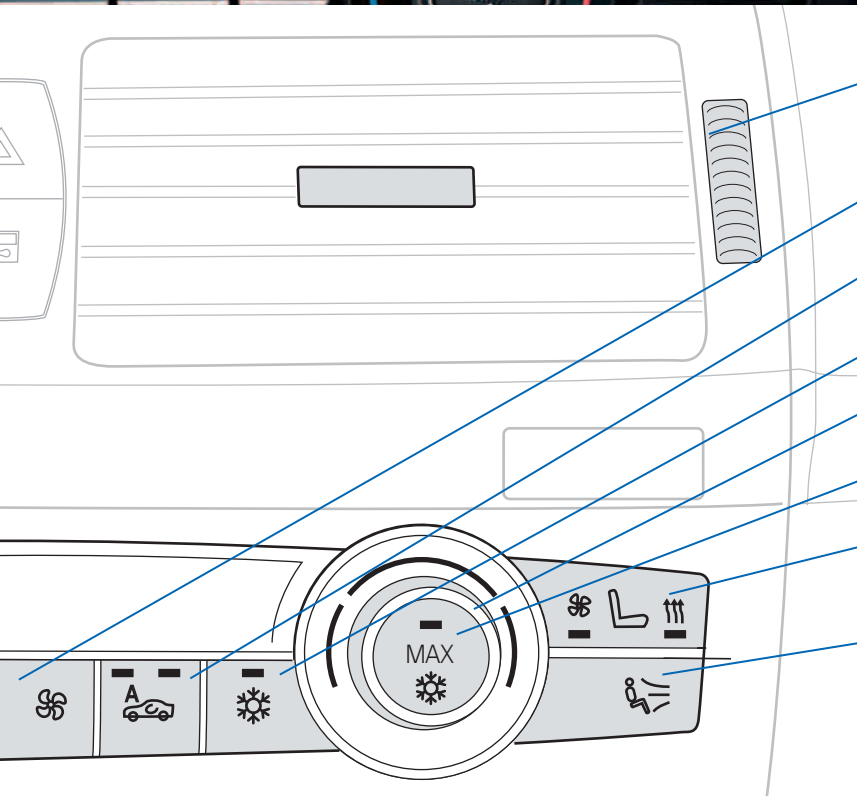

Open and close the air vents

Blower fan speed, automatic climate control off, residual heat

**Automatic recirculated-air control
Recirculated-air mode**

Air conditioner

Temperature, passenger side

Maximum cooling

Seat heating and ventilation*, passenger side


Air distribution, passenger side

16 Displays and controls

Garage door opener

Garage door opener


1. The ignition is on.
2. Press both outer buttons, 1 and 3, for approx. 20 seconds until the LED flashes.
3. Hold the hand-held transmitter a distance of approx. 2 to 8 in/5 to 20 cm away from the memory buttons.
4. Simultaneously press the transmit button of the hand-held transmitter and the memory button of the universal remote control.
5. Release both buttons when the LED flashes rapidly.

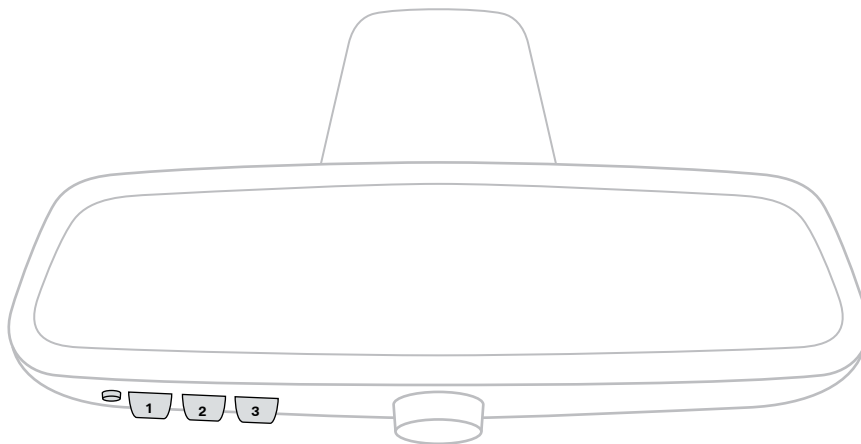

Refer to the following section in the Owner's Manual: Integrated universal remote control.

Securing rear doors and windows

Move the lever in the rear doors to its downward position. The door can only be opened from the outside.

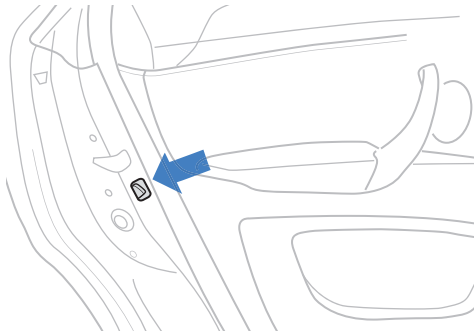

Child safety lock for rear side windows

Press the child safety lock

for the rear side windows on the driver's side door when children are riding in the back. The LED lights up: operation of the rear windows is disabled.

Child restraint system

Please observe the manufacturer's instructions of the child restraint systems concerning the selection, mounting and use of these systems; otherwise, the child's safety may be compromised.

LATCH child restraint fixing system

Before mounting the LATCH child restraint fixing system, pull the belt away from the child seat fastening area.

The inserts for the lower LATCH mountings are located in the space between the seat and the backrest.

Make sure that both lower LATCH mountings are firmly snapped and that the child restraint system is snugly positioned against the backrest.

Run the upper safety belt between the headrest supports and attach it to the fastening point using the hook. Pull the upper safety belt tight and push it under the headrest.

Refer to the following section in the Owner's Manual: Transporting children safely.

18 Driving

Start/Stop button



Switching the ignition on/off

Press the Start/Stop button without depressing the brake pedal.

Starting the engine

Press the Start/Stop button while depressing the brake pedal.

Engine off/radio ready state

Press the Start/Stop button when the engine is running.

M Sport automatic transmission/Parking brake

Unlock button

For shifting from P or to R:

1. Press on the brake while the engine is running.
2. Press the Unlock button.
3. Move the selector lever in the desired direction.

Applying the parking brake

Pull the switch; the LED lights up.

Releasing the parking brake

Press the switch with the brake depressed or transmission position P engaged; the LED goes out.

Automatic Hold

Automatic setting and releasing of the parking brake, for instance in stop-and-go-traffic.

Activating


Press the button; the LED lights up.

Deactivating

Press the button again; the LED goes out.

P button

Press the button to engage transmission position P.

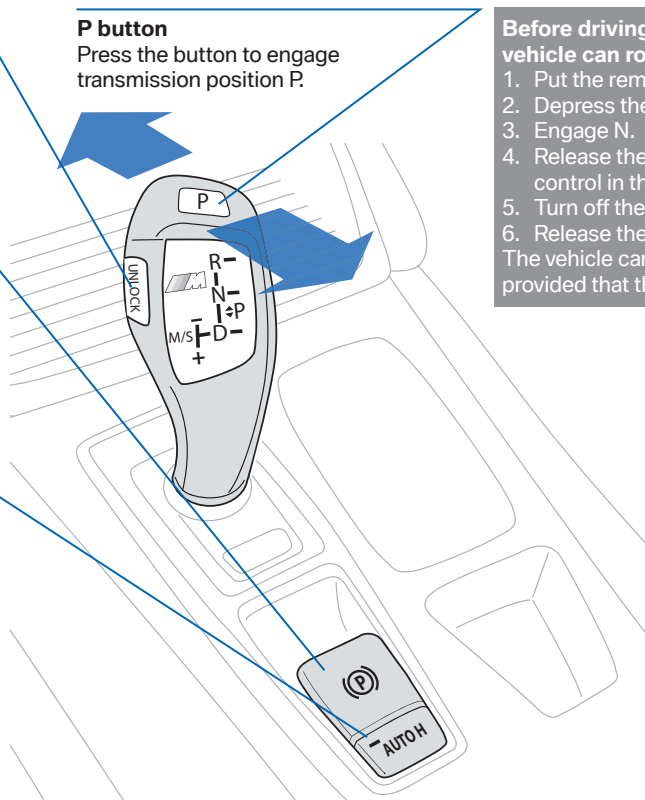

Before driving into a car wash, so that the vehicle can roll:

1. Put the remote control into the ignition.
2. Depress the brake.
3. Engage N.
4. Release the parking brake; leave the remote control in the ignition.
5. Turn off the engine.
6. Release the brake.

The vehicle can roll for approx. 30 minutes, provided that the ignition is not switched off.

20 Driving

M Sport automatic transmission.



Sport program

Push the shift lever in D to the left. In the instrument cluster, speeds S1 to S6 are indicated. Sport program S supports a dynamic driving style.

Manual mode

First switch to Sport mode. Push the shift lever forward or backward resp. Pull the shifter +/- on the steering wheel. The transmission does not upshift when the rpm limit is reached.

Shift lights in the Head-Up Display*

Close to engine speed limits, the yellow marked areas of the tachometer in the M View light up, reminding the driver of the approaching upshift point. Please upshift early while the engine is still cold. When the engine is hot, upshift no later than when the red area lights up. As a final upshift reminder, the whole tachometer blinks when the vehicle reaches the maximum engine speed.

Tip

By the fading in of the M View in the Head-Up Display*, the shift lights, the transmission speed indication, and the vehicle speed are projected within the driver's field of vision.

Driving 21

Lamps

Head-Up Display*


Parking lamps

Lamps off/daytime running lights

Automatic headlamp control,
daytime running lights, welcome lamps,
Adaptive Light Control,
High-beam Assistant*

Instrument lighting

Low beams
Welcome lights

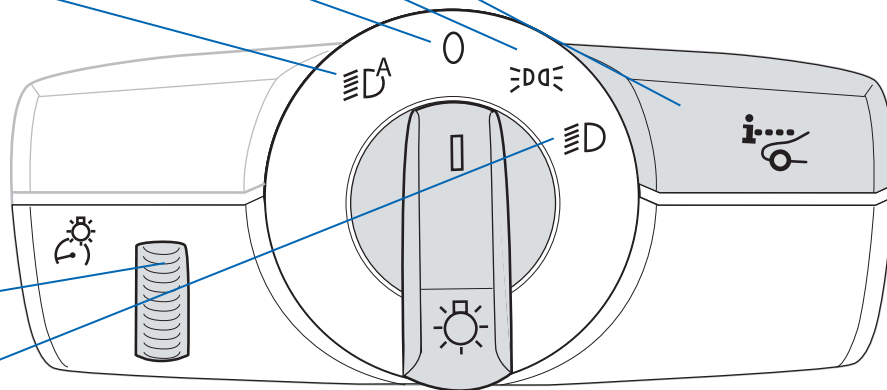

22 Driving M Technology



M TwinPower turbo engine

The M TwinPower turbo engine is a V8 high performance engine. With a 4.4 liter displacement, it creates a maximum output of 555 hp and a maximum torque of 500 lb ft/680 Nm. It is marked by spontaneous response characteristics and an extremely broad effective torque range. The maximum engine speed of 6,800 rpm is electronically limited.

Drivetrain

The all-wheel-drive system xDrive offers a permanently variable torque distribution between the front and rear axles. In conjunction with Dynamic Performance Control and the characteristic M rear-wheel drive design, the dynamics and maneuverability in all speed ranges have been considerably upgraded. Additionally, driving dynamics may be noticeably improved by utilizing the M Dynamic Mode.

Driving on a racetrack

Prior to taking the vehicle to a racetrack, BMW recommends the following:

- Participation in BMW driver training
- Have the vehicle checked at your BMW service center.

Racetrack driving results in increased wear and tear of components.

The standard brake pads and wear indicators are not designed for use on a racetrack. Your center will be most obliged to advise you.


When engine components are hot due to high power demands, engine management may reduce the output in order to protect the engine. After a cooling off period, the full engine power is at your disposal again.

Tachometer

The variable warning area limits the currently permitted engine speed, depending on the engine oil temperature. Please avoid engine speeds in the yellow warning area.

Engine oil temperature

During the warm-up phase, the V8 high performance engine may sound a bit rough with a momentarily higher idling speed. You must drive the vehicle with caution until the engine has reached its operating temperature. The engine oil temperature of an engine at operating temperature is 175 °F/80 °C to 250 °F/120 °C.

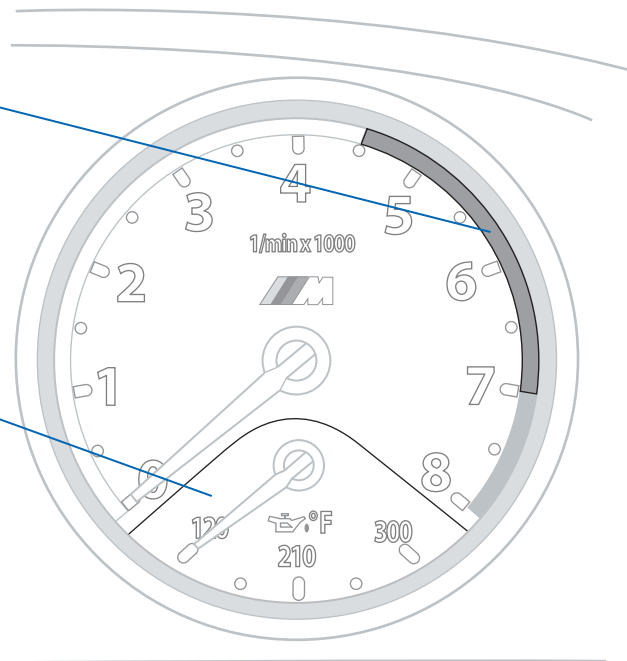

24 Driving

Break-in period



Break-in period

Up to 1,200 miles/2,000 km

Drive the vehicle at varying engine and vehicle speeds. Do not exceed 5,500 rpm or 105 mph/170 km/h.

Always avoid the full-throttle or kickdown position of the accelerator.

From 1,200 miles/2,000 km to 3,000 miles/5,000 km

Engine and vehicle speed may be gradually increased. Only briefly exceed the vehicle speed of 135 mph/220 km/h, for example, when passing.

New tires

The road-holding capabilities of new tires are not yet optimal. You should drive with restraint during the first 200 miles/300 km.

New brake system


Brake pads and rotors reach the most favorable wear and contact pattern at approx. 300 miles/500 km.

Technology 25

M Drive

M Drive

With M Drive, several settings of the vehicle may be configured. The settings affect the drive dynamic control, the adjustment of shock absorbers and steering, the engine characteristics, and the data on the Head-Up Display*.

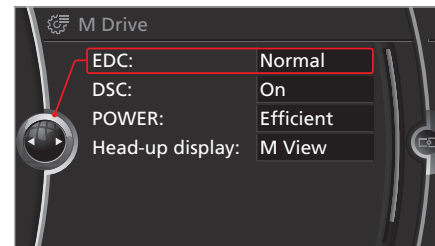

Activating/deactivating M Drive

All settings in M Drive are activated/deactivated when pressing the button.

Settings in M Drive

- "EDC:"
Programs of the steering adjustment and Electronic Damper Control EDC
- "DSC:"
Dynamic Stability Control and M Dynamic Mode
- "POWER:"
M Engine Dynamics Control programs
- "Head-up display:"*
Display of M View

Configuring settings

1. "Settings"
2. "M Drive"
3. Select desired function:
 - "EDC:"
 - "DSC:"
 - "POWER:"
 - "Head-up display:"*
4. Select the desired setting.

26 Radio/CD/Multimedia Controls




CD/DVD* player

Eject CD/DVD*


On/off, volume control

Programmable memory keys

Change station/track

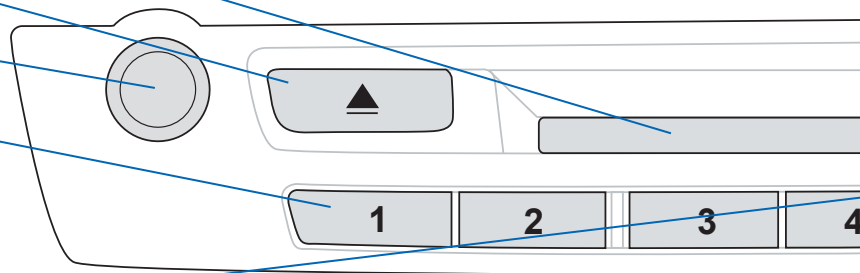

Radio/CD/Multimedia 27 Controls

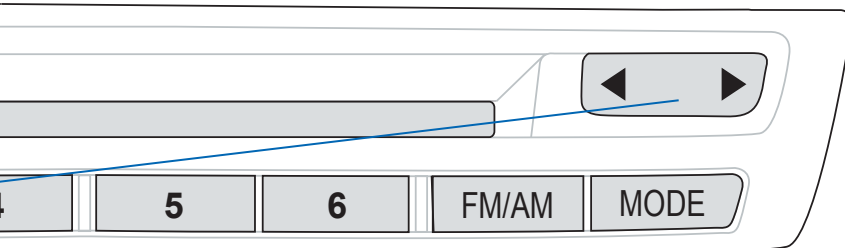

Programmable memory keys

iDrive functions can be stored on the programmable memory keys and be called up directly, e. g., radio stations, navigation destinations, phone numbers and menu entries.

Storing functions

1. Select the function via iDrive.
2. Press the desired key for longer than two seconds.

Executing a function


Press the key.

The function is executed immediately. This means, for example, that the number is dialed when a phone number is selected.

28 iDrive Controller




Controller with buttons

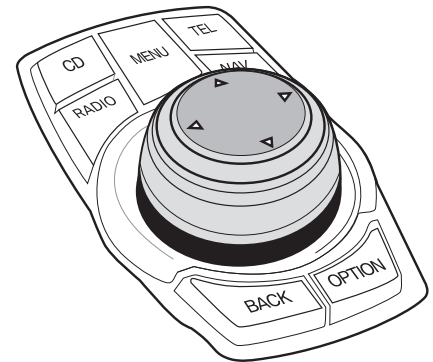


iDrive 29 Controller

Highlighting the menu item

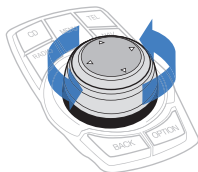


Turn the controller until the desired menu item is highlighted.

Opening the menu item



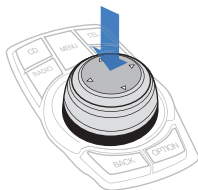


Press the controller.

Changing between panels

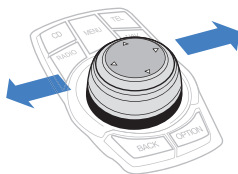

After selecting a menu item, for instance, "Radio", a new panel will be displayed. Panels can overlap. Move the controller either to the left or to the right. The panel changes.

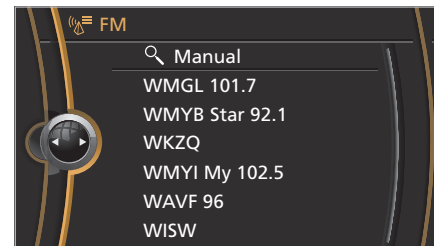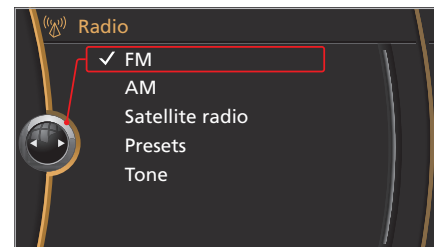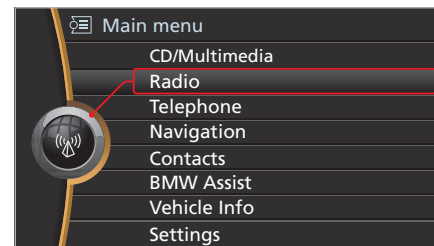


30 iDrive

Buttons on the controller

Opening the menus


Press the buttons on the controller.

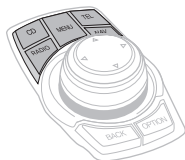

Accessing the "Options" menu

Press the OPTION button.


The OPTION menu consists of various settings: for instance, screen settings such as "Split screen".

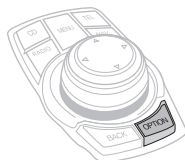


Calling up the previous view

Press the BACK button.

Opens the display that was shown last on the control display.

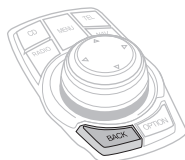

Split screen*/Voice activation system*

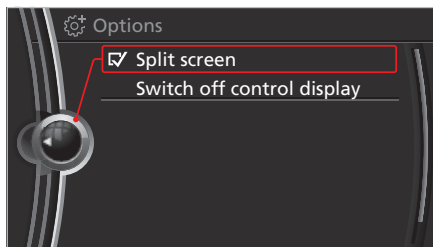**Split screen***

Additional information can be displayed on the right side of the split screen, for example information from the computer.

You can set which information can be displayed.


Switching the split screen on/off*

1. Call up "Options".
2. "Split screen"

The split screen is activated and the information remains displayed, even if another menu is selected.

Tip

You may also store the split screen view* on one of the programmable memory keys.

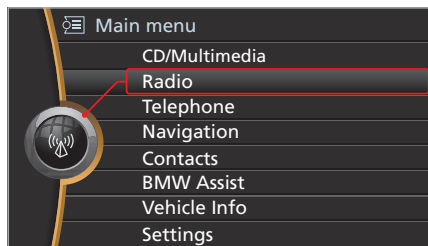**Voice activation system***

The voice activation system allows you to operate certain features via a spoken command.

Most text that is displayed on the control display may be voice-activated.

Example: calling up the FM waveband

1. Press the button on the steering wheel.
2. Say >Radio<.



3. Say >FM<.

The list of available radio stations is displayed.

Having the possible commands read aloud



1. Press the button on the steering wheel.
2. Say >Voice commands<.

Tip

You can also call up the functions directly via so-called short commands, such as >Map perspective view<* and >Redial<. To give those commands, speak without hesitation, loudly and clearly. Avoid background noises, such as those caused by an open sunroof.

32 Navigation

Entering an address*

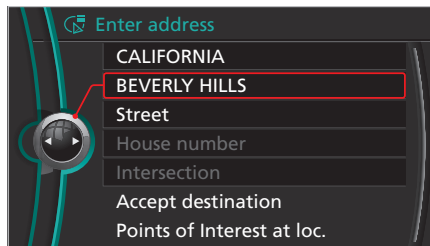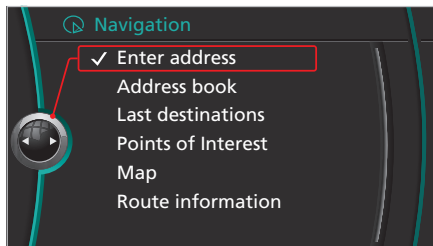

Entering an address

1. "Navigation"
2. "Enter address"


3. Select "State/Province" or the displayed state or province.
4. Select "Town/City/Postal Code" or the displayed town/city/postal code.
5. Select the letters individually. The list gradually grows smaller each time you enter a new letter.
6. If necessary, move the controller to the right and select the name of the town/city from the list.
7. Enter a street and intersection, as you did for the town/city.
8. If desired, select the building number or intersection.
9. "Accept destination"
10. "Start guidance"

Tip

You can enter the destination via the voice activation system*. Town/city, street and building number can also be spoken in one sentence.

Navigation 33

Points of Interest/Map displays*

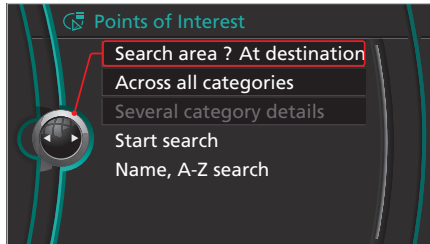

Points of Interest

Searching for specific destinations, e.g., points of interest, hotels, or gas stations.

1. "Navigation"
2. "Points of Interest"
3. Specify "Search area" and "Category".
4. "Start search"

A list of successful hits is displayed.



Map displays*

Various map types can be displayed in the Professional navigation system, for instance a perspective view in 3D*.


1. "Navigation"
2. "Map"
3. "Perspective view"
4. Call up "Options".
5. "Settings"
6. "Perspective view in 3D"

Adjusting the map zoom

1. If necessary, toggle the controller to the right to change the map display.
2.  Select the symbol.
3. Turn the controller.

34 Entertainment

Tone/Radio Station

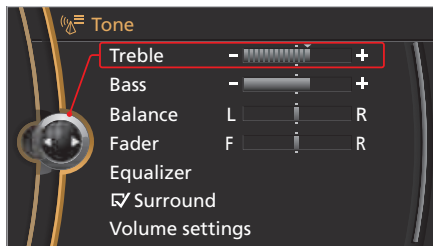


Adjusting the tone

1. "Radio", "CD/Multimedia", or "Settings"
2. "Tone"
3. Select the desired tone setting.
4. Adjust: turn the controller.
5. Confirm: press the controller.



Selecting a radio station


1. "Radio"
2. "FM"

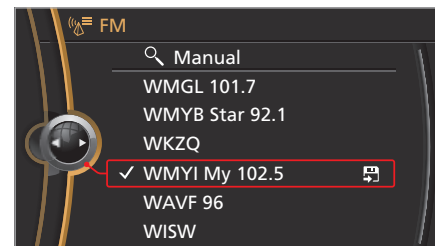

3. Select the desired station.

Tip

You can store your favorite radio stations with the programmable memory keys, 1 to 6. Select the radio station via the iDrive, and press and hold the desired memory key.

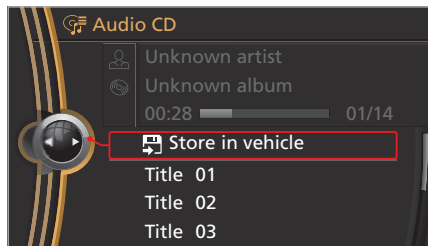

Storing music

CD and DVD* music tracks may be stored in the vehicle in a music collection.

1. Insert the CD/DVD* into the CD/DVD* player.
2. "CD/Multimedia"
3. "CD/DVD"
4. Select the symbol for the CD/DVD* player.

5. "Store in vehicle"

The music collection is displayed. The tracks are stored and played in sequence from the music collection.

Observe the following during the storage process:

Do not switch back to the CD/DVD* player, and do not remove the CD/DVD* from the CD/DVD* player, as this will interrupt the storage process.

Tip



You can only store CDs/DVDs* from the CD/DVD* player. Additional information about how to store compressed audio files from CDs/DVDs* or USB media can be found in the Owner's Manual.

Tip

You can switch to other audio sources, except for the CD/DVD* player, without interrupting the storing process. Tracks from the current CD/DVD* that have already been stored can be called up.

36 Communication

Mobile phone pairing*

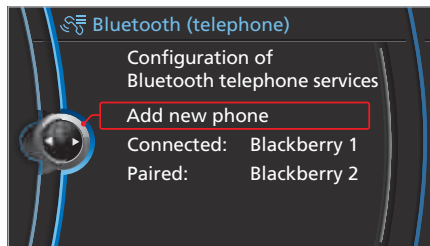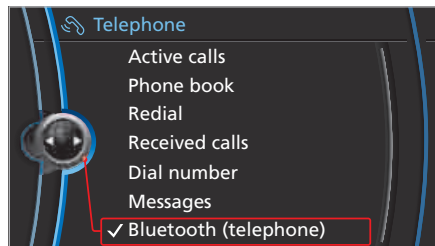

Pairing the mobile phone with the vehicle

1. Switch on the ignition.
2. Activate Bluetooth both on the vehicle and the mobile phone.
3. If necessary, adjust the mobile phone according to the Bluetooth presets, for instance, connection not visible, neither with confirmation nor on the mobile phone.
4. Think of a 4 to 16-digit passkey in order to enter it later. The passkey is only required once for the pairing procedure.
5. "Telephone"
6. "Bluetooth (telephone)"

7. "Add new phone"
The vehicle's Bluetooth name will be displayed on the control display.
8. Use the mobile phone to search for Bluetooth devices; check your mobile phone's operating instructions. The Bluetooth name of the vehicle also appears on the mobile phone display.
9. Select the Bluetooth name of the vehicle on the mobile phone.
The mobile phone's display and the iDrive will prompt you to enter the Bluetooth passkey.

10. Enter the passkey on the mobile phone and via the iDrive. If pairing was successful, the mobile phone appears on the mobile phone list.

Tip

For information on which mobile phones with Bluetooth interface are supported by the mobile phone preparation package, please visit www.bmwusa.com/bluetooth or ask your BMW center.

Communication 37

Using the phone*




Dialing a number

1. "Telephone"
2. "Dial number"
3. Select the digits individually.
4.  Select the symbol to establish the call.

Accepting a call

-  Press the button on the steering wheel.

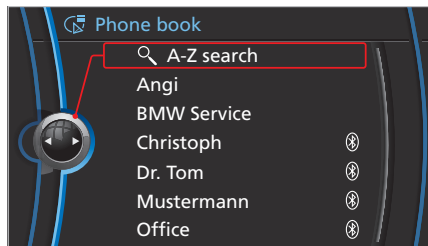

Selecting from the phone book

1. "Telephone"
2. "Phone book"
3. Select the desired entry.

Tip


If required, you may also switch between calls and connect those calls to a telephone conference call; please refer to the Owner's Manual of your vehicle.

Tip

BMW recommends using a snap-in adapter* in order to improve cell phone reception via the external aerial of the vehicle. For information on which mobile phones a snap-in adapter* is available, please visit www.bmwusa.com/bluetooth or ask your BMW center.

38 Refueling

Refueling/Oil level

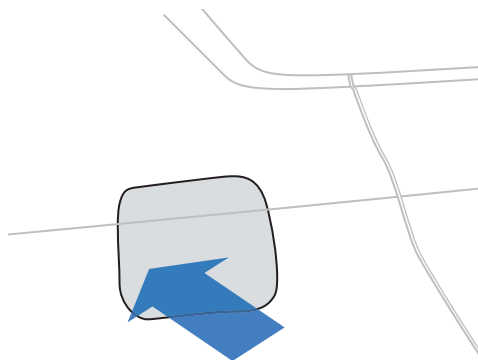

Refueling

Open the fuel filler flap:
Lightly press the rear edge.

Fuel quality

BMW recommends using Super Premium gasoline/AKI 93.

Minimum grade: AKI 91.

Electronic oil level check

The oil level is monitored electronically and shown on the control display.
For recommended oil grades, refer to the Owner's Manual.

Operation via iDrive

1. "Vehicle Info"
2. "Vehicle status"
3. "Engine oil level"

Refer to the information in the Owner's Manual.

FTM Flat Tire Monitor*

The system identifies a loss of pressure by comparing the speeds of rotation of the individual wheels as the car is traveling.

The system must be initialized with the correct tire pressures in order for it to respond reliably in detecting a flat tire.

Operation via iDrive:

1. "Vehicle Info"
2. "Vehicle status"
3. "Reset"
4. Start the engine; do not drive away.
5. Start the initialization with "Reset".
6. Drive away.

FTM is no replacement for tire pressure checks.


TPM Tire Pressure Monitor*

Monitoring of the tire inflation pressure in the four mounted tires: the system reports when the tire inflation pressure has dropped considerably in one or more tires.

The system must have been reset when the inflation pressure was correct; otherwise, reliable signaling of a flat tire is not ensured.

Operation via iDrive:

1. "Vehicle Info"
2. "Vehicle status"
3. "Reset TPM"
4. Start the engine; do not drive away.
5. Start the initialization with "Reset TPM".
6. Drive away.

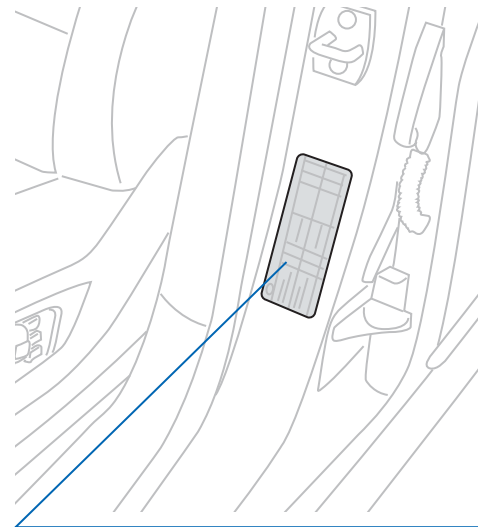

Tire inflation pressure

For speeds of up to 100 mph/160 km/h and for optimum driving comfort, note the pressure values in the tire inflation pressure table (refer to the Owner's Manual), and adjust as necessary. These pressure values can also be found on the tire inflation pressure label on the driver's door pillar.

Tip

Check the tire pressure twice a month and reinitialize the FTM/TPM after adjusting tire pressure and after changing a tire or wheel.

40 Service and Maintenance

BMW Ultimate Service™



BMW Ultimate Service™

Included at no charge with all new BMW vehicles for the first four years or 50,000 miles, whichever comes first.

It includes the New Vehicle Limited Warranty and the BMW Maintenance Program, which cover all factory-recommended maintenance services and specific items that require replacement due to normal wear and tear.

Also included are four years of unlimited mileage Roadside Assistance, and, if the vehicle is equipped with the BMW Assist™* and Bluetooth® system*, a four-year, unlimited mileage subscription to the BMW Assist Safety Plan.

See your authorized BMW center for more details.

 
Service and Maintenance 41

OBD, Emissions values


Socket for Onboard Diagnostics OBD

On the driver's side is an OBD socket for testing components that are critical to exhaust emissions standards.

Emissions values





Refer to the information in the Owner's Manual.

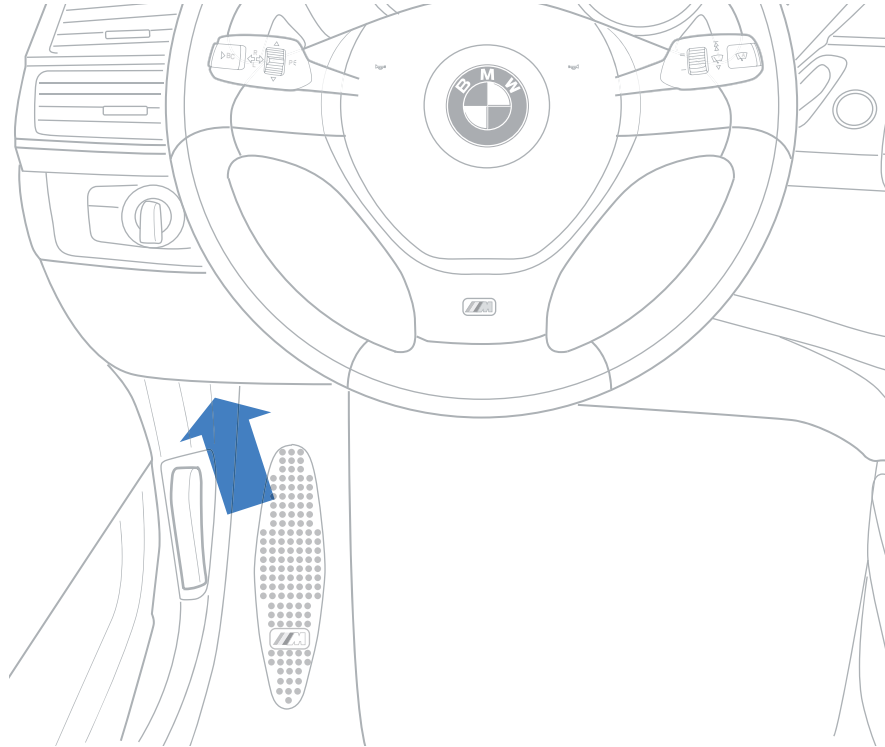

42 24/7 Access

BMW Assist™* and Bluetooth® system*

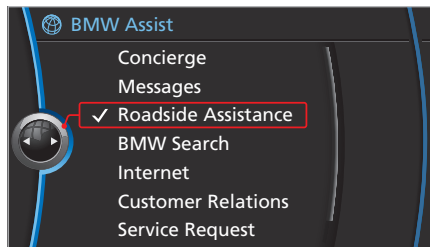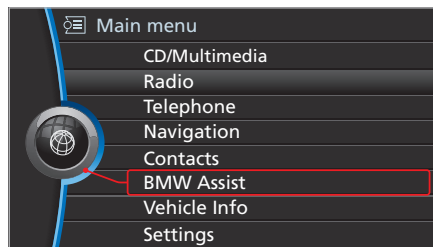

BMW Assist Safety Plan (included for four years)

Combining GPS location technology with hands-free wireless communication, BMW Assist connects you with a trained response specialist 24/7 to help you with almost everything while on the road.

The BMW Assist Safety Plan provides:

- Automatic Collision Notification
- Emergency Request (SOS)
- Enhanced Roadside Assistance
- MyInfo
- Stolen Vehicle Recovery
- Door Unlock
- TeleService
- Customer Relations

Easy Access

To initiate the services, just go to "BMW Assist" in the main menu and select the desired service, or push the SOS button on the overhead console.

What you need to do

You must complete, sign and submit a subscriber agreement with your salesperson. BMW pays for the first 4 years from your BMW's in-service date. To decline services, you must complete, sign and submit a "Waiver and Release" document. If neither action is taken, your BMW Assist services will be remotely deactivated approximately 60 days after you take delivery of your new vehicle.

Bluetooth hands-free calling

The BMW Assist system includes Bluetooth hands-free calling capability with speech recognition. See page 36 or visit www.bmwusa.com/bluetooth for BMW approved handsets and pairing instructions.

Tip

You can even find destinations in the comfort of your home or office and send them via the Internet to your vehicle with the BMW Assist MyInfo service. Visit www.bmwassist.com/myinfo to learn more.

Tip

Upgrade to our optional Convenience Plan to receive directions, traffic and weather information, Critical Calling, Concierge services, online access to the Google Maps™ database, up-to-date fuel prices, and stock indices in your BMW X5 M / BMW X6 M with BMW Search. Push the SOS button, call toll-free 1-888-333-6118, or log on to www.bmwassist.com to learn more.

BMW Roadside Assistance

Can be contacted if assistance is needed in the event of a breakdown.

Telephone: (800) 332-BMW (4269)

For vehicles with the BMW Assist option: Contacting Roadside Assistance through BMW Assist will also transmit vehicle and vehicle position data.

Towing

The only method approved for transporting your vehicle is using a commercial flatbed carrier truck, and securing the vehicle to the flatbed truck with four nylon wheel straps.

When pulling the vehicle onto a flatbed carrier truck, only use the screw-in tow-eye found in the trunk tool kit.

Refer to the detailed towing instructions in the Owner's Manual.

BMW Financial Services**

Offers monthly payments.

UltimatePay: one-time electronic payment service.

EasyPay: have your monthly payment debited automatically every month from the bank account you designate. Of course, you can also pay by mail.

Simply go to the BMW Financial Services section of the Owner's Circle at bmwusa.com and look under "Account Services".

** Subject to credit approval

My Account

Enables BMW owners to enjoy high performance in their vehicles - and in the ownership experience itself.

This secure owner's site is filled with important, convenient and timely information.

Here is where your vehicle information and BMW Financial Service account history are kept and updated. You can see your monthly statements online, and even pay for them quickly and easily with the click of your mouse.

There is also a wide variety of informative features on interesting topics.

For example, check out the Owner's Manual section, which also contains video reference guides. Or watch a video to learn how to pair your Bluetooth phone.

Simply go to bmwusa.com and hover over My Account in the site's top navigation.

44 Helping and receiving assistance


Warning triangle*, first aid kit*

Warning triangle

The warning triangle is located in the trunk.

First aid kit

The first aid kit is located in the right of the luggage compartment or beneath the left-hand side lining.

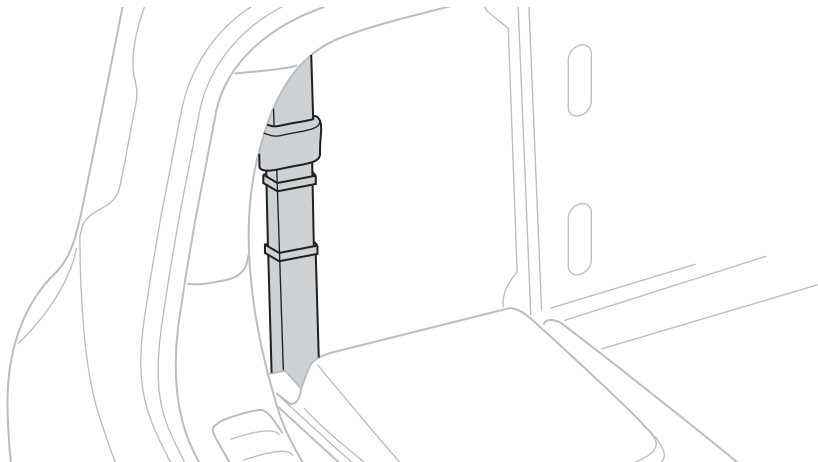

More about BMW

bmwusa.com
1-800-334-4BMW



**The Ultimate
Driving Machine®**

© 2010 Bayerische Motoren Werke

Aktiengesellschaft

Munich, Germany

Reprinting, including excerpts, only with the
written consent of BMW AG, Munich.

Order No. 01 41 2 604 271

US English II/10

Printed on environmentally friendly paper,
bleached without chlorine, suitable for recycling.

