

Use extreme caution when using any device or feature that may take your attention off the road. Ford recommends against the use of any hand-held devices while driving and that you comply with all applicable laws. Your primary responsibility is the safe operation of the vehicle.

INSTRUMENT PANEL FEATURES

1. HEADLAMP CONTROLS
○: Turns the headlights off.

Ⓟ: Turns on parking lamps.

Ⓛ: Turns on low beam headlights.

☼: Autolamps (if equipped): Automatically turns on/off based on available daylight.

Ⓛ: Turns on fog lamps by pulling the control towards you.

2. MULTI-FUNCTION LEVER
Rotate the end of the control up/down to increase/decrease the speed of the wipers.

Push the end of the stalk:
• quickly for a single swipe without fluid.

• and hold briefly for three swipes with washer fluid.

• and hold for a longer wash cycle.

To operate your rear window wiper, turn the rear wiper control to 1 (intermittent speed), 2 (normal speed) or 0 (off). For a rear wash cycle, rotate and hold the rear wiper control to either Ⓛ position.

Note: For optimal wiper performance, clean your blades and glass regularly. Refer to your Owner's Guide for more information.

3. STEERING WHEEL CONTROLS
To set the speed:
1. Press ON.
2. Accelerate to the desired speed.
3. Press SET + and take your foot off the accelerator.

• To set a higher speed, press and hold SET + or press SET + repeatedly until the desired speed is reached.

• To set a lower speed, press and hold SET - or press SET - repeatedly until the desired speed is reached.

• To return to a previously set speed, press RES.

• To turn off, press OFF or turn the ignition off.

VOL +/- : Press to increase/decrease volume levels.

⏮ ⏭: Press to access the previous/next radio station, CD track or preset satellite radio channel.

MEDIA: Press repeatedly to access all possible media sources.

☎: Press to access voice recognition, if equipped.

☎: Press to access SYNC® phone features, if equipped.

4. SERVICE ENGINE SOON LIGHT
The service engine soon light ⚡ illuminates briefly when the ignition is turned on. If it remains on or continues to flash, a malfunction has been detected. Contact your authorized dealer as soon as possible. Normal braking (less ABS) is still functional unless the brake warning light (⚡) is also illuminated.

5. MESSAGE CENTER
The message center displays important vehicle information through a constant monitoring of vehicle systems. The system will also notify you of potential vehicle problems with a display of system warnings followed by a long indicator chime. Please refer to your Owner's Guide for more information.

Owner's Guide for more information.

6. ABS WARNING LAMP
The ABS light ⚡ illuminates briefly when the ignition is turned on. If the ABS light remains on or continues to flash, a malfunction has been detected. Contact your authorized dealer as soon as possible. Normal braking (less ABS) is still functional unless the brake warning light (⚡) is also illuminated.

7. HAZARD FLASHER

8. BATTERY GAUGE
The battery gauge provides information about your vehicle's energy usage. When the pointer is directed at ASSIST, the battery is providing extra power to boost the vehicle's acceleration. When it's pointing to CHARGE, extra energy is being stored in the battery while idling, coasting or slowing down.

Owner's Guide for more information.

9. READY INDICATOR
⚡ Illuminates after the vehicle has successfully started. The vehicle is ready to drive even if you don't hear the engine running.

10. STOP SAFELY HAZARD WARNING LAMP ⚡
Indicates a hybrid component failure or fault that will cause the vehicle to shut down or fail to start. For additional information, please see your Owner's Guide.

11. AUXILIARY POWER POINTS (12V)
The 12V power point outlets, located on the instrument panel and the rear of the center console, are designed for accessory plugs only. Do not insert any other object; damage may occur and blow the fuse.

12. ADVANCETRAC® WITH ROLL STABILITY CONTROL™ (RSC®) STABILITY ENHANCEMENT SYSTEM
The AdvanceTrac® stability enhancement system ⚡ helps you to maintain stability and steerability of your vehicle during a variety of road conditions. If your vehicle becomes stuck in the snow, mud or sand, try turning off the AdvanceTrac® system (by pushing the TCS off button) to allow wheel spin and help increase momentum to dig the vehicle out. The system defaults to on and the control will illuminate when turned off. Refer to your Owner's Guide for safety information and more details.

13. ACTIVE PARK ASSIST (if equipped)
The Active Park Assist system can detect an available parallel parking space and automatically steer the vehicle into that space. The system instructs the driver with visual and/or audible instructions with regard to braking, accelerating and shifting gears in order to safely park the vehicle. To initiate Active Park Assist, press the

AUTO P control and follow the system instructions as prompted by the message center. To stop the parking procedure, grab the steering wheel or press the control again. For complete information, please refer to Active Park Assist in the Driving chapter of your Owner's Guide.

14. PASSENGER AIRBAG OFF
The passenger airbag off indicator will illuminate when the passenger's front airbag is off. Please refer to your Owner's Guide for safety information and more details.

15. POWER POINT - 110 VAC (if equipped)
This outlet, is used for powering electrical devices that require up to 150W. Exceeding this limit will cause the power point to cut off the power temporarily to provide overload protection. The green indicator light will illuminate when the power point is ready to supply power and will blink when it is in fault mode. You do not need an adapter in order to plug in an electrical device.

16. AUXILIARY INPUT JACK
The auxiliary input jack provides a way to connect your portable music player to the in-vehicle audio system. This allows the audio from a portable music player to be played through the vehicle speakers. For additional information, please see your Owner's Guide.

17. POWER AND EFFICIENCY SCREEN (if equipped)
Your navigation system (if equipped) has special hybrid screens which display Energy Flow, Fuel Economy, and Power and Efficiency information. The Power and Efficiency screen provides additional information about brake efficiency, vehicle power, accessory power, engine on reasons and driving efficiency information. To access, press the I hard button on your navigation system, select the HEV tab and then press the Power and Efficiency button. For more information, please refer to your navigation supplement.

INTEGRATED BLIND SPOT MIRRORS
Blind spot mirrors have an integrated convex mirror in the upper corner on the outside mirrors. These mirrors help increase visibility alongside the vehicle; thereby helping you to see a vehicle which may be in your blind spot. As a vehicle approaches, the image will transition from the main mirror to the blind spot mirror. Refer to your Owner's Guide for more information.

REARVIEW CAMERA (if equipped)
This system provides a visual display of the area behind the vehicle. The display automatically appears in the rear view mirror or navigation screen (if equipped) when the vehicle is in Reverse (R) and uses colors (green, yellow and red) to alert you of your proximity to objects. Note: Visibility aids do not replace the need to watch where the vehicle is moving. Refer to your Owner's Guide for safety information, more detail and limitations.

REVERSE SENSING SYSTEM (if equipped)
The reverse sensing system may warn you if there is an object behind the vehicle. A warning tone will sound which increases in frequency as the object gets closer and then will sound continuously when the object is less than 10 inches away. The system is active when the vehicle is in R (Reverse) and traveling less than 3 mph (5km/h). Note: Visibility aids do not replace the need to watch where the vehicle is moving. Refer to your Owner's Guide for safety information, more detail and limitations.

UNIVERSAL GARAGE DOOR OPENER (if equipped)
Your vehicle may be equipped with the Car2U® system located in the driver's visor. The Car2U® home automation system is a universal transmitter that provides a way of opening your garage door and also for remotely activating some devices within your home. The system works by learning the frequency codes that operate garage doors and certain home devices. For more information, refer to the Driver Controls chapter in your Owner's Guide.

USB PORT (if equipped)
The USB port allows you to plug in media playing devices, memory sticks, and also to charge devices if they support this feature. For more information, please refer to your SYNC® supplement or the SYNC® section in your Navigation supplement (if equipped).

DUAL AUTOMATIC CLIMATE CONTROL

1. POWER AND FAN ⚡
Press to turn the system on/off. Press + or - to manually increase/decrease the fan speed.

2. FLOOR AND DEFROST ⚡
Distributes air through the windshield defroster vents, demister vents, floor vents and rear seat floor vents.

3. AUTO/DRIVER TEMPERATURE
Press the control to activate/deactivate full automatic operation. The system will automatically determine fan speed, airflow distribution, A/C on or off and airflow vehicle or recirculated air to heat or cool the vehicle to reach the desired temperature. Turn the control to increase/decrease the temperature on the driver side of the vehicle. Note: This control will also determine the temperature for the entire vehicle cabin when the passenger temperature control (PASS TEMP) is not engaged.

4. DEFROST ⚡
Distributes outside air through the windshield defroster vents and demister vents. Can be used to clear the windshield of fog and thin ice.

5. REAR DEFROSTER ⚡
Press to activate the rear window defroster and clear the rear window of thin ice and fog. Press again to deactivate. The rear window defroster will turn off automatically after a predetermined amount of time, if a low battery condition is detected, or when the ignition is turned off or to the accessory position.

6. DRIVER HEATED SEAT ⚡
Press to activate or deactivate the driver heated seat.

7. A/C
Press to activate/deactivate air conditioning. Use with recirculated air to improve cooling performance and efficiency.

8. PANEL FLOOR PANEL AND FLOOR ⚡
Press the desired control for airflow to be directed through the (instrument panel vents, (instrument panel vents, demister vents, (instrument panel vents, floor vents and rear seat floor vents).

9. PASS TEMP
Press to activate passenger side temperature control. Turn the control to decrease/increase the temperature setting for the passenger side of the vehicle. Press again to deactivate (the driver side settings will then determine the temperature for the entire vehicle cabin).

10. RECIRCULATED AIR ⚡
Press to activate/deactivate air circulation inside the vehicle cabin. Recirculated air may reduce the amount of time needed to cool down the vehicle and may also help reduce undesirable odors from entering the vehicle. Recirculated air engages automatically when MAX A/C is selected.

11. PASSENGER HEATED SEAT ⚡
Press to activate or deactivate the passenger heated seat.

12. MAX A/C
Activates air conditioning and distributes recirculated, conditioned air through the instrument panel vents to provide maximum cooling performance.