

Forester 2011
Quick Reference Guide.





Complete U.S. specifications and illustrations may not have been available at time of publication. Specifications are based on the latest product information available at time of publication. Some images shown are for illustration purposes only. Some equipment shown may be optional at extra cost. Specific options may be available only in combination with other options. Specific combinations of equipment or features may vary from time to time and by geographic area. Certain accessories and equipment may not be available at the time of publication.

This Quick Reference Guide applies to all Forester models. Therefore, some explanations may be for equipment not installed on your vehicle. Subaru of America, Inc., reserves the right to change or discontinue at any time, without notice, prices, colors, materials, equipment, accessories, specifications, models and packages without incurring any obligation to make the same or similar changes on vehicles previously sold. Colors shown may vary due to reproduction process.

For detailed operating and safety information, please consult the Owner's Manual.

Subaru, Outback, Legacy, Forester, Impreza, WRX, WRX/STI, BOXER, SPORTSHIFT, SI-DRIVE, Lineartronic, Alcantara, Circle Surround, Audyssey MultiEQ, HD Radio, XM and Sirius are registered trademarks.

All rights reserved. Contents may not be reprinted or electronically reproduced in whole or in part without prior written approval of Subaru of America, Inc.

© 2010 Subaru of America, Inc.

Table of Contents

Getting Started	2 - 3
Instrument Panel	4 - 5
Gauges	6 - 9
Personalize	10 - 11
Controls	12 - 27
While Operating	28 - 29
Safety/In Case of Emergency	30 - 31
Additional Information	32 - 33

Remote Keyless Entry

Lock/Arm

- Press to lock all doors and rear gate.
- If any of the doors or the rear gate are not fully closed, an electronic chirp will sound five times and the hazard lights will flash five times to alert you that the doors or the rear gate are not properly closed.
- To activate the vehicle finder function, press three times (within five seconds). If you are within 30 feet of the vehicle, the horn will sound one time and the hazard lights will flash three times.

Unlock/Disarm


- Press once to unlock the driver's door.
- Press twice (within five seconds) to unlock all doors.
- When the "Unlock/Disarm" button is pressed, the dome and map lights will illuminate if the dome light switch is in the middle position.



Unlocking the Rear Gate

Press the button to unlock the rear gate.

Seating

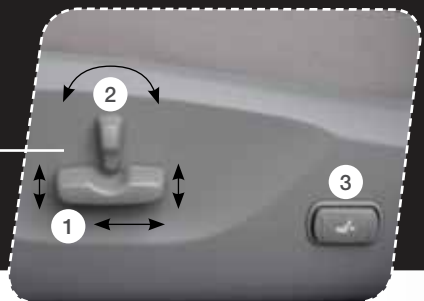

Heated Seats (if equipped)

Press the switch in the corresponding direction for the desired seat temperature. To turn off the seat heater, slightly press in the opposite direction of the current position.

Folding the Rear Seat

Lower the headrests. Pull up on the release knob on the seat side that you want to fold down. To return the seatback to its original position, raise the seatback until it locks into place and make sure that it is securely locked.

10-Way Power Driver's Seat (if equipped)

- 1. Forward/Backward, Angle and Height**
Move the switch toward the front or rear to move the seat forward or backward. Pull the switch up or push down on the front of the switch to adjust the angle of the seat cushion. Pulling the switch up or pushing down on the rear of the switch will adjust the height of the seat cushion.
- 2. Seatback**
Move the switch in the corresponding direction to adjust the angle of the seatback.
- 3. Lumbar**
Press the front part of the switch to increase lumbar support; press the rear part of the switch to decrease lumbar support.



Instrument Panel



pg. 12

pg. 10

pg. 28

pg. 12

pg. 26

pg. 6-9

pg. 27



pg. 13

pg. 14-19

pg. 20-25

Clock

Press the “+” button to advance time or the “-” button to reverse the time. Vehicles with a navigation system please refer to the separate “Operating Instructions for Navigation System.”

Gauges

■ Immediate Attention

■ Caution

■ Informational

Forester 2.5X
Forester 2.5X Premium
Forester 2.5X Limited



Seatbelt warning

BRAKE /  Brake system



Front passenger
seatbelt warning



Hot coolant temperature /
Cold coolant temperature



SRS airbag system



High beam indicator light



Security indicator light



AT OIL TEMP
(AT models)



Door open



ABS warning



Charge warning



Low fuel



Oil pressure warning



All-Wheel Drive
(AT models)



Vehicle Dynamics
Control/Vehicle Dynamics
Control operation



Turn signals



Vehicle Dynamics Control OFF



Front fog light indicator
light (if equipped)



CHECK ENGINE /
Malfunction indicator



Headlight indicator light



Tire pressure warning light



SPORT mode
(AT models)



Front passenger airbag ON



Cruise control
indicator light



Front passenger airbag OFF



Cruise control set
indicator light



Incline Start Assist warning
(MT models)


Gauges

■ Immediate Attention

■ Caution

■ Informational

Forester 2.5X Touring
Forester 2.5XT Touring

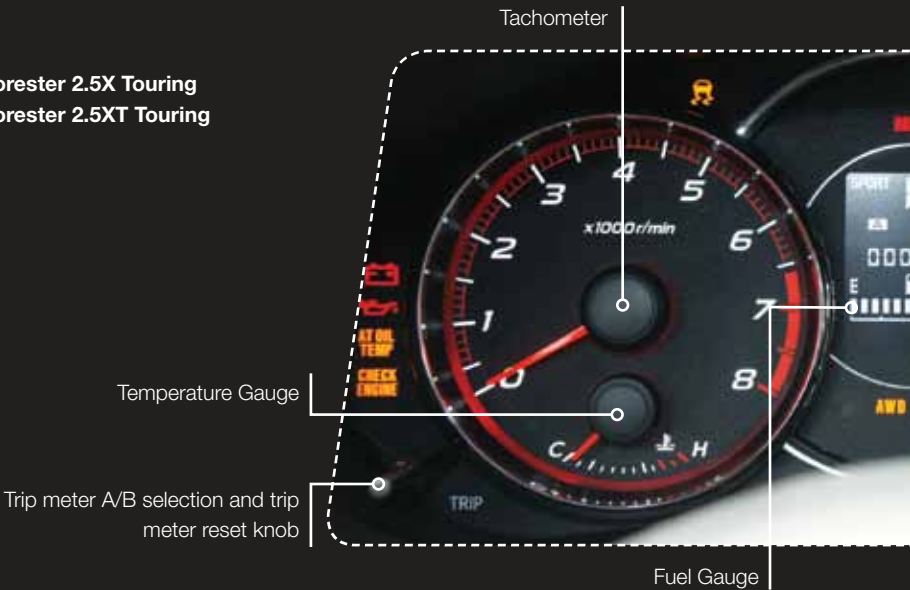

Seatbelt warning

BRAKE /  Brake system



Front passenger
seatbelt warning



High beam indicator light



SRS airbag system



Automatic headlight beam
leveler warning



Security indicator light



AT OIL TEMP
(AT models)



Door open



ABS warning



Charge warning




Low fuel



Oil pressure warning



All-Wheel Drive
(AT models)

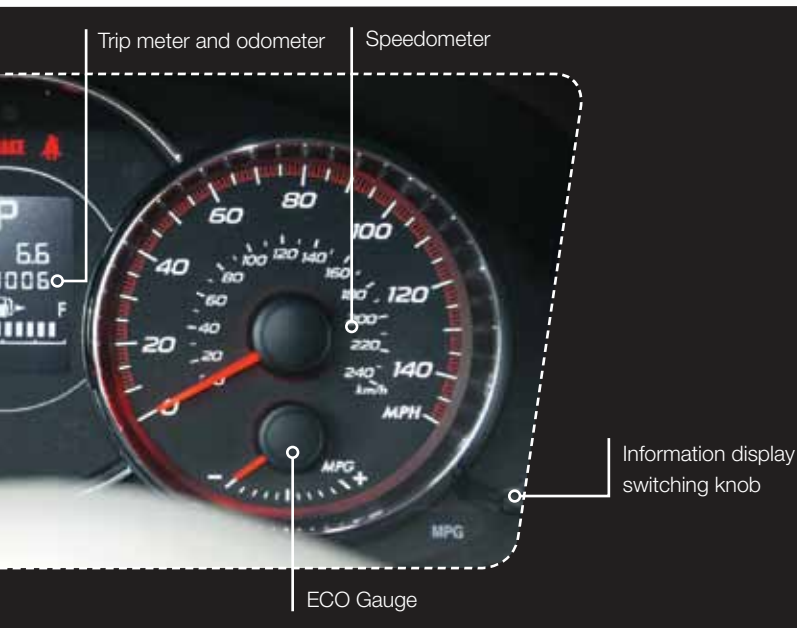

Vehicle Dynamics Control/Vehicle Dynamics Control operation



Turn signals



Vehicle Dynamics Control OFF



Front fog light indicator light (if equipped)



CHECK ENGINE / Malfunction indicator



Headlight indicator light



Tire pressure warning light



SPORT mode (AT models)



Front passenger airbag ON



Cruise control indicator light



Front passenger airbag OFF



Cruise control set indicator light



Incline Start Assist warning (MT models)

Personalize




Tilt and Telescopic Steering Column

Push the lever down firmly to adjust the vertical and lengthwise position of the column; firmly push the lever back up to lock the column in place. Do not adjust while driving.

Power Exterior Mirrors

Push the mirror selection switch to the “L” side to adjust the left-hand mirror or to the “R” side to adjust the right-hand mirror. Push and hold the direction mirror control switch in the direction you want to move the mirror. Push the mirror selection switch back to the middle to prevent unintended operation.



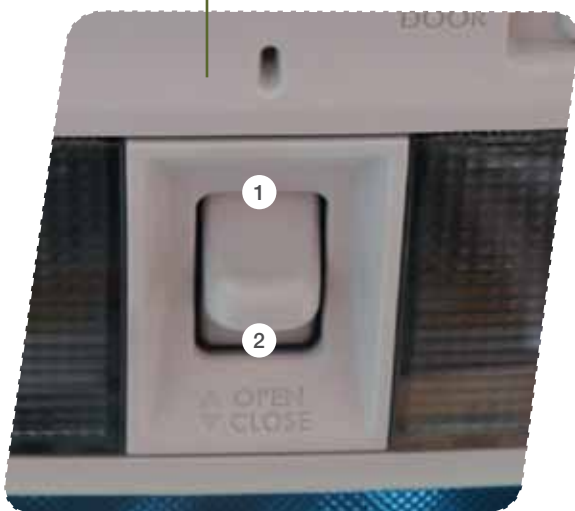

Power Moonroof (if equipped)

With the moonroof in the fully closed position, press the switch ① to fully open the moonroof. Press the switch ② to close the moonroof. To stop the moonroof in a midway position while opening or closing, momentarily press the switch to the ① side or ② side.

Controls

Light Controls

Push up for right turn signal.

Turns on headlights, instrument panel illumination, front side marker lights, taillights and license plate lights.

Push down for left turn signal.



Turns on fog lights (if equipped).

Turns on instrument panel lights, tail lights, front side marker lights and license plate lights.



While the light switch is on, rotate the dial downward to dim the instrument panel illumination. Rotate the dial upward to make the illumination brighter. When the dial is fully rotated upward, the instrument panel illumination becomes full bright.



Windshield Wipers

To turn on the wipers, press the wiper control lever down one level for intermittent, two levels for low, or three levels for high speed. Return the lever to the “OFF” position to stop the wipers. For a single wipe move the lever up. To spray washer fluid, pull and hold the lever toward you.

To operate the rear wiper, rotate the end of the knob upward to the intermittent, continuous, or wash position. When the rear wiper is off, rotate the knob downward to wash and wipe the rear window.

Daytime Running Lights

Daytime running lights are standard on your vehicle. Only a reduced brightness high beam will be automatically turned on when the engine has started and the parking brake is fully released or the light switch is in the “OFF” or “ ” position. The brightness of the illumination of the high beam headlights is reduced by the daytime running light system. You must always switch on your headlights when it’s dark outside by turning the light switch to the  position.

Controls



Manual Climate Control (if equipped)

1. Temperature Control Dial

Rotate the temperature control dial from blue for cool, to red for warm.

2. Air Conditioning Button

Press the "A/C" button to activate the air conditioning. Press it again to turn off the air conditioning.

3. Recirculated / Outside Air Button

Press the air inlet selection button to prevent outside air from being drawn into the passenger compartment. If the button is pushed in, press it again to draw outside air into the compartment. TO PREVENT WINDSHIELD FOGGING, DO NOT REMAIN IN THE RECIRCULATED MODE FOR AN EXTENDED PERIOD OF TIME.

4. Fan Speed Control Dial

Rotate the fan speed control dial to select one of four fan speeds.



5. Rear Window Defogger Button

Press the rear window defogger button to turn on the defogger. The defogger will automatically shut off after about 15 minutes. If the window clears before that time, you can press the button again to turn it off.

6. Air Flow Control Dial

The air flow control dial allows you to choose the direction of air flow. Rotate the dial for the desired air flow position.

Defrost / Defog

To clear the windshield and front door windows of fog or frost, rotate the air flow control dial to the defrost position, set the temperature control to the red position, and set the fan speed control to the fastest speed.

Controls



Automatic Climate Control (if equipped)

1. Air Flow Control Dial

On the automatic setting, the system determines the air flow location to achieve the desired temperature or you can choose the direction of air flow. Rotate the dial for the desired air flow position.

Defrost / Defog

To clear the windshield and front door windows of fog or frost, rotate the air flow control dial to the defrost position, set the temperature control to the red position, and set the fan speed control of the fastest speed.

2. Rear Window Defogger Button

Press the rear window defogger button to turn on the defogger. The defogger will automatically shut off after about 15 minutes. If the window clears before that time, you can press the button again to turn it off.

3. Fan Speed Control Dial

On the automatic setting, the system determines the fan speed to achieve the desired temperature or you can rotate the fan speed control dial to select one of seven fan speeds.



4. Air Conditioning Button

Press the "A/C" button to activate the air conditioning. Press it again to turn off the air conditioning.

5. Recirculated / Outside Air Button

In the automatic mode, the system will determine if recirculated air is needed to achieve a desired temperature. In manual mode, press the air inlet selection button to prevent outside air from being drawn into the passenger compartment. If the button is pushed in, press it again to draw outside air into

the compartment. TO PREVENT WINDSHIELD FOGGING, DO NOT REMAIN IN THE RECIRCULATED MODE FOR AN EXTENDED PERIOD OF TIME.

6. Temperature Control Dial

Rotate the temperature control dial from 65 for cool to 85 for warm.

Controls



Automatic Climate Control (if equipped)

1. Automatic On and Off

This system automatically controls outlet air temperature, fan speed, air flow distribution, air inlet control, and air conditioner compressor operation. Press “AUTO” to activate. Press “OFF” to turn off the system.

2. Temperature Control Dial

Rotate the dial clockwise to increase the temperature or rotate the dial clockwise to decrease the temperature and maintain a comfortable climate within the driver and passenger compartment. The temperature is displayed digitally on the radio screen. Separate temperature

settings can be made for the driver's side and passenger's side by adjusting the dials appropriately.

Operation in Manual Mode

3. Recirculated / Outside Air Button

Press the air inlet selection button to prevent outside air from being drawn into the passenger compartment. Press the button again to allow outside air into the compartment. TO PREVENT WINDSHIELD FOGGING, DO NOT REMAIN IN THE RECIRCULATED MODE FOR AN EXTENDED PERIOD OF TIME.



4. Fan Speed Control Buttons

Press the fan speed control buttons to select seven different fan speed positions.

5. Air Flow Mode Selection Button

Press the button to select the desired air flow mode. The selected air flow mode – either ventilation, bi-level, heat or heat-defrost – is shown on the display.

6. Dual Mode Button

Press the “DUAL” button to activate or deactivate the dual mode. Dual mode makes it possible to have separate temperature settings for the driver's side and passenger's side.

7. Air Conditioner Button

Press the “A/C” button to activate the air conditioning. Press it again to turn off the air conditioning.

8. Defroster Button

Press the button to defrost or dehumidify the windshield and front door windows.

9. Rear Window Defogger Button

Press the button to turn on the defogger. It will automatically shut off after about 15 minutes. If the window clears before that time, you can press the button again to turn it off.

Controls



AM/FM Stereo with Single Disc CD/MP3/WMA Player (if equipped)

Radio Functions

1. Power / Volume Control

Press the power / volume control knob for on or off; rotate the knob to control the volume.

2. Bass, Treble, Balance and Fader

Each press of the “TUNE/TRACK/CH” button will cycle you through Bass, Midrange, Treble, Fade or Balance. Rotate the “TUNE/TRACK/CH” knob to adjust the desired level.

3. FM / AM

Press the “FM/AM” button to choose FM1, FM2, FM3 or AM reception.

4. Tune / Track

Rotate the “TUNE/TRACK/CH” knob clockwise to increase the tuning frequency; rotate the knob counter-clockwise to decrease it.

5. Seek

Press the right or left arrow of the “SEEK” button to pick up the next highest or lowest frequency.

6. Presets

You can save up to six favorite stations for each band – FM1, FM2, FM3 and AM. Select a frequency and press one of the preset buttons for more than 1.5 seconds to store it.

7. Satellite Radio

An optional satellite radio tuner and antenna can be connected to this audio unit. You can hear satellite radio programs by pressing the “SAT” button after connecting optional equipment. To receive satellite radio service, it is necessary to enter into a separate contract with a satellite radio provider.

CD Player Functions

8. Load

Insert a disc into the slot. The CD will automatically be drawn in and will begin play at the first track.

9. Play CD

Press the "CD/AUX" button and playback will begin.

10. Repeat / Random

Pressing the "RPT/RDM" button once to repeat the current track, two presses to repeat the current folder and a third press to turn off repeat.

Press and hold the "RPT/RDM" button once to hear all the tracks on the disc in random order. Two presses to randomize folders on a CD, a third press to randomize the entire disc and a fourth press to turn off random.

11. Eject

Press the button to eject the disc.

12. Forward / Reverse

Rotate the "TUNE/TRACK/CH" knob clockwise to skip to the beginning of the next track; rotate the knob counter-clockwise to skip to the beginning of the current track. Rotate the knob counter-clockwise again to go to the previous selection.

13. Fast Forward / Fast Reverse

Press the right arrow of the "SEEK" button for more than one second to fast forward. Release the button to stop. To fast reverse, press the left arrow for more than one second and release the button to stop.

14. Scan

Press the "SCAN" button to begin previewing the first 10 seconds of each track on the disc. Normal playback will resume after all tracks have been scanned. Press the "SCAN" button again to stop scanning and listen to the track being previewed.

MP3/WMA Formatted CD Player Functions

15. Folder Selection

Press the up arrow of the "FOLDER" button to select the next folder. Press the down arrow to go back to the first music file. Quickly press the down arrow again to go back to the previous folder.

16. Page Scroll

Press the "TEXT" button to select title display. Press and hold again to scroll through the title, 8 characters at a time. Up to a maximum of 64 characters.

17. Display

Press and hold the "TEXT" button during playback to change the display to show the play time, disc title, artist name and track title. If the disc is formatted with MP3/WMA's, press the "TEXT" button to change the display to show play time, folder name and file name.

Controls



AM/FM Stereo with Single Disc CD/MP3/WMA Player (if equipped)

Radio Functions

1. Power / Volume Control

Press the power / volume control knob for on or off; rotate the knob to control the volume.

2. Bass, Treble, Balance and Fader

Each press of the "TUNE/TRACK/CH" button will cycle you through Bass, Midrange, Treble, Fade or Balance. Rotate the "TUNE/TRACK/CH" knob to adjust the desired level.

3. FM / AM

Press the "FM/AM" button to choose FM1, FM2, FM3 or AM reception.

4. Tune / Track

Rotate the "TUNE/TRACK/CH" knob clockwise to increase the tuning frequency; rotate the knob counterclockwise to decrease it.

5. Seek

Press the right or left arrow of the "SEEK" button to pick up the next highest or lowest frequency.

6. Presets

You can save up to six favorite stations for each band – FM1, FM2, FM3 and AM. Select a frequency and press one of the preset buttons for more than 1.5 seconds to store it.

7. Satellite Radio

An optional satellite radio tuner and antenna can be connected to this audio unit. You can hear satellite radio programs by pressing the "SAT" button after connecting optional equipment. To receive satellite radio service, it is necessary to enter into a separate contract with a satellite radio provider.

8. PTY / CAT

Press the "PTY/CAT" button to change to program type selection mode. The PTY group that you are currently listening to is displayed for 10 seconds.

CD Player Functions

9. Load

Insert a disc into the slot. The CD will automatically be drawn in and will begin play at the first track.

10. Play CD

Press the "CD/AUX" button and playback will begin.

11. Repeat / Random

Press the "RPT/RDM" button once to repeat the current track, two presses to repeat the current folder and a third press to turn off repeat. Press and hold the "RPT/RDM" button once to randomize folders on a CD. Two presses to hear all the tracks on the disc in random order, and a third press to turn off random.

12. Eject

Press the button to eject the disc.

13. Forward / Reverse

Rotate the "TUNE/TRACK/CH" knob clockwise to skip to the beginning of the next track; rotate the knob counterclockwise to skip to the beginning of the current track. Rotate the knob counterclockwise again to go to the previous selection.

14. Fast Forward / Fast Reverse

Press the right arrow of the "SEEK" button for more than one second to fast forward. Release the button to stop. To fast reverse, press the left arrow for more than one second and release the button to stop.

15. Scan

Press the "SCAN" button to begin previewing the first 10 seconds of each track on the disc. Normal playback will resume after all tracks have been scanned. Press the "SCAN" button again to stop scanning and listen to the track being previewed.

MP3/WMA Formatted CD Player Functions

16. Folder Selection

Press the up arrow of the "FOLDER" button to select the next folder. Press the down arrow to go back to the first music file. Quickly press the down arrow again to go back to the previous folder.


17. Page Scroll

Press the "TEXT" button to select title display. Press and hold again to scroll through the title, 8 characters at a time up to a maximum of 64 characters.

18. Display

Press and hold the "TEXT" button during playback to change the display to show the play time, disc title, artist name and track title. If the disc is formatted with MP3/WMA's, press the "TEXT" button to change the display to show play time, folder name and file name.

Controls

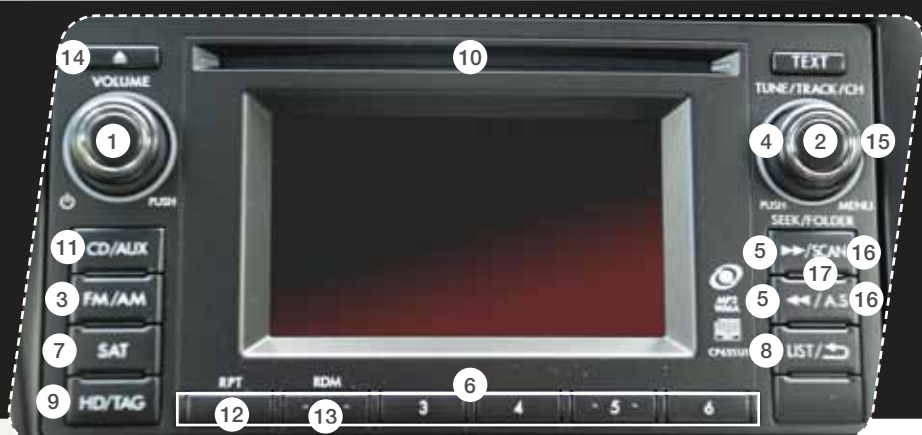

AM/FM Stereo, HD Radio™ with Single Disc CD/MP3/ WMA Player (if equipped)

Radio Functions

1. Power / Volume Control

Press the power / volume control knob for on or off; rotate the knob to control the volume.

2. Bass, Treble, Balance and Fader

Press the “TUNE/TRACK/CH” button to display the setting menu. Using the “TUNE/TRACK/CH” dial you can adjust the settings on the Bass, Mid, Treble, Balance and Fader.

3. FM / AM

Press the “FM/AM” button to choose FM1, FM2, FM-AS, AM or AM-AS reception.

4. Tune / Track

Rotate the “TUNE/TRACK/CH” knob clockwise to increase the tuning frequency; rotate the knob counterclockwise to decrease it.

5. Seek

Press the right or left arrow of the “SEEK” button to pick up the next highest or lowest frequency.

6. Presets

You can save up to six favorite stations for each band – FM1, FM2, FM-3 and AM. Select a frequency and press one of the preset buttons for more than 1.5 seconds to store it.

7. Satellite Radio

An optional satellite radio tuner and antenna can be connected to this audio unit. You can hear satellite radio programs by pressing the “SAT” button after connecting optional equipment. To receive satellite radio service, it is necessary to enter into a separate contract with a satellite radio provider.

8. PTY / CAT

Press the "LIST" button to change to program type selection mode. The PTY group that you are currently listening to is displayed for 10 seconds.

9. HD/TAG

Press the "HD/TAG" button while receiving FM radio (except analog broadcasts) to hear the stations digitally.

CD Player Functions**10. Load**

Insert a disc into the slot. The CD will automatically be drawn in and will begin play at the first track.

11. Play CD

Press the "CD/AUX" button and playback will begin.

12. Repeat

Press the "RPT" button once to repeat the current track, two presses to repeat the current folder and a third press to turn off repeat.

13. Random

Press the "RDM" button once to hear all the tracks on the disc in random order. Two presses to randomize folders on a CD, and a third press to turn off random.

14. Eject

Press the button to eject the disc.

15. Forward / Reverse

Rotate the "TUNE/TRACK/CH" knob clockwise to skip to the beginning of the next track; rotate the knob counterclockwise to skip to the beginning of the current track. Rotate the knob counterclockwise again to go to the previous selection.

16. Fast Forward / Fast Reverse

Press and hold the right arrow of the "SEEK" button to fast forward. Release the button to stop. To fast reverse, press and hold the left arrow, release the button to stop.

MP3/WMA Formatted CD Player Functions**17. Folder Selection**

Press the right arrow of the "FOLDER" button to select the next folder. Press the left arrow to go back to the first music file. Quickly press the left arrow again to go back to the previous folder.

Controls

Steering Wheel Audio Controls (if equipped)

- Press the “+” button to increase the volume. Press the “-” button to reduce the volume.

- Press the button to select the desired audio mode – FM, AM, SAT, CD, AUX, MEDIA.



- With any of the radio modes selected, push the up button or the down button to find the desired frequency. In CD mode, push the up button or the down button to skip forward or back a track.



Aux Jack

The aux jack is located in the center console. You can connect a portable music player to the auxiliary jack and hear the music stored on it through the vehicle speakers. Press the “CD/AUX” button located on the audio system; to select the auxiliary mode.



USB Storage Device / iPod® (if equipped)

You can connect a USB equipped portable music player to the USB connector and hear the music stored on it through the vehicle speakers. Press the “CD/AUX” button located on the audio system repeatedly until the USB / iPod® mode is selected.

Cruise Control

- To activate the cruise control, press the “CRUISE” button. The “CRUISE” indicator light on the instrument panel will turn on. To quit cruise control, press the “CRUISE” button again.

- To resume your speed after canceling, press the “RES/ACC” button.



- To cancel the cruise control, push the brake pedal or press the “CANCEL” button. If you have a manual transmission, you can push in the clutch pedal or shift the selector lever into the “N” (Neutral) position (AT and MT models).

- Press the accelerator pedal until your vehicle reaches the desired speed. Press the “SET/COAST” button. Ease off the accelerator pedal. Your vehicle will maintain the desired speed.

Increase speed

Press the “RES/ACC” button, hold until your vehicle reaches the desired speed, and release. To increase speed using the accelerator pedal, press the pedal until you reach the desired speed. Press the “SET/COAST” button to set the speed.

Decrease speed

Press the “SET/COAST” button, hold until your vehicle slows to the desired speed, and release. To decrease the speed using the brake pedal, press the pedal to release cruise control temporarily. When the speed decreases to the desired speed, press the “SET/COAST” button to set the speed.

While Operating

Vehicle Dynamics Control OFF Switch

Pressing the switch to deactivate the Vehicle Dynamics Control system can help in the following situations:

- A standing start on a steeply sloping road with a snowy, gravel-covered, or otherwise slippery surface.
- When the vehicle's wheels are stuck in mud or deep snow.



Fuel Filler Lid Release

The vehicle is equipped with a fuel filler lid release.

To open the fuel filler lid, pull the fuel filler lever up and release.





Automatic Transmission Shift Mode

4-Speed Automatic Transmission with SPORTSHIFT® Manual Control

The automatic transmission gives you ultimate control with three different driving modes: Normal Mode, Sport Mode and Manual Mode.

Normal Mode

When the selector lever is in the “D” (Drive) position, the transmission is in Normal shift mode. The shift position indicator on the instrument panel shows “D” and the transmission automatically shifts into a suitable forward gear.

Sport Mode

SPORT mode is used when power is needed for rapid acceleration or for uphill driving. Moving the selector lever left into the manual gate ① from “D” (Drive) position causes the transmission to change into Sport Mode.

SPORTSHIFT® Manual Mode

In SPORTSHIFT® Manual Mode, you select the desired gear position to obtain necessary acceleration and engine braking. While in SPORT Mode, move the selector lever up ② or down ③ to select Manual Mode. The shift position indicator shows the selected gear position.

When Manual Shifting Operation is Possible


- Arrow-shaped lights in the center of the instrument panel show whether an upshift is possible and whether a downshift is possible.
- Both arrows are on: Upshifting and downshifting are both possible.
- Up arrow only is on: Only upshifting is possible.
- Down arrow only is on: Only downshifting is possible.

Safety / In Case of Emergency



Child Restraint System

For maximum safety, first carefully read the LATCH system instructions from the device manufacturer, as well as the installation instructions in your Owner's Manual, to properly install the LATCH compatible restraint system. Use the appropriate seatbelts or anchorages provided in your vehicle. Children age 12 and under must properly occupy the rear seat at all times.

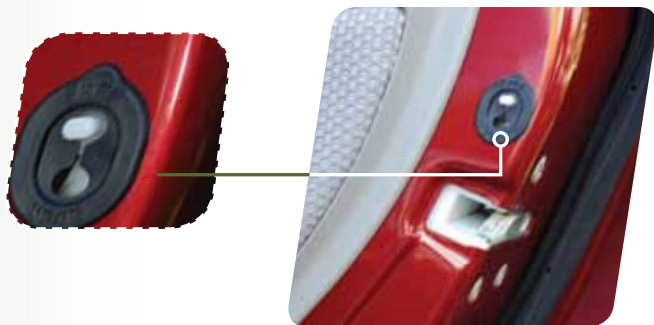

Child Safety Locks

The child safety locks are located on the inside edges of the rear doors. In the locked position, the rear doors can only be opened from the outside.



Location of Spare Tire and Jack

A jack and other maintenance tools are stored in the tool bucket in the center of the spare tire, located in the trunk or cargo area. Raise the center lid and remove the bucket from the center of the spare tire. Take the jack out of the bucket. The jack handle is stowed on the back of the center lid of the cargo area.

Towing Your All-Wheel Drive Vehicle

Since all-wheel drive distributes engine power to all four wheels, improper towing will severely damage your AWD system. A flatbed truck is the only recommended way to properly transport your AWD vehicle. If towing is necessary, it is best done by your Subaru dealer or a commercial towing service.

Subaru Roadside Assistance

Subaru Roadside Assistance is free and standard on every 2011 Subaru vehicle. Coverage is automatic; there are no forms to complete. Subaru Roadside Assistance is available anytime during the 3-year/36,000-mile Subaru Limited Warranty, whichever comes first.* A Subaru Roadside Assistance decal has been affixed to the driver's door window.

Subaru Roadside Assistance: 1-800-261-2155

Exclusions

Specifically excluded from Subaru Roadside Assistance coverage are service requests or claims resulting from: accidents, vandalism, acts of God, violation of any laws, or vehicle modifications not recommended by the manufacturer.

*See your dealer for details

Additional Information



MY.SUBARU.COM

Your Subaru vehicle comes with a unique online resource that helps make your ownership experience more convenient and enjoyable. MySubaru.com is a website that you can personalize and offers useful features and content that makes it easy for you to manage your vehicle care and enjoy all the benefits of Subaru ownership. Log on to MySubaru.com to access features such as: automated service history, e-mail maintenance reminders, online Owner's Manual, warranty information, maintenance schedules and much more...

Access your site today @ MySubaru.com

Fuel

- 2.5 L DOHC Non-turbo models use regular unleaded gasoline with an octane rating of 87 AKI or higher.
- 2.5 L DOHC Turbo models use premium unleaded gasoline with an octane rating of 91 AKI or higher.

Fuel Capacity

- 16.9 US gal (64 liters, 14.1 Imp gal)
- When the low fuel indicator light is displayed on the instrument panel approximately 2.6 U.S. gallons of fuel remain.
- If you have recently fueled your vehicle, the Check Engine light on the instrument panel may stay on due to a missing or loose fuel filler cap (the cap should be tightened until a click is heard).

Engine Oil

Use only the following oils:

- ILSAC GF-4 or GF-5, which can be identified with the ILSAC certification mark (Starburst mark).
- Or API classification SN or SM with the words “ENERGY CONSERVING”.
 - 2.5 L DOHC Non-turbo models use 0W 20 synthetic, replacement interval 7,500 miles; no requirement at the first 3,000 miles.
 - 2.5 L DOHC Turbo models use 5W 30 synthetic, replacement interval 7,500 miles; no requirement at the first 3,000 miles.

Engine Oil Capacity

- 2.5 L DOHC Non-turbo models: 5.5 US qt (5.2 liters, 4.6 Imp qt)
- 2.5 L DOHC Turbo models: 4.4 US qt (4.2 liters, 3.7 Imp qt)

Notes

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

Notes

This image shows a single page of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

Notes

This image shows a single page of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There is no handwriting or other markings on the paper.

Subaru of America, Inc., Subaru Plaza,
P.O. Box 6000, Cherry Hill, NJ 08034-6000

MSA5B1104A
Printed in USA 11/10
Issued 09/10



Subaru Delivery Checklist

Owner Information

VEHICLE ID #	
DELIVERY DATE	
OWNER NAME	
OWNER NAME	

Owner Resources & Warranty

- ☐ Present the Subaru Owner's Manual & Quick Reference Guide (detailed review in "Operation & Controls" section)
- ☐ Review Subaru Roadside Assistance, Owner Cards & Provide Toll-Free Number 1-800-261-2155
- ☐ Explain 3/36 BASIC Warranty / 5/60 Powertrain Warranty / Explain Wear Items & Adjustments / PZEV (if applicable) / Review Rust Perforation Warranty / Tire Warranty
- ☐ Review Service & Maintenance Schedules & Terms
Explain Normal vs. Extreme Schedules (if applicable)
- ☐ Review New Owner's MY.SUBARU.COM Website
- ☐ Review The Subaru Mastercard Program from CHASE & Explain The Card Benefits
- ☐ Explain Dealership's New Owner Follow Up Procedure

Customer Signature

- ☐ Review Dealership Service Department Location, Payment Options & Hours of Operation
- ☐ Introduce The Subaru Service Advisor & Provide Their Business Card
- ☐ Explain Dealership Service Appointment Scheduling & Early Morning Service Drop Off Procedures
- ☐ Review Dealership Parts Department Location & Hours

Vehicle Condition

- ☐ Exterior Condition Approval (New Owner indicated exterior of vehicle is clean & undamaged)
- ☐ Interior Condition Approval (New Owner indicates interior of vehicle is clean & undamaged)
- ☐ Operational Condition Approval (New Owner has driven vehicle & approves it is ready for delivery)

NEW OWNER SIGNATURE

SALES CONSULTANT SIGNATURE

SALES MANAGER SIGNATURE

Fold back and remove this checklist from the QRG. Place this completed checklist in the deal jacket for future reference. Additional copies of this checklist can be made by photocopying.

Operation & Controls

Please use & reference the **SUBARU OWNER'S MANUAL**
& **QUICK REFERENCE GUIDE**

OPERATION & CONTROLS

- ☐ Review Master & Valet Keys
- ☐ Show Keyless Entry, Alarm System & Remote Start (if equipped)
- ☐ Show Hood & Gas Door Releases
- ☐ Show Yellow Caps & Explain Checking & Filling of Vehicle Fluids
- ☐ Show Fuel Filler Door & Gas Cap Operation
- ☐ Show Location of Both Fuse Boxes

REAR & SIDE

- ☐ Show Trunk Release & Valet Feature (sedans only)
- ☐ Show Spare Tire, Tools & Jack Location
- ☐ Explain Temporary Spare Tire Usage & Limitations
- ☐ Explain AWD Towing Requirements & Limitations
- ☐ Show LATCH System & Tethers
- ☐ Show Child Safety Lock Operation

INTERIOR

- ☐ Explain Operation of Manual Transmission & Incline Start Assist (if equipped)
- ☐ Explain Operation of Automatic Transmission & Review Sportshift Modes (if equipped)
- ☐ Explain the Subaru Advanced Frontal Airbag System, Side Airbags (SRS) & Side-Curtain Airbags (SRS)
- ☐ Show Seatbelt & Head Restraint Functions
- ☐ Show Tilt Steering Column & Telescopic Feature (if equipped)
- ☐ Show All Weather Package - Heated Front Seats, Windshield Wiper De-Icer & Heated Side Mirrors (if equipped)

DRIVER CONTROLS & OPERATION

- ☐ Show Power Windows, Door Locks & Side-View Mirror Operation
- ☐ Explain Cruise Control & Power Moonroof Operation (if equipped)
- ☐ Show Headlights, Daytime Running Lights, Parking Lights, Hazard Lights & Fog Lights (if equipped)
- ☐ Show Interior Lighting, Map Light & Clock
- ☐ Show Front & Rear Wiper & Washer Controls
- ☐ Show Climate Control System Including Front & Rear Defrosters
- ☐ Show & Explain Operation of VDC Control Switch
- ☐ Review Instrument Panel Gauges & Warning Lights
- ☐ Explain Tire Pressure Monitoring System Light
- ☐ Show Audio System, Station Presets, Tone, Balance & Fade Controls
- ☐ Activate Satellite Radio System (if equipped)
- ☐ Show GPS Navigation System (if equipped)
- ☐ Explain Operation of Other Vehicle Options, Equipment, or Genuine Subaru Accessories Not Referenced Above Where Applicable