

Subaru of America, Inc., Subaru Plaza,
P.O. Box 6000, Cherry Hill, NJ 08034-6000

MSA5B1105A
Printed in USA 10/10
Issued 10/10



Impreza WRX & Impreza WRX STI

2011
Quick Reference Guide.





Complete U.S. specifications and illustrations may not have been available at time of publication. Specifications are based on the latest product information available at time of publication. Some images shown are for illustration purposes only. Some equipment shown may be optional at extra cost. Specific options may be available only in combination with other options. Specific combinations of equipment or features may vary from time to time and by geographic area. Certain accessories and equipment may not be available at the time of publication.

This Quick Reference Guide applies to all Impreza WRX & Impreza WRX STI models. Therefore, some explanations may be for equipment not installed on your vehicle. Subaru of America, Inc., reserves the right to change or discontinue at any time, without notice, prices, colors, materials, equipment, accessories, specifications, models and packages without incurring any obligation to make the same or similar changes on vehicles previously sold. Colors shown may vary due to reproduction process.

For detailed operating and safety information, please consult the Owner's Manual.

Subaru, Outback, Legacy, Forester, Impreza, WRX, WRX/STI, BOXER, SPORTSHIFT, SI-DRIVE, Lineatronic, Alcantara, Circle Surround, Audyssey MultiEQ, XM and Sirius are registered trademarks.

All rights reserved. Contents may not be reprinted or electronically reproduced in whole or in part without prior written approval of Subaru of America, Inc.

© 2010 Subaru of America, Inc.

Table of Contents

Getting Started	2 - 3
Instrument Panel	4 - 7
Gauges	8 - 11
Personalize	12 - 13
Controls	14 - 23
While Operating	24 - 31
Safety/In Case of Emergency	32 - 33
Additional Information	34 - 35

Remote Keyless Entry

Lock/Arm

- Press to lock all doors and rear gate or trunk.
- If any of the doors or the rear gate (or trunk) are not fully closed, an electronic chirp will sound five times and the hazard lights will flash five times to alert you that the doors or the rear gate are not properly closed.
- To activate the vehicle finder function, press three times (within five seconds). If you are within 30 feet of the vehicle, the horn will sound one time and the hazard lights will flash three times.



Unlock/Disarm

- Press once to unlock the driver's door.
- Press twice (within five seconds) to unlock all doors.
- When the "Unlock/Disarm" button is pressed, the dome and map lights will illuminate if the dome light switch is in the middle position.

Unlocking the Rear Gate/Opening the Trunk Lid

Press the button to unlock the rear gate (5-Door). Press and hold to unlock the trunk (Sedan).

Trunk Lid Release Lock (Sedan only)

Prevent unauthorized entry into the trunk by locking the trunk release lever. Insert the ignition key into the key cylinder and turn the key counterclockwise to the "LOCK" position.



Seating



Seat Controls

1. Forward/Backward

Pull up on the lever below the front of the driver's seat to move the seat forward or backward.

2. Raise/Lower Seat Cushion

To adjust the height of the driver's seat, push or pull the cushion adjustment lever located on the lower left front of the seat.

3. Recline Seatback

To adjust the seatback to the desired position, pull up on the recline lever located on the lower left rear of the driver's seat or lower right rear of the passenger's seat. Do not adjust seats while driving.

Heated Seats (if equipped)

The switches are located on the center console between the driver and passenger seats. Choose low (bottom of switch) for normal heating or high (top of switch) for rapid heating. Choose the center position to turn off the seat heaters.

Folding Down the Rear Seats

Lower the headrests. Pull up on the release knob on the seat side that you want to fold down. To return the seatback to its original position, raise the seatback until it locks into place and make sure that it is securely locked.



Impreza WRX Instrument Panel



pg. 14 pg. 22 pg. 12

pg. 8-11 pg. 22

pg. 14 pg. 18-21 pg. 16-17 pg. 25

Clock
Press the “+” button to advance the time or the “-” button to reverse the time. Vehicles with a navigation system, please refer to the separate “Operating Instructions for Navigation System.”

Impreza WRX STI Instrument Panel



pg. 14

pg. 22 pg. 24

pg. 8-11

pg. 22

pg. 14

pg. 18-21

pg. 16-17

pg. 25

Clock

Press the “+” button to advance the time or the “-” button to reverse the time. Vehicles with a navigation system, please refer to the separate “Operating Instructions for Navigation System.”

Getting Started

Instrument Panel

Gauges

Personalize

Controls

While Operating

Safety / In Case of Emergency

Additional Information

Impreza WRX Gauges

Immediate Attention Caution Informational



 Seatbelt warning	BRAKE /  Brake system	 Vehicle Dynamics Control OFF	 Turn signals
 Front passenger seatbelt warning	 High beam indicator light	CHECK ENGINE /  CHECK ENGINE / Malfunction indicator	 Front fog light indicator light (if equipped)
AIR BAG SRS airbag system	AT OIL TEMP /  AT OIL TEMP (AT models)	 Tire pressure warning light	 Headlight indicator light
 SECURITY Security indicator light	ABS /  ABS warning	ON /  Front passenger frontal airbag ON	CRUISE /  Cruise control indicator light
 Door open	 Low fuel	OFF /  Front passenger frontal airbag OFF	SET /  Cruise control set indicator light
 Charge warning	AWD /  All-Wheel Drive (AT models)	SPORT /  SPORT Mode (AT models)	
 Oil pressure warning	 Vehicle Dynamics Control/Vehicle Dynamics Control operation	 Hill Start Assist Off	

Impreza WRX STI Gauges

Immediate Attention Caution Informational



 Seatbelt warning	BRAKE /  Brake system	 Tire pressure warning light	CRUISE Cruise control indicator light
 Front passenger seatbelt warning	 High beam indicator light	ON /  Front passenger frontal airbag ON	SET Cruise control set indicator light
AIR BAG SRS airbag system	ABS /  ABS warning	OFF /  Front passenger frontal airbag OFF	AUTO Driver's control center differential auto indicator
 Security indicator light	 Low fuel	 Hill Start Assist Off	[S] Sport (S) mode
 Door open	 Vehicle Dynamics Control/Vehicle Dynamics Control operation	 Turn signals	[I] Intelligent (I) mode
 Charge warning	 Vehicle Dynamics Control OFF / Traction Control OFF	 Front fog light indicator light (if equipped)	[S#] Sport Sharp (S#) mode
 Oil pressure warning	CHECK ENGINE CHECK ENGINE / Malfunction indicator	 Headlight indicator light	

Personalize



Tilt and Telescopic Steering Column

Push the lever down firmly to adjust the vertical and lengthwise position of the column; firmly push the lever back up to lock the column in place. Do not adjust while driving.

Power Exterior Mirrors

Push the mirror selection switch to the “L” side to adjust the left-hand mirror or to the “R” side to adjust the right-hand mirror. Push and hold the direction mirror control switch in the direction you want to move the mirror. Push the mirror selection switch back to the middle to prevent unintended operation.



Power Moonroof (if equipped)

 
With the moonroof in the fully closed position, press the switch ④ to tilt the moonroof up. Press and hold the switch ③ to lower the moonroof. Press the switch ② to fully open the moonroof. Press the switch ① to close the moonroof. To stop the moonroof in a midway position while opening or closing, momentarily press the switch to the ① side or ② side.

Controls

Light Controls

Push up for right turn signal.

Push down for left turn signal.

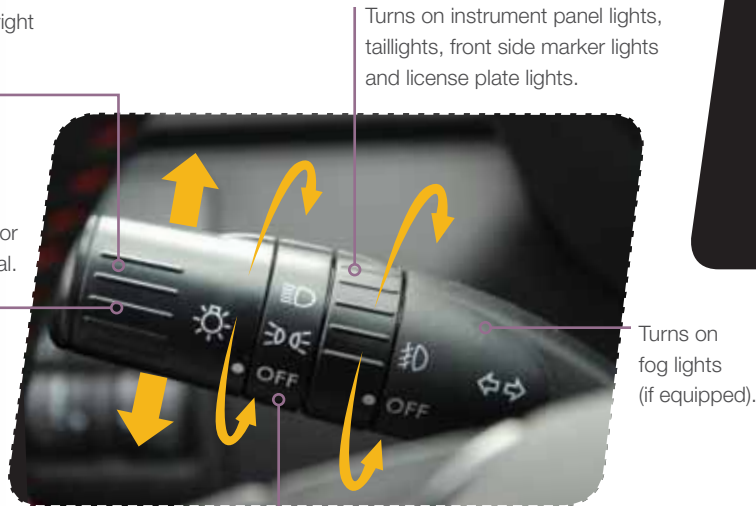

Turns on headlights, instrument panel illumination, front side marker lights, taillights and license plate lights.

 
Illumination Brightness Control

While the light switch is on, rotate the dial downward to dim the instrument panel illumination. Rotate the dial upward to make the illumination brighter. When the dial is fully rotated upward, the instrument panel illumination becomes full bright.



Headlight Beam Leveler (if equipped)

Your vehicle's High-Intensity Discharge (HID) headlights generate more light than conventional halogen headlights. Therefore, a driver of an oncoming vehicle may experience too much glare when your headlight beam height adjustment is high because the vehicle is carrying a heavy load. The headlight beam leveler can be used to adjust beam height to avoid such a condition. To lower the beam, turn the knob to the higher numbers.

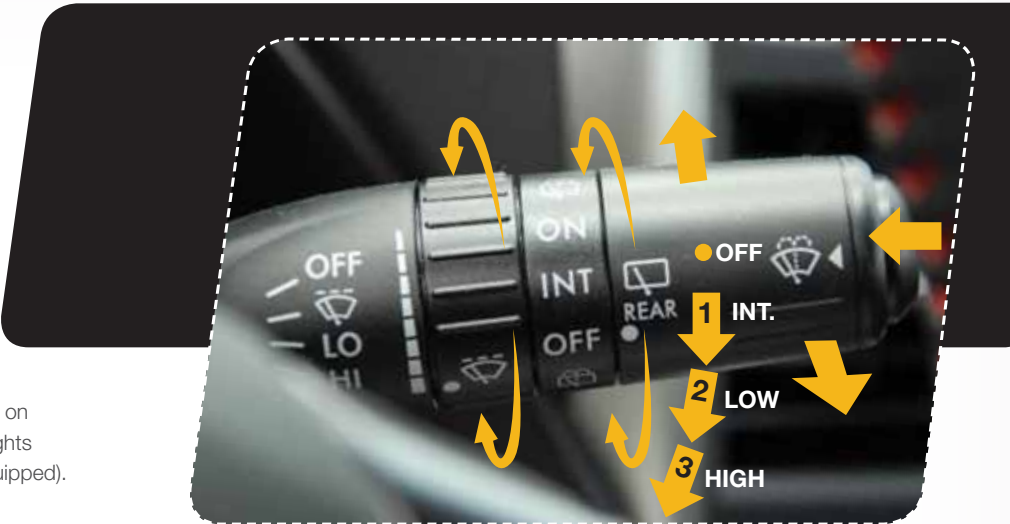

Windshield Wipers

To turn on the wipers, press the wiper control lever down one level for intermittent, two levels for low, or three levels for high speed. Return the lever to the "OFF" position to stop the wipers. For a single wipe, pull the lever toward you. To spray washer fluid, press and hold the button at the end of the lever.

To operate the rear wiper, rotate the end of the knob upward to the intermittent, continuous, or wash position. When the rear wiper is off, rotate the knob downward to wash and wipe the rear window.

Daytime Running Lights

Daytime running lights are standard on your vehicle. Only a reduced brightness high beam will be automatically turned on when the engine has started and the parking brake is fully released or the light switch is in the "OFF" or "3005" position. The brightness of the illumination of the high beam headlights is reduced by the daytime running light system. You must always switch on your headlights when it's dark outside by turning the light switch to the "3005" position.



Automatic Climate Control

1. Air Flow Control Dial

On the automatic setting, the system determines the airflow location to achieve the desired temperature or you can choose the direction of air flow. Rotate the dial for the desired air flow position.

Defrost / Defog

To clear the windshield and front door windows of fog or frost, rotate the air flow control dial to the defrost position, set the temperature control to the red position, and set the fan speed control to the fastest speed.

2. Rear Window Defogger Button

Press the rear window defogger button to turn on the defogger. The defogger will automatically shut off after about 15 minutes. If the window clears before that time, you can press the button again to turn it off.

3. Fan Speed Control Dial

On the automatic setting, the system determines the fan speed to achieve the desired temperature or you can rotate the fan speed control dial to select one of seven fan speeds.

4. Air Conditioning Button

Press the "A/C" button to activate the air conditioning. Press it again to turn off the air conditioning.

5. Recirculated / Outside Air Button

In the automatic mode, the system will determine if recirculated air is needed to achieve a desired temperature. In manual mode, press the air inlet selection button to prevent outside air from being drawn into the passenger compartment. If the button is pushed

in, press it again to draw outside air into the compartment. TO PREVENT WINDSHIELD FOGGING, DO NOT REMAIN IN THE RECIRCULATED MODE FOR AN EXTENDED PERIOD OF TIME.

6. Temperature Control Dial

Rotate the temperature control dial from 65 for cool to 85 for warm.

Controls



AM/FM Stereo with Single Disc CD/MP3/WMA Player

Radio Functions

1. Power / Volume Control

Press the power / volume control knob for on or off; rotate the knob to control the volume.

2. Bass, Treble, Balance and Fader

Each press of the “TUNE/TRACK/CH” button will cycle you through Bass, Midrange, Treble, Fade or Balance. Rotate the “TUNE/TRACK/CH” knob to adjust the desired level.

3. FM / AM

Press the “FM/AM” button to choose FM1, FM2, FM3 or AM reception.

4. Tune / Track

Rotate the “TUNE/TRACK/CH” knob clockwise to increase the tuning frequency; rotate the knob counterclockwise to decrease it.

5. Seek

Press the right or left arrow of the “SEEK” button to pick up the next highest or lowest frequency.

6. Presets

You can save up to six favorite stations for each band – FM1, FM2, FM3 and AM. Select a frequency and press one of the preset buttons for more than 1.5 seconds to store it.

7. Satellite Radio

An optional satellite radio tuner and antenna can be connected to this audio unit. You can hear satellite radio programs by pressing the “SAT” button after connecting optional equipment. To receive satellite radio service, it is necessary to enter into a separate contract with a satellite radio provider.

8. PTY / CAT

Press the “PTY/CAT” button to change to program type selection mode. The PTY group that you are currently listening to is displayed for 10 seconds.

CD Player Functions

9. Load

Insert a disc into the slot. The CD will automatically be drawn in and will begin play at the first track.

10. Play CD

Press the “CD/AUX” button and playback will begin.

11. Repeat / Random

Press the “RPT/RDM” button once to repeat the current track, two presses to repeat the current folder and a third press to turn off repeat.

Press and hold the “RPT/RDM” button once to randomize folders on a CD. Two presses to hear all the tracks on the disc in random order, and a third press to turn off random.

12. Eject

Press the button to eject the disc.

13. Forward / Reverse

Rotate the “TUNE/TRACK/CH” knob clockwise to skip to the beginning of the next track; rotate the knob counterclockwise to skip to the beginning of the current track. Rotate the knob counterclockwise again to go to the previous selection.

14. Fast Forward / Fast Reverse

Press the right arrow of the “SEEK” button for more than one second to fast forward. Release the button to stop. To fast reverse, press the left arrow for more than one second and release the button to stop.

15. Scan

Press the “SCAN” button to begin previewing the first 10 seconds of each track on the disc. Normal playback will resume after all tracks have been scanned. Press the “SCAN” button again to stop scanning and listen to the track being previewed.

MP3/WMA Formatted CD Player Functions

16. Folder Selection

Press the up arrow of the “FOLDER” button to select the next folder. Press the down arrow to go back to the first music file. Quickly press the down arrow again to go back to the previous folder.

17. Page Scroll

Press the “TEXT” button to select title display. Press and hold again to scroll through the title, 8 characters at a time up to a maximum of 64 characters.

18. Display

Press and hold the “TEXT” button during playback to change the display to show the play time, disc title, artist name and track title. If the disc is formatted with MP3/WMA, press the “TEXT” button to change the display to show play time, folder name and file name.



AM/FM Stereo with Single Disc CD/MP3/WMA Player

Radio Functions

- 1. Power / Volume Control**
Press the power / volume control knob for on or off; rotate the knob to control the volume.
- 2. Equalizer, Balance / Fader, Surround**
Press the “AUDIO” button, then touch SETTING on the screen. There you can adjust settings for the equalizer, balance / fader, surround, speaker set up and more.
- 3. MODE / TUNE**
Press the “MODE / TUNE” control knob to choose FM or AM reception. Rotate the “MODE / TUNE” knob clockwise to increase the tuning frequency; rotate the knob counterclockwise to decrease it.

- 4. Seek**
Press the up or down arrow of the “SEEK” button to pick up the next highest or lowest frequency.
- Presets**
You can save up to six favorite stations for each band – FM1, FM2, and AM. Select a frequency and touch one of the presets for more than 1.5 seconds to store it.
- 5. Satellite Radio**
An optional satellite radio tuner and antenna can be connected to this audio unit. You can hear satellite radio programs by pressing the “AUDIO / SAT” button after connecting optional equipment. To receive satellite radio service, it is necessary to enter into a separate contract with a satellite radio provider.

PTY / SEARCH
While on one of the FM or AM audio screens, touch “PTY SEARCH” to search by program type. Choose from one of the PTY categories shown.

CD Player Functions

- 6. Load**
Press the “TILT” button, then touch “NO DISC DVD/CD”. The screen will open up and then insert a disc into the DVD/CD slot. The CD will automatically be drawn in, the screen will close and will begin play at the first track.

Play CD
Press the “AUDIO” control knob until the CD screen appears and playback will begin.

Repeat / Random
While listening to a CD, touch “RPT” to repeat the current track. Touch again to turn off repeat. Touch “RDM” to randomize the songs on the CD. Touch again to turn off random.

- 7. Eject**
Press the “TILT” button then touch “DVD/CD”. The screen will open up and then eject the disc; remove the disc. Press the “TILT” button again to close the screen.
- 8. Forward / Reverse**
Press the up arrow “SEEK” button to skip to the beginning of the next track. Press the down arrow “SEEK” button to skip to the beginning of the current track. Press the down arrow “SEEK” button again to go to the previous track.

Fast Forward / Fast Reverse
Press and hold the up arrow “SEEK” button to fast forward. Release the button to stop. Press and hold the down arrow “SEEK” button to fast reverse and release the button to stop.

- 9. Scan**
Press the “SCAN” button to begin previewing the first 10 seconds of each track on the disc. Normal playback will resume after all tracks have been scanned. Press the “SCAN” button again to stop scanning and listen to the track being previewed.

MP3/WMA Formatted CD Player Functions

Folder Selection
Touch “+” or “-” on the screen to select next or previous folder. Or touch “LIST” to view all of the folders on the CD.

Controls

Steering Wheel Audio Controls (if equipped)

- Press the “+” button to increase the volume. Press the “-” button to reduce the volume.
- Press to shut off the sound.
- With any of the radio modes selected, push the switch up or down to find the desired frequency. In CD mode, push the switch up or down to skip forward or back a track.
- Press the button to select the desired audio mode – FM, AM, SAT, CD, AUX.



Aux Jack or RCA A/V Jack (if equipped)

The aux jack is located in the center console. You can connect a portable music player to the auxiliary jack and hear the music stored on it through the vehicle speakers. Press the “CD/AUX” button located on the audio system to select the auxiliary mode.

USB Storage Device / iPod® (if equipped)

You can connect a USB equipped portable music player to the USB connector and hear the music stored on it through the vehicle speakers. Press the “CD/AUX” button repeatedly until the USB / iPod® mode is selected.

Cruise Control

- To activate the cruise control, press the “CRUISE” button. The “CRUISE” indicator light on the instrument panel will turn on. To quit cruise control, press the “CRUISE” button again.
- To resume your speed after canceling, press the “RES/ACC” button.
- To cancel the cruise control, push the brake pedal or press the “CANCEL” button. If you have a manual transmission, you can push in the clutch pedal or shift the selector lever into the “N” (Neutral) position (AT and MT models).
- Press the accelerator pedal until your vehicle reaches the desired speed. Press the “SET/COAST” button. Ease off the accelerator pedal. Your vehicle will maintain the desired speed.



 
Increase speed

Press the “RES/ACC” button, hold until your vehicle reaches the desired speed, and release. To increase speed using the accelerator pedal, press the pedal until you reach the desired speed. Press the “SET/COAST” button to set the speed.

Decrease speed

Press the “SET/COAST” button, hold until your vehicle slows to the desired speed, and release. To decrease the speed using the brake pedal, press the pedal to release cruise control temporarily. When the speed decreases to the desired speed, press the “SET/COAST” button to set the speed.

While Operating

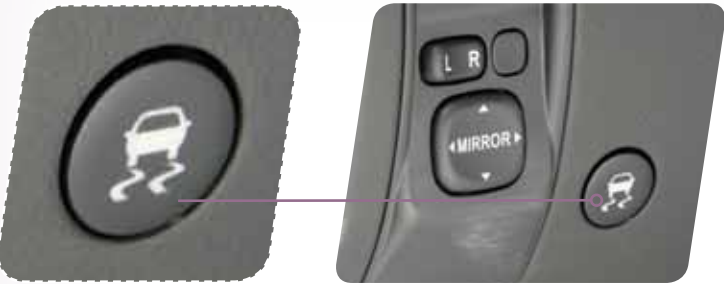

Vehicle Dynamics Control OFF Switch (Impreza WRX only)

Pressing the switch to deactivate the Vehicle Dynamics Control system can help in the following situations:

- A standing start on a steeply sloping road with a snowy, gravel-covered, or otherwise slippery surface.
- When the vehicle's wheels are stuck in mud or deep snow.

Multi-Mode Vehicle Dynamics Control Switch (Impreza WRX STI only)

Traction Mode

Press the switch to enter traction mode. This mode restricts the functions of the Traction Control System and Vehicle Dynamics Control system and thus delays utilizing their functions as a reaction to vehicle behavior. This mode should be used in driving situations where the vehicle dynamic performance will improve without decreasing engine torque control. The indicator light in the gauge cluster will turn green.

Vehicle Dynamics Control OFF Mode

Press and hold the switch to enter Vehicle Dynamics Control Off mode. This mode should be used in emergency situations, such as getting out of mud or deep snow. The indicator light in the gauge cluster will turn yellow.

Fuel Filler Lid Release

To open the fuel filler lid, pull the fuel filler lever up and release.



REV Alarm System (Impreza WRX STI only)

The REV alarm system automatically issues a warning using the REV indicator light whenever the tachometer needle enters the red zone. The REV alarm level can be set manually to an engine speed of your choosing between 2,000 and 7,000 rpm using the trip knob. The trip knob is also used to select a warning alarm buzzer in addition to the light. The REV alarm set level can be viewed in the odometer/tripmeter by turning the ignition switch to the "LOCK" position after the vehicle has stopped and pressing the trip knob. Please refer to your Owner's Manual for more detailed instructions on setting the engine speed alarm level and selecting the warning buzzer.



6-Speed Manual Transmission (Impreza WRX STI only)

This manual transmission is a fully synchromeshed 6 - forward and 1 - reverse speed transmission. Before you can shift into reverse gear, you must raise the slider ring and hold it in that position. Only pull the slider ring up when shifting into reverse gear.



Tires

The factory-fitted tires on your vehicle are summer tires. Summer tires are high-speed capability tires best suited for highway driving under dry conditions. Summer tires are inadequate for driving on slippery roads such as on snow-covered or icy roads. If you drive your vehicle on snow-covered or icy roads, we strongly recommend the use of winter (snow) tires for all four wheels. Please note that these originally

equipped summer tires offer advanced grip performance and will wear out quicker than ordinary tires.

Limited Slip Differential (Impreza WRX STI only)

The Limited Slip Differential (LSD) provides optimum distribution of power according to the difference in revolution between the right and left rear wheels that may be caused by certain driving conditions, thereby improving driving stability on snow-covered, muddy or other slippery roads or during high speed driving. Due to the nature of this mechanical Limited Slip Differential, the rear differential gears may make a vibration and/or noise when making turns. When servicing the LSD, use only specified gear oil.



Front Fender Vents

The front fender has functional side vents that increase air flow through the engine compartment. This provides additional cooling for the intercooler and engine.

Front Hood and Hood Scoop

Due to the lightweight material, a slight vibration is normal at higher speeds and will not affect the durability of the hood. To avoid deforming the front hood when closing, do not press down on the hood with your hands. You can release your hold on the front hood approximately 12 inches above the closing position and weight should cause it to close securely.



Driver Control Center Differential (DCCD) (Impreza WRX STI only)

 
This system adjusts the torque-distribution ratio between the front and rear wheels of the center differential to suit driving and road surface conditions. The DCCD can be operated automatically or manually. When the system is in the automatic mode, the

“AUTO” indicator light in the combination meter comes on. The DCCD can be taken out of “AUTO” mode and used manually by pressing the “AUTO MANU” switch located on the center console. Use the DCCD control switch located beside the parking brake lever for manual operation. Pressing the “AUTO MANU” switch again will return the system to “AUTO” mode. When using the system manually, if the control switch is set closer to or at the “Lock” position, the powertrain may



make a vibration or noise when the vehicle is in tight turns at slow speeds (torque binding). In addition, if the rear differential oil exceeds a certain temperature, the DCCD will automatically cancel the current torque-distribution ratio setting and adopts its minimum ratio.

Impreza WRX Engine Compartment

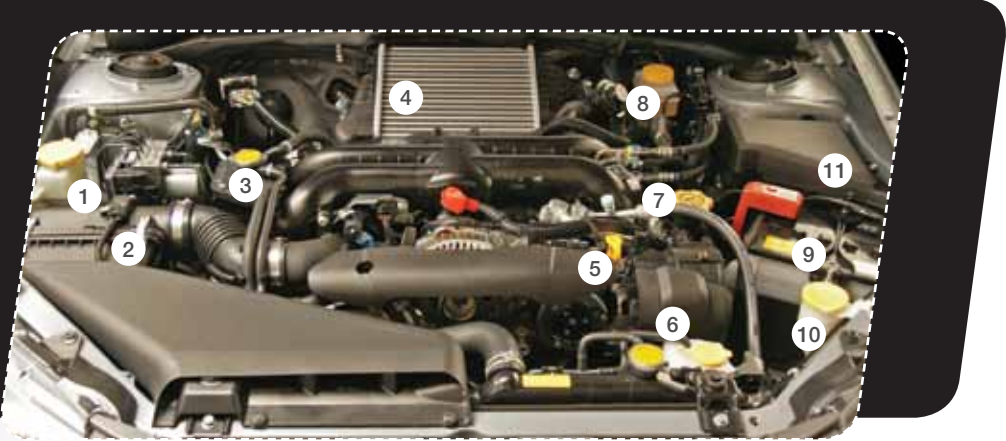

1. Power Steering Fluid Reservoir

Check your power steering fluid level monthly. The power steering fluid expands greatly as its temperature rises and the fluid level differs according to fluid temperature. Therefore, the reservoir tank has two different checking ranges for hot and cold fluid. Please refer to your Owner's Manual for details.

2. Air Cleaner Element

This element filters intake air. Follow the maintenance guidelines in your "Warranty and Maintenance" booklet. When necessary, replace this element with a genuine Subaru air cleaner.

3. Radiator Cap

If your engine overheats, safely pull off the road and stop your vehicle in a safe place. Never attempt to remove the radiator cap until the engine has been shut off and has fully cooled down. If steam is coming from the engine compartment, turn the engine off and move everyone away from the vehicle until it cools. Please refer to your Owner's Manual for details.

4. Intercooler

The intercooler is positioned behind the throttle body to cool intake air and improve supercharging efficiency. (Intake air passing through the turbocharger gets very warm, which could result in lower supercharging efficiency.) To prevent damage to this important system, avoid placing tools and other objects on the intercooler.

5. Engine Oil Level Gauge

Check the engine oil level at each fuel stop. Pull out the dipstick, wipe it clean, and insert it again. Pull it out and check the oil level. If it's below the lower level, add oil to bring the level up to the upper level. (Use only engine oil of the recommended grade and viscosity. Please refer to your Owner's Manual for oil recommendations and other important details.)

6. Engine Coolant Reservoir

Check your coolant level at each fuel stop. Observe the coolant level on the outside of the reservoir while the engine is cool. If the level is close to – or lower than – the "LOW" level mark, add coolant to the "FULL" level mark. If the reserve tank is empty, remove the radiator cap and refill as required. Please refer to your Owner's Manual for details.

7. Engine Oil Filler Cap

Change your oil according to the maintenance schedule in your "Warranty and Maintenance Booklet." Your engine oil must be changed more frequently when you drive on dusty roads, frequently make short trips, or when you drive in extremely cold weather.

8. Brake Fluid Reservoir

Check your brake fluid level monthly. Observe the fluid level on the outside of the reservoir. If the level is below the "MIN" level mark, add the recommended brake fluid (FMVSS No. 116, fresh DOT 3 or 4 brake fluid) to the "MAX" level mark. Use only brake fluid from a sealed container.

9. Battery

When your vehicle does not start due to a battery that has run down, the vehicle may be jump-started by connecting your battery to another battery with jumper cables.

Jump-starting is dangerous if done incorrectly. Please refer to your Owner's Manual for instructions. If you're unsure about how to jump-start your vehicle, please consult a competent mechanic.

 
10. Windshield Washer Tank

It's a good idea to check your washer fluid every time you stop for fuel. If the level is low, fill the windshield washer tank to the neck of the reservoir with windshield washer fluid. In cold weather, use a freeze resistant windshield washer fluid.

11. Main Fuse Box

Your Impreza WRX has two fuse boxes. One is located under the instrument panel, behind the fuse box cover on the driver's seat side. The other is housed in your engine compartment, as shown here. Fuses are designed to melt during an overload situation in order to prevent damage to the wiring harness and electrical equipment. If any lights, accessories or electrical controls fail to operate properly, inspect the corresponding fuse. If it has blown, replace it in accordance with the instructions in your Owner's Manual. The fuse puller and spare fuses are located in the main fuse box in the engine compartment.

Impreza WRX STI Engine Compartment

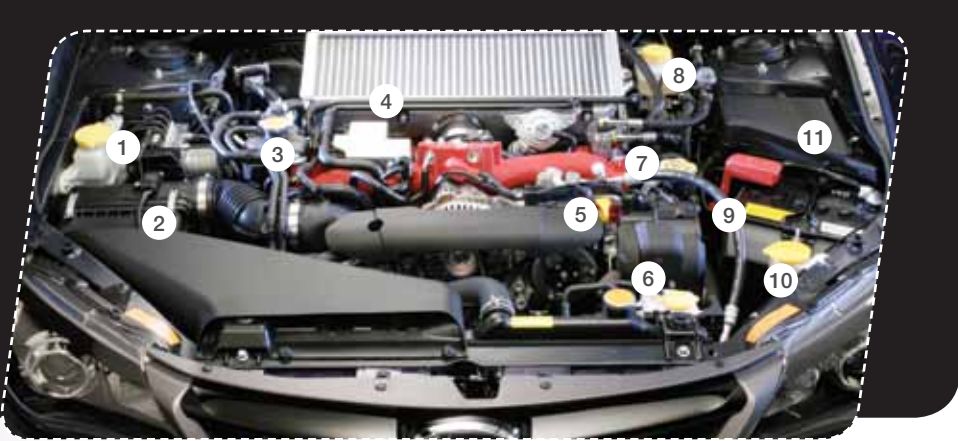

1. Power Steering Fluid Reservoir

Check your power steering fluid level monthly. The power steering fluid expands greatly as its temperature rises and the fluid level differs according to fluid temperature. Therefore, the reservoir tank has two different checking ranges for hot and cold fluid. Please refer to your Owner's Manual for details.

2. Air Cleaner Element

This element filters intake air. Follow the maintenance guidelines in your "Warranty and Maintenance" booklet. When necessary, replace this element with a genuine Subaru air cleaner.

3. Radiator Cap

If your engine overheats, safely pull off the road and stop your vehicle in a safe place. Never attempt to remove the radiator cap until the engine has been shut off and has fully cooled down. If steam is coming from the engine compartment, turn the engine off and move everyone away from the vehicle until it cools. Please refer to your Owner's Manual for details.

4. Intercooler

The intercooler is positioned behind the throttle body to cool intake air and improve supercharging efficiency. (Intake air passing through the turbocharger gets very warm, which could result in lower supercharging efficiency.) To prevent damage to this important system, avoid placing tools and other objects on the intercooler.

5. Engine Oil Level Gauge

Check the engine oil level at each fuel stop. Pull out the dipstick, wipe it clean, and insert it again. Pull it out and check the oil level. If it's below the lower level, add oil to bring the level up to the upper level. (Use only engine oil of the recommended grade and viscosity. Please refer to your Owner's Manual for oil recommendations and other important details.)

6. Engine Coolant Reservoir

Check your coolant level at each fuel stop. Observe the coolant level on the outside of the reservoir while the engine is cool. If the level is close to – or lower than – the "LOW" level mark, add coolant to the "FULL" level mark. If the reserve tank is empty, remove the radiator cap and refill as required. Please refer to your Owner's Manual for details.

7. Engine Oil Filler Cap

Change your oil according to the maintenance schedule in your "Warranty and Maintenance Booklet." Your engine oil must be changed more frequently when you drive on dusty roads, frequently make short trips, or when you drive in extremely cold weather.

8. Brake Fluid Reservoir

Check your brake fluid level monthly. Observe the fluid level on the outside of the reservoir. If the level is below the "MIN" level mark, add the recommended brake fluid (FMVSS No. 116, fresh DOT 3 or 4 brake fluid) to the "MAX" level mark. Use only brake fluid from a sealed container.

9. Battery

When your vehicle does not start due to a battery that has run down, the vehicle may be jump-started by connecting your battery to another battery with jumper cables.

Jump-starting is dangerous if done incorrectly. Please refer to your Owner's Manual for instructions. If you're unsure about how to jump-start your vehicle, please consult a competent mechanic.

 
10. Windshield Washer Tank

It's a good idea to check your washer fluid every time you stop for fuel. If the level is low, fill the windshield washer tank to the neck of the reservoir with windshield washer fluid. In cold weather, use a freeze resistant windshield washer fluid.

11. Main Fuse Box


Your Impreza WRX STI has two fuse boxes. One is located under the instrument panel, behind the fuse box cover on the driver's seat side. The other is housed in your engine compartment, as shown here. Fuses are designed to melt during an overload situation in order to prevent damage to the wiring harness and electrical equipment. If any lights, accessories or electrical controls fail to operate properly, inspect the corresponding fuse. If it has blown, replace it in accordance with the instructions in your Owner's Manual. The fuse puller and spare fuses are located in the main fuse box in the engine compartment.

Safety / In Case of Emergency

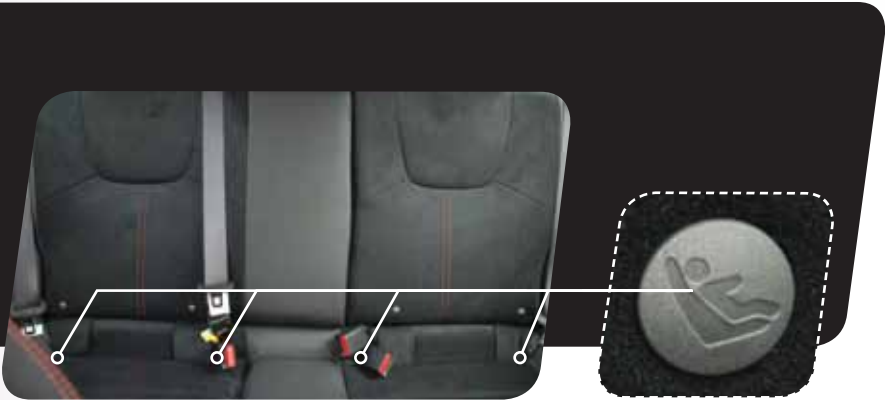

Child Restraint System

 For maximum safety, first carefully read the LATCH system instructions from the device manufacturer, as well as the installation instructions in your Owner's Manual, to properly install the LATCH compatible restraint system. Use the appropriate seatbelts or anchorages provided in your vehicle. Children age 12 and under must properly occupy the rear seat at all times.

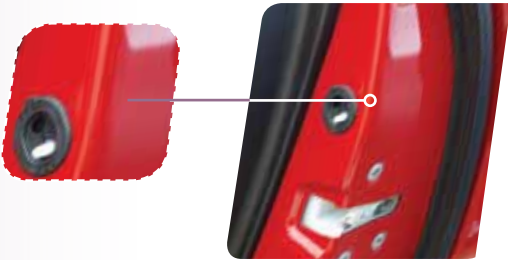

Child Safety Locks

The child safety locks are located on the inside edges of the rear doors. In the locked position, the rear doors can only be opened from the outside.



Internal Child Safety Trunk Release with Self-Illuminating Handle (Sedan only)

In the event that children or adults become locked inside the trunk, this luminescent handle allows them to open the lid from inside the trunk. To open, simply pull the yellow handle downward as indicated by the arrow on the handle, and then push up on the lid.



Location of Spare Tire and Jack

A jack and other maintenance tools are stored in the tool bucket in the center of the spare tire, located in the trunk or cargo area.

Towing Your All-Wheel Drive Vehicle

Since all-wheel drive distributes engine power to all four wheels, improper towing will severely damage your AWD system. A flatbed truck is the only recommended way to properly transport your AWD vehicle. If towing is necessary, it is best done by your Subaru dealer or a commercial towing service.

Subaru Roadside Assistance

Subaru Roadside Assistance is free and standard on every 2011 Subaru vehicle. Coverage is automatic; there are no forms to complete. Subaru Roadside Assistance is available anytime during the 3-year/36,000-mile Subaru Limited Warranty, whichever comes first.* A Subaru Roadside Assistance decal has been affixed to the driver's door window.

Subaru Roadside Assistance: 1-800-261-2155

Exclusions

Specifically excluded from Subaru Roadside Assistance coverage are service requests or claims resulting from: accidents, vandalism, acts of God, violation of any laws, or vehicle modifications not recommended by the manufacturer.

*See your dealer for details.

Additional Information



MY.SUBARU.COM

Your Subaru vehicle comes with a unique online resource that helps make your ownership experience more convenient and enjoyable. My.Subaru.com is a website that you can personalize and offers useful features and content that makes it easy for you to manage your vehicle care and enjoy all the benefits of Subaru ownership. Log on to My.Subaru.com to access features such as: automated service history, e-mail maintenance reminders, online Owner's Manual, warranty information, maintenance schedules and much more...

Access your site today @ My.Subaru.com

Fuel

- For Impreza WRX, use only premium unleaded gasoline with an octane rating of 91 AKI or higher.
- For Impreza WRX STI, use premium unleaded gasoline with an octane rating of 93 AKI or higher. If 93 AKI fuel is not readily available in your area, premium unleaded gasoline with an octane rating of 91 AKI may be used with no detriment to engine durability or driveability. However, you may notice a slight decrease in maximum engine performance while using 91 AKI fuel.

Fuel Capacity

- 16.9 US gal (64 liters, 14.1 Imp gal)
- When the low fuel indicator light is displayed on the instrument panel, approximately 2.6 US gallons (10.0 liters, or 2.2 Imp gal) of fuel remain.
- If you have recently fueled your vehicle, the check engine light on the instrument panel may stay on due to a missing or loose fuel filler cap (the cap should be tightened until a click is heard).

Engine Oil

Use only the following oils:

- 5W 30 synthetic, replacement interval 7,500 miles; no requirement at the first 3,000 miles.
- ILSAC GF-4 or GF-5, which can be identified with the ILSAC certification mark (Starburst mark).
- Or API classification SN or SM with the words "ENERGY CONSERVING".

Engine Oil Capacity

4.2 US qt (4.0 liters, 3.5 Imp qt)

Notes

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

Subaru Delivery Checklist

Owner Information

VEHICLE ID #	
DELIVERY DATE	
OWNER NAME	
OWNER NAME	

Owner Resources & Warranty

- ☐ Present the Subaru Owner's Manual & Quick Reference Guide (detailed review in "Operation & Controls" section)
- ☐ Review Subaru Roadside Assistance, Owner Cards & Provide Toll-Free Number 1-800-261-2155
- ☐ Explain 3/36 BASIC Warranty / 5/60 Powertrain Warranty / Explain Wear Items & Adjustments / PZEV (if applicable) / Review Rust Perforation Warranty / Tire Warranty
- ☐ Review Service & Maintenance Schedules & Terms
Explain Normal vs. Extreme Schedules (if applicable)
- ☐ Review New Owner's MY.SUBARU.COM Website
- ☐ Review The Subaru Mastercard Program from CHASE & Explain The Card Benefits
- ☐ Explain Dealership's New Owner Follow Up Procedure

Customer Signature

- ☐ Review Dealership Service Department Location, Payment Options & Hours of Operation
- ☐ Introduce The Subaru Service Advisor & Provide Their Business Card
- ☐ Explain Dealership Service Appointment Scheduling & Early Morning Service Drop Off Procedures
- ☐ Review Dealership Parts Department Location & Hours

Vehicle Condition

- ☐ Exterior Condition Approval (New Owner indicated exterior of vehicle is clean & undamaged)
- ☐ Interior Condition Approval (New Owner indicates interior of vehicle is clean & undamaged)
- ☐ Operational Condition Approval (New Owner has driven vehicle & approves it is ready for delivery)

NEW OWNER SIGNATURE
SALES CONSULTANT SIGNATURE
SALES MANAGER SIGNATURE

Fold back and remove this checklist from the QRG. Place this completed checklist in the deal jacket for future reference. Additional copies of this checklist can be made by photocopying.

Operation & Controls

Please use & reference the **SUBARU OWNER'S MANUAL**
& **QUICK REFERENCE GUIDE**

OPERATION & CONTROLS

- ☐ Review Master & Valet Keys
- ☐ Show Keyless Entry, Alarm System & Remote Start (if equipped)
- ☐ Show Hood & Gas Door Releases
- ☐ Show Yellow Caps & Explain Checking & Filling of Vehicle Fluids
- ☐ Show Fuel Filler Door & Gas Cap Operation
- ☐ Show Location of Both Fuse Boxes

REAR & SIDE

- ☐ Show Trunk Release & Valet Feature (sedans only)
- ☐ Show Spare Tire, Tools & Jack Location
- ☐ Explain Temporary Spare Tire Usage & Limitations
- ☐ Explain AWD Towing Requirements & Limitations
- ☐ Show LATCH System & Tethers
- ☐ Show Child Safety Lock Operation

INTERIOR

- ☐ Explain Operation of Manual Transmission & Incline Start Assist (if equipped)
- ☐ Explain Operation of Automatic Transmission & Review Sportshift Modes (if equipped)
- ☐ Explain the Subaru Advanced Frontal Airbag System, Side Airbags (SRS) & Side-Curtain Airbags (SRS)
- ☐ Show Seatbelt & Head Restraint Functions
- ☐ Show Tilt Steering Column & Telescopic Feature (if equipped)
- ☐ Show All Weather Package - Heated Front Seats, Windshield Wiper De-Icer & Heated Side Mirrors (if equipped)

DRIVER CONTROLS & OPERATION

- ☐ Show Power Windows, Door Locks & Side-View Mirror Operation
- ☐ Explain Cruise Control & Power Moonroof Operation (if equipped)
- ☐ Show Headlights, Daytime Running Lights, Parking Lights, Hazard Lights & Fog Lights (if equipped)
- ☐ Show Interior Lighting, Map Light & Clock
- ☐ Show Front & Rear Wiper & Washer Controls
- ☐ Show Climate Control System Including Front & Rear Defrosters
- ☐ Show & Explain Operation of VDC Control Switch
- ☐ Review Instrument Panel Gauges & Warning Lights
- ☐ Explain Tire Pressure Monitoring System Light
- ☐ Show Audio System, Station Presets, Tone, Balance & Fade Controls
- ☐ Activate Satellite Radio System (if equipped)
- ☐ Show GPS Navigation System (if equipped)
- ☐ Explain Operation of Other Vehicle Options, Equipment, or Genuine Subaru Accessories Not Referenced Above Where Applicable