

2012
Tribeca



Quick Reference Guide



Complete U.S. specifications and illustrations may not have been available at time of publication. Specifications are based on the latest product information available at time of publication. Some images shown are for illustration purposes only. Some equipment shown may be optional at extra cost. Specific options may be available only in combination with other options. Specific combinations of equipment or features may vary from time to time and by geographic area. Certain accessories and equipment may not be available at the time of publication.

This Quick Reference Guide applies to all Tribeca models. Therefore, some explanations may be for equipment not installed on your vehicle. Subaru of America, Inc., reserves the right to change or discontinue at any time, without notice, prices, colors, materials, equipment, accessories, specifications, models and packages without incurring any obligation to make the same or similar changes on vehicles previously sold. Colors shown may vary due to reproduction process.

For detailed operating and safety information, please consult the Owner's Manual.

Subaru, Outback, Legacy, Forester, Impreza, WRX, WRX/STI, BOXER, SI-DRIVE, Lineartronic, XM and Sirius are registered trademarks.

All rights reserved. Contents may not be reprinted or electronically reproduced in whole or in part without prior written approval of Subaru of America, Inc.

© 2011 Subaru of America, Inc.

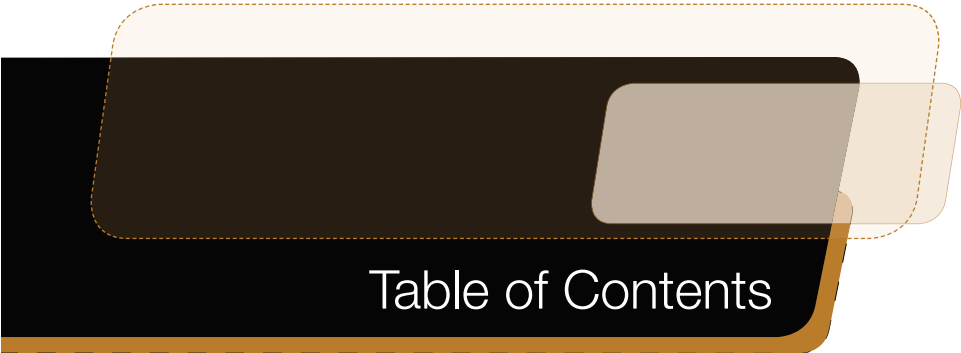 


Table of Contents

Getting Started	2 - 3
Instrument Panel	4 - 5
Gauges	6 - 7
Personalize	8 - 9
Controls	10 - 17
While Operating	18 - 19
Safety/In Case of Emergency	20 - 21
Additional Information	22 - 23

Remote Keyless Entry

Lock/Arm

- Press to lock all doors and rear gate and activate the security alarm.
- If any of the doors or the rear gate are not fully closed, an electronic chirp will sound five times and the hazard lights will flash five times to alert you that the doors or the rear gate are not properly closed.
- To activate the vehicle finder function, press three times (within five seconds). If you are within 30 feet of the vehicle, the horn will sound one time and the hazard lights will flash three times.

Unlock/Disarm

- Press once to unlock the driver's door.
- Press twice (within five seconds) to unlock all doors.
- When the "Unlock/Disarm" button is pressed, the dome and map lights will illuminate if the dome light switch is in the middle position.

Unlocking the Rear Gate

Press to unlock the rear gate. An electronic chirp will sound twice and the hazard lights will flash twice.

Panic Alarm

 
- Press once and the horn will sound and the hazard lights will flash.
- Press any button on the remote to deactivate.

Immobilizer

When the security alarm is activated, the immobilizer interrupts the starter motor to prevent an intruder from starting your vehicle without a registered key.



Seating

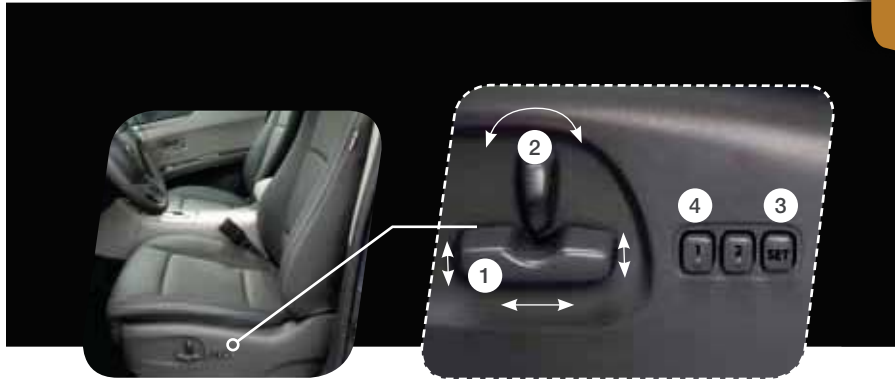

Power Driver Seat: 8-way Adjust

1. Forward/Backward, Angle and Height

Move the switch toward the front or rear to move the seat forward or backward. Pull the switch up or push down on the front of the switch to adjust the angle of the seat cushion. Pulling the switch straight up or pushing the switch straight down will adjust the height of the entire seat cushion.

2. Seatback

Move the switch in the corresponding direction to adjust the angle of the seatback.

Midway Stopping Feature for 2nd Row Seats

The 2nd row seats are equipped with a midway stopping feature on the sliding mechanism. Release the midway stopping feature by pushing the lever located on the outside of the 2nd row seat forward and slide the seat.



Power Driver's Seat: Memory (if equipped)

You can memorize two seat positions. To memorize seat positions:

3. Press the "SET" button.
4. Within five seconds after pressing the "SET" button, press the "1" or "2" button. A buzzer will sound one time to inform you that the memorizing is finished.

To move the seat to a memorized position with the vehicle selector lever in "P" (Park) position, press either the "1" or "2" button. The seat will move to the stored position.

Instrument Panel





pg. 16

pg. 11

pg. 12-13

pg. 14-15

Getting
Started

**Instrument
Panel**

Gauges

Personalize

Controls

While
Operating

Safety / In Case
of Emergency

 
Additional
Information

Gauges

■ Immediate Attention

■ Caution

■ Informational

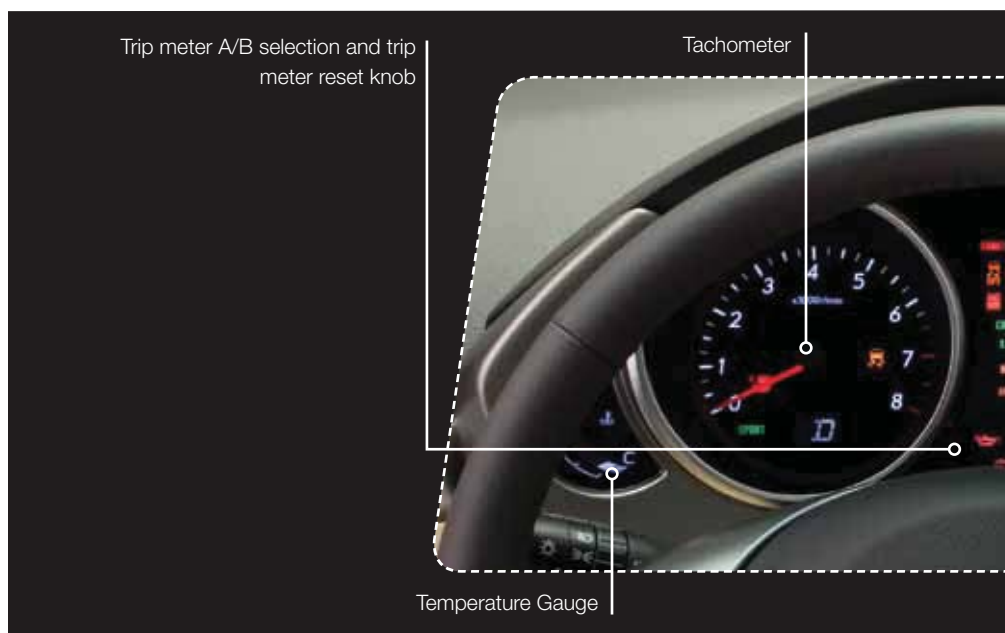

Seatbelt warning

BRAKE / (P) Brake system



Front passenger seatbelt warning



Rear Differential oil temperature warning



SRS airbag system



High beam indicator light



Security indicator light



AT OIL TEMP warning



Door open



ABS warning



Charge warning



 
Low fuel



Oil pressure warning



All-Wheel Drive warning

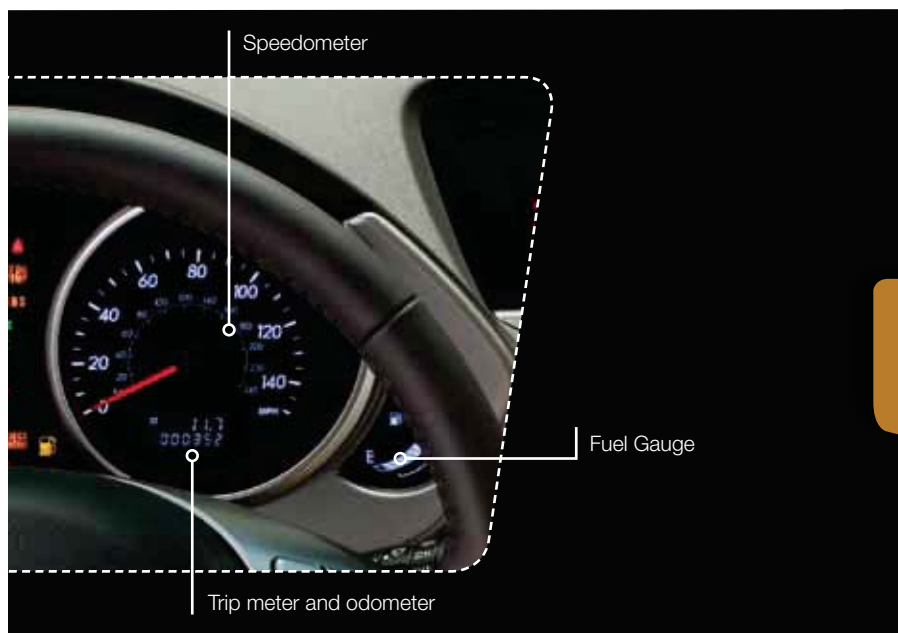

	Vehicle Dynamics Control/Vehicle Dynamics Control operation		Turn signals
	Vehicle Dynamics Control OFF		Front fog light indicator light (if equipped)
	CHECK ENGINE / Malfunction indicator		Headlight indicator light
	Tire pressure warning light		Cruise Control indicator light
	Front passenger frontal airbag ON		Cruise control set indicator light
	Front passenger frontal airbag OFF		SPORT mode
	Low windshield washer fluid		

Personalize



Steering Column

Push the lever down firmly to adjust the height and lengthwise position of the column. Firmly push the lever back up to lock the column in place. Do not adjust while driving.

Power Exterior Mirrors

 
Turn knob to the "L" side to adjust the left-hand mirror or to the "R" side to adjust the right-hand mirror. Move the knob in the direction you want to move the mirror, then return the knob to the neutral/center position. The mirrors can also be adjusted manually.



HomeLink® (if equipped)

Three buttons on the driver's side sun visor control indoor or outdoor devices (such as a garage door) from inside your vehicle.



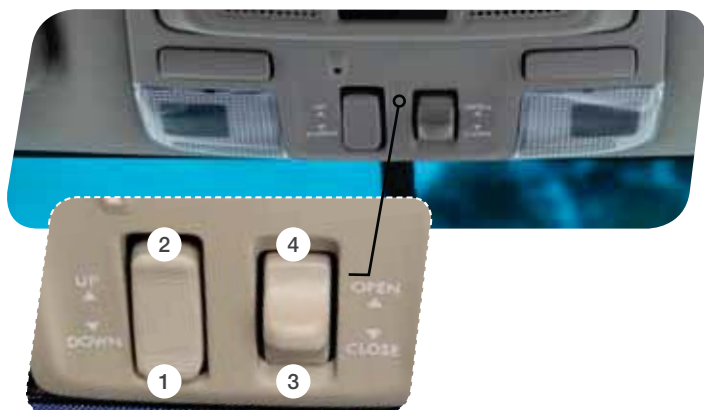

Power Moonroof (if equipped)

With the moonroof in the fully closed position, press the switch ② to tilt the rear of the moonroof up. Press and hold the switch ① to lower the moonroof. Press the switch ④ to fully open the moonroof. Press the switch ③ to close the moonroof. To stop the moonroof in a midway position while opening or closing, momentarily press the switch to the ④ side or ③ side.

Rear Seat Entertainment System (if equipped)

You can enjoy watching movies or listening to music when a movie DVD or music CD is inserted into the rear seat entertainment system. You can operate the rear seat entertainment system by the remote control. You can play a video or game when a video camera or a video machine is connected to the auxiliary input jacks, located on the left rear quarter panel across from the 3rd row seats. You can listen to audio by using the wireless headphones that are included with the system.



Getting
Started

Instrument
Panel

Gauges

Personalize

Controls

While
Operating

Safety / In Case
of Emergency

Additional
Information

 
Controls

Light Controls

Push up for right turn signal.

Turns on headlights, instrument panel illumination, parking lights, taillights and license plate lights.

Push down for left turn signal.

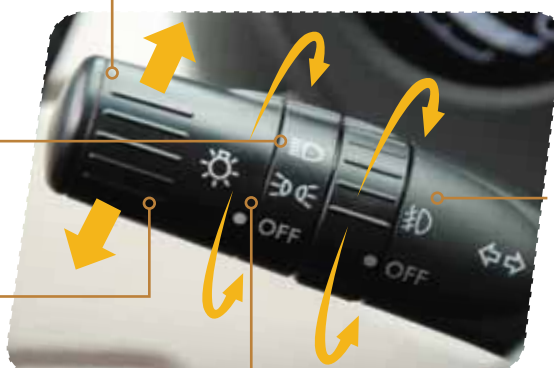

Turns on fog lights (if equipped).

Turns on instrument panel lights, tail lights, parking lights and license plate lights.

 


When the dial is turned downward, illumination becomes dim. When the dial is turned upward, illumination becomes bright. When the dial is fully turned upward while the light switch is on, instrument panel illumination becomes bright.

Parking Light Switch

The switch is located on the top of the steering column. Press the switch to turn the lights on or off. This control operates the parking lights, rear side marker lights, tail lights and license plate lights when the ignition is off.



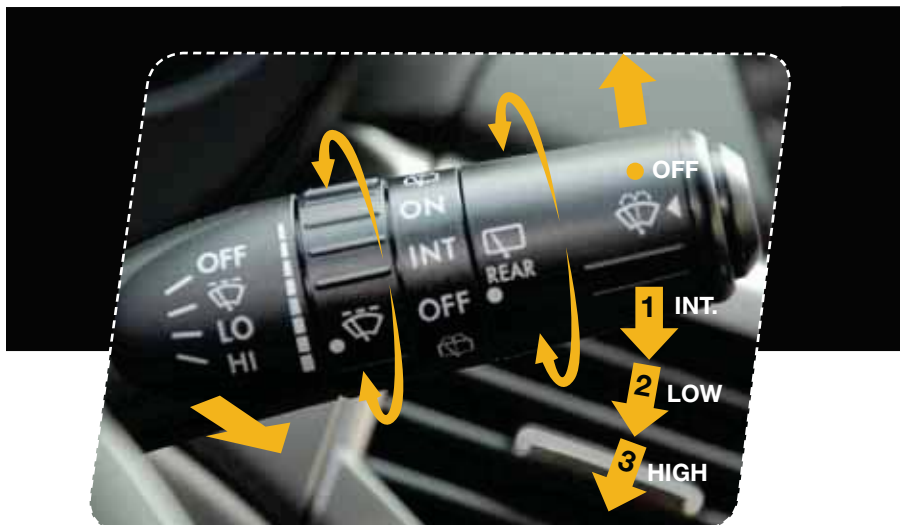

Windshield Wipers

To turn the wipers on, press the wiper control lever down one level for intermittent, two levels for low, or three levels for high speed. Return the lever to the "OFF" position to stop the wipers. For a single wipe/mist, pull the lever toward you. To spray washer fluid spray, press the washer button at the end of the wiper control lever.

To operate the rear wiper, turn the knob on the end of the control lever forward to intermittent, continuous, or wash position. Turn the end of the lever backward for wash operation when the rear wiper is not in use. When the automatic transmission is placed in reverse, the rear wiper will operate continuously even when the rear wiper is in the "INT" position.

Daytime Running Lights

Daytime running lights are standard on your vehicle. A reduced brightness high beam will be automatically turned on by the daytime running light system when the engine has started and the parking brake is fully released and the light switch is in the "OFF" or "D" position. You must always switch on your headlights when it's dark outside by turning the light switch to the "D" position.

Windshield Wiper De-Icer

Remove the snow from your windshield before starting this system.



To begin de-icing, push the button (the light will illuminate while in operation). The de-icing system automatically shuts off after about 15 minutes. If more time is required, push the button to reactivate the de-icer.

Getting
Started

Instrument
Panel

Gauges

Personalize

Controls

While
Operating

Safety / In Case
of Emergency

Additional
Information

Controls



AUTOMATIC CLIMATE CONTROL

1. Rear A/C Cooling

A fan speed control dial is located on the back of the center console. Turn the dial to select one of four (0-4) fan speeds.

When the front passenger air conditioner is operating, cool air comes from vents on the ceiling. When the front passenger air conditioner is off, room temperature air comes from the vents.

2. Temperature Control

Separate temperature settings can be made for the driver's side and passenger's side by adjusting the dials appropriately.

Turn the dial clockwise and release to increase the temperature by one degree.

Turn the dial counterclockwise and release to reduce the temperature by one degree.

3. Heated Seats

The left button is for the driver's seat and the right button is for the front passenger's seat. To warm the seats, press the appropriate button. Adjust the temperature level by pressing the button. Indicator lights beside the button show the temperature level. To turn off, press the button a few times until all indicator lights go off or keep the button pressed for two more seconds.

4. Defroster Button

Push the button to defrost or dehumidify the windshield and front door windows.

5. Automatic On and Off

This system automatically controls outlet air temperature, fan speed, air flow distribution, air inlet control, and air conditioner compressor operation. Press "AUTO" to activate. Press "OFF" to turn off.



6. Recirculated/Outside Air

Press the air inlet selection button to prevent outside air from being drawn into the passenger compartment. Press the button again to allow outside air into the compartment.

TO PREVENT WINDSHIELD FOGGING, DO NOT REMAIN IN THE RECIRCULATED MODE FOR ANY EXTENDED PERIOD OF TIME.

7. Fan Speed

Turn the fan speed control dial to select one of six fan speeds. Turn the dial clockwise to increase fan speed; turn it counterclockwise to decrease. Fan speed level is shown on the display of the dial. Push the "AUTO" button to automatically change the fan speed to correspond with various temperature conditions.

8. Air Flow

Push the "MODE" button to select the desired air flow mode: ventilation, bi-level, heat or heat-defrost will be displayed on the fan speed control dial.

9. Rear Window Defogger

To defog the rear window and exterior mirrors, press the rear window defogger button. The defogger will automatically shut off in about 15 minutes. To manually shut it off, press the button again.

10. Air Conditioning

Press the "A/C" button to activate the air conditioning. Press it again to turn the air conditioning off.

Getting
Started

Instrument
Panel

Gauges

Personalize

Controls

While
Operating

Safety / In Case
of Emergency

Additional
Information

Controls



Audio Controls

Radio Functions

1. Power/Volume Control

Push the "POWER/VOL" knob for on or off; turn the knob to control volume.

2. Bass, Treble, Balance, Fader

Each press of the "TONE/BAL" button will cycle you through Volume, Bass, Midrange, Treble, Fade, or Balance. Use the "POWER/VOL" knob to adjust the desired tone or mode.

3. FM/AM

Push to choose FM1, FM2 or AM reception.

4. Tune/Track

Press the up arrow to increase the tuning frequency; press the down arrow to decrease it.

5. Seek

Press the up or down arrow of the "SEEK/FLDR" button to pick up the next highest or lowest frequency.

6. Presets

You can save up to six favorite stations for each band – FM1, FM2, and AM. Select a frequency and press one of the preset buttons until a confirmation beep is heard.

7. Satellite Radio (if equipped)

You can hear satellite radio programs by pressing the "SAT" button. To receive satellite radio service after your trial period, it is necessary to enter into a separate contract with the satellite radio provider.

CD Player Functions

8. Load (six-disc player)

Press the "LOAD" button and an available position will blink. Press the "DISC SELECT" button (1-6) at the position where you want to insert a disc. When the "LOAD" indicator flashes, insert the disc. The disc will automatically be drawn in and will begin play at the first track.



9. Load Disc (single disc player)
Insert a disc into the slot. The CD will automatically be drawn in and will begin play at the first track.

10. Play CD (six-disc player)
Press the “CD” button and the desired “DISC SELECT” button (1-6) and playback will begin.

11. Eject
Press the  button to eject the disc.

12. Forward/Reverse
Press the up arrow of “TUNE/TRACK” to skip to the beginning of the next track; press the down arrow to skip to the beginning of the current track. Press the down arrow again to go to the previous selection.

Fast Forward/Fast Reverse
Press and hold the up arrow to fast forward. Release the button to stop. To fast reverse, press and hold the down arrow; release the button to stop.

13. Repeat
In the single disc player: Press “RPT” to repeat the current selection. Press again to cancel.
In the six-disc player: Press “RPT” to repeat the current selection. Press again to repeat all tracks in the current selected CD. Press again to cancel.

14. Random
During playback, press and hold “RDM” to hear all disc selections in random order.

15. Scan
Press the “SCAN” button to begin previewing the first 10 seconds of each track on the disc. Normal playback will resume after all tracks have been scanned. Press the “SCAN” button again to stop scanning and listen to the track being previewed.

To Use Your MP3/WMA Player with formatted MP3 files (without navigation system)*

Display
Press the “AUDIO” button for 0.5 seconds or longer during playback to change the display to show the file title, play time, and folder title.

Page Scroll
Press “AUDIO” to select title display. Press again for less than 0.5 seconds to scroll through the title, 15 characters at a time. The display is designed to show titles for up to three pages (64 characters).

Folder Selection
Press the up arrow of “SEEK/FLDR” to select the next folder. Press the down arrow to go back to the first music file. Quickly press the down arrow again to go back to the previous folder.

*For vehicles equipped with the navigation system, please consult the Tribeca Navigation Owner’s Manual.

Getting Started

Instrument Panel

Gauges

Personalize

Controls

 
While Operating

Safety / In Case of Emergency

Additional Information

Controls

Steering Wheel Audio Controls (if equipped)

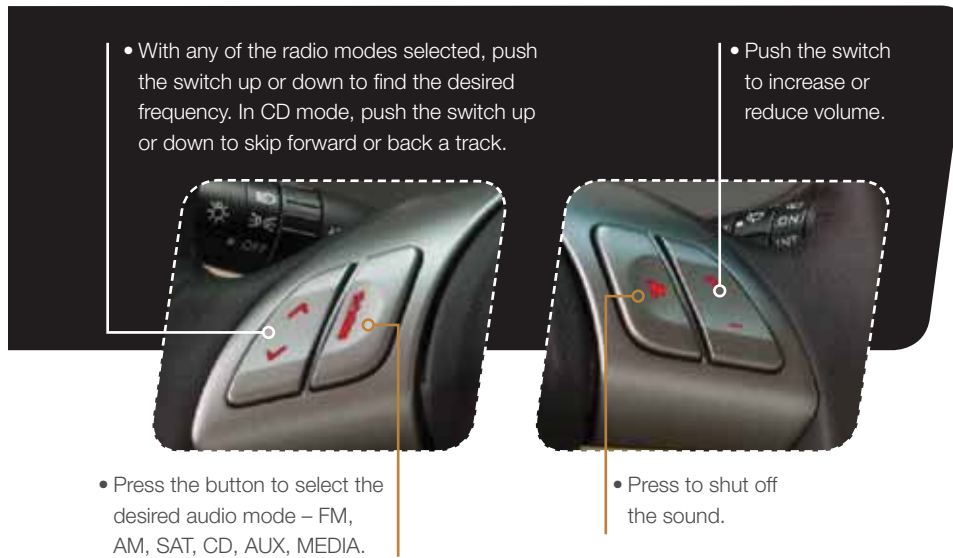

Auxiliary Input Jack

(Inside center console) The auxiliary input jack is located inside the console box. You can connect a portable music device to the jack and hear music stored in the portable device through the vehicle speakers. When a portable music device is connected to the auxiliary input jack inside the console box, you cannot hear sound from the Rear Seat Entertainment through the audio.

Rear Seat Entertainment AUX (if equipped)

The rear seat entertainment aux is located on the driver's side rear interior panel. When other portable devices are connected to the auxiliary input jacks and the vehicle is equipped with a Rear Seat Entertainment system, it is possible to play the sound from each device through the speakers. Each press of the "AUX" or "RES/AUX" button changes the device selected for audio output to the next one in the sequence.



Cruise Control

- **Resume**

Push the control lever up to “RES/ACC.”

- **Temporary Cancel**

There are two ways to temporarily cancel cruise control: depress the brake pedal or push the control downward to “CANCEL”.



- **Set**

Push the main “CRUISE” switch located on the end of the control lever. The “CRUISE” indicator light on the instrument panel will turn on. Press the accelerator pedal until your vehicle reaches the desired speed. Push the control lever downward to “SET/COAST” and release. Ease off the accelerator pedal. Your vehicle will maintain the desired speed.

- **Shut Off**

To deactivate cruise control, push the main “CRUISE” switch again, or, when the vehicle is stopped, turn the ignition switch to the “ACC” or “LOCK” position.

Increase speed

Push the control lever up to the “RES/ACC” position, hold until your vehicle reaches the desired speed, and release. To increase speed using the accelerator pedal, press the pedal until you reach the desired speed. Push the control lever down to the “SET/COAST” position to set the speed.

Decrease speed

Move the control lever to “SET/COAST,” hold until your vehicle slows to the desired speed, and release. To decrease the speed using the brake pedal, press the pedal to release cruise control temporarily. When the speed decreases to the desired rate, push the control lever down to the “SET/COAST” position.

Getting
Started

Instrument
Panel

Gauges

Personalize

Controls

While
Operating

Safety / In Case
of Emergency

Additional
Information

While Operating

Automatic Shift Mode

Ultimate Control

The automatic transmission gives you ultimate control with five forward speeds, one reverse speed, and a manual mode. Switch to the optional AT Shift mode when you need that extra boost for uphill driving.

Normal Mode

When the selector lever is in the “D” (Drive) position, the transmission is in normal shift mode. The shift position indicator in the meter cluster shows “D” and the transmission automatically shifts into a suitable gear from 1st to 5th.

Sport Mode

Moving the selector lever left into the manual gate from “D” changes the transmission into Sport mode. The shift position indicator shows “D” and the “SPORT” light illuminates in the meter cluster. In the Sport mode, the transmission automatically shifts from 1st to 5th, but shifts up at higher engine revolutions than in normal mode.

Manual Mode

Moving the selector lever into “+” or “-” makes the transmission change into Manual mode. When the selector lever is moved to “+,” the transmission shifts into the next higher gear. When the selector lever is moved to “-,” the transmission shifts into the next lower gear. The shift position indicator in the instrument cluster shows the selected gear position. In Manual mode, you can select your desired gear position to obtain necessary acceleration and engine braking. Moving the selector lever into “+” when the vehicle stops enables the vehicle to start in 2nd gear.



1. Upshifting:

Shift to the next higher gear (in the 1st – 5th gear range) by pushing the selector lever toward the “+” end of the manual gate.

2. Downshifting:

Shift to the next lower gear (in the 5th – 1st gear range) by pushing the selector lever toward the “-” end of the manual gate.

3. Deselect Manual Mode:

Exit Manual mode by returning the selector lever right to the “D” position from the manual gate. Normal mode is now selected.

When Manual Shifting Operation

Is Possible:

 
Arrow-shaped lights in the instrument panel show whether an upshift is possible and whether a downshift is possible.

BOTH ARROWS ARE ON: Upshifting and downshifting are both possible.

UP ARROW ONLY IS ON: Only upshifting is possible.

DOWN ARROW ONLY IS ON: Only downshifting is possible.

Rear View Monitor Navigation (if equipped)

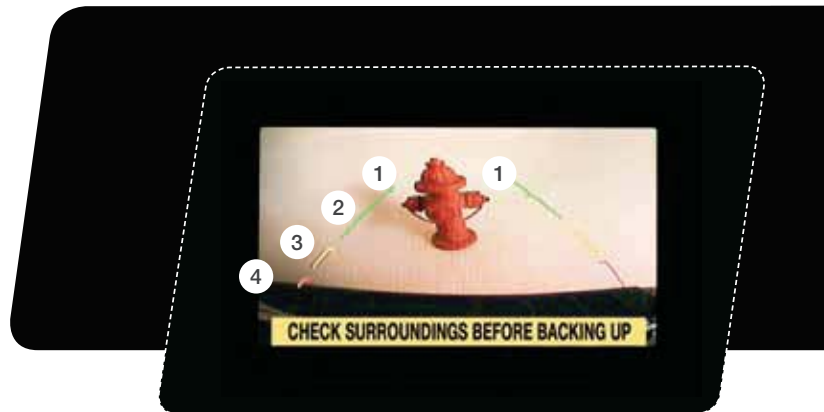

Vehicles with Navigation system have a rear view camera. When the selector lever is moved into "R" (Reverse) position, the rear view is shown on the display. Camera footage is live, real time as you see it on the rear view mirror. Also, width of the vehicle and distance from the vehicle are indicated as lines in the image on the display.

1. Width of the vehicle: Oblique vertical lines
2. Approx. 6.5-10 feet from the rear bumper: Green horizontal line
3. Approx. 3 feet from the rear bumper: Yellow horizontal line
4. Approx. 1.5 feet from the rear bumper: Red horizontal line

To be safe, always check around and behind the vehicle with your eyes first before backing up. Never rely upon the rear view monitor.

Fuel Door Lid Release

Found on the floor next to the driver's seat. To open the fuel door lid, pull the lever up and release.



Getting Started

Instrument Panel

Gauges

Personalize

 
Controls

While Operating

Safety / In Case of Emergency


Additional Information

Safety / In Case of Emergency

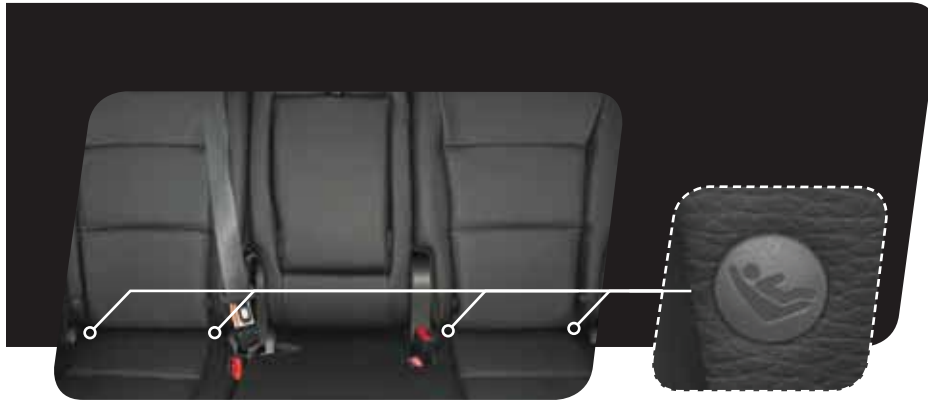

Child Restraint System

 For maximum safety, first carefully read and follow the instructions from the device manufacturer to properly install the restraint system inside your vehicle. Use the appropriate seatbelts or anchorages provided in your vehicle. Please refer to your Owner's Manual for the proper installation instructions. Children age 12 and under must be properly restrained in the rear seat at all times.

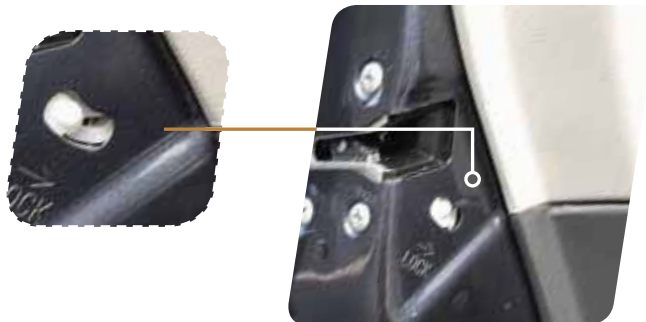

Child Safety Locks

The locks are located on the rear inside edge of the rear doors. While the lever is in the locked position, the rear doors of the vehicle cannot be opened from the inside.



Location of Spare Tire and Jack

Your vehicle is equipped with a temporary spare tire, located under the rear of the vehicle. The jack and necessary tools to release the spare from the vehicle are located in the storage tray, under the cargo floorboard. To remove the spare tire, remove the cargo floorboard and remove the access hole plugs located on the body, then insert the tool through the access hole and turn it counterclockwise with the wheel nut wrench. Store the flat tire in the spare tire carrier.

Towing Your All-Wheel Drive Vehicle

Because all-wheel drive distributes engine power to all four wheels, improper towing will severely damage your AWD system. A flatbed truck is the only way to properly transport your AWD vehicle. If towing is necessary, it is best done by your Subaru dealer or a commercial towing service.

Subaru Roadside Assistance

Subaru Roadside Assistance is free and standard on every 2011 Subaru vehicle. Coverage is automatic; there are no forms to complete. Subaru Roadside Assistance is available anytime during the 3-year/36,000-mile Subaru Limited Warranty, whichever comes first.* A Subaru Roadside Assistance decal has been affixed to the driver's door window.

Subaru Roadside Assistance: 1-800-261-2155

Exclusions

Specifically excluded from Subaru Roadside Assistance coverage are service requests or claims resulting from: accidents, vandalism, acts of God, violation of any laws, or vehicle modifications not recommended by the manufacturer.

*See your dealer for details

Getting
Started

Instrument
Panel

Gauges

Personalize

Controls

While
Operating

**Safety /
In Case of
Emergency**

Additional
Information

Additional Information



MY.SUBARU.COM

Your Subaru vehicle comes with a unique online resource that helps make your ownership experience more convenient and enjoyable. My.Subaru.com is a website that you can personalize and offers useful features and content that makes it easy for you to manage your vehicle care and enjoy all the benefits of Subaru ownership. Log on to My.Subaru.com to access features such as: automated service history, e-mail maintenance reminders, online Owner's Manual, warranty information, maintenance schedules and much more...

Access your site today @ My.Subaru.com

Fuel

Use regular unleaded gasoline with an octane rating of 87 AKI or higher.

Fuel Capacity

- 16.9 US gal (64 liters, 14.1 Imp gal)
- When the low fuel indicator light is displayed on the instrument panel, approximately 2.6 U.S. gallons of fuel remain.
- If you have recently fueled your vehicle, the check engine light on the instrument panel may stay on due to a missing or loose fuel filler cap (the cap should be tightened until a click is heard).

Engine Oil

Use only the following oils:

- ILSAC GF-4 or GF-5, which can be identified with the ILSAC certification mark (Starburst mark).
- Or API classification SN or SM with the words "ENERGY CONSERVING".

Engine Oil Capacity

- 6.9 US qt (6.5 liters, 5.7 Imp qt)

Getting
Started

Instrument
Panel

Gauges

Personalize

Controls

While
Operating

Safety / In Case
of Emergency

**Additional
Information**

Notes

[illegible]

Subaru Delivery Checklist

Owner Information

VEHICLE ID #	
DELIVERY DATE	
OWNER NAME	
OWNER NAME	

Owner Resources & Warranty

- ☐ Present the Subaru Owner's Manual & Quick Reference Guide (detailed review in "Operation & Controls" section)
- ☐ Review Subaru Roadside Assistance, Owner Cards & Provide Toll-Free Number 1-800-261-2155
- ☐ Explain 3/36 BASIC Warranty / 5/60 Powertrain Warranty / Explain Wear Items & Adjustments / PZEV (if applicable) / Review Rust Perforation Warranty / Tire Warranty
- ☐ Review Service & Maintenance Schedules & Terms
Explain Normal vs. Extreme Schedules (if applicable)
- ☐ Review New Owner's MY.SUBARU.COM Website
- ☐ Review The Subaru Mastercard Program from CHASE & Explain The Card Benefits
- ☐ Explain Dealership's New Owner Follow Up Procedure

Customer Signature

- ☐ Review Dealership Service Department Location, Payment Options & Hours of Operation
- ☐ Introduce The Subaru Service Advisor & Provide Their Business Card
- ☐ Explain Dealership Service Appointment Scheduling & Early Morning Service Drop Off Procedures
- ☐ Review Dealership Parts Department Location & Hours

Vehicle Condition

- ☐ Exterior Condition Approval (New Owner indicates exterior of vehicle is clean & undamaged)
- ☐ Interior Condition Approval (New Owner indicates interior of vehicle is clean & undamaged)
- ☐ Operational Condition Approval (New Owner has driven vehicle & approves it is ready for delivery)

NEW OWNER SIGNATURE
SALES CONSULTANT SIGNATURE
SALES MANAGER SIGNATURE

Fold back and remove this checklist from the QRG. Place this completed checklist in the deal jacket for future reference. Additional copies of this checklist can be made by photocopying.

Operation & Controls

Please use & reference the **SUBARU OWNER'S MANUAL**
& **QUICK REFERENCE GUIDE**

OPERATION & CONTROLS

- | | |
|--|--|
| ☐ Review Master & Valet Keys | ☐ Show Yellow Caps & Explain Checking & Filling of Vehicle Fluids |
| ☐ Show Keyless Entry, Alarm System & Remote Start (if equipped) | ☐ Show Fuel Filler Door & Gas Cap Operation |
| ☐ Show Hood & Gas Door Releases | ☐ Show Location of Both Fuse Boxes |

REAR & SIDE

- | | |
|---|--|
| ☐ Show Trunk Release & Valet Feature (sedans only) | ☐ Explain AWD Towing Requirements & Limitations |
| ☐ Show Spare Tire, Tools & Jack Location | ☐ Show LATCH System & Tethers |
| ☐ Explain Temporary Spare Tire Usage & Limitations | ☐ Show Child Safety Lock Operation |

INTERIOR

- | | |
|--|---|
| ☐ Explain Operation of Automatic Transmission & Review Sport and Manual Modes | ☐ Show Tilt Steering Column & Telescopic Feature (if equipped) |
| ☐ Show All Weather Package - Heated Front Seats, Windshield Wiper De-Icer & Heated Side Mirrors (if equipped) | ☐ Explain the Subaru Advanced Frontal Airbag System (SRS), Front Seat Side Pelvis/Torso Airbags (SRS) & Side-Curtain Airbags (SRS) |
| ☐ Show Seatbelt & Head Restraint Functions | |

DRIVER CONTROLS & OPERATION

- | | |
|--|--|
| ☐ Show Power Windows, Door Locks & Side-View Mirror Operation | ☐ Review Instrument Panel Gauges & Warning Lights |
| ☐ Explain Cruise Control & Power Moonroof Operation (if equipped) | ☐ Explain Tire Pressure Monitoring System Light |
| ☐ Show Headlights, Daytime Running Lights, Parking Lights, Hazard Lights & Fog Lights (if equipped) | ☐ Show Audio System, Station Presets, Tone, Balance & Fade Controls |
| ☐ Show Interior Lighting, Map Light & Clock | ☐ Show GPS Navigation System (if equipped) |
| ☐ Show Front & Rear Wiper & Washer Controls | |
| ☐ Show Climate Control System Including Front & Rear Defrosters | |
| ☐ Show & Explain Operation of VDC Control Switch | |

☐ Explain Operation of Other Vehicle Options, Equipment, or Genuine Subaru Accessories Not Referenced Above Where Applicable

Subaru of America, Inc., Subaru Plaza,
P.O. Box 6000, Cherry Hill, NJ 08034-6000



MSA5B1206A
Issued July 2011
Printed in USA 10/11

