

Contents

Quick Reference Guide
for the vehicle



The Ultimate
Driving Machine®



THE BMW 5 SERIES. QUICK REFERENCE GUIDE.

BMW EfficientDynamics
Less emissions. More driving pleasure.

Contents

Your BMW 5 Series at a glance

Welcome on board

Your BMW 5 Series offers you a wide range of equipment to make driving an enjoyable experience.

This Quick Reference Guide informs you about the most important basic functions of your BMW 5 Series vehicle.

For safety reasons, please read the printed Owner's Manual for Vehicle.

Any updates made after the editorial deadline for the Owner's Manuals are located in the appendix of this Quick Reference Guide.

BMW hopes you get off to a good start and that you enjoy your BMW 5 Series.

This Quick Reference Guide also describes and depicts equipment that may not be contained in your vehicle because of the selected special equipment or market-specific version.

4	Opening and closing	42	Breakdown assistance
6	Seat, mirrors, and steering wheel	43	Service and maintenance
11	Safety	44	24/7 access
12	Displays and controls	46	Appendix
18	Driving		
25	Radio/CD/Multimedia		
28	iDrive		
33	Integrated Owner's Manual		
34	Navigation		
36	Entertainment		
38	Communication		
40	Refueling		



4 Opening and closing Remote control



Opening


Unlocks the vehicle.

Closing

Locks the vehicle.

Opening the trunk lid

Press and hold.

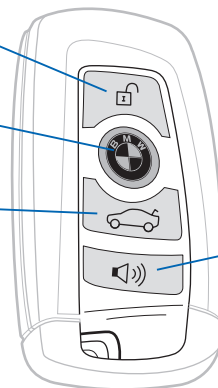

Convenient opening

Press and hold the Open button to open the side windows and the glass sunroof after unlocking.

Switching on the headlamp courtesy delay feature

Press briefly.

Panic mode

Press the button for at least 3 seconds to set off the alarm system.
Switch off by pressing any button.

Personal Profile

Some of the vehicle's functions can be individually tailored and stored for several remote controls. Different settings are retrieved and implemented in the vehicle, depending on the remote control that is detected when unlocking the vehicle. The personal settings can be taken to another vehicle with the Personal Profile function.

The joy of driving without a remote control


The Comfort Access system allows you to gain access to the vehicle and start the engine without pressing the remote control. The remote control is automatically detected in the immediate vicinity or inside the vehicle.

Opening

Take a firm hold of the door handle.

Closing

Press the panel with your fingers for approx. 1 second.

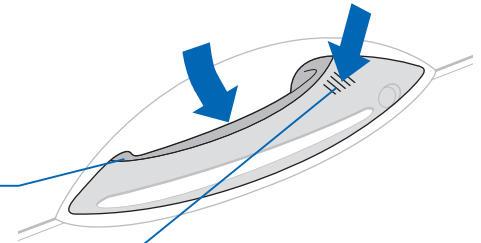

Tip

The trunk lid can be opened without contact if you have the remote control with you. Additional information can be found in the Owner's Manual for Vehicle.

6 Seat, mirrors, and steering wheel

Partially powered seat

Backrest tilt


Height

Lumbar support

Forward/back


Thigh support

Seat tilt

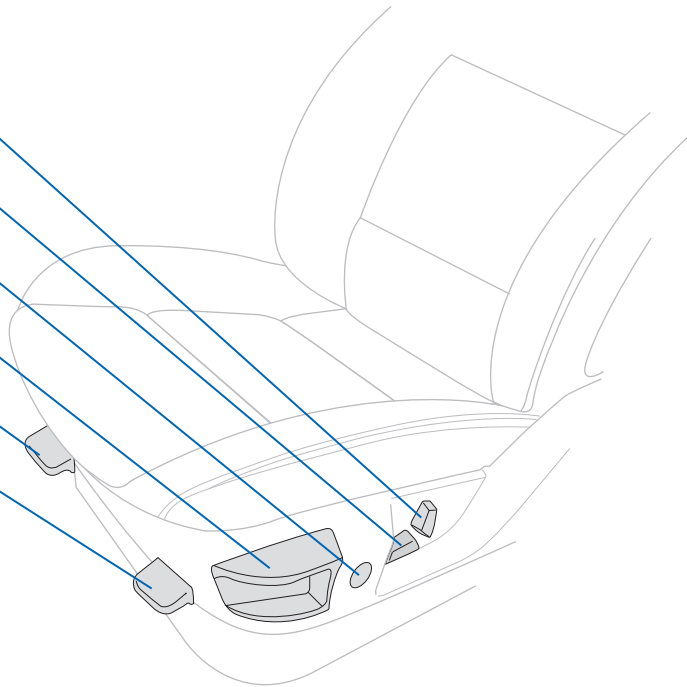

Seat, mirrors, and steering wheel 7

Electrically adjustable seat

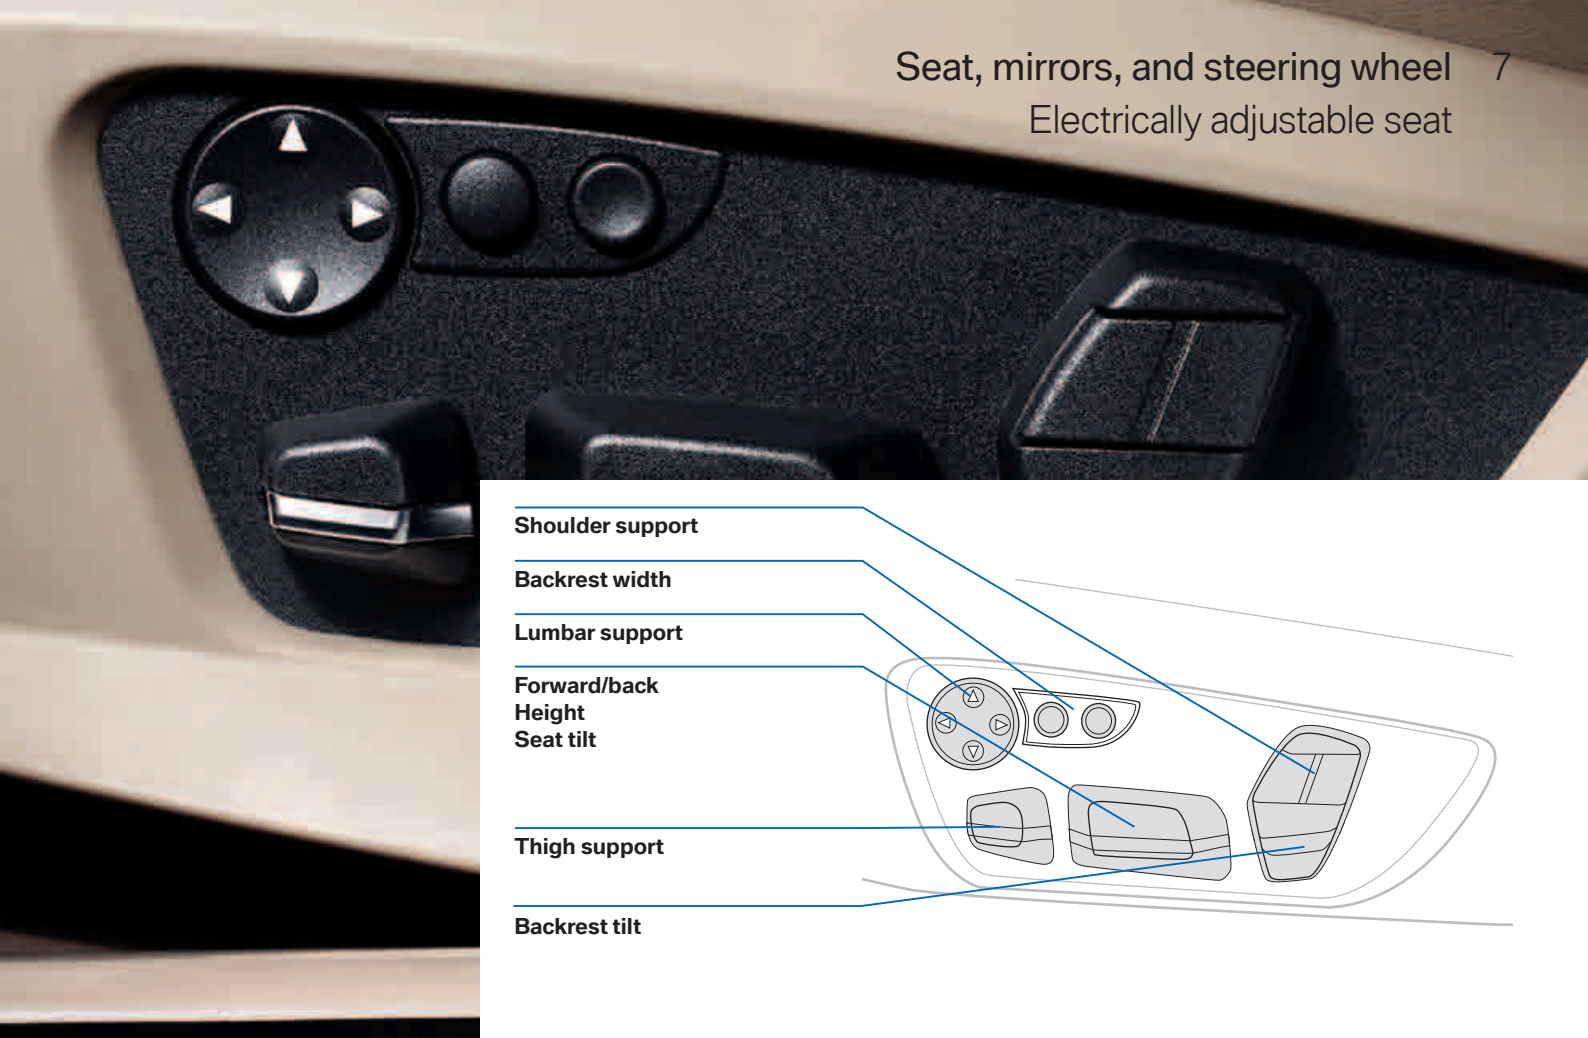

8 Seat, mirrors, and steering wheel

Mirrors


Mirror adjustment

Folding the mirrors in and out

Mirror left/right, Automatic Curb Monitor

To select the mirror: left/right


Automatic Curb Monitor on: switch set to driver's side mirror.

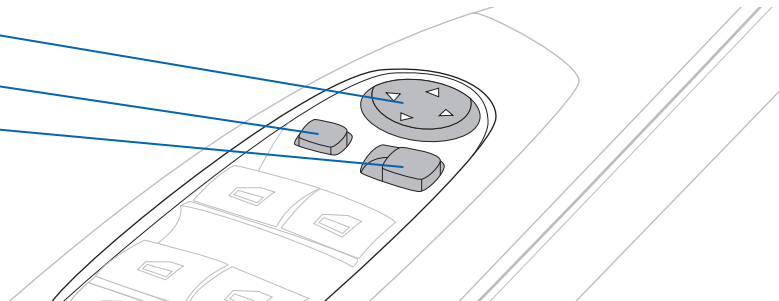

Seat, mirror, and steering wheel memory

You can store and retrieve two different positions for the driver's seat, exterior mirrors, and steering wheel for each remote control. The lumbar support setting is not stored.

1. Ignition on.
2. Set the seat, mirrors, and steering wheel.
3. Press the M button; the LED lights up.
4. Press memory button 1 or 2.

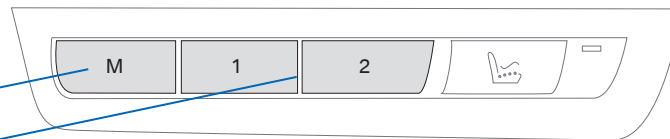


M button

Memory buttons

Seat, mirrors, and steering wheel 9

Universal Garage Door Opener

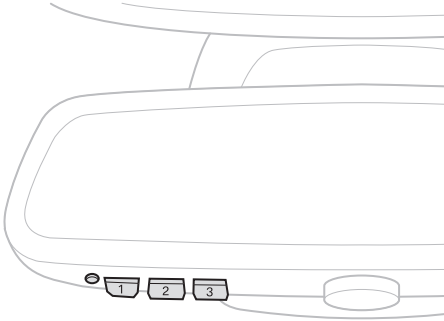

Programming

1. Switch on the ignition.
2. Press the two outer memory buttons 1 and 3 for approx. 20 seconds until the LED flashes.
3. Hold the hand-held transmitter 1 to 3 in/2.5 to 8 cm away from the memory buttons.
4. Simultaneously press the transmit button of the hand-held transmitter and the memory button of the Universal Garage Door Opener – the LED flashes slowly.
5. Release both buttons when the LED flashes rapidly.

With alternating-code radio systems

The Universal Garage Door Opener and the device may need to be synchronized.

1. Park the vehicle within range of the remote-controlled device.
2. Program the Universal Garage Door Opener as described above.
3. Press the synchronization button on the receiver of the device being set up. You have approx. 30 seconds for the next step.
4. Press the programmed memory button of the Universal Garage Door Opener for approx. 3 seconds. Repeat this step up to three times if necessary.


Operation

After programming, elements such as a garage door or lighting system can be operated using one of the buttons on the interior rear view mirror.

Note the additional information contained in the Owner's Manual for Vehicle.


10 Seat, mirrors, and steering wheel

Steering wheel

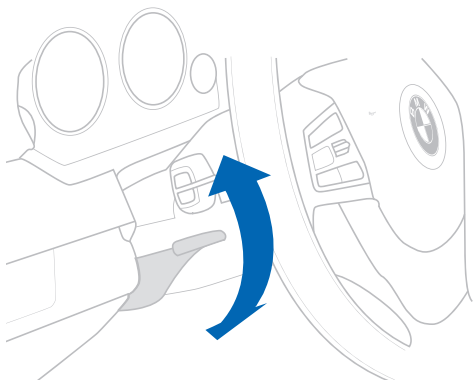

Manual steering wheel adjustment

1. Move the lever down.
2. Adjust the steering wheel to the seating position in longitudinal direction and height.
3. Move the lever back up.

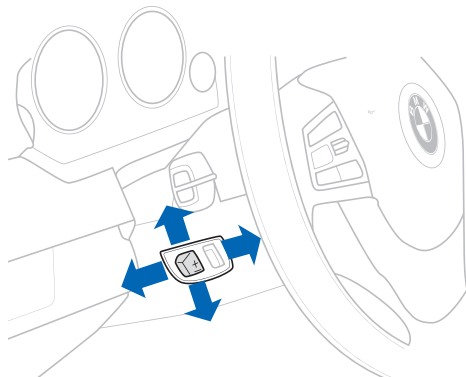


Electric steering wheel adjustment

The steering wheel can be adjusted in four directions.

Locking the doors and windows

Move the lever in the rear doors to its downward position. The respective door can only be opened from the outside.

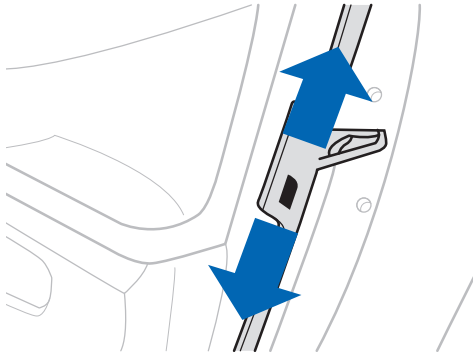

LATCH child restraint fixing system

To mount and use the LATCH child restraint fixing systems, observe the operating and safety information from the system manufacturer; otherwise, the level of protection may be reduced.

Mounts for the lower LATCH anchors

Before mounting the LATCH child restraint fixing system, pull the belt away from the child seat fastening area.

Make sure that the lower LATCH anchors are properly engaged and that the child restraint system is resting snugly against the backrest.

Firmly press the installation guide into the gap between the seat upholstery and backrest. Continue to press until the two funnel-shaped guides snap into place in the LATCH support brackets. The installation guide can be removed simply by pulling.



Safety switch for the rear

Press the button on the driver's door if children are being transported in the rear.

This locks various functions so that they cannot be operated from the rear.

Refer to the following section in the Owner's Manual: Transporting children safely.

12 Displays and controls

Around the steering wheel

Activating turn signals

Push the lever up or down beyond the resistance point.

Canceling turn signals

Push the lever as far as the pressure point.

Brief signaling/triple turn signal activation

Push the lever up or down to the pressure point.

High beams

Push the lever forward.

Computer

Press the upper button on the lever.


High-beam Assistant

Press the lower button on the lever.

Headlamp flasher


Pull the lever.

Horn

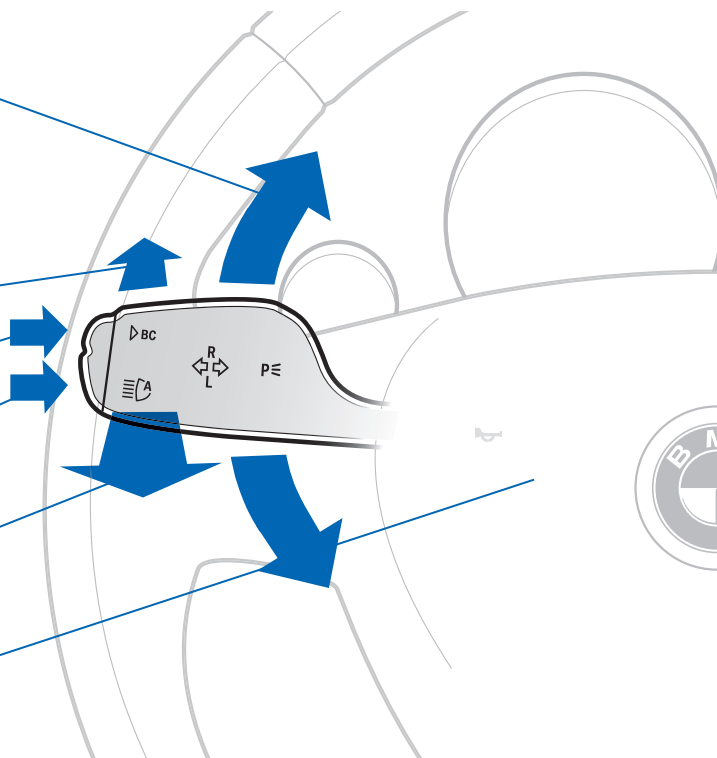

Displays and controls 13


Around the steering wheel

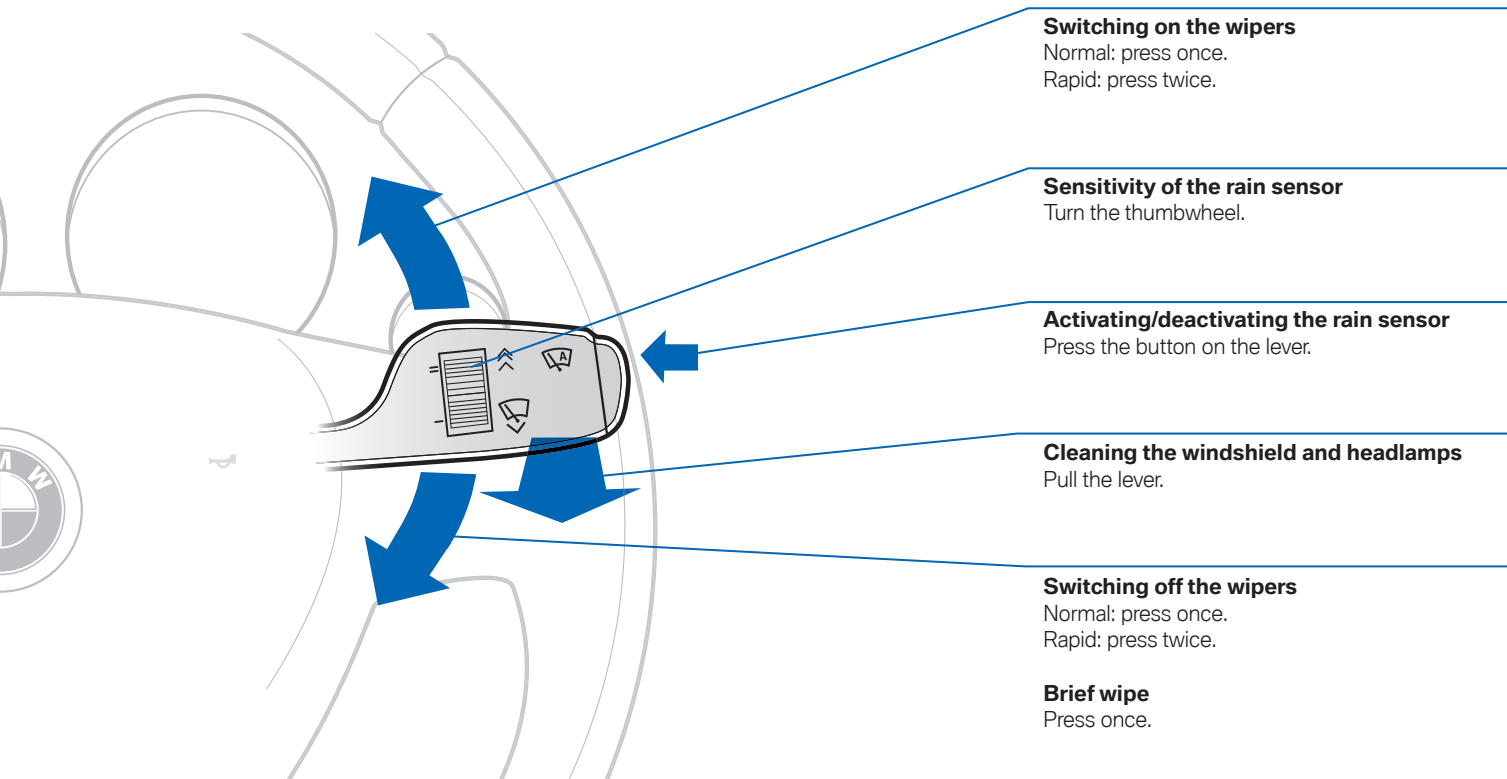

14 Displays and controls

Multifunctional instrument display

 The instrument display is variable. When the driving mode is changed to ECO PRO, SPORT or SPORT+, the style of the instrument display adjusts according to the selected drive mode. Changing of the display style can be disabled on the Control Display.



Changing the driving mode

Press the button in the center console repeatedly until the desired driving mode appears in the tachometer.



Display in the ECO PRO driving mode

This display supports a fuel-efficient driving style by highlighting the efficiency display and presenting various ECO PRO tips.



Display in the SPORT, SPORT+ driving mode

This display supports a sporty driving style by highlighting the tachometer, the transmission displays, and the speed.

Note the additional information contained in the Owner's Manual for Vehicle.

Displays and controls 15

Around the center console

Control Display

Hazard warning flashers


Central locking

Radio/CD/Multimedia

Automatic climate control

Transmission selector lever

Controller with buttons

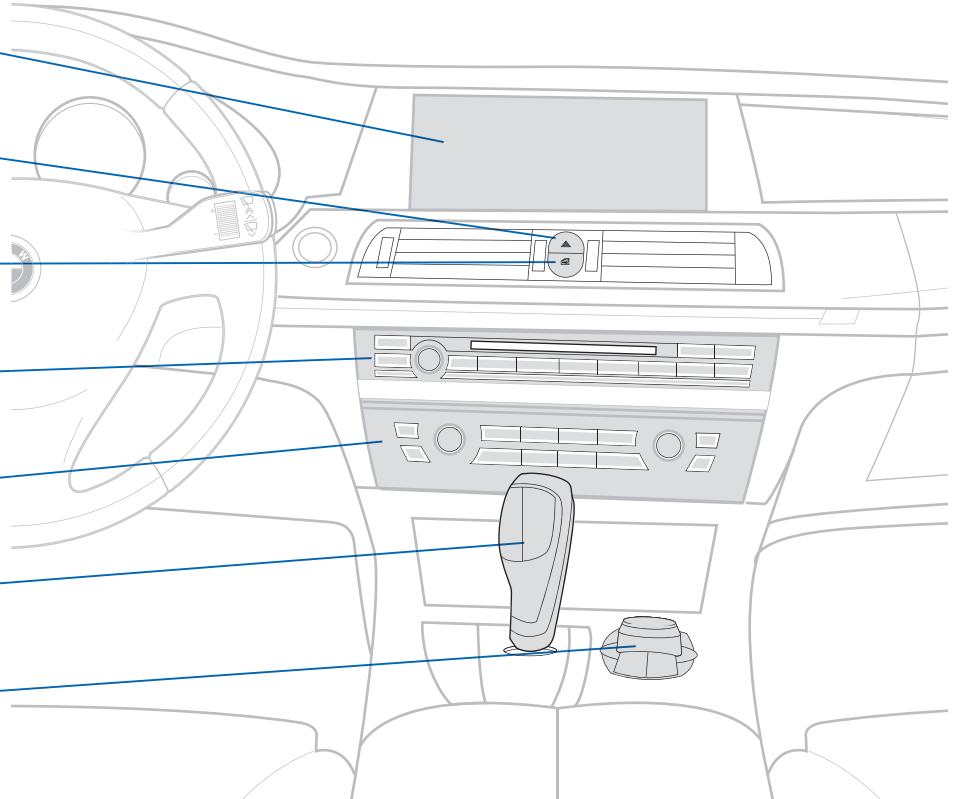

16 Displays and controls

Automatic climate control

Display

Air volume, AUTO intensity, residual heat, left

Temperature, left

AUTO program, left

Air distribution, left

Active seat ventilation, left


Seat heating, left

ALL program

The driver's settings are transferred to the front passenger side/rear.


Rear window defroster

Air conditioning

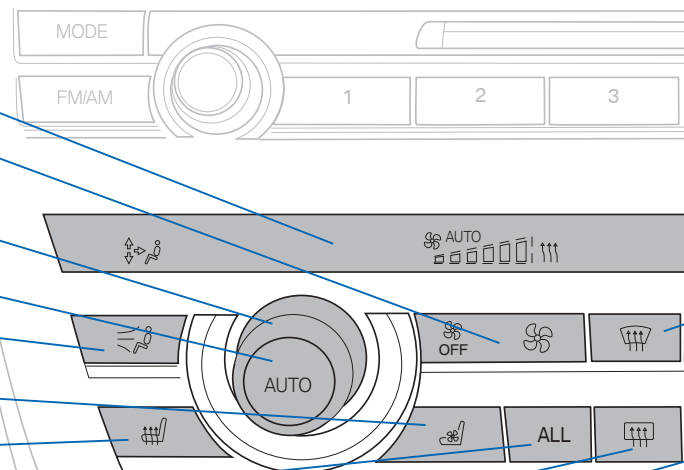

Displays and controls 17

Automatic climate control

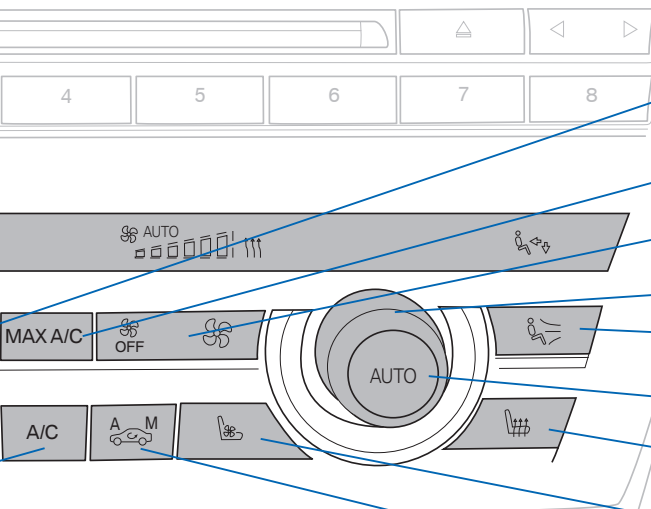

Defrosting windows, removing condensation

Maximum cooling

Air volume, AUTO intensity, right

Temperature, right

Air distribution, right

AUTO program, right

Seat heating, right

Active seat ventilation, right

Automatic recirculated-air control
Recirculated-air mode

18 Driving

Start/Stop button



Switching the ignition on/off

Press the Start/Stop button without depressing the brake pedal or the clutch.

Starting the engine

Press the Start/Stop button while depressing the brake pedal and, if necessary, the clutch.

Engine off/radio ready state

Press the Start/Stop button while the engine is running.

Auto Start/Stop function

This function helps save fuel. It does this by automatically switching off the engine during stops. A display in the instrument cluster indicates that the Auto Start/Stop function is ready to start the engine automatically.

Automatic engine start

Automatic transmission: release the brake pedal.
Manual transmission: depress the clutch pedal.

Automatic engine stop

Automatic transmission: while the vehicle is stationary, the selector lever is in D, the brake pedal is depressed and the driver's safety belt is fastened or the driver's door is closed.

Manual transmission: while the vehicle is stationary, neutral is engaged, the clutch pedal is not depressed and the driver's safety belt is fastened or the driver's door is closed.

Note the additional information contained in the Owner's Manual for Vehicle.

Driving 19

Lamps

Parking lamps
Daytime running lights

Lamps off
Daytime running lights

Automatic headlamp control
Adaptive Light Control
High-beam Assistant
Welcome lamps
Daytime running lights


Front fog lamps

Rear fog lamps

Low beams
Welcome lamps
High-beam Assistant

Instrument lighting

Headlamp range control

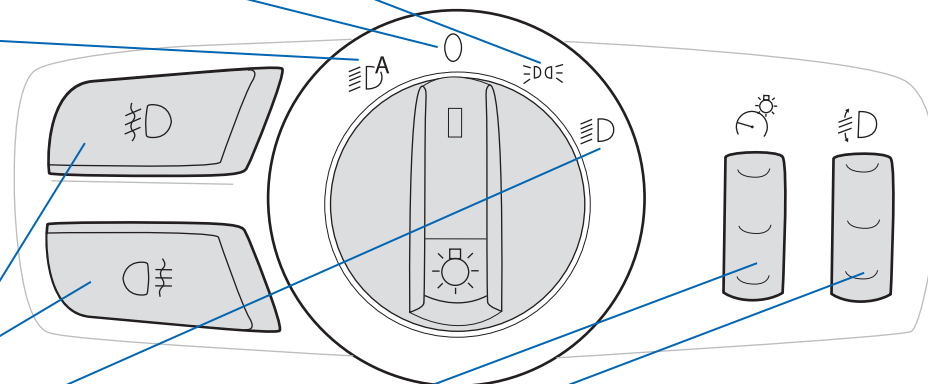

20 Driving

Automatic transmission with Steptronic/parking brake

P button

When the vehicle is stationary, press the button to engage transmission position P.

Unlock button

To shift out of P or into R:


1. Depress the brake pedal while the engine is running.
2. Press the Unlock button.
3. Move the selector lever in the desired direction.

Applying the parking brake

Pull the switch; the LED lights up.

Releasing the parking brake

Press the switch with the brake pedal depressed or transmission position P engaged; the LED goes out.

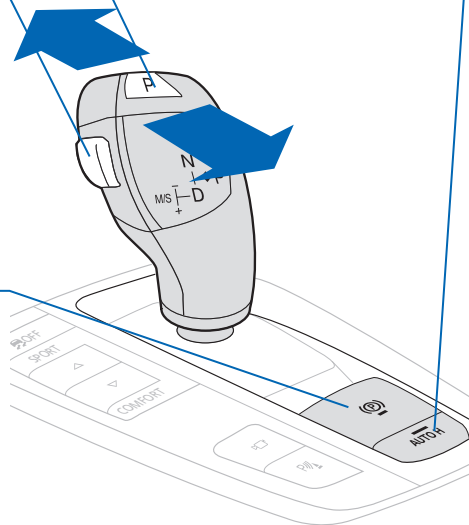

Automatic Hold

Automatic setting and releasing of the parking brake, for instance in stop-and-go traffic.

To activate Automatic Hold:

Press the button.

The LED and AUTO H lettering light up.

To deactivate Automatic Hold:

Press the button again.

The LED and AUTO H lettering go out.

To make it possible for the vehicle to roll in an automatic car wash, take the following steps:

1. Release the parking brake and deactivate Automatic Hold.
2. Drive into the car wash.
3. Depress the brake pedal if necessary.
4. Engage transmission position N.
5. Switch off the engine.

The vehicle can roll, provided that the ignition remains switched on.


Manual transmission/parking brake

Reverse gear

When the gearshift lever is pushed to the left, a slight resistance needs to be overcome.

5th/6th gear

Push the gearshift lever to the right.

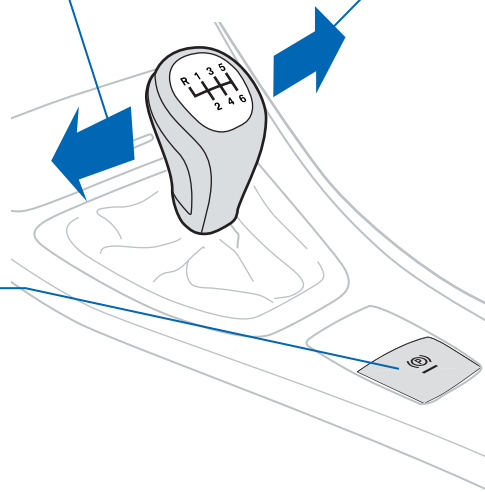**Applying the parking brake**

Pull the switch; the LED lights up.

Releasing the parking brake

Press the switch with the brake pedal or clutch depressed; the LED goes out.

To make it possible for the vehicle to roll in an automatic car wash, take the following steps:

1. Release the parking brake.
2. Drive into the car wash.
3. Shift to neutral.
4. Switch off the engine.
5. Switch on the ignition.

 
22 Driving ECO PRO



The concept

ECO PRO helps achieve a fuel-efficient driving style by adjusting the engine control and comfort functions such as climate control and the seat and mirror heating temperature. The indicator in the instrument cluster changes to a special display. For example, it shows ECO PRO tips that assist you in driving more fuel efficiently.

Activating ECO PRO



Press the button repeatedly until ECO PRO appears in the instrument cluster.

Bonus range and driving style

By using an optimized driving style, you can achieve a better cruising range.

- Blue display: efficient driving style
- Gray display: adjust your driving style, for example by lifting your foot off the accelerator.

ECO PRO tips



To achieve good fuel economy, drive with less pressure on the accelerator and decelerate well in advance of upcoming driving situations that require you to slow.



Reduce the vehicle speed to the selected ECO PRO speed.




Automatic transmission: change from S/M to D, and avoid manual shifting.



Manual transmission: follow the shift instructions.




Manual transmission: engage neutral gear for an engine stop.

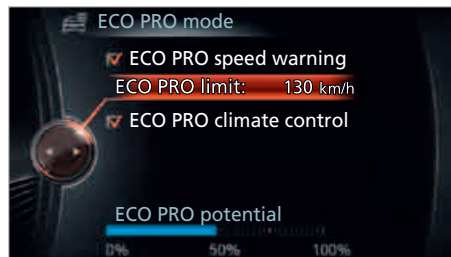

Configuring ECO PRO

Individual settings can be made.

1. "Settings"
2. "Driving mode"
3. "Configure ECO PRO"
4. Configure the program.

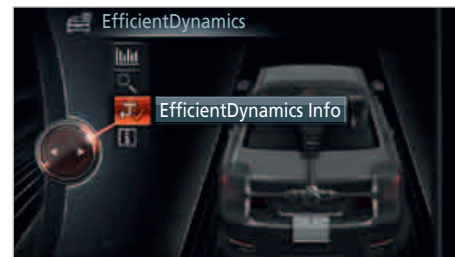

Displaying EfficientDynamics information

The currently active systems are displayed.

EfficientDynamics Info

Vehicle-dependent systems are displayed:

- Auto Start/Stop function.
- Energy recovery.
- Climate control.

24 Driving

Driving stability control systems

Dynamic Stability Control DSC

DSC prevents traction loss in the drive wheels when driving away and accelerating.

DSC also recognizes unstable vehicle conditions, such as fishtailing or nose-diving.

Subject to physical limits, DSC helps to keep the vehicle on a steady course by reducing engine speed and by applying the brakes at individual wheels.

DSC can be activated/deactivated using the Driving Experience Switch.

Dynamic Traction Control DTC

The DTC system is a version of the DSC in which forward momentum is optimized. The system ensures maximum forward momentum on special road conditions, such as unplowed snowy roads, but driving stability is limited.

DTC can be activated/deactivated using the Driving Experience Switch.

Dynamic Damping Control

This system reduces undesirable vehicle motion when using a dynamic driving style or traveling on uneven road surfaces. This enhances driving dynamics and comfort as required for the road surface and driving style.

The system offers three different programs. They can be selected using the Driving Experience Switch.

Driving Experience Switch


The Driving Experience Switch can be used to adjust the driving dynamics of the vehicle.

For this purpose, various programs are available for selection. Programs can be activated using the button of the Driving Experience Switch and the DSC OFF button.

Operating the programs



DSC OFF
TRACTION

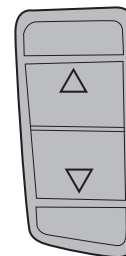

SPORT+
SPORT
COMFORT
COMFORT+
ECO PRO

Note the additional information contained in the Owner's Manual for Vehicle.

Radio/CD/Multimedia 25

Controls



26 Radio/CD/Multimedia Controls

Switching the radio on/off

Press the knob.


Setting the volume

Turn the knob.

Changing the entertainment source


Radio
CD/DVD
Music collection
External devices

Changing the radio station waveband

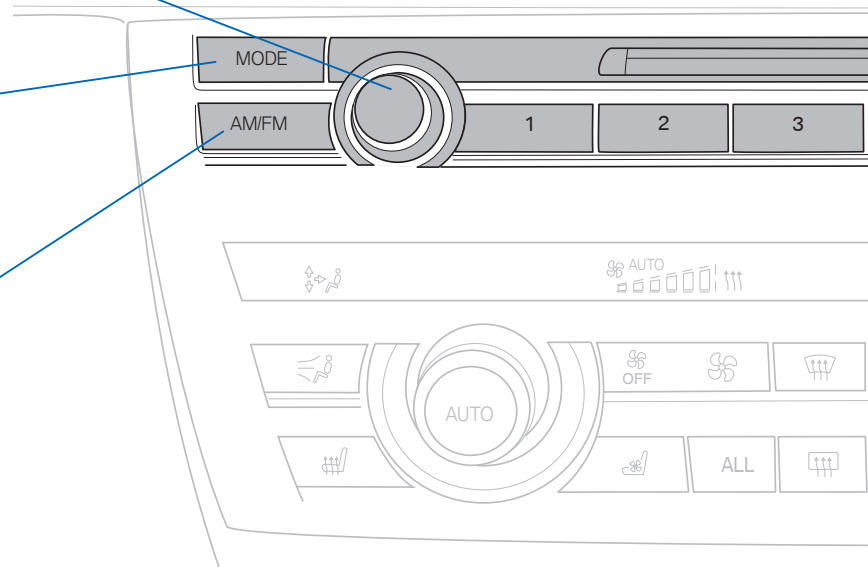


Radio/CD/Multimedia 27

Controls

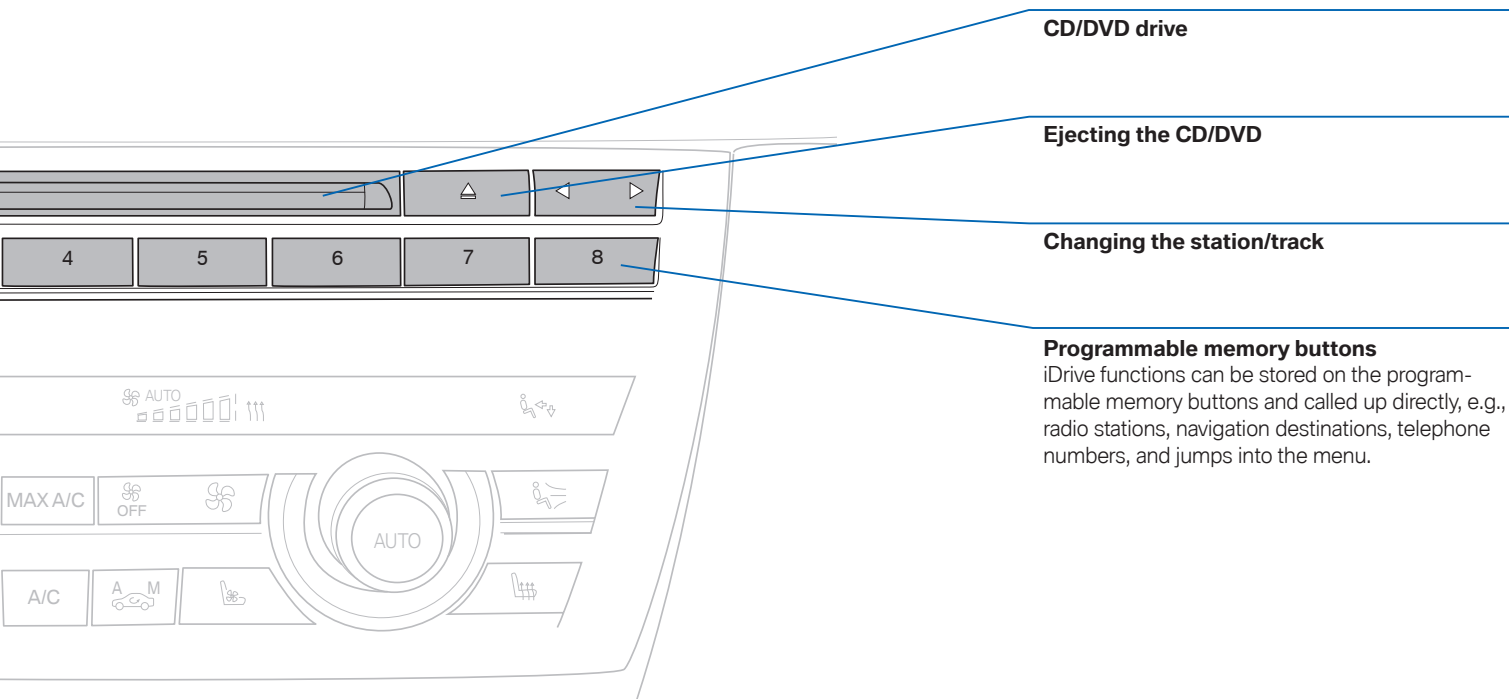


28 iDrive Controller

Controller with buttons

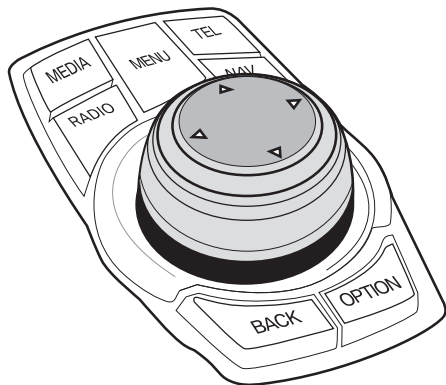


iDrive 29 Controller

Highlighting the menu item

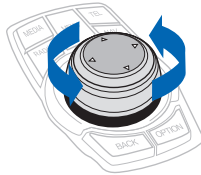


Turn the controller until the desired menu item is highlighted.

Opening the menu item

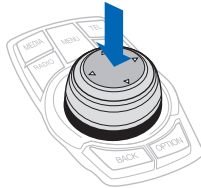


Press the controller.

Changing between panels

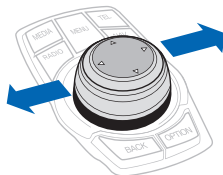


After a menu item such as "Radio" is selected, a new panel is displayed. Panels can overlap. Move the controller either to the left or the right. The panel changes.

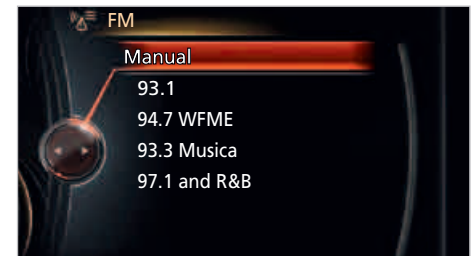

30 iDrive


Buttons on the controller

Opening the menus

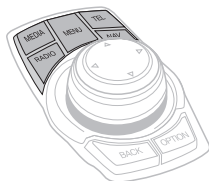

Press the button on the controller.


Opening the "Options" menu

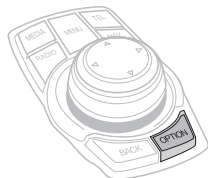

Press the OPTION button.

The "Options" menu consists of different areas: screen settings, for instance "Split screen". This section remains unchanged. Operating options for the selected main menu, such as for "Radio". If necessary, additional operating options for the selected menu such as "Store station".


Displaying the previous panel

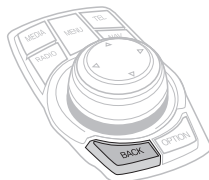

Press the BACK button.

The previous panel is reopened.

Programmable memory buttons

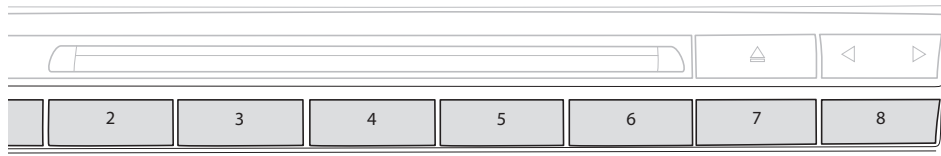

iDrive functions can be stored on the programmable memory buttons and called up directly, e.g., radio stations, navigation destinations, telephone numbers, and jumps into the menu.

Saving a function

1. Highlight the function via the iDrive.
2. Press the desired button for longer than 2 seconds.

Executing a function

Press the button.

The function is executed immediately. This means, for example, that the number is dialed when a phone number is selected.

Tip

You can also save content from the Integrated Owner's Manual to the programmable memory buttons.



Displaying memory button assignments

Briefly touch the button.

The button assignment is displayed at the top edge of the screen.

To display short information: touch the button.


To display detailed information: touch the button for an extended period.

Tip

For easy access to the Getting Help features, you can save this function on the programmable memory buttons. In the "Options" menu, select "Display Owner's Manual" and save it to a programmable memory button.

32 iDrive

Split screen/voice activation system

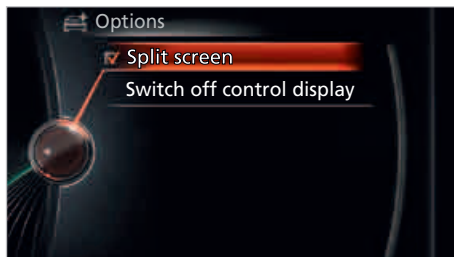

Split screen

Additional information, such as information from the computer, can be displayed on the right side of the split screen. You can set which information is displayed.

Switching the split screen on/off

1. Open "Options".
2. "Split screen"

The split screen is activated and the information remains displayed, even if another menu is selected.



Voice activation system

The voice activation system can be used to operate functions by means of spoken commands. Most menu items that are displayed on the Control Display may be voice-activated.

Example: opening the FM waveband

1. Press the button on the steering wheel.
2. Wait for the signal.
3. Say >Radio<.



4. Say >F M<.

The list of available radio stations is displayed.

Having the possible commands read aloud

1. Press the button on the steering wheel.
2. Say >Voice commands<.



Tip

You can also open the functions directly using so-called short commands, such as >Map perspective<.

To give these commands, speak without hesitation, loudly, and clearly. Avoid background noise such as that caused by open windows.

Integrated Owner's Manual 33

Operation via iDrive

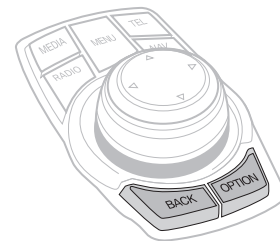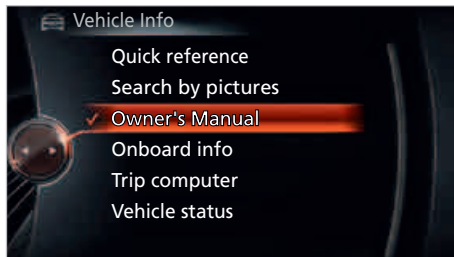

Integrated Owner's Manual

Your BMW 5 Series comes with an Integrated Owner's Manual, which contains all of the information necessary for you to make the best use of your vehicle. For your safety, the Integrated Owner's Manual is only displayed when the vehicle is stationary.

Selecting the components

1. Open the main menu.
2. "Vehicle Info"
3. Select the desired section:
 - "Quick reference"
 - "Search by pictures"
 - "Owner's Manual"

Getting Help feature via iDrive

The Owner's Manual for the currently selected menu can be displayed.

1. Open "Options".
2. "Display Owner's Manual"

You can switch between the Integrated Owner's Manual and the currently selected menu by using the BACK and OPTION buttons. This is particularly helpful for functions with multiple operating steps.

Printed Owner's Manual




A printed Owner's Manual is contained in the vehicle document portfolio in the glove compartment or in the trunk.

Tip

Complex principles are explained quickly via videos in the Integrated Owner's Manual.

34 Navigation

Entering a destination

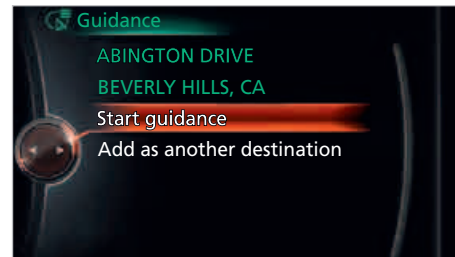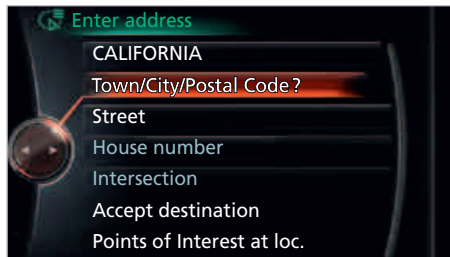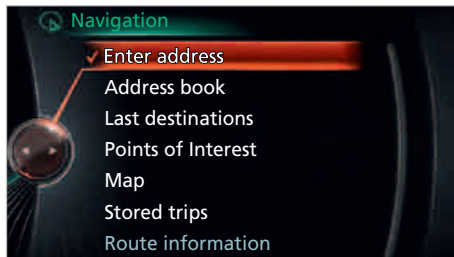

Manual destination entry


1. "Navigation"
2. "Enter address"

3. Select "State/Province" or the displayed state or province.
4. Select "Town/City/Postal Code" or the displayed town/city/postal code.
5. Select letters as necessary.
The list grows smaller each time you enter a new letter.
6. Move the controller to the right.

7. Select the city/town name in the list.
8. Select "Street" or the displayed street.
9. Enter the street and, if necessary, the intersection or building number in the same manner as the town/city.
10. "Accept destination"
11. "Start guidance"

Tip

You can also enter a destination using the voice activation system. Town/city, street, and building number can also be spoken in one command.

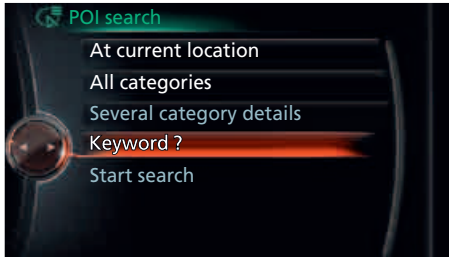


Searching for points of interest

Selection of points of interest, such as hotels or tourist attractions.

1. "Navigation"
2. "Points of Interest"
3. Select the type of search:
 - "Google™ Local Search"
 - "A-Z search"
 - "Category search".
4. Specify "At current location", "All categories" and, if necessary, "Several category details" and "Keyword".

A list of the points of interest is displayed.

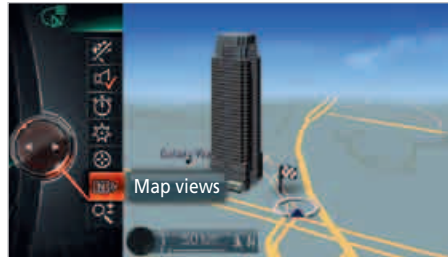

Setting the map view

Various map views can be displayed.


1. "Navigation"
2. "Map"
3.  "Map views"

Changing the scale

1. If necessary, move the controller to the right to change the map view.
2.  Select this symbol.
3. Turn the controller.

36 Entertainment

Tone/radio

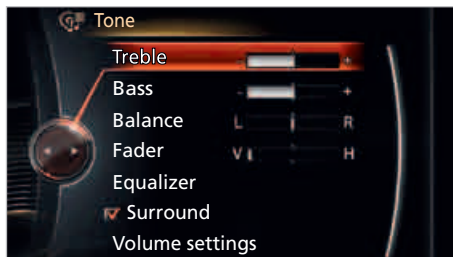


Adjusting the tone

1. "Multimedia", "Radio" or "Settings"
2. "Tone"
3. Select the desired tone settings.
4. To adjust: turn the controller.
5. To store: press the controller.



Selecting the station

1. "Radio"
 2. "FM" or "AM"
- The station played last is played and displayed.

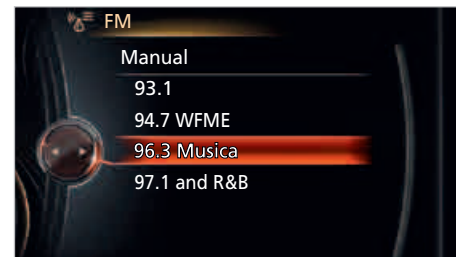

3.  "FM stations", "AM stations", or  "Presets"
4. Select the desired station.
The selected station is stored for the remote control currently in use.

Tip

You can store your favorite radio stations on the programmable memory buttons 1-8. Use the iDrive to select the radio station and hold the desired button down for several seconds.



Storing from a CD/DVD

Music tracks from CDs/DVDs and USB media may be stored in the music collection on a hard disk in the vehicle.

1. Insert the CD or DVD in the CD/DVD player.
2. "Multimedia"
3. "CD/DVD"
4.  Select the symbol for the CD/DVD player.

Tip

Music can be stored via the CD/DVD player and compressed audio files can be stored via the USB interface in the center armrest. Additional information can be found in the Owner's Manual on navigation, entertainment, and communication.

5. "Store in vehicle"

The music collection is displayed and the first track is played. During storage, the tracks are played in sequence.

Observe the following during the storage process:

Do not switch to the CD/DVD drive and do not remove the CD/DVD from the CD/DVD drive as this will interrupt the storage process.

Tip

You can switch to other audio sources without interrupting the storage process. Tracks from the current CD/DVD that have already been stored can be called up.

38 Communication

Telephone



Pairing the mobile phone with the vehicle


1. Switch on the ignition.
2. Activate Bluetooth on the vehicle and the mobile phone.
3. If necessary, adjust the mobile phone according to the Bluetooth presets, e.g., connection without confirmation or visibility.
4. If necessary, deactivate Bluetooth audio.
5. If necessary, define a 4 to 16-digit number as the Bluetooth passkey. This is only required for the one-time pairing procedure.
6. "Settings"
7. "Connections"
8. "Bluetooth®"
9. "Add new device"
The Bluetooth name of the vehicle appears on the Control Display.
10. Perform additional steps on the mobile phone, such as searching for the Bluetooth device.
The Bluetooth name of the vehicle also appears on the mobile phone display.
11. Select the Bluetooth name of the vehicle on the mobile phone display.
12. Enter and confirm the Bluetooth passkey on the mobile phone and via the iDrive.
or
Compare the control number on the Control Display with the control number on the mobile phone display. Confirm the control number on the mobile phone and on the Control Display.
"OK"

Tip

Please ask your BMW center which mobile phones with a Bluetooth interface are supported. You can obtain additional information on the Internet at:
www.bmwusa.com/bluetooth

Communication 39


Telephone

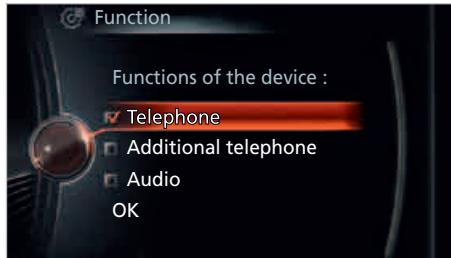

13. Select the functions for which the mobile phone is to be used.

14. "OK"


The mobile phone is connected and displayed at the top of the mobile phone list.

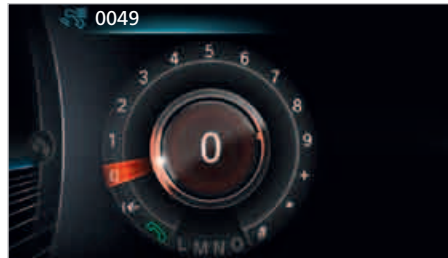

Dialing a number

1. "Telephone"
2. "Dial number"
3. Select the digits individually.
4. Change to letters if necessary.
5.  Select this symbol to establish the call.

The connection is established via the mobile phone to which the telephone function has been assigned.

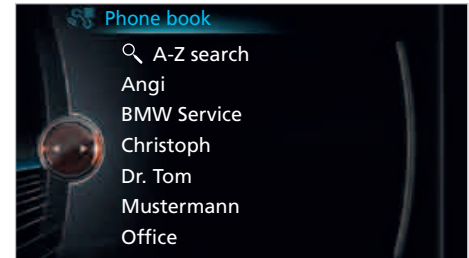

Selecting from the phone book

1. "Telephone"
 2. "Phone book"
 3. Select the desired entry.
- The symbols identify the storage location of the contacts.

Accepting a call

-  Press the button on the steering wheel.

Tip


Up to three mobile phones can be linked to the vehicle and used as a telephone, an additional telephone, or an audio player. Additional information can be found in the Owner's Manual on navigation, entertainment, and communication.

Tip

You can also select the number via the voice activation system. The connection is established via the mobile phone to which the telephone function has been assigned.

40 Refueling

Refueling/oil level

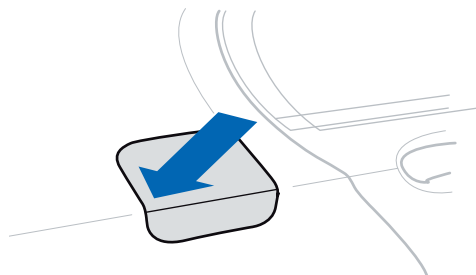

Refueling

To open the fuel filler flap:
Lightly press the rear edge.

Fuel quality: gasoline

Only use unleaded gasoline without metal additives.
Recommended fuel quality: BMW recommends
AKI 91.

Minimum fuel grade: AKI 89.

Maximum ethanol content: 10%, which corresponds to E10.

The ethanol should meet the following quality standards:

US: ASTM 4806-xx

CAN: CGSB-3.511-xx

xx: Note the standard applicable in each case.

Displaying the oil level

The oil level is monitored electronically and shown on the Control Display.

1. "Vehicle Info"
2. "Vehicle status"
3.  "Engine oil level"

For recommended oil grades, refer to the Owner's Manual.

Note the additional information contained in the Owner's Manual for Vehicle.

Flat Tire Monitor FTM

The system identifies a loss of pressure by comparing the speeds of rotation of the individual wheels as the car is traveling.

The system must be initialized with the correct tire pressure in order for it to reliably respond in detecting a flat tire.

1. "Vehicle Info"
2. "Vehicle status"
3.  "Reset"
4. Start the engine; do not drive away.
5. Start the initialization with "Reset".
6. Drive away.


The FTM is not a substitute for carrying out tire pressure checks.

Tire Pressure Monitor TPM

TPM checks the inflation pressures of the four mounted tires. The system notifies you if there is a significant loss of pressure in one or more tires.

In order to assure that a flat tire is reported reliably, the system must be reset while all tire inflation pressures are correct.

1. "Vehicle Info"
2. "Vehicle status"
3.  "Reset"
4. Start the engine; do not drive away.
5. Reset the tire pressure using "Reset".
6. Drive away.

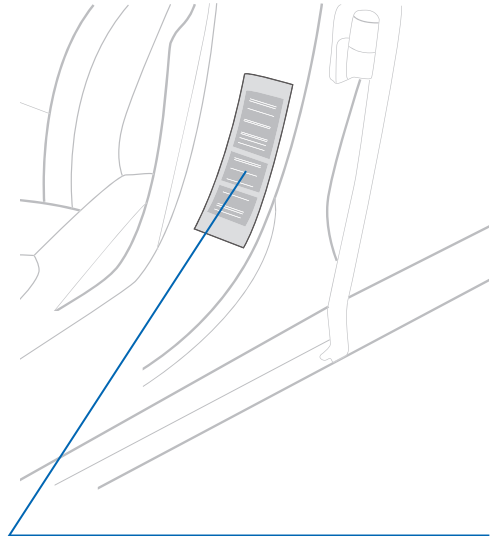

Tire pressure

The pressure values for approved tire sizes and speeds up to 100 mph/160 km/h can be found on the driver's door pillar.

If the tire's speed rating code is not listed, use the tire pressure for the corresponding size, e.g., 245/45 R18.

Check the tire pressure at least twice a month and before taking an extended trip. Initialize the FTM/TPM after correcting the tire pressure or changing the tires/wheels.


42 Breakdown assistance

Warning triangle, first aid kit



Warning triangle and first aid kit

The warning triangle and the first aid kit are located in the container on the inside of the trunk lid. To open, release the wing screw.

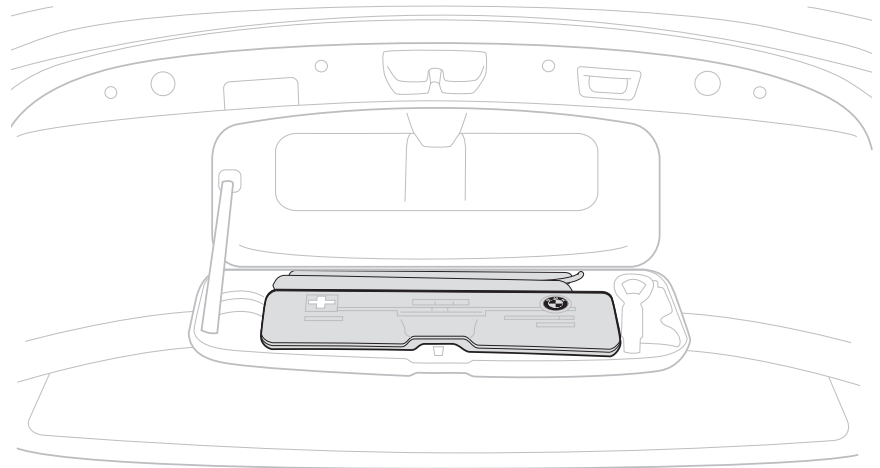


Socket for Onboard Diagnostics OBD

There is an OBD socket on the driver's side for checking the primary components in the vehicle emissions.


SERVICE
ENGINE
SOON

Emissions

 The warning lamp lights up:
Emissions are deteriorating. Have
the vehicle checked as soon as
possible.




Indicator for the previously de-
scribed malfunctions in Canadian
models.

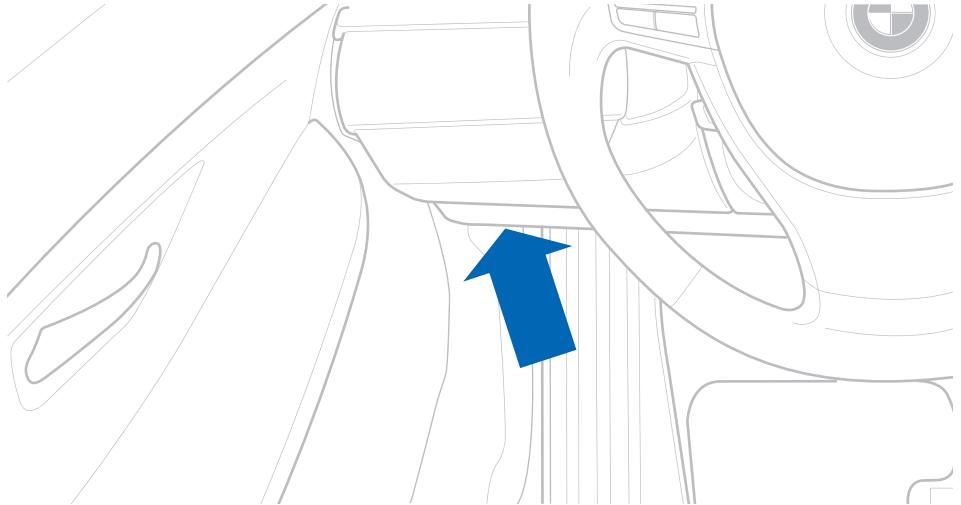

Note the additional information contained in
the Owner's Manual for Vehicle.

44 24/7 Access

BMW Assist™ and Bluetooth® system

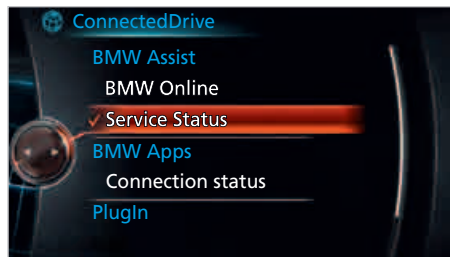

BMW Assist Safety Plan

Combining GPS location technology with hands-free wireless communication, BMW Assist connects you with a trained response specialist 24/7 to help you with almost everything while on the road.

The BMW Assist Safety Plan provides:

- Automatic Collision Notification
- Emergency Request (SOS)
- Enhanced Roadside Assistance
- Stolen Vehicle Recovery
- My Info
- Remote Door Unlock
- TeleService
- Customer Relations

Easy Access

To initiate the services, just go to "BMW Assist" in the main menu and select the desired service, or push the SOS button on the overhead console.

What You Need To Do

You must complete, sign, and submit a subscriber agreement with your salesperson. To decline services, you must complete, sign, and submit a "Waiver and Release" document. If neither action is taken, your BMW Assist services will be remotely deactivated approximately 60 days after you take delivery of your new vehicle.

Bluetooth hands-free calling

The BMW Assist system includes Bluetooth hands-free calling capability with speech recognition. See page 38 or visit www.bmwusa.com/bluetooth for BMW approved handsets and pairing instructions.

Tip

You may even prepare some services offered by BMW Assist in the comfort of your home and send them to your vehicle via the Internet.

Tip

Upgrade to our optional Convenience Plan to receive directions, traffic and weather information, Critical Calling, Concierge services, online access to the Google Maps™ database, news headlines, up-to-date fuel prices and stock indices in your BMW 5 Series with BMW Search. Push the SOS button, call toll-free 1-888-333-6118, or log on to www.bmwassist.com to learn more.

BMW Roadside Assistance

Can be contacted if assistance is needed in the event of a breakdown.

Telephone

USA: (800) 332-4BMW (4269)

Canada: 1-800-267-8269

If possible, the vehicle and position data are transmitted in the process.

Towing

The safest method approved for transporting vehicles is to use a commercial flatbed carrier truck, dispatched via Roadside Assistance, and to secure the vehicle to the flatbed truck with four nylon wheel straps.

When pulling the vehicle onto a flatbed carrier truck, only use the screw-in tow fitting found in the tool kit.

Refer to the detailed towing instructions in the Owner's Manual.

46 Appendix

Any updates to the Owner's Manual for Vehicle can be found here.

More about BMW



**The Ultimate
Driving Machine®**

bmwusa.com
www.bmw.ca

© 2012 Bayerische Motoren Werke

Aktiengesellschaft

Munich, Germany

Reprinting, including excerpts, only with the
written consent of BMW AG, Munich.

Order No. 01 40 2 916 503

US English VI/12

Printed on environmentally friendly paper,
bleached without chlorine, suitable for recycling.

