

2013 Infiniti FX

Quick Reference Guide



INFINITI.



- | | |
|---|--|
| 01 INSTRUMENT BRIGHTNESS CONTROL * | 13 POWER LIFTGATE MAIN SWITCH |
| 02 TRIP COMPUTER SWITCHES | 14 DYNAMIC DRIVER ASSISTANCE SWITCH* |
| 03 LOW TIRE PRESSURE WARNING LIGHT | 15 TILT / TELESCOPIC STEERING WHEEL SWITCH* |
| 04 PADDLE SHIFTERS* | 16 WARNING SYSTEMS SWITCH* |
| 05 HEADLIGHT AND TURN SIGNAL CONTROL | 17 VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH* |
| 06 WINDSHIELD WIPER /WASHER SWITCH | 18 INTELLIGENT KEY PORT* |
| 07 TRIP A/B RESET SWITCH* | 19 HOOD RELEASE* |
| 08 STEERING WHEEL SWITCHES FOR AUDIO* / BLUETOOTH® / NAVIGATION | 20 CONTROL PANEL DISPLAY SCREEN* |
| 09 INTELLIGENT CRUISE CONTROL | 21 AUDIO SYSTEM |
| 10 OUTSIDE MIRROR CONTROL SWITCH | 22 AUTOMATIC CLIMATE CONTROLS |
| 11 INTELLIGENT BRAKE ASSIST (IBA) OFF SWITCH* | 23 FRONT PASSENGER AIR BAG STATUS LIGHT* |
| 12 POWER LIFTGATE SWITCH | |

*See your Owner's Manual for information.

new system features

Around View Monitor with Moving Object Detection (MOD) (if so equipped)	2
Power Liftgate Switch	3
Power Liftgate Main Switch	4
Garage Mode System (if so equipped)	4

essential information

Loose Fuel Cap	5
Tire Pressure Monitoring System (TPMS)	5
Front Armrest/Center Console Storage Box	6

first drive features

INFINITI Intelligent Key™ System	7
Power Liftgate	8
Power Seat Adjustments	8
Automatic Drive Positioner (if so equipped)	9
Outside Mirror Control Switch	9
Starting/Stopping the Engine	10
Headlight Control Switch	10
Windshield Wiper/Washer Switch	11
Automatic Climate Control (if so equipped)	12
FM/AM/SiriusXM™ Satellite Radio with CD/DVD Player (with Navigation System – if so equipped)	14
USB/iPod® Interface	15
Conventional (Fixed Speed) Cruise Control	15
Intelligent Cruise Control (ICC) System (if so equipped)	16
Power Outlets	17
Fuel-Filler Door	17

system guide

Trip Computer	18
Bluetooth® Hands-free Phone System	18
System Operating Tips	19
Bluetooth® System with Navigation (if so equipped)	19
Bluetooth® System without Navigation (if so equipped)	21
Navigation System (if so equipped)	23
DVD Player (if so equipped)	24
HomeLink® Universal Transceiver	25



- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

 
For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**”, “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” and the “**Starting and driving (section 5)**” of your Owner’s Manual.




new system features

Around View Monitor with Moving Object Detection (MOD) (if so equipped)

- With the ignition switch in the **ON** position, the Around View Monitor is activated by pressing the **CAMERA** button **01**, located on the control panel, or by moving the shift lever to the **R (REVERSE)** position. The control panel displays various views of the position of the vehicle.
- When the shift lever is in the **P (PARK)**, **N (NEUTRAL)** or **D (DRIVE)** position and the **CAMERA** button **01** is pressed, the following views will display in order:

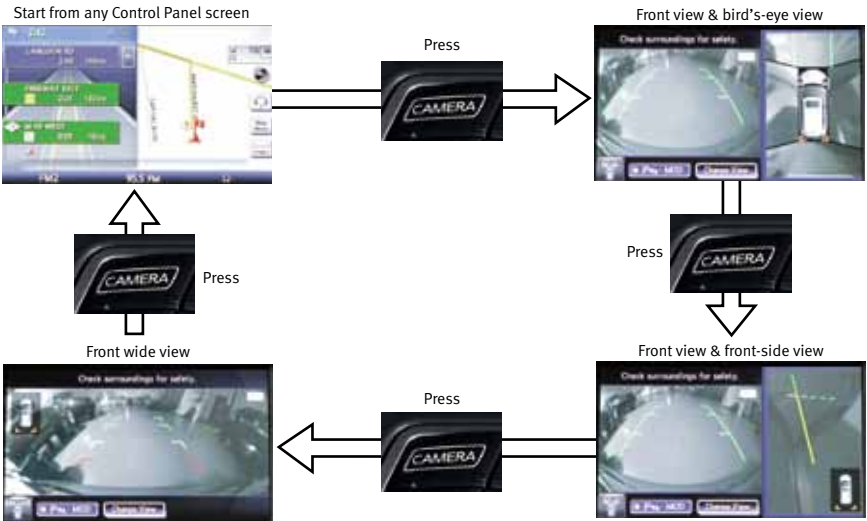

 
- When the shift lever is in the **R (REVERSE)** position and the **CAMERA** button **01** is pressed, the following views will display in order:

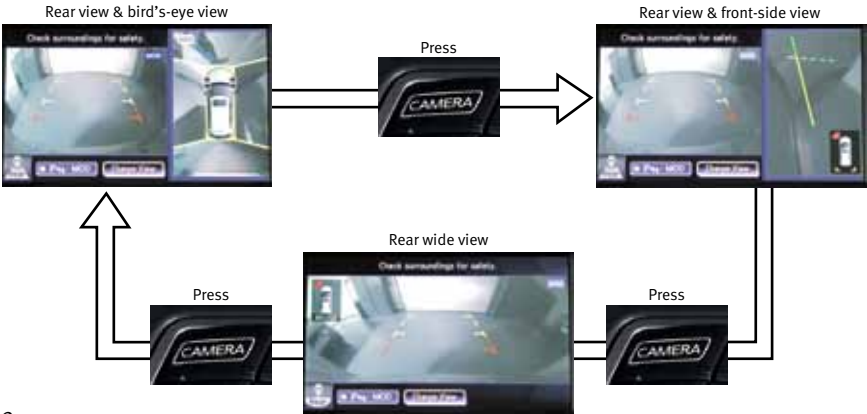


- For information regarding how to access additional viewing cycles, please see your Owner's Manual.
- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
 - Red 1.5 ft (0.5 m); Yellow 3 ft (1 m); Green 7 ft (2 m) and 10 ft (3 m).

NOTE:

 - There are some areas where the system will not show objects.
 - When in the front or the rear view display, an object below the bumper or on the ground may not be viewed **02**.
 - When in the bird's-eye view, a tall object near the seam of the camera viewing areas **03** will not appear in the monitor.
- The distance between objects viewed on the AVM differs from the actual distance.
- Objects in the bird's-eye view will appear further than the actual distance.




02

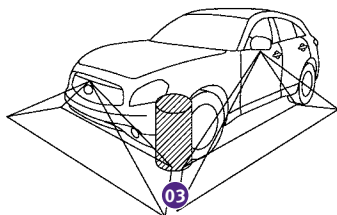 

03

MOVING OBJECT DETECTION (MOD)

 - If the MOD system detects moving objects surrounding the vehicle, a yellow frame **01** will be displayed on the camera image and a chime sounds.
- In the bird's-eye view, a yellow frame is displayed on those camera images (front, rear, right, left) where moving objects are detected.
- When the following are displayed:
 - Blue **MOD** icon **02**: the system is operative in this view.
 - Gray **MOD** icon **03**: the system is not operative in this view.
 - No **MOD** icon: the system is off. The indicator will also be off if all of the warning systems are deactivated using the camera settings menu.
- To temporarily turn the system on or off, touch the **04** key.

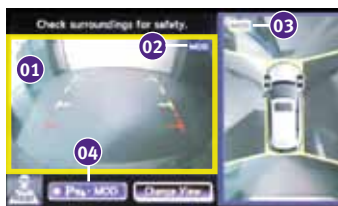


For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual.

Power Liftgate Switch

- When the liftgate is closed, the liftgate will open automatically by pushing the power liftgate switch **01** on the instrument panel.

 For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.

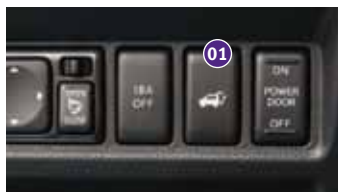

new system features

Power Liftgate Main Switch

- The power liftgate operation can be turned **ON** or **OFF** by the power liftgate main switch **01** on the instrument panel.
- When the power liftgate main switch is pushed to the **OFF** position, power operation is not available to the power liftgate switch on the liftgate or the liftgate opener switch **02** on the instrument panel.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

Garage Mode System (if so equipped)

 
- Your vehicle’s power liftgate operation can be set to stop opening at a user selected position in order to help avoid damaging the liftgate or overhead objects.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

Loose Fuel Cap

- A **LOOSE FUEL CAP** warning message will appear in the dot matrix liquid crystal display **01** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will disappear when the vehicle detects the fuel-filler cap is properly tightened and the reset button **02** is pressed.
- If the cap is not properly tightened, the Malfunction Indicator Light  may illuminate.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

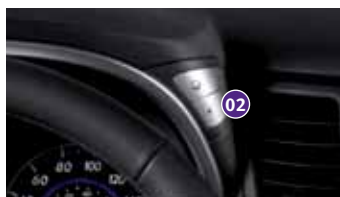

Tire Pressure Monitoring System (TPMS)

- A **CHECK TIRE PRESSURE** warning message will appear in the dot matrix liquid crystal display **01** and the low tire pressure warning light **02** will illuminate when one or more tires are low on pressure and air is needed.
 - The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mile (1.6km) at moderate speeds.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 MPH (25km/h). The **CHECK TIRE PRESSURE** warning message and low tire pressure warning light will disappear.
- When the low tire pressure warning light flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by an INFINITI retailer.
- Tire pressure rises and falls depending on the heat caused by the vehicle’s operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates in low ambient temperature, check the tire pressure in your tires.
 - Check the tire pressure (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to section 9, “Technical and consumer information”, in your Owner’s Manual for the location of the Tire and Loading Information label.



For more information, refer to the “**Instruments and controls (section 2)**”, the “**Starting and driving (section 5)**” and the “**Maintenance and do-it-yourself (section 8)**” of your Owner’s Manual.

Front Armrest/Center Console Storage Box

- To access the bottom storage bin, pull up on the driver's side lever **01**.
- To access the top storage bin, pull up on the passenger's side lever **02**.

For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual.



INFINITI Intelligent Key™ System

The INFINITI Intelligent Key™ system allows you to lock or unlock your vehicle, open your liftgate and start the engine.

NOTE: It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

 
 


- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **01** once or press the  button **02** on the keyfob.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **01** once; the corresponding door will unlock. Push the door handle request switch **01** again within 1 minute; all other doors will unlock, or
 - Press the  button **03** on the keyfob to unlock the driver's side door. Press the  button again; all other doors will unlock.
- To open the liftgate, press the  button **04** for more than 1 second.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **05** for more than 1 second. Once activated, the panic alarm and headlights will stay on for 25 seconds.



INFINITI INTELLIGENT KEY™ BATTERY DISCHARGE

- If the battery in the Intelligent Key is almost discharged, the guide light **06** of the Intelligent Key port blinks and the Intelligent Key insertion indicator **07** is displayed in the vehicle information display.
- To start the engine under these circumstances, insert the Intelligent Key into the key port with the keyring side facing backward until it latches into place. Then push the ignition switch to start the engine.
- To remove the Intelligent Key from the port, push the ignition switch to turn the engine off and then pull the Intelligent Key out of the port.
- The Intelligent Key port does not charge the Intelligent Key battery. If you see the Intelligent Key warning light **08**, replace the battery in the Intelligent Key.

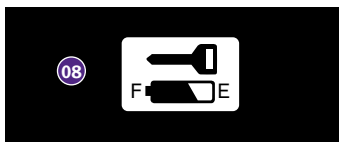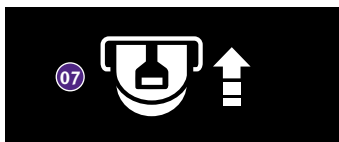


For more information, refer to the “**Pre-driving checks and adjustments** (section 3)”, “**Starting and driving** (section 5)” and the “**Maintenance and do-it yourself** (section 8)” of your Owner's Manual.

first drive features

Power Liftgate

When the liftgate is closed, the liftgate will open automatically by:

 - Pushing the power liftgate switch **01** on the instrument panel.
- Pushing the liftgate opener switch **02**.

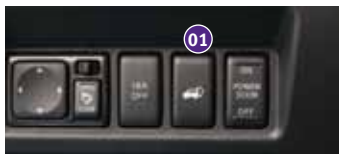

- Pressing the  button **03** on the INFINITI Intelligent Key™ for more than 1 second.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



Power Seat Adjustments

- To slide the seat forward or backward, push the control switch  **01** forward or backward.
- To recline the seatback, push the switch  **02** forward or backward.

SEAT LIFTER

- To raise or lower the front portion or height of the seat, push the front or back end of the switch  **01** up or down.

POWER LUMBAR SUPPORT

- To adjust the seat lumbar support, push the front or back end of the switch  **03**.



For more information, refer to the “**Safety — seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

Automatic Drive Positioner (if so equipped)

- Two positions for the driver's seat, steering column and outside mirrors can be stored in the automatic drive positioner memory.
- Follow these procedures to set the memory positions:
 - Confirm the shift lever is in the **P (PARK)** position.
 - Push the ignition switch to the **ON** position.
 - Adjust the driver's seat, steering column and outside mirrors to the desired positions using the adjusting switches for each feature.
 - Push the **SET** switch and within 5 seconds, push the memory switch (**1** or **2**) for at least 1 second.
 - The indicator light on the memory switch you select will illuminate for approximately 5 seconds.
 - The driver's seat, steering column and outside mirror positions are now set to your preference.
- These memorized positions can also be linked to your INFINITI Intelligent Key™.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.

Outside Mirror Control Switch

- To select the right or left side mirror, move the control switch **01** right or left.
- To adjust each mirror to the desired position, use the control switch **02**.
- To fold the outside rearview mirrors, push the switch **03** to the **CLOSE** position and to unfold the outside rearview mirrors push the switch **03** to the **OPEN** position.



REVERSE TILT-DOWN FEATURE (if so equipped)

- When backing up the vehicle, the right or left outside mirror can be selected to turn downward to provide better rear visibility.
 1. Push the ignition switch to the **ON** position.
 2. Move the shift lever to the **R (REVERSE)** position.
 3. Choose the right or left outside mirror by operating the outside mirror control switch **01**.
 4. The selected outside mirror surface moves downward.

NOTE: The control switch **01** must be in the right or left position for the reverse tilt-down feature to function.

- When one of the following conditions has occurred, the outside mirror surface will return to its original position:
 - The shift lever is moved to any position other than **R (REVERSE)**.
 - The outside mirror control switch is set to the center “neutral” position.
 - The ignition switch is pushed to the **OFF** position.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.

first drive features

Starting/Stopping the Engine

NOTE: It is important to make sure the INFINITI Intelligent Key™ is with you (that is, in your pocket or purse).



- Depress the brake pedal.
 - If the brake pedal is not depressed, pushing the ignition switch once enters the **ACC** mode.
 - If the ignition switch is pushed a second time, the vehicle will enter the **ON** mode.
- Move the shift lever to **P (PARK)**.
- Push the ignition switch to start the engine.

TURNING THE ENGINE OFF

- Move the shift lever to the **P (PARK)** position and apply the parking brake.
- Press the ignition switch **START/STOP** button to turn the engine off.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

Headlight Control Switch

- Turn the headlight control switch to the  position **01** to turn on the front parking, side marker, tail, license plate and instrument panel lights. Turn the switch to the  position **02** to turn on the headlights.



AUTOLIGHT SYSTEM

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **03** then push the ignition switch to **ON**. To deactivate the autolight system, turn the headlight control switch to the **OFF**,  position **01** or  position **02**.

HIGH BEAM SELECT

- Push the headlight control switch forward **04** to select the high beam function. The blue indicator light  illuminates in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light goes off.
- Pull and release the headlight control switch **05** to flash the headlight high beams on and off.



FOG LIGHT SWITCH

NOTE: The headlights must be on and the low beams  selected for the fog lights to operate.

- Turn the switch (inside collar) to the  position **06** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.

 


For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

Windshield Wiper/Washer Switch


- Move the lever to the following positions to operate the windshield wipers:

- 01** Mist (**MIST**) - One sweep operation of the front wipers.
- 02** Intermittent (**INT**) - Operates the speed-sensing and rain-sensing (if so equipped) front wipers intermittently. The intermittent operation speed can be adjusted by twisting the time control ring **03**.
- 04** Low (**LO**) - Front wipers operate at a continuous low-speed.
- 05** High (**HI**) - Front wipers operate at a continuous high-speed.
- 06** Front washer  - Pull the lever toward you to activate the front washer. The front wipers will operate several times.

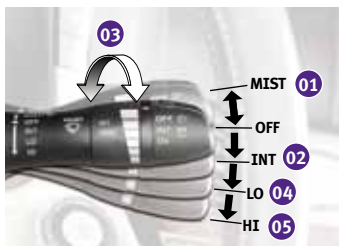

REAR WINDSHIELD WIPER AND WASHER

 - 07** Intermittent (**INT**) - Rear wiper operates intermittently.
- 08** Low (**ON**) - Rear wiper operates at a continuous low-speed.
- 09** Rear washer  - Push the lever forward to activate the rear washer. The rear wiper will operate several times.

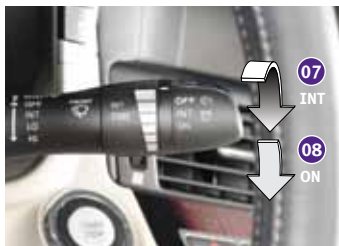


For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

2013 Infiniti FX Delivery Checklist

Bluetooth® Hands-free Phone System

- 1. Connect the customer's phone
- 2. Explain voice tagging
- 3. Identify microphone location
- 4. Explain how to dial a number
- 5. Explain how to receive and end a call

 - Yes
- ☐
 - ☐
 - ☐
 - ☐
 - ☐

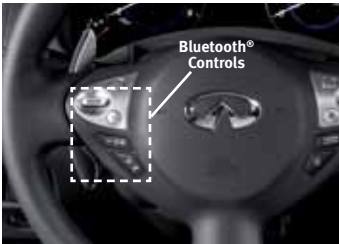

Navigation System (if so equipped)

Demonstrate

- 1. How to operate the touch screen and/or scrolling dial
- 2. How to add a home location
- 3. How to set a destination
- 4. How to search for nearby places
- 5. How to turn the display off

- Yes
- ☐
 - ☐
 - ☐
 - ☐
 - ☐



Outside Mirrors

Demonstrate

- 1. Outside mirror adjustment switch location
- 2. Right and left mirror adjustment
- 3. Neutral switch position
- 4. Mirror tilt down function (if so equipped)

- Yes
- ☐
 - ☐
 - ☐
 - ☐



Seat Adjustments

Demonstrate

- 1. How to slide the front seat forward or backward
- 2. How to recline the front seat
- 3. How to operate the seat lifter
- 4. How to operate the lumbar support
- 5. How to operate the heated/cooled seat controls (if so equipped)
- 6. How to fold the rear seats

- Yes
- ☐
 - ☐
 - ☐
 - ☐
 - ☐
 - ☐



Audio System

Demonstrate

- 1. How to tune in to the next broadcast station and skip to the next category (if so equipped) or CD track
- 2. How to store a radio station in a preset
- 3. How to scan the broadcast stations

- Yes
- ☐
 - ☐
 - ☐



2013 Infiniti FX Delivery Checklist

Windshield Wiper/Washer Switch

 
Demonstrate

FRONT WINDSHIELD WIPER AND WASHER

- 01 MIST (one sweep) function
- 02 Intermittent (INT) wiper function
- 03 Time delay adjustment ring
- 04 Low (LO) speed wiper function
- 05 High (HI) speed wiper function
- 06 Front washer  function

Yes

- ☐
- ☐
- ☐
- ☐
- ☐
- ☐

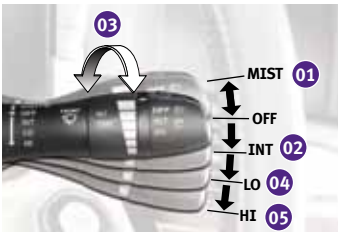

REAR WINDSHIELD WIPER AND WASHER

- 07 Intermittent (INT) wiper function
- 08 ON wiper function
- 09 Rear washer  function

- ☐
- ☐
- ☐



RAIN-SENSING AUTO WIPER SYSTEM (if so equipped)

- 09 Rain-Sensing Auto Wiper System operation

- ☐



Heating, Ventilation and Air Conditioning

Demonstrate

- 1. AUTO mode and DUAL mode
- 2. Fan Speed control
- 3. Mode control
- 4. A/C function
- 5. Defrost and Defog operation
(include recirculation button)

Yes

- ☐
- ☐
- ☐
- ☐
- ☐



Owner's Signature

Date

Sales Consultant's Signature

 
Date

Sales Manager's Signature

Date

All information, specifications, photographs and illustrations are those in effect at the time of printing. INFINITI reserves the right to change specifications or design without notice and without obligation. For additional information, see your INFINITI retailer or contact NISSAN North America, Inc. See your Owner's Manual for important warnings and details on vehicle operation and maintenance.

first drive features

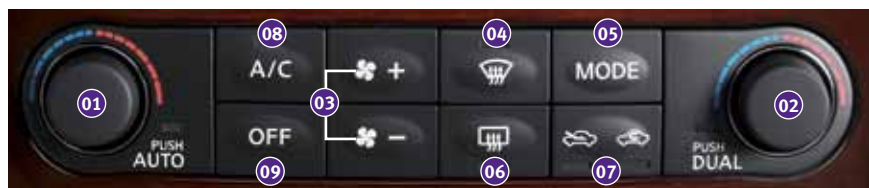

Automatic Climate Control (if so equipped)

01 AUTO BUTTON/DRIVER'S SIDE TEMPERATURE CONTROL DIAL

- The auto mode may be used year-round. Press the **AUTO** button to turn the system on and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.
- Turn the driver's side temperature control dial to the left for cooler air or right for warmer air.

02 DUAL BUTTON/PASSENGER'S SIDE TEMPERATURE CONTROL DIAL

- Press the **DUAL** button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side by turning the passenger's side temperature control dial.
- Turn the passenger's side temperature control dial left for cooler air or right for warmer air.

03 FAN SPEED CONTROL BUTTONS

- To manually adjust the fan speed, press the top button to increase the fan speed or press the bottom button to decrease the fan speed.

04 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the defroster control button to turn the system on. The A/C automatically turns on when the defroster mode is selected. This feature removes humidity from the air.
- Turn the temperature control dial **01** to set the desired temperature.
- To defrost the front and side windows quickly, set the temperature controls and fan speed controls to their maximum settings.

05 MODE BUTTON

- Press the **MODE** button to cycle through the following air flow outlets:
 - Air flows from the center and side vents.
 - Air flows from the center, side and foot vents.
 - Air flows mainly from the foot vents.
 - Air flows from the defroster and foot vents.

06 DEFROSTING REAR WINDOW AND OUTSIDE MIRRORS

- Push the rear window defroster switch to turn the system on or off.
- This function automatically turns off after approximately 15 minutes.

07 INTAKE AIR CONTROL BUTTON (if so equipped)

AIR RECIRCULATION

- Press the intake air control button to recirculate interior air inside the vehicle. The indicator light on the  side will come on. This system is used to avoid outside odors and helps to adjust the inside vehicle temperature more effectively.
- The air recirculation mode cannot be activated when the air conditioner is in the front defrosting mode .

OUTSIDE AIR CIRCULATION

- Press the intake air control button again to draw outside air into the passenger compartment. The indicator light on the  side will come on.

AUTOMATIC INTAKE AIR CONTROL

- In the auto mode, the intake air will be controlled automatically. To manually control the intake air, press the intake air control button. To return to the automatic control mode, press the intake air control button for about 2 seconds.

08 A/C BUTTON

- Press the **A/C** button to turn the air conditioner system on or off. This system helps cool and dehumidify the air inside the cabin and defog the windows.

09 OFF BUTTON

- Press the **OFF** button to turn the climate control system off.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

first drive features



FM/AM/SiriusXM™* Satellite Radio with CD/DVD Player (with Navigation System – if so equipped)

01 VOLUME/ON•OFF CONTROL KNOB

- Press the **VOL/ON•OFF** control knob to turn the system on or off. Turn the knob right or left to increase or decrease the volume.

02 SEEK•CAT AND TRACK BUTTONS

- To scan quickly through each broadcasting station, press the **SEEK•CAT** button or the **TRACK** button to stop at the previous or next broadcast station.
- For SiriusXM™ satellite radio, press the **SEEK•CAT** button or the **TRACK** button to switch to the first channel of the previous or next category.
- Press the **SEEK•CAT** button or the **TRACK** button to change tracks on a CD.
- Press and hold the **SEEK•CAT** button or the **TRACK** button to fast forward or rewind a track on a CD.

03 TUNE/FOLDER/AUDIO CONTROL KNOB

- To manually tune the radio, turn the **TUNE/FOLDER/AUDIO** knob left or right.

04 STATION PRESET BUTTONS

- Twelve stations can be set for the FM band, six for the AM band and eighteen for SiriusXM satellite radio.
- To store a station in a preset, you must first select a radio band by pressing the **AM•FM/SAT** button **05**, then tune to the desired AM, FM or SiriusXM satellite station.
- Then press and hold the desired station preset button (**1-6**) until the sound is briefly muted. The channel indicator will then display and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored, then press the corresponding station select button (**1-6**).

*SiriusXM™ Satellite Radio is only available on vehicles equipped with optional SiriusXM™ satellite subscription service.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

USB/iPod® Interface

- The USB jack **01** is located in the center console under the arm rest.
- When a compatible USB memory device or iPod® is plugged into the USB jack, compatible audio and video files stored on the device can be played through the vehicle's audio system and front display.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual.



Conventional (Fixed Speed) Cruise Control

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph.
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **CRUISE ON/OFF** switch **01**. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **02** and release. The **CRUISE SET** indicator light in the instrument panel will illuminate. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **03**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **02**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **04**.
- To turn off cruise control, push the **CRUISE ON/OFF** switch **01**. Both the **CRUISE** indicator light and the **SET** indicator light in the instrument panel will turn off.



 
 
For more information, refer to the “**Starting and driving (section 5)**” of your Owner's Manual.

first drive features

Intelligent Cruise Control (ICC) System (if so equipped)

VEHICLE-TO-VEHICLE DISTANCE CONTROL MODE

- To set Vehicle-To-Vehicle Distance Control mode, press the **CRUISE ON/OFF** button **01** for less than 1.5 seconds. The **CRUISE** indicator light **02** will illuminate.
- Accelerate to the desired speed.
- Push down on the **COAST/SET** switch **03** and release it. Cruise control will be set to the desired speed.
- Press the distance button **04** repeatedly to change the set distance between long, middle, and short.
- When a vehicle is not detected ahead of you in the lane, the set distance and set vehicle speed indicator lights will illuminate **05** in set mode.
- When a vehicle is detected ahead of you in the lane, the vehicle ahead detection, set distance, and set vehicle speed indicator lights will illuminate **06** in set mode.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **07**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **03**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **08** or tap the brake pedal. The set vehicle speed indicator **05** will go out.
- To turn off cruise control, press the **CRUISE ON/OFF** button **01**. The **CRUISE** indicator light **02**, in the instrument panel, will turn off.



To set conventional (fixed speed) cruise control mode:

- While cruise control is off, press the **CRUISE ON/OFF** button **01** and hold it down for more than 1.5 seconds. The **CRUISE** indicator light will illuminate.
- Accelerate to the desired speed.
- Push down on the **COAST/SET** switch and release it. The **SET** indicator light will illuminate. Cruise control should be set to the desired speed.

To switch between the two cruise control modes:

- When one of the two cruise modes is in use, you must turn the system off, and then turn it on again to select the other cruise control mode.

For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual.

Power Outlets

- The power outlets are used for powering electrical accessories such as cellular telephones. They are rated at 12 volt, 120W (10A) maximum.
- Power outlets are located on the instrument panel **01**, inside the center console **02**, on the rear console **03** and in the cargo area **04**.
- To use a power outlet, open the cap.

For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual.



Fuel-Filler Door

The fuel-filler door is located on the passenger's side of the vehicle.

 
- When the doors of the vehicle are locked or unlocked, the fuel-filler door is automatically locked or unlocked at the same time.
- To open the fuel-filler door, once unlocked, push the left side of the door and release.



For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

Trip Computer


- When the  button **01** is pressed, the following modes will appear on the dot matrix liquid crystal display **02** :
 - MPG** – Displays the current fuel consumption.
 - MPG/MPH** – Displays the average fuel consumption and speed since the last reset.
 - TIME/MILES** – Displays the elapsed time and total distance the vehicle has been driven since the last reset.
 - RANGE** – Displays the estimated distance to empty (dte) the vehicle can be driven before refueling.
 - OUTSIDE TEMP** – Displays the exterior air temperature including a low temperature warning feature.
 - SETTING** – Allows you to set reminders for alerts and maintenance intervals or change the language and units used in the system.
 - Press the  button **03** to cycle through the various setting modes.
 - Press the  button **01** to choose the selected menu.
 - WARNING** – If there are any.

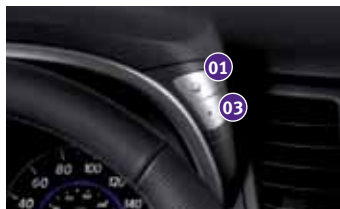

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

Bluetooth® Hands-free Phone System

 - With an overhead microphone and sound transmitted through the audio system speakers, the Bluetooth® Hands-free Phone System utilizes Bluetooth wireless technology and voice recognition to provide hands-free cellular phone communication.
- Bluetooth Streaming Audio (available with Navigation System only) allows you to use a compatible Bluetooth phone to play audio files on your device. Your compatible cellular phone can be connected to the vehicle’s audio system allowing audio files to play through the vehicle’s speakers.
- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*

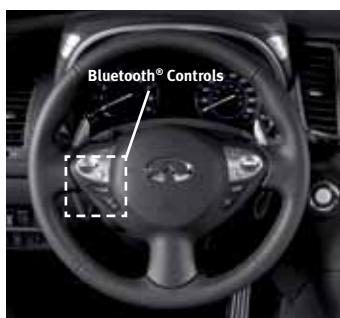

*Some jurisdictions prohibit the use of cellular telephones while driving.

SYSTEM OPERATING TIPS

- Close all windows. Surrounding noises may interfere with system operation and performance.
- Press the  or  button on the steering wheel to activate voice recognition.
- Wait for the tone before speaking.
- Begin speaking a command within 5 seconds of the tone.
- Speak in a clear and natural voice without pausing between words.
- Look straight ahead and avoid speaking too loudly or too softly.
- To go back to the previous command, say “Go back”.
- To cancel a voice recognition session, say “Exit” or press and hold the  or  button.
- To interrupt the system voice and give a command quickly, press the  or  button.
- When speaking Phonebook names, please be aware some phones require the last name to be spoken before the first name. For example, “Michael Smith” may be spoken as “Smith Michael”.
- To increase or decrease the volume of the voice prompts, push the volume control switches — or + on the steering wheel or turn the **VOL/ON•OFF** control knob on the audio system while the system is responding.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Speaker Adaptation Mode. See your Owner’s Manual for detailed information.
- Some commands are not available while the vehicle is in motion.
- The “Help” command can be used to hear a list of available commands at any time.
- Please refer to the cellular phone manufacturer’s Owner’s Manual for detailed information regarding your Bluetooth phone.



Bluetooth® System with Navigation* (if so equipped)

CONNECTING PROCEDURE

NOTE: The vehicle must be stationary when connecting the phone.



1. Press the  button and select the “Connect Phone” key.

 


*Some jurisdictions prohibit the use of cellular telephones while driving.

system guide

2. Initiate connecting from the phone.

- The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible phones, please visit www.InfinitiUSA.com/bluetooth.
- When prompted for a PIN code, enter “1234” from the handset. (The PIN code is assigned by INFINITI and cannot be changed.)

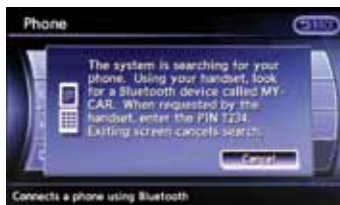

3. When the connecting is complete, the screen will return to the Phone menu display.

 
PHONEBOOK SETUP

- Depending on your cell phone, the system may automatically download your cell phone's entire phonebook to the vehicle's Bluetooth system.
- If the phonebook does not download to “Handset Phonebook”, 40 entries may be created in the “Vehicle Phonebook”. This phonebook allows a custom recording for each entry to be spoken while using the voice recognition system. To create the “Vehicle Phonebook”:

1. Push the  button on the steering wheel
2. Select “Vehicle Phonebook”.
3. Select “Add New” at the top of the screen.



4. Choose the method for entering the phonebook entry.
For this example, select “Enter Number by Keypad”.
5. Enter the digits and select “OK”.

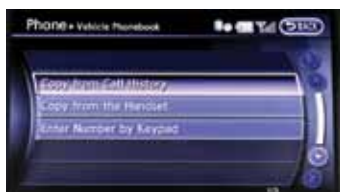

6. Select “Voicetag” to record a custom name to speak when using the Voice Recognition system.
7. Select “Store” and speak the custom name after the tone.
8. When the voicetag is successfully stored, select “OK” to save the phonebook entry.



9. After the phonebook entry is saved, it will show a screen that is ready to call the number. Select “BACK” to return to the Vehicle Phonebook.

CALLING A PHONEBOOK ENTRY:

1. Press the  button.
2. After waiting for the tone, say “Phone”.
3. After the tone, say “Handset Phonebook” or “Vehicle Phonebook” to select the desired phonebook.

4. After the tone, say the name of the person as shown on the vehicle's display of the phonebook. Depending on the phone, the last name of the contact may need to be spoken before the first name.

MAKING A CALL:

1. Press the  button.
2. After waiting for the tone, say "Phone".
3. After the next tone, say "Dial Number".
4. After the next tone, say "123-456-7891". You may also say the digits in groups of 3, 3 and 4, respectively. To use this group dialing method, say only the first 3 digits of the phone number instead of all 10 digits. After the system recognizes the number, it will request the next 3 digits and finally the last 4 digits.
5. After the system speaks the correct number and sounds the tone, say "Dial."

RECEIVING/ENDING A CALL

- To accept the call, press the  button on the steering wheel or touch the "Answer" key. To reject the call, touch the "Reject Call" key.
- To hang-up, press the  button or touch the "Hang-Up" key.



Bluetooth® System without Navigation* (if so equipped)

PAIRING PROCEDURE

1. Press the  button on the steering wheel. The system announces the available commands.
2. Say "Connect Phone". The system acknowledges the command and announces the next set of available commands.
3. Say "Add Phone". The system acknowledges the command and asks you to initiate connecting from the phone handset.
4. Initiate pairing from the phone.



- The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible phones, please visit www.InfinitiUSA.com/bluetooth.
- When prompted for a PIN code, enter "1234" from the handset. (The PIN code is assigned by INFINITI and cannot be changed.)

system guide

5. The system asks for a name for the phone. Say “Yes”. The system acknowledges the command and registers the cellular phone.

PHONEBOOK

- Depending on the phone, the system may automatically download the entire phonebook. For more information, please visit www.InfinitiUSA.com/bluetooth or the phone’s user guide.
- If the phonebook does not download automatically, 40 entries can be individually downloaded. To manually download entries:
 1. Push the  button on the steering wheel
 2. After the tone, say “Phonebook”.
 3. After the next tone, say “Transfer Entry”.
 4. Using the phone, select an entry to send to the vehicle. Please consult the website above or your phone’s User Guide for specific steps of the phone.
 5. The system will speak the transferred entry. Confirm the entry by saying “Yes” after the tone.

CALLING A PHONEBOOK ENTRY:

1. Press the  button.
2. After waiting for the tone, say “Call”.
3. After the next tone, speak a name of a phonebook entry. For example “Michael Smith”.
4. Confirm the correct name is recognized by saying “Dial” after the tone.

NOTE: In some cases, names stored using all UPPERCASE letters may not be recognized by the voice recognition system.

MAKING A CALL:

1. Press the  button.
 2. After waiting for the tone, say “Call”.
 3. After the next tone, say “Phone Number”.
 4. After the next tone, say “123- 456- 7890”.
- You may also say the digits in groups of 3, 3 and 4, respectively. To use this group dialing method, say only the first 3 digits of the phone number instead of all 10 digits. After the system recognizes the digits, it will request the next 3 digits and finally the last 4 digits.
5. After the system speaks the correct number and sounds the tone, say “Dial.”

RECEIVING/ENDING A CALL

- To accept the call, press the  button on the steering wheel.
To reject the call, press the  button.
- To hang-up, press the  button.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual or please visit www.InfinitiUSA.com/bluetooth.



Navigation System (if so equipped)

- Your Navigation System can calculate a route from the current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.

01 Touch screen display

02 DEST button – Press to enter a destination.

03 STATUS button – Press multiple times to display audio information with either the air conditioner status, fuel economy or navigation directions.

04 ZOOM OUT button – Press to zoom the map out.

05 ROUTE button – Press to access the guidance control functions (guidance cancellation, route priority, waypoint setting on the route, etc.).

06 INFINITI Controller

- **ENTER** button – Press to select the highlighted item on the screen. If this button is pressed while a map is displayed, the map menu screen is displayed.
- Main directional buttons – Use to move across the map, highlight an item on the screen or adjust a setting (volume, brightness, etc.).
- Additional directional buttons – Use to move across the map or highlight an item on the character input screen.
- Center dial – Use to highlight an item on the screen or adjust a setting. The center dial can also be used to adjust the map scale.

system guide

- 07 **INFO** button – Press to display the fuel economy, tire pressure, maintenance, location, traffic information (if so equipped) and weather information (if so equipped).
- 08  button – Press to switch between the day screen (bright) and the night screen (dark). Press and hold to turn off the display. Press again to turn on the display.
- 09 **ZOOM IN** button – Press to zoom the map in.
- 10 **MAP** button – Press to display the map. While following a programmed route, press multiple times to change the type of route information displayed.
- 11 **SETTING** button – Press to access the system settings.
- 12 **BACK** button – Press to return to the previous screen. In a settings screen, this button is also used to apply the setting. In a character input screen, this button is also used to delete the characters that have been entered.
- 13 **VOICE** button – Press to hear the current guidance for a programmed route.

For more information, please refer to your Navigation System Owner's Manual.

DVD Player (if so equipped)

- This system allows you to play video files via a DVD or CD from the front display.
- To view movies on the front display, stop the vehicle in a safe location, move the shift lever to the **P (PARK)** position and apply the parking brake.
- To reduce driver distraction, movies will not be shown on the front display while the vehicle is in any drive position.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.





HomeLink® Universal Transceiver

- The HomeLink® system can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.

For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual, the HomeLink® website at www.homelink.com or call 1-800-355-3515.



INFINITI.

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. See your Owner's Manual, which contains important safety warnings and information about the operation and maintenance of your vehicle, for complete details. Nissan North America, Inc. reserves the right to make changes, at anytime, without prior notice, in prices, colors, materials, equipment, specifications, and models and to discontinue models or equipment. Due to continuous product development and other pre- and post-production factors, actual vehicle, materials and specifications may vary. Some vehicles are shown with optional equipment. See the actual vehicle for complete accuracy. Specifications, options and accessories may differ in Hawaii, U.S. territories and other countries. For additional information on availability, options or accessories, see your INFINITI retailer or contact Nissan North America, Inc.