 


2013 Infiniti G Sedan

Quick Reference Guide



INFINITI.

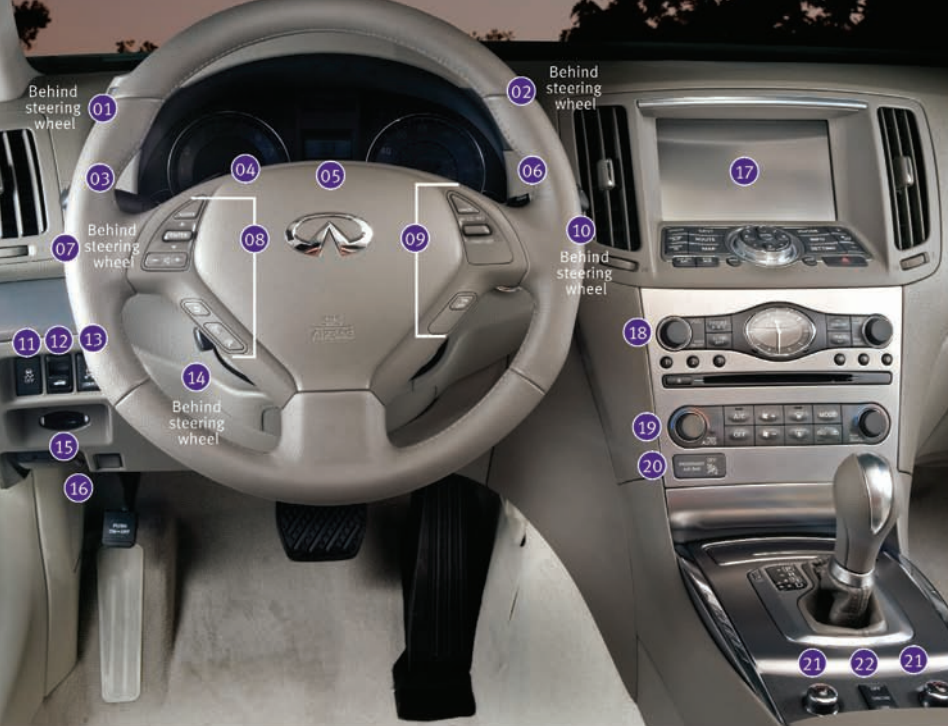

- 01 INSTRUMENT BRIGHTNESS CONTROL*
- 02 TRIP COMPUTER SWITCHES
- 03 HEADLIGHT AND TURN SIGNAL CONTROL
- 04 LOW TIRE PRESSURE WARNING LIGHT
- 05 DOT MATRIX LIQUID CRYSTAL DISPLAY
- 06 WINDSHIELD WIPER AND WASHER SWITCH
- 07 TRIP A/B RESET BUTTON*
- 08 STEERING WHEEL SWITCHES FOR AUDIO* / BLUETOOTH®
- 09 CRUISE CONTROL
- 10 PUSH BUTTON IGNITION SWITCH
- 11 VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH*

- 12 TRUNK RELEASE SWITCH
- 13 SONAR SYSTEM SWITCH*
- 14 TILT AND TELESCOPIC STEERING COLUMN*
- 15 INTELLIGENT KEY PORT
- 16 HOOD RELEASE*
- 17 CONTROL PANEL DISPLAY
- 18 AUDIO SYSTEM
- 19 AUTOMATIC CLIMATE CONTROLS
- 20 FRONT PASSENGER AIR BAG STATUS LIGHT*
- 21 HEATED SEAT SWITCHES*
- 22 SNOW MODE ON/OFF SWITCH*

*See your Owner's Manual for information.

essential information

Loose Fuel Cap	2
Tire Pressure Monitoring System (TPMS)	2
Accessing the Front Cup Holders (if so equipped)	3

first drive features

INFINITI Intelligent Key System	4
Trunk Lid Release	5
Seat Adjustments	5
Automatic Drive Positioner (if so equipped)	6
Outside Mirror Control Switch	6
Starting/Stopping the Engine	6
Headlight Control Switch	7
Windshield Wiper and Washer Switch	8
Climate Controls	8
FM/AM/SiriusXM™ Satellite Radio with CD/DVD Player (with Navigation System – if so equipped)	10
USB/iPod® Interface	11
Conventional (Fixed Speed) Cruise Control	11
Intelligent Cruise Control (ICC) System (if so equipped)	11
Fuel-Filler Door	12

system guide

Trip Computer	13
Bluetooth® Hands-free Phone System (if so equipped)	13
System Operating Tips	13
Bluetooth® System with Navigation (if so equipped)	14
Bluetooth® System without Navigation (if so equipped)	16
Navigation System (if so equipped)	17
DVD Player (if so equipped)	18
HomeLink® Universal Transceiver	18



- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

 
For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**”, the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” and the “**Starting and driving (section 5)**” of your Owner’s Manual.



Loose Fuel Cap

- A **LOOSE FUEL CAP** warning message will appear in the dot matrix liquid crystal display **01** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will disappear when the vehicle detects the fuel-filler cap is properly tightened and the reset button **02** is pressed.
- If the cap is not properly tightened, the Malfunction Indicator Light **SERVICE ENGINE SOON** may illuminate.

For more information, refer to the “Instruments and controls (section 2)” and the “Pre-driving checks and adjustments (section 3)” of your Owner’s Manual.

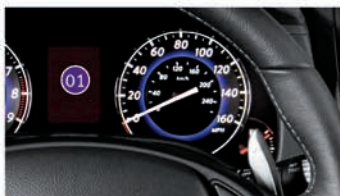

Tire Pressure Monitoring System (TPMS)

- A **CHECK TIRE PRESSURE** warning message will appear in the dot matrix liquid crystal display **01** and the low tire pressure warning light **02** will illuminate when one or more tires are low on pressure and air is needed.
 - The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 MPH (25 km/h). The **CHECK TIRE PRESSURE** warning message and low tire pressure warning light will disappear.
- When the low tire pressure warning light flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by an INFINITI retailer.
- Tire pressure rises and falls depending on the heat caused by the vehicle’s operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates in low ambient temperature, check the tire pressure in your tires.
 - Check the tire pressure (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to section 9, “Technical and consumer information”, in your Owner’s Manual for the location of the Tire and Loading Information label.



For more information, refer to the “Instruments and controls (section 2)”, “Starting and driving (section 5)” and the “Maintenance and do-it-yourself (section 8)” of your Owner’s Manual.

Accessing the Front Cup Holders (if so equipped)

- To open the cup holders, push the lid **01** down and release.
- The flap **02** will fold down when inserting a large container.

For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual.



first drive features

INFINITI Intelligent Key System

The INFINITI Intelligent Key system allows you to lock or unlock the vehicle, open the trunk and start the engine.

NOTE: It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **01** once or press the  button **02** on the keyfob.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **01** once; the corresponding door will unlock. Push the door handle request switch **01** again within 1 minute; all other doors will unlock, or
 - Press the  button **03** on the keyfob to unlock the driver's side door. Press the  button again; all other doors will unlock.
- To release the trunk lid, press the  button **04** for more than 1 second. Lift the trunk lid to access the trunk.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **05** for more than 1 second. Once activated, the panic alarm and headlights will stay on for 25 seconds.



INFINITI INTELLIGENT KEY BATTERY DISCHARGE

- If the battery in the Intelligent Key is almost discharged, the guide lights **06** of the Intelligent Key port blink and the Intelligent Key battery discharge indicator **07** is displayed in the dot matrix liquid crystal display.
- To start the engine under these circumstances, insert the Intelligent Key into the key port with the buttons facing upward and the key ring end toward you until it latches into place. Then push the ignition switch to start the engine.
- To remove the Intelligent Key from the port, push the ignition switch to turn the engine off and then pull the Intelligent Key out of the port.
- The Intelligent Key port does not charge the Intelligent Key battery. If you see the low battery indicator **07**, replace the battery in the Intelligent Key.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**”, “**Starting and driving (section 5)**” and the “**Maintenance and do-it yourself (section 8)**” of your Owner’s Manual.

Trunk Lid Release

Use one of the following methods to open the trunk:

- Push the trunk open request switch **01** for more than one second while carrying the INFINITI Intelligent Key with you.
- Press the trunk button  on the Intelligent Key for more than one second.
- From inside the vehicle, push down on the trunk lid release switch **02** on the instrument panel.



For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

Seat Adjustments

POWER SEAT ADJUSTMENTS

- To slide the seat forward or backward, push the control switch  **01** forward or backward.
- To recline the seatback, push the switch  **02** forward or backward.

SEAT LIFTER

- To adjust the angle of the front portion or height of the seat, push the front or rear end of the switch  **01** up or down.



POWER LUMBAR SUPPORT (if so equipped)

- To adjust the seat lumbar support, push the front or back end of the switch  **03**.

For more information, refer to the "Safety — seats, seat belts and supplemental restraint system (section 1)" of your Owner's Manual.

first drive features

Automatic Drive Positioner (if so equipped)

- Two positions for the driver's seat, steering column and outside mirrors can be stored in the automatic drive positioner memory.
- Follow these procedures to set the memory positions:
 - Confirm the shift lever is in the **P (PARK)** position (automatic transmissions) or the parking brake is applied (manual transmissions).
 - Push the ignition switch to the **ON** position.
 - Adjust the driver's seat, steering column and outside mirrors to the desired positions using the adjusting switches for each feature.
 - Push the **SET** switch and within 5 seconds, push the memory switch (1 or 2) for at least 1 second.
 - The indicator light on the memory switch you select will illuminate for approximately 5 seconds.
 - The driver's seat, steering column and outside mirror positions are now set to your preference.
- These memorized positions can also be linked to your INFINITI Intelligent Key.



For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

Outside Mirror Control Switch

- To select the right or left side mirror, turn the control switch **01** right or left.
- To adjust the mirror angle, move the control switch **01** up, down, right or left.
- To prevent accidentally moving the mirror, turn and set the switch to the middle "neutral" position.



For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

Starting/Stopping the Engine

AUTOMATIC TRANSMISSION (if so equipped)

- Depress the brake pedal.
- Press the ignition switch **START/STOP** button to start the engine.

NOTE: It is important to make sure the INFINITI Intelligent Key is with you (that is, in your pocket or purse).

MANUAL TRANSMISSION (if so equipped)

- Depress the brake pedal.
- Move the shift lever to **N (NEUTRAL)**.
- Depress the clutch pedal to the floor.
- Push the ignition switch **START/STOP** button.



TURNING THE ENGINE OFF

- For an automatic transmission, move the shift lever to the **P (PARK)** position, apply the parking brake and push the ignition switch.
- For a manual transmission, apply the foot brake and place the vehicle in 1st gear, then apply the parking brake and push the ignition switch.

For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual.

Headlight Control Switch

HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **01** to turn on the front parking, side marker, tail, license plate and instrument panel lights. Turn the switch to the  position **02** to turn on the headlights.



AUTOLIGHT SYSTEM (if so equipped)

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **03** then push the ignition switch to **ON**. To deactivate the autolight system, turn the headlight control switch to the **OFF**,  position **01** or  position **02**.

HIGH BEAM SELECT

- Push the headlight control switch forward **04** to select the high beam function. The blue indicator light  illuminates in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light goes off.
- Pull and release the headlight control switch **05** to flash the headlight high beams on and off.



FOG LIGHT SWITCH

NOTE: The headlights must be on and the low beams  selected for the fog lights to operate.

- Turn the switch (inside collar) to the  position **06** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.



For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual.

 
first drive features

Windshield Wiper and Washer Switch

RAIN-SENSING AUTO WIPER SYSTEM (if so equipped)

- Move the lever to the following positions to operate the windshield wipers:

- 01 Mist (**MIST**) - One sweep operation of the wipers.
- 02 Intermittent (**INT**) - Wipers operate intermittently and vary in accordance with vehicle speed. The intermittent operation speed can be adjusted by twisting the time control ring 03.
- 04 Low (**LO**) - Wipers operate at a continuous low speed.
- 05 High (**HI**) - Wipers operate at a continuous high speed.
- 06 Pull the lever toward you to activate the washer. The wipers will operate several times.

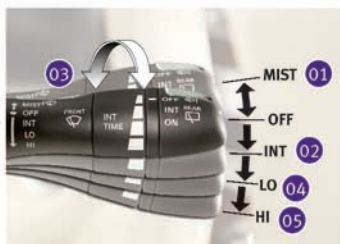

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

Climate Controls



01 AUTO BUTTON/DRIVER’S SIDE TEMPERATURE CONTROL DIAL

- The auto mode may be used year-round. Press the **AUTO** button to turn the system on and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.
- Turn the driver’s side temperature control dial to the left for cooler air or right for warmer air.

02 DUAL BUTTON/PASSENGER’S SIDE TEMPERATURE CONTROL DIAL

- Press the **DUAL** button to turn the passenger’s side temperature controls on or off. This will allow the passenger’s side temperature to be adjusted independently from the driver’s side by turning the passenger’s side temperature control dial.
- Turn the passenger’s side temperature control dial left for cooler air or right for warmer air.

03 FAN SPEED CONTROL BUTTONS

- To manually adjust the fan speed, press the top  button to increase the fan speed or press the bottom  button to decrease the fan speed.

04 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the defroster control button  to turn the system on. The A/C automatically turns on when the defroster mode is selected. This feature removes humidity from the air.
- Turn the temperature control dial  to set the desired temperature.
- To defrost the front and side windows quickly, set the temperature controls and fan speed controls to their maximum settings.

05 MODE BUTTON

- Press the **MODE** button to cycle through the following air flow outlets:
 -  Air flows from the center and side vents.
 -  Air flows from the center, side and foot vents.
 -  Air flows mainly from the foot vents.
 -  Air flows from the defroster and foot vents.

06 DEFROSTING REAR WINDOW AND OUTSIDE MIRRORS

- Press the rear window defroster switch  to turn the system on or off.
- This function automatically turns off after approximately 15 minutes.

07 INTAKE AIR CONTROL BUTTON

AIR RECIRCULATION

- Press the intake air control button to recirculate interior air inside the vehicle. The indicator light on the  side will come on. This system is used to avoid outside odors and helps to adjust the inside vehicle temperature more effectively.
- The air recirculation mode cannot be activated when the air conditioner is in the front defrosting mode .

OUTSIDE AIR CIRCULATION

- Press the intake air control button to draw outside air into the passenger compartment. The indicator light on the  side will come on.

AUTOMATIC INTAKE AIR CONTROL

- In the auto mode, the intake air will be controlled automatically. To manually control the intake air, press the intake air control button. To return to the automatic control mode, press the intake air control button for about 2 seconds.

08 A/C BUTTON

- Press the **A/C** button to turn the air conditioner system on or off. This system helps cool and dehumidify the air inside the cabin and defog the windows.

09 OFF BUTTON

- Press the **OFF** button to turn the climate control system off.

For more information, refer to the “Instruments and controls (section 2)” and the “Monitor, climate, audio, phone and voice recognition systems (section 4)” of your Owner’s Manual.

first drive features

FM/AM/SiriusXM™* Satellite Radio with CD/DVD Player (with Navigation System — if so equipped)



01 VOLUME/ON•OFF CONTROL KNOB

- Press the **VOL/ON•OFF** control knob to turn the system on or off. Turn the knob right or left to increase or decrease the volume.

02 SEEK•CAT AND TRACK BUTTONS

- To scan quickly through each broadcasting station, press the **SEEK•CAT** button or the **TRACK** button to stop at the previous or next broadcast station.
- For SiriusXM™ Satellite Radio, press the **SEEK•CAT** button or the **TRACK** button to switch to the first channel of the previous or next category.
- Press the **SEEK•CAT** button or the **TRACK** button to change tracks on a CD.
- Press and hold the **SEEK•CAT** button or the **TRACK** button to fast forward or rewind a track on a CD.

03 TUNE/FOLDER/AUDIO CONTROL KNOB

- To manually tune the radio, turn the **TUNE/FOLDER/AUDIO** knob left or right.

04 STATION PRESET BUTTONS

- Eighteen stations can be set in any combination of AM, FM and SiriusXM™ Satellite Radio stations.
- To store a station in a preset, first select a preset bank A, B or C by pressing the **PRESET A•B•C** button (05).
- Then select the radio band by pressing the **AM•FM/SAT** button (06) and tune to the desired AM, FM or SiriusXM™ Satellite Radio station.
- Next, press and hold the desired station select button (1-6) until a beep is heard and the sound is briefly muted. The channel indicator will appear and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select button (1-6).

*SiriusXM™ Satellite Radio is only available on vehicles equipped with optional SiriusXM™ Satellite Radio subscription service.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

USB/iPod® Interface

- The USB jack **01** is located in the center console under the arm rest.
- When a compatible USB memory device or iPod® is plugged into the USB jack, compatible audio and video files stored on the device can be played through the vehicle's audio system and front display.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.



Conventional (Fixed Speed) Cruise Control

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 MPH (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON/OFF** switch **01**. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **02** and release. The **CRUISE SET** indicator light in the instrument panel will illuminate. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **03**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **02**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **04**.
- To turn off cruise control, push the **ON/OFF** switch **01**. The **CRUISE** indicator light in the instrument panel will turn off.



For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

Intelligent Cruise Control (ICC) System (if so equipped)

 
VEHICLE-TO-VEHICLE DISTANCE CONTROL MODE

- To set Vehicle-To-Vehicle Distance Control mode, press the **ON/OFF** button **01** for less than 1.5 seconds. The **CRUISE** indicator light **02** will illuminate.
- Accelerate to the desired speed.
- Push down on the **COAST/SET** switch **03** and release it. Cruise Control will be set to the desired speed.
- Press the distance button **04** repeatedly to change the set distance between long, middle, and short.



first drive features

- When a vehicle is not detected ahead of you in the lane, the set distance and set vehicle speed indicator lights will illuminate **05** in set mode.
- When a vehicle is detected ahead of you in the lane, the vehicle ahead detection, set distance, and set vehicle speed indicator lights will illuminate **06** in set mode.
- To reset at a faster cruising speed, push up and hold the **ACCEL/RES** switch **07**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push down and hold the **COAST/SET** switch **03**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **08**. The set vehicle speed indicator **05** will go out.
- To turn off cruise control, press the **ON/OFF** button **01**. The **CRUISE** indicator light **02**, in the instrument panel, will turn off.

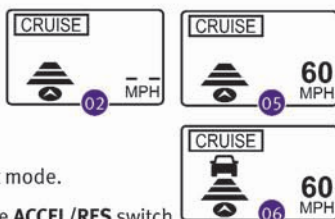

To set conventional (fixed speed) cruise control mode:

- While cruise control is off, press the **ON/OFF** button **01** and hold it down for more than 1.5 seconds. The **CRUISE** indicator light will illuminate.
- Accelerate to the desired speed.
- Push down on the **COAST/SET** switch and release it. The **SET** indicator light will illuminate. Cruise control should be set to the desired speed.

To switch between the two cruise control modes:

- When one of the two cruise modes is in use, you must turn the system off, and then turn it on again to select the other cruise control mode.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

Fuel-Filler Door

- The fuel-filler door is located on the right, rear side of the vehicle.
- Unlock the fuel-filler door using one of the following operations, then push and release the right side of the door to open.
 - Push the door handle request switch while carrying the INFINITI Intelligent Key with you.
 - Press the UNLOCK button on the Intelligent Key.
 - Push the power door lock switch to the UNLOCK position.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

Trip Computer

- When the  button **01** is pressed, the following modes will appear on the dot matrix liquid crystal display **02** :
 - MPG** – Displays the current fuel consumption.
 - MPG/MPH** – Displays the average fuel consumption and speed since the last reset.
 - TIME/MILES** – Displays the elapsed time and total distance the vehicle has been driven since the last reset.
 - RANGE** – Displays the estimated distance to empty (dte) the vehicle can be driven before refueling.
 - OUTSIDE TEMP** – Displays the exterior air temperature including a low temperature warning feature.
 - SETTING** – Allows you to set reminders for alerts and maintenance intervals or change the language and units used in the system.
 - Press the  button **03** to cycle through the various setting modes.
 - Press the  button **01** to choose the selected mode.
 - WARNING** – If there are any.
- Push the reset switch **03** for approximately 1 second to reset the currently displayed trip odometer to zero.



 
For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

Bluetooth® Hands-free Phone System (if so equipped)

- With an overhead microphone and sound transmitted through the audio system speakers, the Bluetooth® Hands-free Phone System utilizes Bluetooth wireless technology and voice recognition to provide hands-free cellular phone communication.
- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*

SYSTEM OPERATING TIPS

- Close all windows. Surrounding noises may interfere with system operation and performance.
- Press the  or  button on the steering wheel to activate voice recognition.
- Wait for the tone before speaking.
- Begin speaking a command within 5 seconds of the tone.
- Speak in a clear and natural voice without pausing between words.

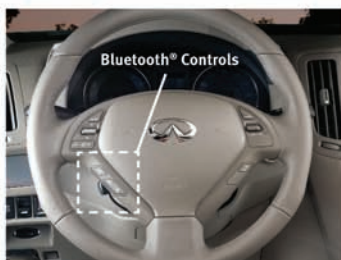

*Some jurisdictions prohibit the use of cellular telephones while driving.

 
- Look straight ahead and avoid speaking too loudly or too softly.
- To go back to the previous command, say “Go back”.
- To cancel a voice recognition session, say “Exit” or press and hold the  or  button.
- To interrupt the system voice and give a command quickly, press the  or  button.
- When speaking Phonebook names, please be aware some phones require the last name to be spoken before the first name. For example, “Michael Smith” may be spoken as “Smith Michael”.
- To increase or decrease the volume of the voice prompts, push the volume control switches — or + on the steering wheel or turn the **VOL/ON•OFF** control knob on the audio system while the system is responding.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Speaker Adaptation Mode. See your Owner’s Manual for detailed information.
- Some commands are not available while the vehicle is in motion.
- The “Help” command can be used to hear a list of available commands at any time.
- Please refer to the cellular phone manufacturer’s Owner’s Manual for detailed information regarding your Bluetooth phone.

Bluetooth® System with Navigation (if so equipped)

CONNECTING PROCEDURE


NOTE: The vehicle must be stationary when connecting the phone.

1. Press the **PHONE** button on the instrument panel or the  button on the steering wheel and select the “Connect Phone” key.
2. Initiate connecting from the phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible phones, please visit www.InfinitiUSA.com/bluetooth.
 - When prompted for a PIN code, enter “1234” from the handset. (The PIN code is assigned by INFINITI and cannot be changed.)
3. When the connecting is complete, the screen will return to the Phone menu display.

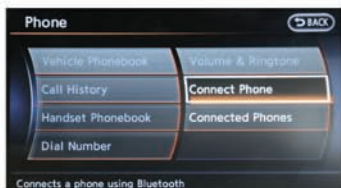

PHONEBOOK SETUP

 
- Depending on your cell phone, the system may automatically download your cell phone's entire phonebook to the vehicle's Bluetooth system.
- If the phonebook does not download automatically, the vehicle phonebook may be set for up to 1,000 entries.
- To manually download entries:
 1. Press the  button and select the "Vehicle Phonebook" key.
 2. Select the "Add New" key at the top of the display. There are different methods to input a phone number. Select one of the following options:
 - "Copy from Call History" to save a number from the Outgoing, Incoming or Missed Calls lists.
 - "Copy from the Handset" to save a number that has been downloaded from your handset to the vehicle.
 - "Enter Number by Keypad" to input the number and name manually.

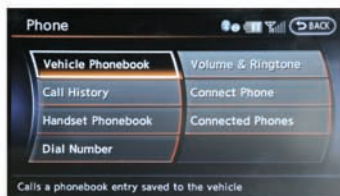

MAKING A CALL

To make a call, follow this procedure:

 1. Press the  button on the steering wheel. The "Phone" menu will appear on the control panel display.
2. Select the "Vehicle Phonebook", "Call History", "Handset Phonebook" or "Dial Number" key.
3. Select the desired entry from the list.
4. Select "Call" to start dialing the number.

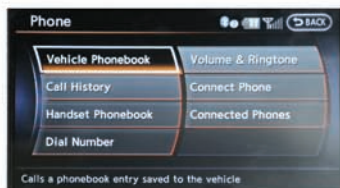

RECEIVING/ENDING A CALL

- To accept the call, press the  button on the steering wheel or touch the "Answer" key.
- To reject the call, touch the "Reject Call" key.
- To hang up, press the  button or touch the "Hang up" key.



Bluetooth® System without Navigation (if so equipped)

PAIRING PROCEDURE

1. Press the  button on the steering wheel. The system announces the available commands.
2. Say "Connect Phone". The system acknowledges the command and announces the next set of available commands.
3. Say "Add Phone". The system acknowledges the command and asks you to initiate connecting from the phone handset.
4. Initiate pairing from the phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible phones, please visit www.InfinitiUSA.com/bluetooth.
 - When prompted for a PIN code, enter "1234" from the handset. (The PIN code is assigned by INFINITI and cannot be changed.)
5. The system asks for a name for the phone. Say "Yes". The system acknowledges the command and registers the cellular phone.



PHONEBOOK REGISTRATION

- When the cellular phone is connected to the in-vehicle module, the data stored in the cellular phone such as phonebook, outgoing call logs, incoming call logs and missed call logs is automatically transferred and registered to the system.
- The availability of this function depends on each cellular phone. The copying procedure also varies according to each cellular phone. See your cellular phone Owner's Manual for more information.
- Up to 1,000 phone numbers per registered cellular phone can be stored in the phonebook.

MAKING A CALL

1. Push the  button on the steering wheel. A tone will sound.
2. Say "Call". The system acknowledges the command and announces the next set of available commands.
3. Say the registered person's name. The system acknowledges the command and announces the next set of available commands.
4. Say "Yes". The system acknowledges the command and makes the call.

RECEIVING/ENDING A CALL

- To accept the call, press the  button on the steering wheel.
- To reject the call, press the  button on the steering wheel.
- To hang up, press the  button on the steering wheel.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual or please visit www.InfinitiUSA.com/bluetooth.

Navigation System (if so equipped)



- 01 **STATUS BUTTON** - Push multiple times to display audio information with either the air conditioner status, fuel economy or navigation directions.
- 02 **Destination (DEST)** - Push to enter a destination.
- 03 **INFINITI CONTROLLER** - Turn to highlight an item on the screen, and push **ENTER** to select the highlighted item. On the map screen, turn to adjust the map scale. To scroll the map, push the controller in the direction you want to scroll.
- 04 **ZOOM IN, ZOOM OUT BUTTONS** - Push to adjust the map scale.
- 05 **ROUTE** - Push to access the guidance control functions such as guidance cancellation, route priority or waypoint setting on the route.
- 06 **Information (INFO)** - Push to display the vehicle, traffic, weather, or voice recognition information.
- 07 **☀/☾ OFF** - Push to switch between the day screen (bright) and the night screen (dark). Push and hold to turn off the display. Push again to turn on the display.
- 08 **MAP** - Push to display the map. While following a route, push multiple times to change the type of route information displayed.
- 09 **SETTING** - Press to access the system settings.
- 10 **BACK** - Press to return to the previous screen.
 - In a settings screen, press this button to apply the setting.
 - In a character input screen, press button to delete a character incorrectly entered.
- 11 **VOICE** - Press to hear the current voice guidance for a programmed route.

For more information, please refer to your Navigation System Owner's Manual.

DVD Player (if so equipped)

- With this DVD Player, you can play video files via a DVD or CD from the front display.
- To view movies on the front display, stop the vehicle in a safe location, move the shift lever to the **P (PARK)** position and apply the parking brake.
- To reduce driver distraction, movies will not be shown on the front display while the vehicle is in any drive position.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.



HomeLink® Universal Transceiver

- The HomeLink® system can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.



For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual, the HomeLink® website at www.homelink.com or call 1-800-355-3515.



INFINITI.

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. See your Owner's Manual, which contains important safety warnings and information about the operation and maintenance of your vehicle, for complete details. Nissan North America, Inc. reserves the right to make changes, at any time, without prior notice, in prices, colors, materials, equipment, specifications, and models and to discontinue models or equipment. Due to continuous product development and other pre- and post-production factors, actual vehicle, materials and specifications may vary. Some vehicles are shown with optional equipment. See the actual vehicle for complete accuracy. Specifications, options and accessories may differ in Hawaii, U.S. territories and other countries. For additional information on availability, options or accessories, see your INFINITI retailer or contact Nissan North America, Inc.