 


2013 **NV1500**
NV2500 HD
NV3500 HD

QUICK REFERENCE GUIDE



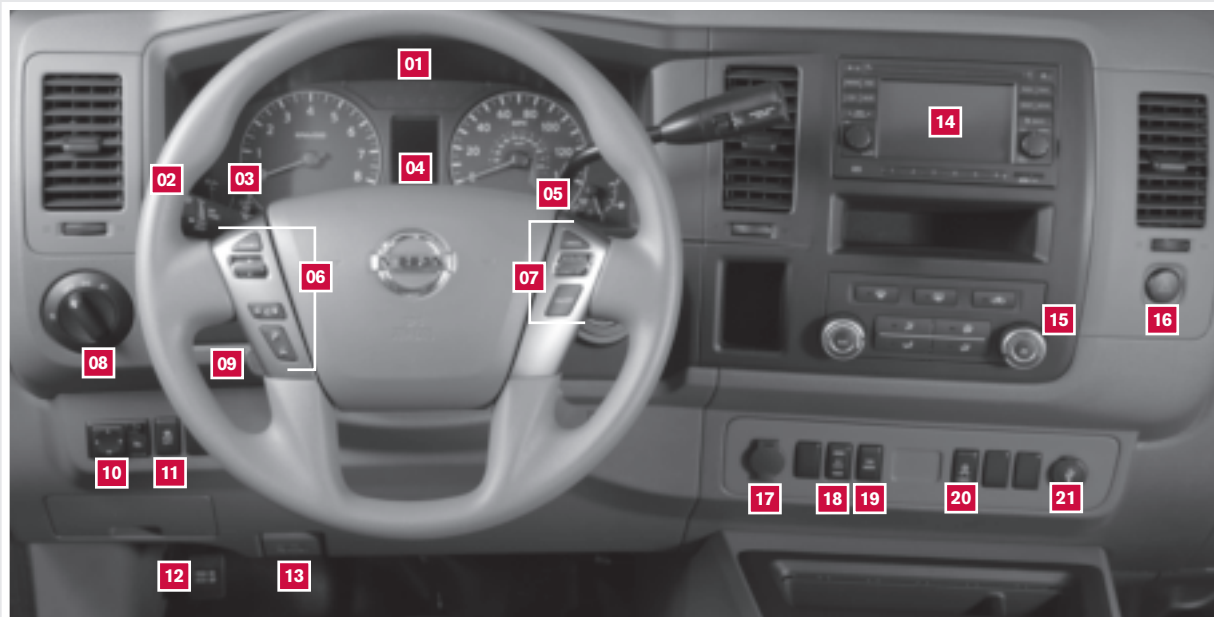

- | | | | |
|--|---|---|--|
| 01 LOW TIRE PRESSURE WARNING LIGHT | 05 INSTRUMENT BRIGHTNESS CONTROL / TRIP ODOMETER RESET SWITCH* | 10 OUTSIDE MIRROR CONTROL SWITCH | 16 HAZARD WARNING FLASHER SWITCH* |
| 02 WINDSHIELD WIPER AND WASHER / HEADLIGHT BEAM SELECT / TURN SIGNAL CONTROL SWITCH | 06 STEERING WHEEL SWITCHES FOR AUDIO / BLUETOOTH® | 11 VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH* | 17 POWER OUTLET* |
| 03 VEHICLE INFORMATION DISPLAY INFO BUTTON* | 07 CRUISE CONTROL | 12 PARKING BRAKE* | 18 POWER INVERTER SWITCH |
| 04 VEHICLE INFORMATION DISPLAY* | 08 HEADLIGHT CONTROL SWITCH | 13 HOOD RELEASE* | 19 TOW MODE SWITCH* |
| | 09 TILT STEERING COLUMN* | 14 AUDIO AND NAVIGATION SYSTEM | 20 REAR SONAR SYSTEM OFF SWITCH* |
| | | 15 CLIMATE CONTROLS | 21 USB JACK* |

*See your Owner's Manual for more information.

NEW SYSTEM FEATURES

Power Inverter Switch (if so equipped)	2
TPMS Sensor Reset	2

ESSENTIAL INFORMATION

Loose Fuel Cap	3
Tire Pressure Monitoring System (TPMS).	3

FIRST DRIVE FEATURES

Remote Keyless Entry System (if so equipped)	4
Front Power Seat Adjustment (if so equipped).	4
Outside Mirror Control Switch (if so equipped)	4
Starting/Stopping the Engine.	5
Headlight Control Switch	5
Windshield Wiper and Washer Switch	5
Manual Climate Controls (if so equipped).	6
FM/AM/SiriusXM™ Satellite Radio with CD Player (if so equipped).	7
Opening the Back Doors	8
Fuel-Filler Door	8

SYSTEM GUIDE

Cruise Control (if so equipped)	9
Navigation System (if so equipped).	9
Bluetooth® Hands-free Phone System (if so equipped)	10
Vehicle Information Display	12

This easy-to-use Quick Reference Guide is intended to help you more fully appreciate some of the unique features and functions of your new vehicle. However, it is not intended to replace your Owner's Manual. The Owner's Manual contains more detailed information to help you better understand the important safety warnings, features, operation and maintenance of your vehicle. All information, specifications, photographs and illustrations in this publication are those in effect at the time of printing. NISSAN reserves the right to change specifications or design without notice and without obligation.



- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride properly secured in child restraints or seat belts according to their age and weight.
- Never install a rear-facing child restraint in the front seat of this vehicle.
- Do not drink and drive.

For more information, refer to the **"Safety — Seats, seat belts and supplemental restraint system (section 1)"** of your Owner's Manual.



Additional information about your vehicle is also available in your Owner's Manual, Navigation System Owner's Manual and at www.nissanusa.com.

 


To view detailed instructional videos, go to
www.nissanownersinfo.mobi/2013/nvcargovan
 or snap this barcode with an appropriate barcode reader.

new system features

POWER INVERTER SWITCH (if so equipped)

- The power inverter switch is located on the instrument panel below the climate controls. This switch controls power provided to the 120 volt outlets.
- To use the outlets for items requiring between 150W and 400W, stop your vehicle, place the shift lever in the **P (PARK)** position and push the power inverter switch.
- **400W** and **150W** will illuminate on the switch according to the mode selected.
- Only the 150W mode is available when the ignition switch is placed in the **ACC** or **ON** position or while the vehicle is being driven.

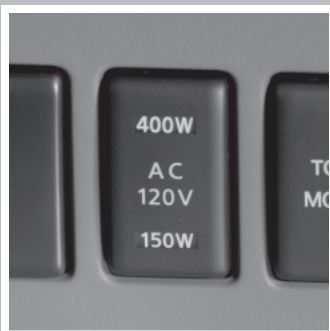

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

TIRE PRESSURE MONITORING SYSTEM (TPMS) SENSOR RESET

- The Tire Pressure Monitoring System (TPMS) has sensors that must be reset after tire rotation.
- After rotating the tires, a low tire pressure TPMS warning **01** will illuminate. The TPMS sensor positions must be relearned.
- When the relearning process has been successfully performed, the TPMS warning lamp will turn off.

 


For more information, refer to the “**Maintenance and do-it-yourself (section 8)**” of your Owner’s Manual.

LOOSE FUEL CAP


- A **LOOSE FUEL CAP** warning message will appear in the vehicle information display **01** when the fuel-filler cap is not tightened correctly.
- The warning message will disappear when the vehicle detects the fuel-filler cap is properly tightened and the reset button **02** is pressed.
- If the cap is not properly tightened, the Malfunction Indicator Light  may illuminate.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

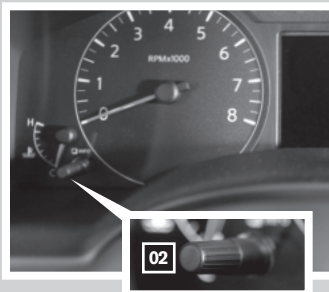

TIRE PRESSURE MONITORING SYSTEM (TPMS)

 - A **CHECK TIRE** pressure warning message will appear in the vehicle information display **01** and the TPMS light **02** will illuminate when one or more tires are low on pressure and air is needed.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 MPH (25 km/h) and the warning and indicator light will disappear.
- When the low tire pressure warning light **02** flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by a NISSAN dealer.
- Tire pressure rises and falls depending on the heat caused by the vehicle’s operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates in low ambient temperature, check the tire pressure in all four tires.

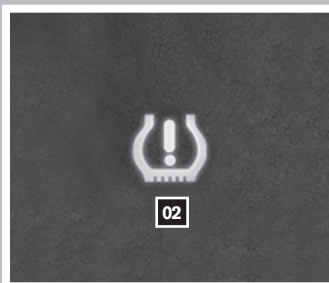

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Starting and driving (section 5)**” of your Owner’s Manual.

 
first drive features

REMOTE KEYLESS ENTRY SYSTEM (if so equipped)

The Remote Keyless Entry System allows you to lock or unlock your vehicle and turn on the interior lights.

- To lock the vehicle, press the **1** button on your keyfob.
- To unlock the vehicle, press the **2** button on your keyfob.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

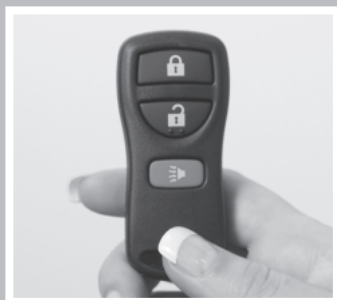

FRONT POWER SEAT ADJUSTMENT (if so equipped)

- Push the control switch **01** forward or backward to slide the seat forward or backward.
- Push the switch **02** forward or backward to adjust the angle of the seatback.

SEAT LIFTER (driver’s seat)

- To adjust the angle and height of the seat cushion, push the front or rear end of the switch **01** up or down.

LUMBAR SUPPORT (driver’s seat)

- Turn the knob **03** to adjust the seat lumbar area.

 
For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.



OUTSIDE MIRROR CONTROL SWITCH (if so equipped)

- Move the switch **01** right or left to select the right or left mirror.
- Adjust each mirror to the desired position using the switch **02**.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

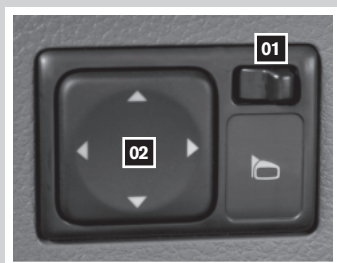

STARTING/STOPPING THE ENGINE

- Depress the brake pedal.
- Move the shift lever to the **P (PARK)** position.
- Turn the ignition switch to the **START** position.

TURNING THE ENGINE OFF

- Move the shift lever to the **P (PARK)** position and apply the parking brake.
- Turn the ignition switch to the **LOCK** position.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.



HEADLIGHT CONTROL SWITCH

- Turn the headlight control switch to the  position to turn on the front parking, tail, license plate and instrument panel lights.
- Turn the control switch to the  position to turn on the headlights.

 
 
For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.



WINDSHIELD WIPER AND WASHER SWITCH

- Move the lever to the following positions to operate the windshield wipers:


- 01** Intermittent (**INT**) - Wipers operate intermittently. The intermittent speed can be adjusted by twisting the time control ring **02**.
- 03** Low (**LO**) - Wipers operate at a continuous low speed.
- 04** High (**HI**) - Wipers operate at a continuous high speed.
- 05** Mist (**MIST**) - One sweep operation of the wipers.
- 06** To activate the washer, press the button on the end of the lever. The wipers will operate several times.

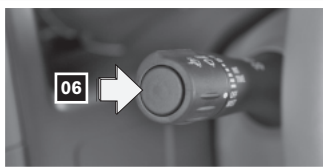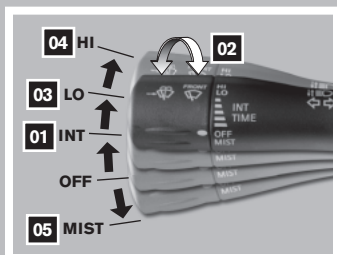

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

 first drive features

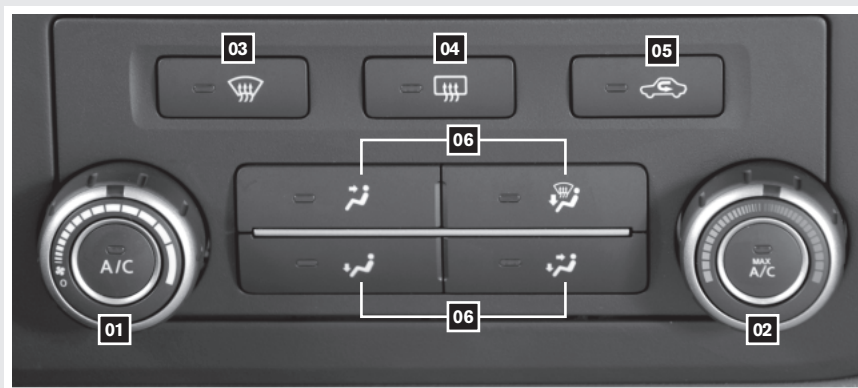

MANUAL CLIMATE CONTROLS (if so equipped)

01 FAN SPEED CONTROL DIAL

- Turn the fan speed control dial  to the left (low) or right (high) to control fan speed.

02 TEMPERATURE CONTROL DIAL

- Turn the temperature control dial **02** to select the desired temperature. Turn the control dial to the left for cooler air or right for warmer air.

03 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the front window defroster button  to turn the system on or off.

04 REAR WINDOW AND OUTSIDE MIRROR (if so equipped) DEFROSTER SWITCH

- Push the rear window defroster switch  to turn the system on or off.

05 AIR RECIRCULATION BUTTON

- Press the air recirculation button to recirculate air inside the vehicle. The indicator light on the button will come on. This system is used to avoid certain outside odors and helps to adjust the inside vehicle temperature more effectively.
- The air recirculation mode can only be selected if the air flow control mode is in the  or  position.

06 AIR FLOW CONTROL BUTTONS

- Press the preferred air flow control button to select the following air flow outlets:

-  Air flows from the center and side vents
-  Air flows from the center, side and foot vents
-  Air flows mainly from the foot vents
-  Air flows from the defroster and foot vents

For more information, refer to the “Instruments and controls (section 2)” and the “Display screen, heater, air conditioner, audio and phone systems (section 4)” of your Owner’s Manual.



FM/AM/SiriusXM™* SATELLITE RADIO WITH CD PLAYER (if so equipped)

01 VOL/ON-OFF CONTROL KNOB

- Press the **VOL/ON-OFF** control knob to turn the system on or off.
- Turn the **VOL/ON-OFF** control knob to the right or left to increase or decrease the volume.

02 TUNE/SCROLL/AUDIO KNOB

- To manually tune the radio, turn the **TUNE/SCROLL/AUDIO** knob left or right.

03 STATION SELECT BUTTONS

- Twelve stations can be set for the FM band, six for the AM band and eighteen for SiriusXM™ Satellite Radio.
- To store a station in a preset, you must first select a radio band by pressing the **FM-AM** button **05** or **XM** button **06**, then tune to the desired AM, FM or SiriusXM™ Satellite Radio station.
- Press and hold the desired station select button (**1-6**) until a beep is heard and the sound is briefly muted. The channel indicator will appear on the display and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select button (**1-6**).

04 SEEK/CATEGORY BUTTONS

- To scan through each broadcasting station, press the **SEEK/CATEGORY** buttons.
- To skip from one track to another on a CD, press the **SEEK/CATEGORY** buttons.
- When the **SEEK/CATEGORY** buttons are pressed and held while a CD is playing, the CD will rewind or fast forward. When the button is released, the CD will play at normal speed.

*SiriusXM™ Satellite Radio is only available on vehicles equipped with optional SiriusXM™ Satellite Radio subscription service.

 
For more information, refer to the **"Display screen, heater, air conditioner, audio and phone systems (section 4)"** of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

first drive features

OPENING THE BACK DOORS

- Unlock the vehicle by pressing the **1** button on your keyfob twice.
- Pull the door handle **01** toward you to open the right back door.

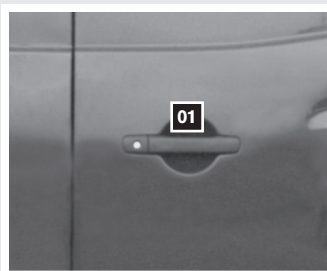

- Lift the lever on the left back door **02** and pull the door to open.



- To open either door to the wide open position, pull the release latch **03** toward the back door to release the check link bar.
- Open the door slowly until the magnetic door stopper connects to the stop pad on the outside of the vehicle.



For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

FUEL-FILLER DOOR

- The fuel-filler door is located on the left, rear side of the vehicle.
- To open the fuel-filler door, pull the lid open.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.



CRUISE CONTROL (if so equipped)

- The cruise control system enables you to set a constant cruising speed.
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.

For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual.



NAVIGATION SYSTEM (if so equipped)

- 01** ☀/☾ - Press to change the display brightness between day and night modes. Press and hold to turn the display off. Press again to turn the display on.
- 02** Touch screen display.
- 03** **MAP** - Press to display the current location map screen.
- 04** **NAV** - Press to access the functions of the Navigation System.
- 05** **TRAF** - Press to view traffic information on the route.
- 06** **SETUP** - Press to access the system settings.
- 07** **BACK** - Press to return to the previous screen.
- 08** **SCROLL** knob - Turn to scroll through the items in a list. Press to select a menu item.
- 09** **SD-card location** - An SD-card with map data must be inserted here for map functions to operate.
- 10** **Volume control knob** - Turn right to increase the volume or left to decrease the volume.

For more information, refer to your Navigation System Owner's Manual.

BLUETOOTH® HANDS-FREE PHONE SYSTEM (if so equipped)

- With an overhead microphone and sound transmitted through the audio system speakers, the Bluetooth® Hands-free Phone System utilizes Bluetooth wireless technology and voice recognition to provide hands-free cellular phone communication.
- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*

SYSTEM OPERATING TIPS

- Close all windows. Surrounding noises may interfere with system operation and performance.
- Press the  button on the steering wheel to activate voice recognition.
- Wait for the tone before speaking.
- Begin speaking a command within 5 seconds of the tone.
- Speak in a clear and natural voice without pausing between words.
- Look straight ahead and avoid speaking too loudly or too softly.
- To go back to the previous command, say "Go back" or "Correction."
- To cancel a voice recognition session, simply wait 5 seconds, say "Cancel" or "Quit," or press the  button for 5 seconds.
- To interrupt the system voice and give a command quickly, press the  button.
- When speaking Phonebook names, please be aware some phones require the last name to be spoken before the first name. For example, "Michael Smith" may be spoken as "Smith Michael".
- To increase or decrease the volume of the voice prompts, push the volume control switches — or + on the steering wheel or turn the **VOL/ON-OFF** control knob on the audio system while the system is responding.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Voice Adaptation Mode. See your Owner's Manual for detailed information.
- Some commands are not available while the vehicle is in motion.
- The "Help" command can be used to hear a list of available commands at any time.
- Please refer to the cellular phone manufacturer's Owner's Manual for detailed information regarding your Bluetooth phone.
- For recommended phones and detailed instructions, please visit www.nissanusa.com/bluetooth.

CONNECTING PROCEDURE

NOTE: The vehicle must be stationary when connecting the phone.

1. Press the  button on the steering wheel. The system announces the available commands.
2. Say: "Connect phone". The system acknowledges the command and announces the next set of available commands.
3. Say: "Add phone". The system acknowledges the command and asks you to initiate connecting from the phone handset.



4. Initiate connecting from the phone:

- The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and compatible phones, please visit www.nissanusa.com/bluetooth.
- When prompted for a Passkey code, enter "1234" from the handset. (The Passkey code is assigned by NISSAN and cannot be changed.)

5. Say a name for the phone when the system asks you to provide one. You can give the phone a name of your choice.

PHONEBOOK SETUP

- Depending on your cell phone, the system may automatically download your cell phone's entire phonebook to the vehicle's Bluetooth system.
- If the phonebook does not download automatically, 40 entries can be individually downloaded.
- To manually download entries:
 1. Push the  button on the steering wheel.
 2. After the tone, say "Phonebook".
 3. After the next tone, say "Transfer Entry". The system acknowledges the command and asks you to initiate the transfer from the phone handset. The new contact phone number will be transferred from the cellular phone to the vehicle.
 - The transfer procedure varies according to each cellular phone. See your cellular phone's owner's manual for details. You can also visit www.nissanusa.com/bluetooth for instructions on transferring phone numbers from NISSAN recommended cellular phones.
 4. The system repeats the number and prompts you for the next command. When you have finished entering numbers or transferring an entry, choose "Store."
 5. The system confirms the name, location and number.

MAKING A CALL

1. Press the  button. A tone will sound.
2. Say: "Call". The system acknowledges the command and announces the next set of available commands.
3. Say: "Phone Number". The system acknowledges the command and announces the next set of available commands.
4. Say the number you wish to call starting with the area code in single digit format.
5. When you have finished speaking the phone number, the system repeats it back and announces the available commands.
6. Say: "Dial". The system acknowledges the command and makes the call.

 
 
RECEIVING/ENDING A CALL

- When you receive a phone call, a ring tone sounds through the audio system.
- To accept the call, press the .
- To reject the call, press the .
- To hang up the phone at the end of a call or to disconnect during call placement, press the .

For more information, refer to the "**Display screen, heater, air conditioner, audio and phone systems (section 4)**" of your Owner's Manual or please visit www.nissanusa.com/bluetooth.

VEHICLE INFORMATION DISPLAY

- Turn the INFO button **01** to display the following modes in the vehicle information display **02**:
 - **RANGE** – Displays the estimated distance the vehicle can be driven before refueling.
 - **AVG MPG** – Displays the average fuel economy since the last reset.
 - **AVG MPH** – Displays the average miles per hour since the last reset.
 - **TIME** – Displays the time driven since the last reset.
 - **TIRE INFO** – Push to display the specific tire pressure of each tire (except the spare).
 - **SETTINGS** – The setting mode allows you to set reminders or preferences for maintenance intervals, reset the TPMS after rotating the tires or to change the unit of the display.
 - In the setting mode screen, turn the **INFO** button to select settings.
 - Press the **INFO** button to select and change one of the menu items.
 - **WARNING** – Displays any warnings that may be present.

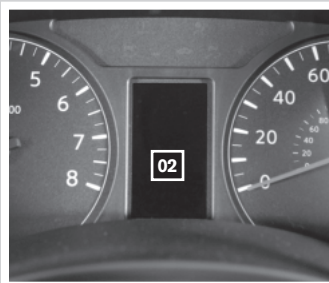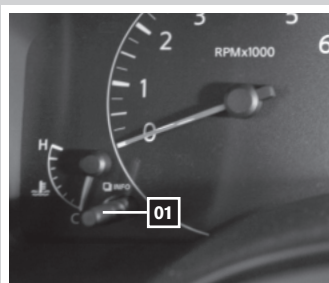

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. See your Owner's Manual, which contains important safety warnings and information about the operation and maintenance of your vehicle, for complete details. Nissan North America, Inc. reserves the right to make changes, at any time, without prior notice, in prices, colors, materials, equipment, specifications, and models and to discontinue models or equipment. Due to continuous product development and other pre- and post-production factors, actual vehicle, materials and specifications may vary. Some vehicles are shown with optional equipment. See the actual vehicle for complete accuracy. Specifications, options and accessories may differ in Hawaii, U.S. territories and other countries. For additional information on availability, options or accessories, see your NISSAN dealer or contact Nissan North America, Inc.



To view detailed instructional videos,
go to **www.nissanownersinfo.mobi/2013/nvcargovan**
or snap this barcode with an appropriate barcode reader.

