 


2013 **NV**  
**PASSENGER**  
**VAN**



QUICK REFERENCE GUIDE

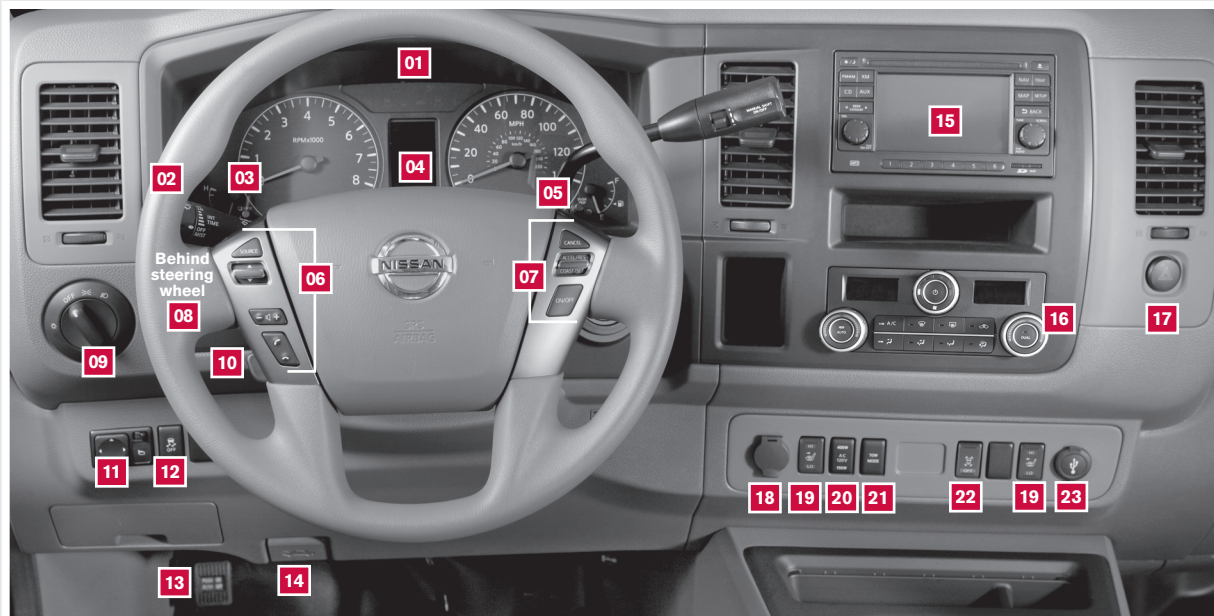

- |                                                                                            |                                                          |                                                     |                                                   |
|--------------------------------------------------------------------------------------------|----------------------------------------------------------|-----------------------------------------------------|---------------------------------------------------|
| <b>01</b> LOW TIRE PRESSURE WARNING LIGHT                                                  | <b>06</b> STEERING WHEEL SWITCHES FOR AUDIO / BLUETOOTH® | <b>12</b> VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH* | <b>18</b> POWER OUTLET                            |
| <b>02</b> WINDSHIELD WIPER AND WASHER / HEADLIGHT BEAM SELECT / TURN SIGNAL CONTROL SWITCH | <b>07</b> CRUISE CONTROL                                 | <b>13</b> PARKING BRAKE*                            | <b>19</b> HEATED SEAT SWITCH*                     |
| <b>03</b> VEHICLE INFORMATION DISPLAY INFO BUTTON                                          | <b>08</b> FOG LIGHT SWITCH                               | <b>14</b> HOOD RELEASE*                             | <b>20</b> POWER INVERTER SWITCH                   |
| <b>04</b> VEHICLE INFORMATION DISPLAY                                                      | <b>09</b> HEADLIGHT CONTROL SWITCH                       | <b>15</b> AUDIO AND NAVIGATION SYSTEM               | <b>21</b> TOW MODE SWITCH*                        |
| <b>05</b> INSTRUMENT BRIGHTNESS CONTROL / TRIP ODOMETER RESET SWITCH*                      | <b>10</b> TILT STEERING COLUMN*                          | <b>16</b> AUTOMATIC CLIMATE CONTROLS                | <b>22</b> FRONT AND REAR SONAR SYSTEM OFF SWITCH* |
|                                                                                            | <b>11</b> OUTSIDE MIRROR CONTROL SWITCH                  | <b>17</b> HAZARD WARNING FLASHER SWITCH*            | <b>23</b> USB JACK                                |

\*See your Owner's Manual for information.

**NEW SYSTEM FEATURES**

|                                                        |   |
|--------------------------------------------------------|---|
| Power Inverter Switch (if so equipped) . . . . .       | 2 |
| Front and Rear Sonar Switch (if so equipped) . . . . . | 2 |
| Fog Light Switch (if so equipped) . . . . .            | 2 |
| TPMS Sensor Reset . . . . .                            | 3 |

**ESSENTIAL INFORMATION**

|                                                  |   |
|--------------------------------------------------|---|
| Loose Fuel Cap . . . . .                         | 4 |
| Tire Pressure Monitoring System (TPMS) . . . . . | 4 |

**FIRST DRIVE FEATURES**

|                                                                           |    |
|---------------------------------------------------------------------------|----|
| Remote Keyless Entry System (if so equipped) . . . . .                    | 5  |
| Opening the Back Doors . . . . .                                          | 5  |
| Operating the Sliding Door . . . . .                                      | 6  |
| Front Power Seat Adjustment (if so equipped) . . . . .                    | 6  |
| Removing the 2nd, 3rd and 4th Row Seats . . . . .                         | 7  |
| Installing the 2nd, 3rd and 4th Row Seats . . . . .                       | 7  |
| Outside Mirror Control Switch . . . . .                                   | 9  |
| Starting/Stopping the Engine . . . . .                                    | 9  |
| Headlight Control Switch . . . . .                                        | 9  |
| Windshield Wiper and Washer Switch . . . . .                              | 10 |
| Automatic Climate Controls (if so equipped) . . . . .                     | 10 |
| Rear Climate Controls . . . . .                                           | 12 |
| FM/AM/SiriusXM™ Satellite Radio with CD Player (if so equipped) . . . . . | 12 |
| USB/iPod® Interface (if so equipped) . . . . .                            | 13 |
| Cruise Control (if so equipped) . . . . .                                 | 13 |
| Power Outlets . . . . .                                                   | 14 |
| Fuel-Filler Door . . . . .                                                | 15 |

**SYSTEM GUIDE**

|                                                               |    |
|---------------------------------------------------------------|----|
| Vehicle Information Display . . . . .                         | 16 |
| Bluetooth® Hands-free Phone System (if so equipped) . . . . . | 16 |
| Navigation System (if so equipped) . . . . .                  | 19 |



- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the **“Safety — Seats, seat belts and supplemental restraint system (section 1)”**, the **“Display screen, heater, air conditioner, audio and phone systems (section 4)”** and the **“Starting and driving (section 5)”** of your Owner’s Manual.



Additional information about your vehicle is also available in your Owner’s Manual, Navigation System Owner’s Manual and at [www.nissanusa.com](http://www.nissanusa.com).



To view detailed instructional videos, go to  
[www.nissanownersinfo.mobi/2013/nvpassengervan](http://www.nissanownersinfo.mobi/2013/nvpassengervan)  
 or snap this barcode with an appropriate barcode reader.

# new system features

## POWER INVERTER SWITCH (if so equipped)

- The power inverter switch **01** is located on the instrument panel below the climate controls. This switch controls power provided to the 120 volt outlets.
- To use the outlets for items requiring between 150W and 400W, stop your vehicle, place the shift lever in the **P (PARK)** position, place the ignition in the **ON** position and push the power inverter switch.
- **400W** and **150W** will illuminate on the switch according to the mode selected.
- Only the 150W mode is available when the ignition switch is placed in the **ACC** or **ON** position or while the vehicle is being driven.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.



## FRONT AND REAR SONAR SWITCH (if so equipped)

- The front and rear sonar system detects obstacles both in front of and behind the vehicle. The system is activated when the ignition is in the **ON** position and the shift selector is moved to either the **R (REVERSE)** or **D (DRIVE)** position.
- When moving forward, the front sonar system will beep to alert you to obstacles within 3 ft (1.0 m) of the front bumper.
- When backing up, the rear sonar system will beep to alert you to obstacles within 5.9 ft (1.8 m) of the rear bumper.
- Turn the system off by pushing the sonar system **OFF** switch **01**. Push the switch again to enable the system. The system will automatically reset the next time the ignition switch is in the **ON** position.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.



## FOG LIGHT SWITCH (if so equipped)

NOTE: The headlights must be on and the low beams  selected for the fog lights to operate.

- Push the fog light switch **01** to turn the fog lights on.
- To turn them off, push the fog light switch **01** again.
- The fog lights will turn off if the headlights are turned off.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.



## TIRE PRESSURE MONITORING SYSTEM (TPMS) SENSOR RESET

- Tire pressures are different between the front and rear tires. The Tire Pressure Monitoring System (TPMS) has sensors that must be reset after tire rotation.
- After rotating the tires, a low tire pressure TPMS warning  will illuminate. The TPMS sensor positions must be relearned.
- When the relearning process has been successfully performed, the TPMS warning lamp will turn off.

 
For more information, refer to the “**Maintenance and do-it-yourself (section 8)**” of your Owner’s Manual.

# essential information

## LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will display in the vehicle information display **01** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will disappear when the vehicle detects the fuel-filler cap is properly tightened and the reset button **02** is pressed for about 1 second.
- If the cap is not properly tightened, the Malfunction Indicator Light  may also illuminate.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

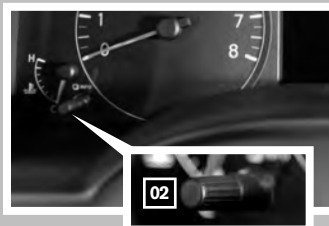

## TIRE PRESSURE MONITORING SYSTEM (TPMS)

- A **CHECK TIRE** warning message will appear in the vehicle information display **01** and the low tire pressure warning light **02** will illuminate when one or more tires are low on pressure and air is needed.
  - The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mile (1.6 km) at moderate speeds.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 MPH (25 km/h). The **CHECK TIRE** warning message and low tire pressure warning light will disappear.
- When the low tire pressure warning light flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by a NISSAN dealer.
- Tire pressure rises and falls depending on the heat caused by the vehicle’s operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates in low ambient temperature, check the tire pressure in your tires.
  - Check the tire pressure (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to section 9, “Technical and consumer information”, in your Owner’s Manual for the location of the Tire and Loading Information label.



For more information, refer to the “**Instruments and controls (section 2)**”, the “**Starting and driving (section 5)**” and the “**Maintenance and do-it-yourself (section 8)**” of your Owner’s Manual.

## REMOTE KEYLESS ENTRY SYSTEM (if so equipped)

The Remote Keyless Entry System allows you to lock or unlock your vehicle and turn on the interior lights.

- To lock the vehicle, press the  button on your keyfob.
- To unlock the driver's door, press the  button on your keyfob.
- Press the  button again within 5 seconds and all doors will unlock.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.



## OPENING THE BACK DOORS

- Unlock the vehicle by pressing the  button on your keyfob twice.
- To open the right side back door, pull the door handle .



- Lift the lever on the left side back door  and pull the door to open.



- To open either door to the wide open position, pull the release latch  toward the back door to release the check link arm.
- Open the door slowly until the magnetic door stopper connects to the stop pad on the outside of the vehicle.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.

# first drive features

## OPERATING THE SLIDING DOOR

- The sliding door can be opened from the inside or the outside.
- To open the sliding door from the inside, pull the release lever **01** down and pull the handle **02** toward the rear of the vehicle until the door clicks. This will lock the door into an open position.
- To close the sliding door from the inside, pull the release lever **01** down. The door will release from the open position and slide closed.
- To open the sliding door from the outside, pull the outside handle and slide the door toward the rear of the vehicle until the door clicks. The door will lock into an open position.
- To close the sliding door from the outside, pull the outside handle again. The door will release from the open position and slide closed.



For more information, refer to the **“Pre-driving checks and adjustments (section 3)”** of your Owner's Manual.

## FRONT POWER SEAT ADJUSTMENT (if so equipped)

 
- To slide the seat forward or backward, push the control switch **01** forward or backward.
- To adjust the angle of the seatback, push the switch **02** forward or backward.

### SEAT LIFTER (driver's seat)

- To adjust the angle and height of the seat cushion, push the front or rear end of the switch **01** up or down.

### LUMBAR SUPPORT (driver's seat)

- Turn the knob **03** to adjust the seat lumbar area.

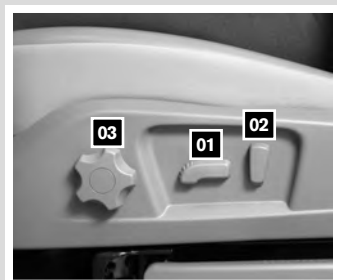


For more information, refer to the **“Safety — Seats, seat belts and supplemental restraint system (section 1)”** of your Owner's Manual.



## REMOVING THE 2ND, 3RD AND 4TH ROW SEATS

 1. On the back of the seat, remove the pull strap **01** from the stowed position.

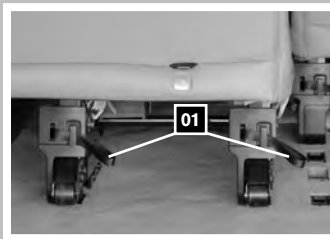

2. Stand directly behind the seat and pull up and rearward on the straps to disengage the seat.



3. Push up and forward to remove the seats from the wells.
4. Rest the seat on the vehicle floor and with 2 people, remove the seat from the vehicle.
5. Store the seat in a safe location.

NOTE: The 4th row seats have rollers on the seat frame to make the seat easier to move.

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.



## INSTALLING THE 2ND, 3RD AND 4TH ROW SEATS

1. Make sure the seat mounting locations are free from objects.
2. Check the latches to make sure that they are in the open position. Pull the pull strap if the latch is closed.
3. Using 2 people, bring the seat to the appropriate mounting position.



# first drive features

4. Push up on the rear of the seat.



5. Line up the seat with the mounting locations. Tilt the seat slightly forward so the front hooks engage into the front mounting locations.



6. Push up on the rear of the seat so the rear latches are 4 inches above the floor. Make sure that the area beneath the seat is clear. Release the seat so the rear latches drop into the mounting location and lock.
7. Check the front hook and rear latch to make sure the latches are locked into the mounting location.



8. Push and pull each seat to ensure the seat is properly engaged. Check that the latch indicator does not show more than 50% red. If necessary, pull the straps and relatch the seats.
9. When the seats are secure, place the straps in their holders to keep them from being inadvertently pulled.

For more information, refer to the **“Safety — Seats, seat belts and supplemental restraint system (section 1)”** of your Owner's Manual.



## OUTSIDE MIRROR CONTROL SWITCH

- The outside mirror control switch is located on the left side of the instrument panel.
- Move the switch **01** to select the left or right mirror.
- Adjust each mirror to the desired position using the switch **02**.
- Move the switch **01** to the center “neutral” position to prevent accidentally moving the mirror.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.

## STARTING/STOPPING THE ENGINE

- Depress the brake pedal.
- Move the shift lever to the **P (PARK)** position.
- Turn the ignition switch to the **START** position.

### TURNING THE ENGINE OFF

- Move the shift lever to the **P (PARK)** position and apply the parking brake.
- Turn the ignition switch to the **LOCK** position.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner's Manual.

 


## HEADLIGHT CONTROL SWITCH

- Turn the headlight control switch to the  $\equiv \text{D} \text{C} \text{E}$  position **01** to turn on the front parking, tail, license plate and instrument panel lights.
- Turn the control switch to the  $\equiv \text{D}$  position **02** to turn on the headlights.

### HIGH BEAM SELECT

- Push the lever forward **03** to select the high beam function. The blue indicator light  $\equiv \text{D}$  illuminates in the instrument panel. Pull the lever back to the original position to select the low beam function. The blue indicator light goes off.
- Pull and release the lever **04** to flash the headlight high beams on and off.

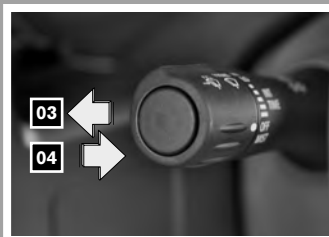

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner's Manual.





# 2013 NV Passenger Van Delivery Checklist

## BLUETOOTH® HANDS-FREE PHONE SYSTEM (if so equipped)

- Demonstrate**
1. Connect the customer's phone
  2. Explain voice tagging
  3. Identify microphone location
  4. Explain how to dial a number
  5. Explain how to receive and end a call

Yes

☐  
☐  
☐  
☐  
☐  
☐



## HEATING, VENTILATION AND AIR CONDITIONING

**Demonstrate**

1. Fan Speed control
2. Mode control
3. A/C function
4. Defrost and Defog operation  
(include recirculation button)

Yes

☐  
☐  
☐  
☐



## SEAT ADJUSTMENT

**Demonstrate**

1. How to slide the front seat forward or backward
2. How to recline the front seat
3. How to operate the seat lifter (if so equipped)
4. How to operate the lumbar support  
(if so equipped)
5. How to adjust the rear seats (if so equipped)

Yes

☐  
☐  
☐  
☐  
☐



## TIRE PRESSURE MONITORING SYSTEM (TPMS)

**Demonstrate**

1. Identify CHECK TIRE PRESSURE warning message **01** location
2. Identify the low tire pressure warning light **02** location
3. Explain TPMS

Yes

☐  
☐  
☐



## CLOCK SETTING

**Demonstrate**

1. How to set clock in the audio system and/or navigation system (if so equipped)

Yes

☐

# 2013 NV Passenger Van Delivery Checklist

## WINDSHIELD WIPER/WASHER SWITCH

### Demonstrate

- 01 Intermittent (**INT**) wiper function
- 02 Time delay adjustment ring
- 03 Low (**LO**) speed wiper function
- 04 High (**HI**) speed wiper function
- 05 **MIST** (one sweep) function
- 06 Washer  function

### Yes

☐

 
☐

☐

☐

☐

☐

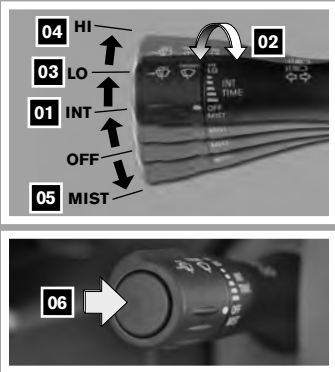

## AUDIO SYSTEM

### Demonstrate

- 1. How to tune to the next broadcast station and skip to the next category (if so equipped) or CD track
- 2. How to store a radio station in a preset
- 3. How to scan the broadcast stations

### Yes

☐

☐

☐



\_\_\_\_\_  
Sales Consultant Signature

\_\_\_\_\_  
Date

\_\_\_\_\_  
Sales Manager Signature

\_\_\_\_\_  
Date

\_\_\_\_\_  
Customer Signature

\_\_\_\_\_  
Date

All information, specifications, photographs and illustrations are those in effect at the time of printing. NISSAN reserves the right to change specifications or design without notice and without obligation. For additional information, see your NISSAN dealer or contact NISSAN North America, Inc. See Owner's Manual for important warnings and details on vehicle operation and maintenance.

 


# first drive features

## WINDSHIELD WIPER AND WASHER SWITCH

- Move the lever to the following positions to operate the windshield wipers:

- 01** Intermittent (**INT**) - Wipers operate intermittently. The intermittent speed can be adjusted by twisting the time control ring **02**.
- 03** Low (**LO**) - Wipers operate at a continuous low speed.
- 04** High (**HI**) - Wipers operate at a continuous high speed.
- 05** Mist (**MIST**) - One sweep operation of the wipers.
- 06** To activate the washer, press the button on the end of the lever. The wipers will operate several times.

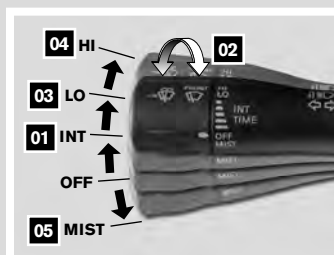

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.



## AUTOMATIC CLIMATE CONTROLS (if so equipped)

### **01** AUTO BUTTON/DRIVER’S SIDE TEMPERATURE CONTROL DIAL

- The auto mode may be used year-round. Press the **AUTO** button to turn the system on and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.
- Turn the driver’s side temperature control dial left for cooler air or right for warmer air.

### **02** DUAL BUTTON/PASSENGER’S SIDE TEMPERATURE CONTROL DIAL

- Press the passenger’s side **DUAL** control button to turn the passenger’s side temperature controls on or off. This will allow the passenger’s side temperature to be adjusted independently from the driver’s side by turning the passenger’s side control.
- Turn the passenger’s side temperature control dial left for cooler air or right for warmer air.



### 03 FAN SPEED CONTROL DIAL/OFF BUTTON

- Turn the dial to the left to decrease fan speed or to the right to increase fan speed.
- Push the button to turn the system off.

### 04 AIR FLOW CONTROL BUTTONS

- Press the air flow control buttons to manually control air flow:
  -  Air flows from the center and side vents.
  -  Air flows from the center, side, and foot vents.
  -  Air flows mainly from the foot vents.
  -  Air flows from the defroster and foot vents.

### 05 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the front window defroster button  to turn the system on. The A/C automatically turns on when the defroster mode is selected. This feature removes humidity from the air.
- Use the temperature control dial **01** to set the desired temperature.
- To defrost the front and side windows, set the driver's side temperature control dial **01** and fan speed control dial **03** to their maximum settings.

### 06 REAR WINDOW AND OUTSIDE MIRROR (if so equipped) DEFROSTER SWITCH

- Push the rear window defroster switch  to turn the system on or off.
- The rear window defroster automatically turns off after approximately 15 minutes.

### 07 AIR RECIRCULATION BUTTON

- Press the air recirculation button  to recirculate air inside the vehicle. The indicator light on the button will illuminate. This system is used to avoid certain outside odors and helps to adjust the inside vehicle temperature more effectively.
- The air recirculation mode can only be activated when the air conditioner is in the  or  mode.

### 08 A/C BUTTON

- Press the **A/C** button to manually turn the A/C on or off.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Display screen, heater, air conditioner, audio and phone systems (section 4)**” of your Owner's Manual.

# first drive features

## REAR CLIMATE CONTROLS

### 01 FAN SPEED CONTROL DIAL

- Turn the fan speed control dial to the left to decrease fan speed or to the right to increase fan speed.
- Turn the dial all the way to the left to turn the fan off.

### 02 TEMPERATURE CONTROL DIAL

- The temperature control dial adjusts the temperature and airflow of the outlet air.
- Turn the dial to the left for cooler air or to the right for warmer air.
- When the temperature control dial is turned all the way to the left, the air flows only from the ceiling vents. When the temperature control dial is turned all the way to the right, the air flows only from the floor vents beneath the second and third row of seats.
- When the temperature control dial is turned toward the center settings, air flows from both the floor and ceiling vents.



For more information, refer to the **“Display screen, heater, air conditioner, audio and phone systems (section 4)”** of your Owner's Manual.



## FM/AM/SiriusXM™ SATELLITE RADIO with CD PLAYER (if so equipped)

### 01 VOL/ON-OFF CONTROL KNOB

- Press the **VOL/ON-OFF** control knob to turn the system on or off.
- Turn the **VOL/ON-OFF** control knob to the right or left to increase or decrease the volume.

### 02 TUNE/SCROLL/AUDIO KNOB

- To manually tune the radio, turn the **TUNE/SCROLL/AUDIO** knob left or right.

\*SiriusXM™ Satellite Radio is only available on vehicles equipped with optional SiriusXM™ Satellite Radio subscription service.

### 03 SEEK/CATEGORY BUTTONS

- To scan through each broadcasting station, press the **SEEK/CATEGORY** buttons.
- To skip from one track to another on a CD, press the **SEEK/CATEGORY** buttons.
- When the **SEEK/CATEGORY** buttons are pressed and held while a CD is playing, the CD will rewind or fast forward. When the button is released, the CD will play at normal speed.

### 04 STATION SELECT BUTTONS

- Twelve stations can be set for the FM band, six for the AM band and eighteen for SiriusXM™ Satellite Radio.
- To store a station in a preset, you must first select a radio band by pressing the **FM-AM** button **05** or **XM** button **06**, then tune to the desired FM, AM or SiriusXM™ Satellite Radio station.
- Next, press and hold the desired station select button (**1-6**) until a beep is heard and the sound is briefly muted. The channel indicator will appear on the display and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored, then press the corresponding station select button (**1-6**).

For more information, refer to the “**Display screen, heater, air conditioner, audio and phone systems (section 4)**” of your Owner’s Manual.

## USB/iPOD® INTERFACE (if so equipped)

 
- The USB jack **01** is located on the instrument panel in front of the shift lever.
- When a compatible USB memory device or iPod® is plugged into the USB jack, compatible audio files stored on the device can be played through the vehicle’s audio system.

For more information, refer to the “**Display screen, heater, air conditioner, audio and phone systems (section 4)**” of your Owner’s Manual.



## CRUISE CONTROL (if so equipped)

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON/OFF** switch **01**. The **CRUISE** indicator light in the instrument panel will illuminate.

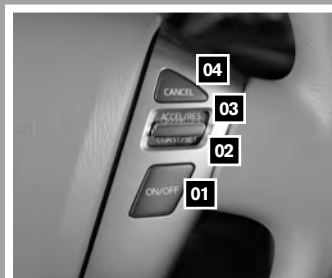

# first drive features

 
- To set cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **02** and release. The **SET** indicator light in the instrument panel will illuminate. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **03**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **02**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **04**.
- To turn off cruise control, push the **ON/OFF** switch **01**. Both the **CRUISE** indicator light and **SET** indicator light in the instrument panel will turn off.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

## POWER OUTLETS

### 12V OUTLETS

- The power outlets are for powering electrical accessories such as cellular telephones. They are rated at 12 volt, 120W (10A) maximum.
- Open the cap to use a power outlet.
- The power outlet on the instrument panel **01** and the 3rd row (if so equipped) **02** are powered only when the ignition switch is in the **ACC** or **ON** position.
- The power outlet located inside the center console storage box (if so equipped) **03** is powered directly by the vehicle’s battery.

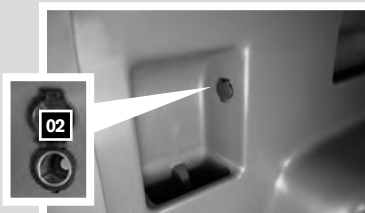

### 120V OUTLETS (if so equipped)

- There are two 120V power outlets supplied with your vehicle. They are located inside the center console storage box **04** and the rear luggage area **05**.
- Use 120V power outlets with the engine running to avoid discharging the vehicle battery.



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.



## FUEL-FILLER DOOR

- The fuel-filler door is located on the driver's side of the vehicle.
- To open the fuel-filler door, pull the lid open.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.



## VEHICLE INFORMATION DISPLAY

- Turn the **INFO** button **01** to display the following modes in the vehicle information display **02**:
  - **RANGE** – Displays the estimated distance the vehicle can be driven before refueling.
  - **AVG MPG** – Displays the average fuel economy since the last reset.
  - **AVG MPH** – Displays the average miles per hour since the last reset.
  - **TIME** – Displays the time driven since the last reset.
  - **TIRE INFO** – Push to display the specific tire pressure of each tire (except the spare).
  - **SETTINGS** – The setting mode allows you to set reminders or preferences for maintenance intervals, reset the TPMS after rotating the tires or to change the unit of the display.
    - In the setting mode screen, turn the **INFO** button to select settings.
    - Press the **INFO** button to select and change one of the menu items.
  - **WARNING** – Displays any warnings that may be present.



 
For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

## BLUETOOTH® HANDS-FREE PHONE SYSTEM (if so equipped)

- With an overhead microphone and sound transmitted through the audio system speakers, the Bluetooth® Hands-free Phone System utilizes Bluetooth wireless technology and voice recognition to provide hands-free cellular phone communication.
- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.\*

### SYSTEM OPERATING TIPS

- Close all windows. Surrounding noises may interfere with system operation and performance.
- Press the  button on the steering wheel to activate voice recognition.
- Wait for the tone before speaking.



\*Some jurisdictions prohibit the use of cellular telephones while driving.

- Begin speaking a command within 5 seconds of the tone.
- Speak in a clear and natural voice without pausing between words.
- Look straight ahead and avoid speaking too loudly or too softly.
- To go back to the previous command, say "Go back" or "Correction."
- To cancel a voice recognition session, simply wait 5 seconds, say "Cancel" or "Quit," or press the  button for 5 seconds.
- To interrupt the system voice and give a command quickly, press the  button.
- When speaking Phonebook names, please be aware some phones require the last name to be spoken before the first name. For example, "Michael Smith" may be spoken as "Smith Michael".
- To increase or decrease the volume of the voice prompts, push the volume control switches — or + on the steering wheel or turn the **VOL/ON-OFF** control knob on the audio system while the system is responding.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Voice Adaptation Mode. See your Owner's Manual for detailed information.
- Some commands are not available while the vehicle is in motion.
- The "Help" command can be used to hear a list of available commands at any time.
- Please refer to the cellular phone manufacturer's Owner's Manual for detailed information regarding your Bluetooth phone.
- For recommended phones and detailed instructions, please visit **[www.nissanusa.com/bluetooth](http://www.nissanusa.com/bluetooth)**.

## CONNECTING PROCEDURE

NOTE: The vehicle must be stationary when connecting the phone.

1. Press the  button on the steering wheel. The system announces the available commands.
2. Say: "Connect phone". The system acknowledges the command and announces the next set of available commands.
3. Say: "Add phone". The system acknowledges the command and asks you to initiate connecting from the phone handset.
4. Initiate connecting from the phone:
  - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and compatible phones, please visit **[www.nissanusa.com/bluetooth](http://www.nissanusa.com/bluetooth)**.
  - When prompted for a Passkey code, enter "1234" from the handset. (The Passkey code is assigned by NISSAN and cannot be changed.)
5. Say a name for the phone when the system asks you to provide one. You can give the phone a name of your choice.

## PHONEBOOK SETUP

- Depending on your cell phone, the system may automatically download your cell phone's entire phonebook to the vehicle's Bluetooth system.
- If the phonebook does not download automatically, 40 entries can be individually downloaded.
- To manually download entries:
  1. Push the  button on the steering wheel.
  2. After the tone, say "Phonebook".
  3. After the next tone, say "Transfer Entry". The system acknowledges the command and asks you to initiate the transfer from the phone handset. The new contact phone number will be transferred from the cellular phone to the vehicle.
- The transfer procedure varies according to each cellular phone. See your cellular phone's owner's manual for details. You can also visit [www.nissanusa.com/bluetooth](http://www.nissanusa.com/bluetooth) for instructions on transferring phone numbers from NISSAN recommended cellular phones.
- 4. The system repeats the number and prompts you for the next command. When you have finished entering numbers or transferring an entry, choose "Store."
- 5. The system confirms the name, location and number.

## MAKING A CALL

1. Press the  button. A tone will sound.
2. Say: "Call". The system acknowledges the command and announces the next set of available commands.
3. Say: "Phone Number". The system acknowledges the command and announces the next set of available commands.
4. Say the number you wish to call starting with the area code in single digit format.
5. When you have finished speaking the phone number, the system repeats it back and announces the available commands.
6. Say: "Dial". The system acknowledges the command and makes the call.

## RECEIVING/ENDING A CALL

- When you receive a phone call, a ring tone sounds through the audio system.
- To accept the call, press the  button.
- To reject the call, press the  button.
- To hang up the phone at the end of a call or to disconnect during call placement, press the  button.

For more information, refer to the **"Display screen, heater, air conditioner, audio and phone systems (section 4)"** of your Owner's Manual or please visit [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).





## NAVIGATION SYSTEM (if so equipped)

- 01** ☀/☾ - Press to change the display brightness between day and night modes. Press and hold to turn the display off. Press again to turn the display on.
- 02** Touch screen display.
- 03** **MAP** - Press to display the current location map screen.
- 04** **NAV** - Press to access the functions of the Navigation System.
- 05** **TRAF** - Press to view traffic information on the route.
- 06** **SETUP** - Press to access the system settings.
- 07** ↶ **BACK** - Press to return to the previous screen.
- 08** **SCROLL** knob - Turn to scroll through the items in a list. Press to select a menu item.
- 09** SD-card location - An SD-card with map data must be inserted here for map functions to operate.
- 10** Volume control knob - Turn right to increase the volume or left to decrease the volume.

For more information, refer to your Navigation System Owner's Manual.













This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. See your Owner's Manual, which contains important safety warnings and information about the operation and maintenance of your vehicle, for complete details. Nissan North America, Inc. reserves the right to make changes, at any time, without prior notice, in prices, colors, materials, equipment, specifications, and models and to discontinue models or equipment. Due to continuous product development and other pre- and post-production factors, actual vehicle, materials and specifications may vary. Some vehicles are shown with optional equipment. See the actual vehicle for complete accuracy. Specifications, options and accessories may differ in Hawaii, U.S. territories and other countries. For additional information on availability, options or accessories, see your NISSAN dealer or contact Nissan North America, Inc.



To view detailed instructional videos,  
go to **[www.nissanownersinfo.mobi/2013/nvpassengervan](http://www.nissanownersinfo.mobi/2013/nvpassengervan)**  
or snap this barcode with an appropriate barcode reader.

