 


2013 **NV 200**  
**COMPACT**  
**CARGO**

QUICK REFERENCE GUIDE



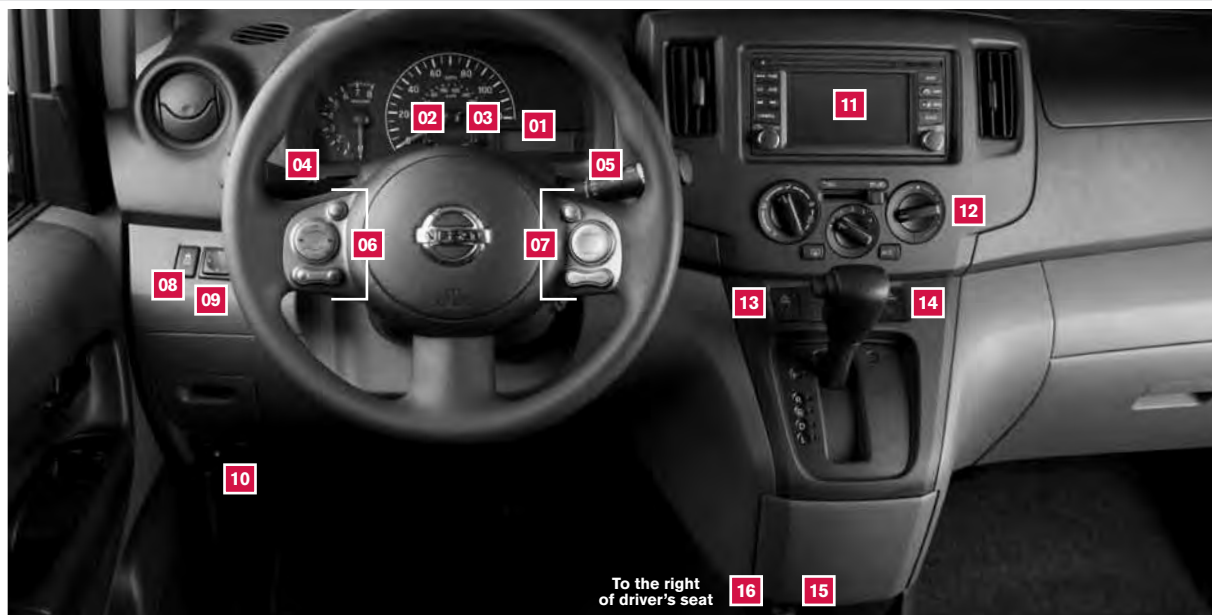

- |                                                                      |                                                        |                                          |                                                 |
|----------------------------------------------------------------------|--------------------------------------------------------|------------------------------------------|-------------------------------------------------|
| <b>01</b> TRIP COMPUTER                                              | <b>05</b> WINDSHIELD WIPER AND WASHER SWITCH           | <b>09</b> OUTSIDE MIRROR CONTROL SWITCH  | <b>14</b> FRONT PASSENGER AIR BAG STATUS LIGHT* |
| <b>02</b> LOW TIRE PRESSURE WARNING LIGHT                            | <b>06</b> STEERING WHEEL SWITCHES FOR AUDIO/BLUETOOTH* | <b>10</b> HOOD RELEASE*                  | <b>15</b> POWER OUTLET                          |
| <b>03</b> INSTRUMENT BRIGHTNESS CONTROL/ TRIP ODOMETER RESET SWITCH* | <b>07</b> CRUISE CONTROL                               | <b>11</b> AUDIO AND NAVIGATION SYSTEM    | <b>16</b> PARKING BRAKE*                        |
| <b>04</b> HEADLIGHT BEAM SELECT/TURN SIGNAL CONTROL SWITCH           | <b>08</b> VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH*    | <b>12</b> CLIMATE CONTROLS               |                                                 |
|                                                                      |                                                        | <b>13</b> HAZARD WARNING FLASHER SWITCH* |                                                 |

\*See your Owner's Manual for information.

**NEW SYSTEM FEATURES**

|                     |   |
|---------------------|---|
| Trip Computer ..... | 2 |
|---------------------|---|

**ESSENTIAL INFORMATION**

|                                              |   |
|----------------------------------------------|---|
| Tire Pressure Monitoring System (TPMS) ..... | 3 |
| Loose Fuel Cap .....                         | 3 |

**FIRST DRIVE FEATURES**

|                                                                      |    |
|----------------------------------------------------------------------|----|
| Remote Keyless Entry System (if so equipped) .....                   | 4  |
| Opening the Back Doors .....                                         | 4  |
| Operating the Sliding Doors .....                                    | 5  |
| Manual Seat Adjustment .....                                         | 5  |
| Outside Mirror Control Switch (if so equipped) .....                 | 6  |
| Starting/Stopping the Engine .....                                   | 6  |
| Headlight Control Switch .....                                       | 6  |
| Windshield Wiper and Washer Switch .....                             | 7  |
| Manual Climate Controls .....                                        | 7  |
| FM/AM/SiriusXM Satellite Radio with CD Player (if so equipped) ..... | 9  |
| USB/iPod® Interface (if so equipped) .....                           | 10 |
| Cruise Control (if so equipped) .....                                | 10 |
| Power Outlets .....                                                  | 11 |
| Fuel-Filler Door .....                                               | 11 |

**SYSTEM GUIDE**

|                                                             |    |
|-------------------------------------------------------------|----|
| Bluetooth® Hands-free Phone System (if so equipped) .....   | 12 |
| System Operating Tips .....                                 | 12 |
| Bluetooth® System without Navigation (if so equipped) ..... | 13 |
| Bluetooth® System with Navigation (if so equipped) .....    | 14 |
| Navigation System (if so equipped) .....                    | 16 |



- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the **“Safety — Seats, seat belts and supplemental restraint system (section 1)”**, the **“Monitor, climate, audio, phone and voice recognition systems (section 4)”** and the **“Starting and driving (section 5)”** of your Owner’s Manual.



Additional information about your vehicle is also available in your Owner’s Manual, Navigation System Owner’s Manual and at [www.nissanusa.com](http://www.nissanusa.com).

 


To view detailed instructional videos, go to  
**[www.nissanownersinfo.mobi/2013/nv200](http://www.nissanownersinfo.mobi/2013/nv200)**  
 or snap this barcode with an appropriate barcode reader.

# new system features

## TRIP COMPUTER


- With the ignition switch in the **ON** position, modes of the trip computer **01** can be selected by pushing the trip computer change button **02** on the instrument panel.
  - **TRIP A** – Measures the distance of one specific trip.
  - **TRIP B** – Measures the distance of a second specific trip.
  - **mpg** – Displays the instant fuel economy.
  - **mpg AVG** – Displays average fuel consumption since the last reset.
  - **mls** ➡  – Displays the estimated distance to empty (dte) the vehicle can be driven before refueling.
- To reset **TRIP A**, **TRIP B**, **mpg**, or **mpg AVG** go to the desired mode on the trip computer and hold the change button **02** for more than 3 seconds.

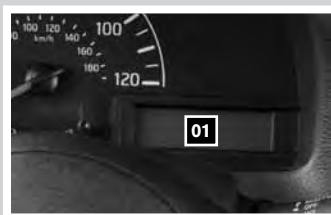

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner's Manual

## TIRE PRESSURE MONITORING SYSTEM (TPMS)

 
- A **CHECK TIRE PRES** warning message will appear in the trip computer **01** and the low tire pressure warning light **02** will illuminate when one or more tires are low on pressure and air is needed.
  - The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 MPH (25 km/h). The **CHECK TIRE PRES** warning message and low tire pressure warning light will disappear.
- When the low tire pressure warning light flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by a NISSAN dealer.
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates, check the tire pressure in your tires.
  - Check the tire pressure (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to section 9, "Technical and consumer information", in your Owner's Manual for the location of the Tire and Loading Information label.

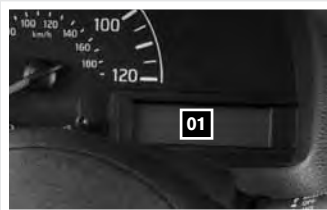

For more information, refer to the "Instruments and controls (section 2)", the "Starting and driving (section 5)" and the "Maintenance and do-it-yourself (section 8)" of your Owner's Manual.

## LOOSE FUEL CAP

 - A **LOOSE FUEL CAP** warning message will display in the trip computer **01** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will disappear when the vehicle detects the fuel-filler cap is properly tightened and the reset button **02** is pressed for more than 1 second.
- If the cap is not properly tightened, the Malfunction Indicator Light  may also illuminate.

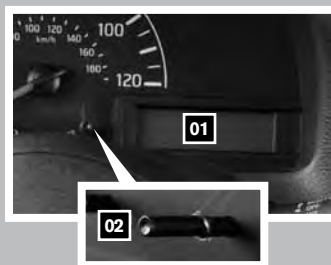

For more information, refer to the "Instruments and controls (section 2)" and the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

# first drive features

## REMOTE KEYLESS ENTRY SYSTEM (if so equipped)

The Remote Keyless Entry System allows you to lock or unlock your vehicle and turn on the interior lights.

- To lock the vehicle, press the  button on your keyfob.
- To unlock the driver's door, press the  button on your keyfob.
- Press the  button again within 5 seconds and all doors will unlock.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.



## OPENING THE BACK DOORS

- Unlock the vehicle by pressing the  button on your keyfob twice.
- Pull the handle  to open the right side back door.



- Lift the lever on the left side back door  and pull the door to open.



- To open either door to the wide open position, pull the release lever  toward the front of the vehicle to release the check link arm.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.



## OPERATING THE SLIDING DOORS

 
- The sliding door can be opened from the inside or the outside.
- To open the sliding door from the inside, pull the handle **01** toward the rear of the vehicle and slide door until the door clicks into the detent.
- To close the sliding door from the inside, pull the handle **01** toward the front of the vehicle. The door will release from the open position and slide closed.
- To open the sliding door from the outside, pull the outside handle and slide the door toward the rear of the vehicle until the door clicks. The door will lock into an open position.
- To close the sliding door from the outside, pull the outside handle again. The door will release from the open position and slide closed.



For more information, refer to the **“Pre-driving checks and adjustments (section 3)”** of your Owner’s Manual.

## MANUAL SEAT ADJUSTMENT

- Pull up on the bar **01** under the front of the seat and slide forward or backward. Release the bar to lock the seat in position.
- Pull up on the lever **02** and lean back to recline the seatback. To bring the seatback forward, pull the lever up and lean your body forward. Release the lever to lock the seatback in position.

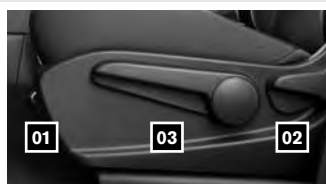

### SEAT LIFTER (driver’s seat)

- Pull up or push down on the adjusting lever **03** repeatedly to adjust the seat height.

### LUMBAR SUPPORT (driver’s seat)

- Move the lever **04** forward or backward to adjust the seat lumbar area.



For more information, refer to the **“Safety — Seats, seat belts and supplemental restraint system (section 1)”** of your Owner’s Manual.

# first drive features

## OUTSIDE MIRROR CONTROL SWITCH (if so equipped)

- The outside mirror control switch is located on the left side of the instrument panel.
- Move the switch **01** to select the left or right mirror.
- Adjust each mirror to the desired position using the switch **02**.
- Move the switch **01** to the center “neutral” position to prevent accidentally moving the mirror.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.

## STARTING/STOPPING THE ENGINE

- Depress the brake pedal.
- Move the shift lever to the **P (PARK)** position.
- Turn the ignition switch to the **START** position.

### TURNING THE ENGINE OFF

- Move the shift lever to the **P (PARK)** position and apply the parking brake.
- Turn the ignition switch to the **LOCK** position.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner's Manual.



## HEADLIGHT CONTROL SWITCH

- Turn the headlight control switch to the  $\equiv \text{D} \equiv$  position **01** to turn on the front parking, tail, license plate and instrument panel lights.
- Turn the control switch to the  $\equiv \text{D}$  position **02** to turn on the headlights.

### HIGH BEAM SELECT

- Push the headlight control switch forward **03** to select the high beam function. The blue indicator light  $\equiv \text{D}$  illuminates in the instrument panel. Pull the headlight control switch back to the original position to select the low beam function. The blue indicator light goes off.
- Pull and release the lever **04** to flash the headlight high beams on and off.



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner's Manual.

 
To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).




## WINDSHIELD WIPER AND WASHER SWITCH

- Move the lever to the following positions to operate the windshield wipers:

- 01** Mist (**MIST**) - One sweep operation of the wipers.
- 02** Move the lever down to the **INT** position and then rotate the control ring **03** away from you to increase **INT** wiper speeds.
- 04** Low (**LO**) - Wipers operate at a continuous low-speed.
- 05** High (**HI**) - Wipers operate at a continuous high-speed.
- 06** Washer  - Pull the lever toward you to activate the washer. The wipers will operate several times.

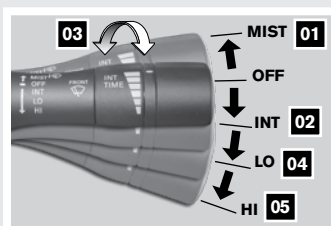

 For more information, refer to the “Instruments and controls (section 2)” of your Owner’s Manual.

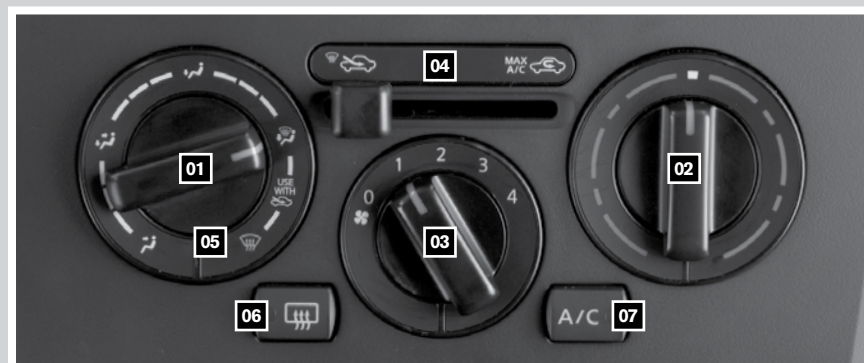

## MANUAL CLIMATE CONTROLS

### 01 AIR FLOW CONTROL DIAL

- Turn the dial to select the following air flow outlets:

-  Air flows from the center and side vents.
-  Air flows from the center, side, and foot vents.
-  Air flows mainly from the foot vents.
-  Air flows from the defroster and foot vents.
-  Air flows mainly from the defroster vents.

### 02 TEMPERATURE CONTROL DIAL

- Turn the temperature control dial left for cooler air or right for warmer air.

To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).

 
# 2013 NV 200 Compact Cargo Delivery Checklist

## BLUETOOTH® HANDS-FREE PHONE SYSTEM (if so equipped)

- Demonstrate**
1. Connect the customer's phone
  2. Explain voice tagging
  3. Identify microphone location
  4. Explain how to dial a number
  5. Explain how to receive and end a call

Yes

☐  
☐  
☐  
☐  
☐  
☐

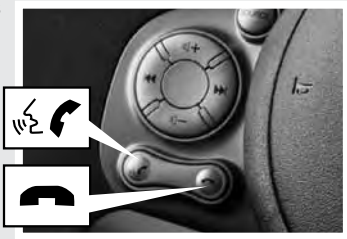

## HEATING, VENTILATION AND AIR CONDITIONING

**Demonstrate**

1. Fan Speed control
2. Mode control
3. A/C function
4. Defrost and Defog operation (include air intake lever)

Yes

☐  
☐  
☐  
☐



## SEAT ADJUSTMENT

**Demonstrate**

1. How to slide the front seat forward or backward
2. How to recline the front seat
3. How to operate the seat lifter
4. How to operate the lumbar support

Yes

☐  
☐  
☐  
☐



 
## TIRE PRESSURE MONITORING SYSTEM (TPMS)

**Demonstrate**

1. Identify **CHECK TIRE PRES** warning message **01** location
2. Identify the low tire pressure warning light **02** location
3. Explain TPMS

Yes

☐  
☐  
☐

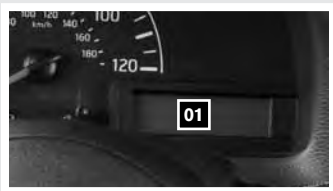

## CLOCK SETTING

**Demonstrate**

1. How to set clock in the audio system and/or navigation system (if so equipped)

Yes

☐

# 2013 NV 200 Compact Cargo Delivery Checklist

## WINDSHIELD WIPER AND WASHER SWITCH

### Demonstrate

- 01** MIST (one sweep) function
- 02** Intermittent (INT) wiper function
- 03** Time delay adjustment ring
- 04** Low (LO) speed wiper function
- 05** High (HI) speed wiper function
- 06** Washer  function

Yes

☐

 
 
☐

☐

☐

☐

☐

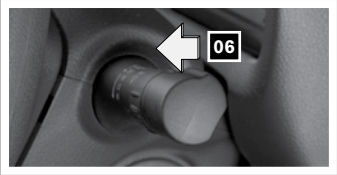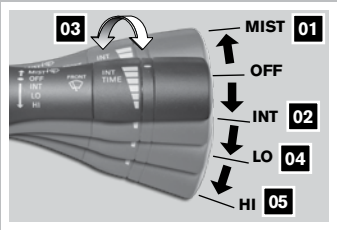

## AUDIO SYSTEM

### Demonstrate

- 1. How to tune to the next broadcast station and skip to the next category (if so equipped) or CD track
- 2. How to store a radio station in a preset
- 3. How to scan the broadcast stations

Yes

☐

☐

☐



Sales Consultant Signature

Date

Sales Manager Signature

Date

Customer Signature

Date

All information, specifications, photographs and illustrations are those in effect at the time of printing. NISSAN reserves the right to change specifications or design without notice and without obligation. For additional information, see your NISSAN dealer or contact NISSAN North America, Inc. See Owner's Manual for important warnings and details on vehicle operation and maintenance.



# first drive features

## 03 FAN SPEED CONTROL DIAL

- Turn the dial to the left to decrease fan speed or to the right to increase fan speed.

## 04 AIR INTAKE LEVER (Outside air circulation/Air recirculation)

- Move the air intake lever to the  position to recirculate air inside the vehicle.  
Move the air intake lever to the  position to draw outside air into the passenger compartment.

## 05 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- First, move the air intake lever **04** to the left position  to draw fresh air into the vehicle.
- Then turn the air flow control dial **01** to the front window defroster mode .
- When the  or  position is selected, press the **A/C** button to turn the air conditioner on for better performance. This will dehumidify the air and help defog the windows.

## 06 REAR WINDOW AND OUTSIDE MIRROR DEFROSTER SWITCH (if so equipped)

- Push the rear window defroster switch  to turn the system on or off.
- The rear window defroster automatically turns off after approximately 15 minutes.

## 07 A/C BUTTON

- Press the **A/C** button to manually turn the A/C on or off.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.



## FM/AM/SiriusXM<sup>®</sup> SATELLITE RADIO with CD PLAYER (if so equipped)

### 01 VOL/ON-OFF CONTROL DIAL

- Press the **VOL/ON-OFF** control dial to turn the system on or off.
- Turn the **VOL/ON-OFF** control dial to the right or left to increase or decrease the volume.

### 02 TUNE KNOB/AUDIO BUTTON

- To manually tune the radio, turn the **TUNE** knob left or right.

### 03 SEEK BUTTONS

- To scan through each broadcasting station, press the seek buttons **|◀◀|** or **▶▶|**.
- For SiriusXM Satellite Radio, to switch to the first channel of the previous or next category, press the seek buttons **|◀◀|** or **▶▶|**.
- To change tracks on a CD, press the **|◀◀|** or **▶▶|** buttons.
- When the seek buttons **|◀◀|** or **▶▶|** are pressed and held while a CD is playing, the CD will rewind or fast forward. When the button is released, the CD will play at normal speed.

### 04 STATION MEMORY KEYS

- Twelve stations can be set for the FM band, six for the AM band and eighteen for SiriusXM Satellite Radio.
- To store a station in a preset, you must first select a radio band by pressing the **FM-AM** button **05** or **XM** button **06**, then tune to the desired FM, AM or SiriusXM Satellite Radio station.
- Now select and hold the desired station memory key (**1-6**) until the preset number is updated on the display and a beep is heard. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored, then press the corresponding station memory key (**1-6**).

\*SiriusXM Satellite Radio is only available on vehicles equipped with optional SiriusXM Satellite Radio subscription service.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).

# first drive features

## USB/iPOD® INTERFACE (if so equipped)

- The USB jack **01** is located below shift selector.
- When a compatible USB memory device or iPod® is plugged into the USB jack, compatible audio files stored on the device can be played through the vehicle's audio system.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.



## CRUISE CONTROL (if so equipped)

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 MPH (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON/OFF** switch **01**. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **02** and release. The **SET** indicator light in the instrument panel will illuminate. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **03**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **02**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **04**.
- To turn off cruise control, push the **ON/OFF** switch **01**. Both the **CRUISE** indicator light and **SET** indicator light in the instrument panel will turn off.



For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

## POWER OUTLETS

### 12V OUTLETS

- The power outlets are for powering electrical accessories such as cellular telephones. They are rated at 12 volt, 120W (10A) maximum.
- Open the cap or remove plug to use a power outlet.
- The power outlet on the instrument panel **01** and on the back of the center console **02** are powered only when the ignition switch is in the **ACC** or **ON** position.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.



## FUEL-FILLER DOOR

- The fuel-filler door release **01** is located to the left of the steering wheel below the instrument panel.
- To open the fuel-filler door, pull the release **01**.
- The fuel-filler door is located on the passenger’s side of the vehicle

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



## BLUETOOTH® HANDS-FREE PHONE SYSTEM (if so equipped)

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.\*

### SYSTEM OPERATING TIPS

- The “Help” command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Say commands after the tone, or press the  button to say a command at any time.
- Speak naturally without long pauses and without raising your voice.
- When speaking Phonebook names, please be aware some phones require the last name to be spoken before the first name. For example, “Michael Smith” may be spoken as “Smith Michael”.
- To cancel a voice recognition session, simply wait 5 seconds, say “Cancel” or “Quit,” or press and hold the  button for 5 seconds.
- To increase or decrease the volume of the voice prompts, push the volume control switches **+** or **-** on the steering wheel or turn the control dial on the audio system while the audio system is responding.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Voice Adaptation Mode. See your Owner’s Manual for detailed information.
- For more detailed information and instructions, refer to your cellular phone Owner’s Manual and visit [www.nissanusa.com/bluetooth](http://www.nissanusa.com/bluetooth).





## BLUETOOTH® SYSTEM WITHOUT NAVIGATION (if so equipped)

### CONNECTING PROCEDURE

NOTE: The vehicle must be stationary when connecting the phone.

1. Press the  button on the steering wheel. The system announces the available commands.
2. Say: "Connect phone". The system acknowledges the command and announces the next set of available commands.
3. Say: "Add phone". The system acknowledges the command and asks you to initiate connecting from the phone handset.
4. Initiate connecting from the phone:

\*Some jurisdictions prohibit the use of cellular telephones while driving.

- The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and compatible phones, please visit [www.nissanusa.com/bluetooth](http://www.nissanusa.com/bluetooth).
  - When prompted for a PIN code, enter "1234" from the handset. (The PIN code is assigned by NISSAN and cannot be changed.)
5. Say a name for the phone when the system asks you to provide one. You can give the phone a name of your choice.



### PHONEBOOK SETUP

- The phonebook stores up to 1,000 names for each phone paired with the system.
- Depending on your cell phone, the system may automatically download your cell phone's entire phonebook to the vehicle's Bluetooth® system.
- If the phonebook does not download automatically, entries can be individually downloaded.
- To manually download entries:
  1. Push the  button on the steering wheel.
  2. After the tone, say "Phonebook".
  3. After the next tone, say "Transfer Entry". The system acknowledges the command and asks you to initiate the transfer from the phone handset. The new contact phone number will be transferred from the cellular phone to the vehicle.
    - The transfer procedure varies according to each cellular phone. See your cellular phone's owner's manual for details. You can also visit [www.nissanusa.com/bluetooth](http://www.nissanusa.com/bluetooth) for instructions on transferring phone numbers from NISSAN recommended cellular phones.
  4. The system repeats the number and prompts you for the next command. When you have finished entering numbers or transferring an entry, choose "Store."
  5. The system confirms the name, location and number.

### MAKING A CALL FROM THE PHONEBOOK

1. Press the  button.
2. After waiting for the tone, say "Call".

# system guide

3. After the next tone, speak a name of a phonebook entry. For example "Michael Smith".
4. Confirm the correct name is recognized by saying "Dial" after the tone.

NOTE: In some cases, names stored using all UPPERCASE letters may not be recognized by the Voice Recognition system.

## MAKING A CALL BY PHONE NUMBER

1. Press the  button. A tone will sound.
2. Say: "Call". The system acknowledges the command and announces the next set of available commands.
3. Say: "Phone Number". The system acknowledges the command and announces the next set of available commands.
4. Say the number you wish to call, starting with the area code in single digit format.
5. When you have finished speaking the phone number, the system repeats it back and announces the available commands.
6. Say: "Dial". The system acknowledges the command and makes the call.

## RECEIVING/ENDING A CALL

- When you receive a phone call, a ring tone sounds through the audio system.
- To accept the call, press the  button.
- To reject the call, press the  button.
- To hang up the phone at the end of a call or to disconnect during call placement, press the  button.

 
For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual or please visit [www.nissanusa.com/bluetooth](http://www.nissanusa.com/bluetooth).

## BLUETOOTH® SYSTEM WITH NAVIGATION (if so equipped)

- Send predefined or custom text messages\* through your vehicle's Bluetooth® system.
- Receive texts through your vehicle's Bluetooth® system that can be read to you.
- Bluetooth® Streaming Audio allows you to use a compatible Bluetooth® phone to play audio files on your device. Your compatible cellular phone can be connected to the vehicle's audio system allowing audio files to play through the vehicle's speakers.

## CONNECTING PROCEDURE

1. Press the **MENU** button on the control panel.
2. Select the "Settings" key **01**.

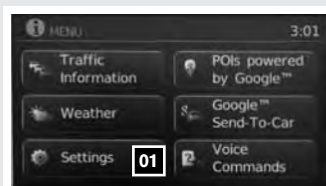

3. Select the "Phone & Bluetooth" key **02**.



To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).


4. Select the “Connect New Device” key **03**.
5. Initiate the connecting process from the handset.  
The system will display the message: “is PIN XXXXXX displayed on your Bluetooth® device?” If the PIN is displayed on your Bluetooth® device, select “Yes” to complete the connecting process.



## VEHICLE PHONEBOOK

 To access the vehicle phonebook:

1. Press the button on the control panel.
2. Select the “Phonebook” key **04**.
3. Choose the desired entry from the displayed list.

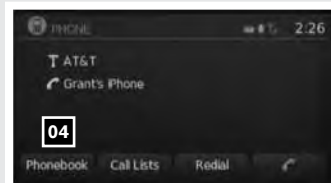

## MAKING A CALL FROM THE PHONEBOOK

1. Press the button on the steering wheel to activate Voice Recognition.
2. Say “Call”:
3. Say a name in the vehicle phonebook to call that entry.

## MAKING A CALL BY PHONE NUMBER

1. Press the button on the steering wheel to activate Voice Recognition.
2. Say “Phone”.
3. Say “Dial Number”, and when prompted speak the digits of the number you wish to dial.
4. Say “Dial”.

 
## RECEIVING A CALL

To accept the incoming call, either:

1. Press the button on the steering wheel, or
2. Select the green on the screen.

To reject the incoming call, either:

1. Press the button on the steering wheel, or
2. Select the red on the screen.

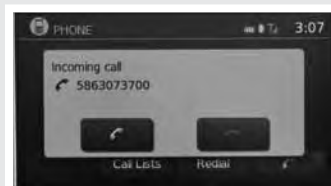

\*Laws in some communities may restrict the use of text messaging. Check local regulations before using this feature.

For more information, refer to the **“Monitor, climate, audio, phone and voice recognition systems (section 4)”** of your Owner’s Manual.



## NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from the current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- Your Navigation System, along with POIs (Point Of Interest) powered by Google™\* (if so equipped), allows you to enter a destination using Google search results.
- Using Google™ Send-to-Car\* (if so equipped) you can send a destination from Google Maps to your vehicle's Navigation System.

- 01 VOL/ON-OFF** control dial – Rotate clockwise to increase the volume or counterclockwise to decrease the volume.
- 02 TUNE** knob/**AUDIO** button – Turn to scroll through the items in a list. Press to select a menu item.
- 03 MAP** button – Press to display the current location map screen.
- 04 NAV** button – Press to access the functions of the Navigation System.
- 05** ☀/☾ – Press to change the display brightness between day and night modes. While the mode is being displayed, the brightness can be adjusted using the **TUNE** knob. Press and hold to turn the display off. Press again to turn the display on.
- 06 MENU** button – Press to access the system settings key.
- 07 BACK** button – Press to return to the previous screen.

\*An account must first be registered from the Info Services settings screen and a compatible Bluetooth® Hands-free phone and subscription service is required. Please visit [www.nissanusa.com/bluetooth](http://www.nissanusa.com/bluetooth) for compatible phone information.

For more information, refer to your **Navigation System** Owner's Manual.



This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. See your Owner's Manual, which contains important safety warnings and information about the operation and maintenance of your vehicle, for complete details. Nissan North America, Inc. reserves the right to make changes, at any time, without prior notice, in prices, colors, materials, equipment, specifications, and models and to discontinue models or equipment. Due to continuous product development and other pre- and post-production factors, actual vehicle, materials and specifications may vary. Some vehicles are shown with optional equipment. See the actual vehicle for complete accuracy. Specifications, options and accessories may differ in Hawaii, U.S. territories and other countries. For additional information on availability, options or accessories, see your NISSAN dealer or contact Nissan North America, Inc.



To view detailed instructional videos,  
go to **[www.nissanownersinfo.mobi/2013/nv200](http://www.nissanownersinfo.mobi/2013/nv200)**  
or snap this barcode with an appropriate barcode reader.

