 


2013 **370Z**

QUICK REFERENCE GUIDE



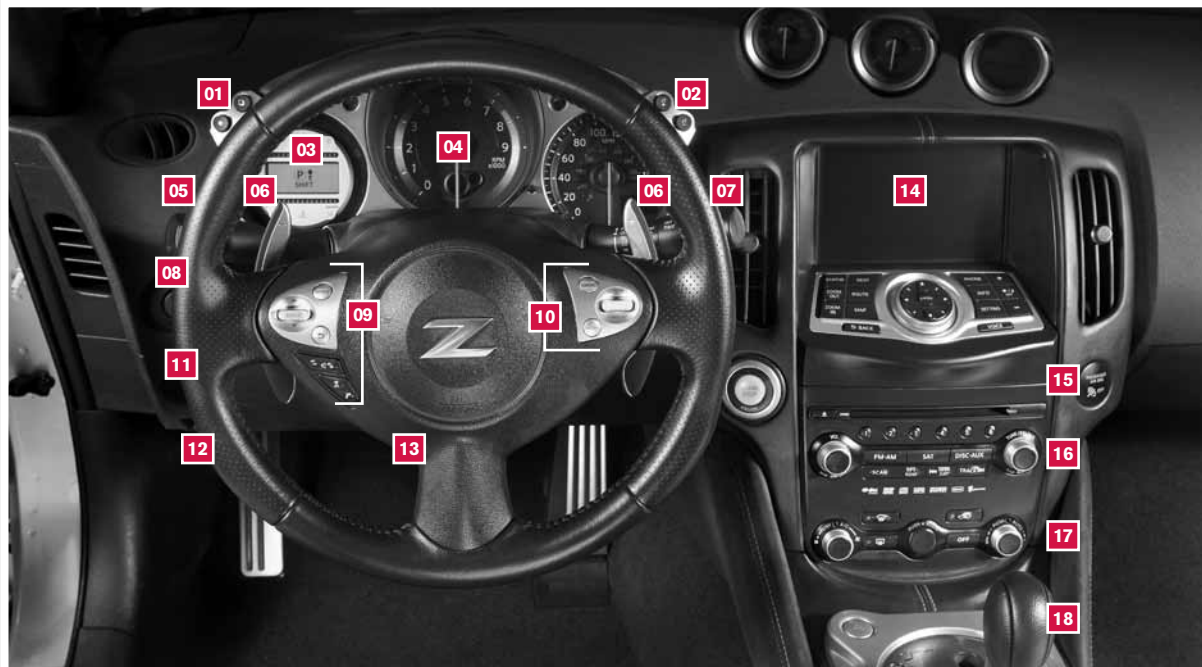

- 01** ENTER / NEXT SWITCHES*
- 02** INSTRUMENT BRIGHTNESS CONTROL*
- 03** VEHICLE INFORMATION DISPLAY*
- 04** LOW TIRE PRESSURE WARNING LIGHT
- 05** HEADLIGHT AND TURN SIGNAL CONTROL

- 06** PADDLE SHIFTERS*
- 07** WINDSHIELD WIPER / WASHER SWITCH
- 08** VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH*
- 09** STEERING WHEEL SWITCHES FOR AUDIO* / BLUETOOTH® / NAVIGATION

- 10** CRUISE CONTROL
- 11** INTELLIGENT KEY PORT
- 12** HOOD RELEASE*
- 13** TILT STEERING COLUMN ADJUSTMENT*
- 14** CONTROL PANEL DISPLAY*

- 15** FRONT PASSENGER AIR BAG STATUS LIGHT*
- 16** AUDIO SYSTEM
- 17** AUTOMATIC CLIMATE CONTROLS
- 18** SYNCHROREV MATCH® MODE (S-MODE) SWITCH*

*See your Owner's Manual for information.

NEW SYSTEM FEATURES

Opening the Soft Top (Roadster models)	2
--	---

ESSENTIAL INFORMATION

Loose Fuel Cap	3
Tire Pressure Monitoring System (TPMS)	3
Engine Oil Temperature Gauge	4
Automatic Power Windows	4

FIRST DRIVE FEATURES

NISSAN Intelligent Key® System	5
Rear Hatch/Trunk Lid Release	6
Soft Top Operation (Roadster models)	6
Power Seat Adjustments (if so equipped)	7
Outside Mirror Control Switch	7
Starting/Stopping the Engine	8
Headlight Control Switch	9
Windshield Wiper/Washer Switch	9
Automatic Climate Controls (if so equipped)	10
FM/AM/SiriusXM™ Satellite Radio with CD/DVD Player (if so equipped)	11
Cruise Control	12
Clock Set/Adjustment	12
Fuel-Filler Door	13

SYSTEM GUIDE

Trip Computer	14
Bluetooth® Hands-free Phone System (if so equipped)	14
System Operating Tips	15
Bluetooth® System with Navigation (if so equipped)	15
Bluetooth® System without Navigation (if so equipped)	17
Navigation System (if so equipped)	18
HomeLink® Universal Transceiver (if so equipped)	20



- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the **“Safety — Seats, seat belts and supplemental restraint system (section 1)”**, the **“Center display, heater, air conditioner, audio, phone and voice recognition systems (section 4)”** and the **“Starting and driving (section 5)”** of your Owner’s Manual.



Additional information about your vehicle is also available in your Owner’s Manual, Navigation System Owner’s Manual and at www.nissanusa.com.

To view detailed instructional videos, go to www.nissanownersinfo.mobi/2013/370z or snap this barcode with an appropriate barcode reader.

new system features

OPENING THE SOFT TOP (Roadster models)

- The soft top can be opened from outside the vehicle using the door handle request switch **01** as follows:
 - The ignition switch must be in the **OFF** position.
 - Push and hold the door handle request switch **01** until the soft top is fully opened.

NOTE: It is important to make sure the NISSAN Intelligent Key® is with you (that is, in your pocket or purse).

 
For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.



LOOSE FUEL CAP


- A **LOOSE FUEL CAP** warning message will appear in the vehicle information display **01** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will disappear when the vehicle detects the fuel-filler cap is properly tightened and the reset button **02** is pressed for about 1 second.
- If the cap is not properly tightened, the Malfunction Indicator Light SERVICE ENGINE SOON may illuminate.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

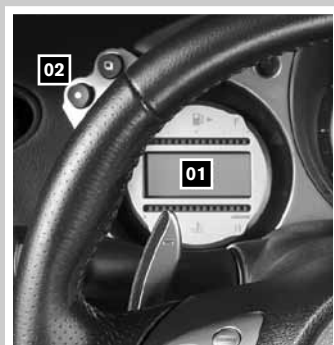

TIRE PRESSURE MONITORING SYSTEM (TPMS)

 - A **CHECK TIRE PRESSURE** warning message will appear in the vehicle information display **01** and the low tire pressure warning light **02** will illuminate when one or more tires are low on pressure and air is needed.
 - The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mile (1.6km) at moderate speeds.
- After tire pressures are adjusted, press the reset button **03** to turn off the **CHECK TIRE PRESSURE** warning message. To turn off the warning light, drive the vehicle at speeds above 16 MPH (25km/h).
- When the low tire pressure warning light flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by a NISSAN dealer.
- Tire pressure rises and falls depending on the heat caused by the vehicle’s operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates in low ambient temperature, check the tire pressure in your tires.
 - Check the tire pressure (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to section 9, “Technical and consumer information”, in your Owner’s Manual for the location of the Tire and Loading Information label.

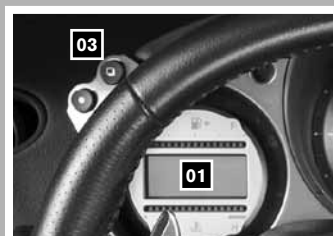

For more information, refer to the “**Instruments and controls (section 2)**”, the “**Starting and driving (section 5)**” and the “**Maintenance and do-it-yourself (section 8)**” of your Owner’s Manual.

ENGINE OIL TEMPERATURE GAUGE

 
 
- Performance driving patterns or extended driving at elevated ambient temperatures may result in increased engine oil temperature during operation.
- During normal vehicle operation oil temperatures will be below 280°F. If the engine oil temperature gauge **01** indicates 280°F or above while driving, reduce engine speed (RPM) and drive at a reduced speed.
- When the engine oil temperature is high, the engine protection mode, which helps reduce chance of engine damage, may activate and automatically decrease engine power.

For more information, refer to the **"Instrument and controls (section 2)"**, **"Maintenance and do-it-yourself (section 8)"** and the **"Technical and consumer information (section 9)"** of your Owner's Manual.



AUTOMATIC POWER WINDOWS

- Your power windows have an automatic adjusting function to ensure windows close completely to help seal against wind noise and weather leaks.
- When the front doors are opened, the windows automatically lower slightly to avoid contact between the windows and the side roof panels.
- If your vehicle's battery has been discharged or disconnected, your power window automatic function will not operate.
- Refer to your Owner's Manual for information to initialize your power window system.
- If the power window functions do not operate properly after initializing the system, have your vehicle checked by a NISSAN dealer.

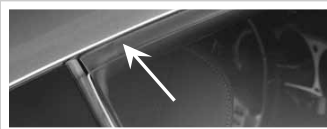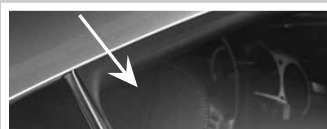

For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual.

 
NISSAN INTELLIGENT KEY® SYSTEM

The NISSAN Intelligent Key® system allows you to lock or unlock your vehicle, open your rear hatch/trunk lid and start the engine.

NOTE: It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).





- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **01** once or press the  button **02** on the keyfob.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **01** once; the corresponding door will unlock. Push the door handle request switch **01** again within 1 minute; all other doors will unlock, or
 - Press the  button **03** on the keyfob to unlock the driver's side door. Press the  button again; all other doors will unlock.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **04** for more than 1 second. Once activated, the panic alarm and headlights will stay on for 25 seconds.

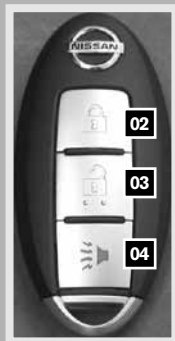


INTELLIGENT KEY BATTERY DISCHARGE

  - If the low battery indicator **05** appears in the vehicle information display, replace the battery as soon as possible.
- If the battery in the Intelligent Key is almost discharged, the guide light **06** of the Intelligent Key port blinks and the key insertion indicator **07** will appear in the vehicle information display.
- To start the engine under these circumstances, insert the Intelligent Key into the key port with the key ring end toward you until it latches into place. Then push the ignition switch to start the engine.
- To remove the Intelligent Key from the port, push the ignition switch to turn the engine off and then pull the Intelligent Key out of the port.

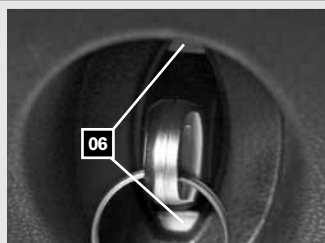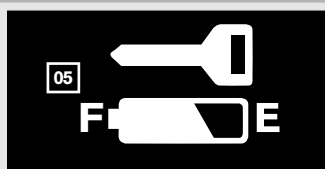

 For more information, refer to the “**Pre-driving checks and adjustments (section 3)**”, the “**Starting and driving (section 5)**” and the “**Maintenance and do-it yourself (section 8)**” of your Owner's Manual.

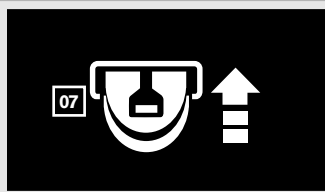


first drive features

REAR HATCH/TRUNK LID RELEASE

- Unlock the rear hatch/trunk lid by pushing the request switch **01**.
- Once unlocked, push the opener switch **02** and pull up to open the rear hatch/trunk lid.

NOTE: It is important to make sure the NISSAN Intelligent Key® is with you (that is, in your pocket or purse).

 For more information, refer to the “Pre-driving checks and adjustments (section 3)” of your Owner’s Manual.

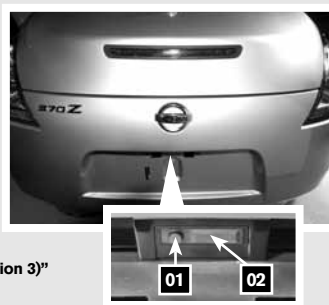


SOFT TOP OPERATION (Roadster models)

Before opening or closing your soft top, refer to the Owner’s Manual for detailed warnings and cautions regarding soft top operation.

Soft Top Operation

1. Make sure the area is clear of obstructions and that there is at least 6 feet of clearance above the vehicle.
2. Apply the parking brake and move the shift lever to the **P (PARK)** position (automatic transmission) or the **N (NEUTRAL)** position (manual transmission).
3. Depress the brake pedal and the clutch pedal (manual transmission).
4. Start the engine.
5. Push and hold the soft top operating switch, located on the center console, to **OPEN 01** or **CLOSE 02** until the top is fully opened or closed.

 For more information, refer to the “Pre-driving checks and adjustments (section 3)” of your Owner’s Manual.

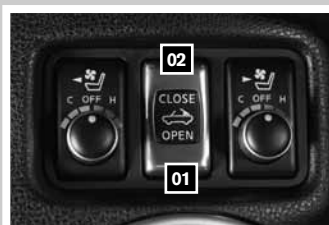


POWER SEAT ADJUSTMENTS (if so equipped)

- To slide the seat forward or backward, push the control switch **01** forward or backward
- To adjust the angle of the seatback, push the switch **02** forward or backward.



MANUAL SEAT LIFTER (if so equipped for driver's seat)

 - To adjust the angle and height of the seat cushion to the desired position, turn either dial **03**.

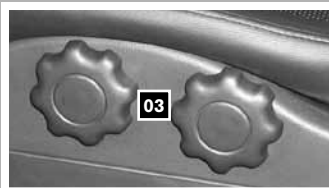

MANUAL LUMBAR SUPPORT (if so equipped for driver's seat)

- Your driver's seat lumbar support **04** is located on the inboard side of the driver's seat. To adjust the lumbar support, move the lever up or down.



For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner's Manual.

OUTSIDE MIRROR CONTROL SWITCH

- To select the right or left side mirror, turn the control switch **01** right or left.
- To adjust the mirror angle, move the control switch **01** up, down, right or left.
- To prevent accidentally moving the mirror, turn and set the switch to the middle “neutral” position.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.



first drive features

STARTING/STOPPING THE ENGINE

NOTE: It is important to make sure the NISSAN Intelligent Key® is with you (that is, in your pocket or purse).

AUTOMATIC TRANSMISSION (if so equipped)

- Depress the brake pedal.
 - If the brake pedal is not depressed, pushing the ignition switch once will activate the **ACC** mode.
 - Pushing the ignition switch a second time will activate the **ON** mode.
- Move the shift lever to **P (PARK)**.
- Press the ignition switch **START/STOP** button to start the engine.



MANUAL TRANSMISSION (if so equipped)

- Depress the brake pedal.
- Move the shift lever to **N (NEUTRAL)**.
- Depress the clutch pedal to the floor.
 - If the clutch pedal is not depressed, pushing the ignition switch once will activate the **ACC** mode.
 - Pushing the ignition switch a second time will activate the **ON** mode.
- Press the ignition switch **START/STOP** button to start the engine.

TURNING THE ENGINE OFF

- For an automatic transmission, move the shift lever to the **P (PARK)** position, apply the parking brake and press the ignition switch **START/STOP** button to turn the engine off.
- For a manual transmission, move the shift lever to the **N (NEUTRAL)** position, apply the parking brake, place the vehicle in 1st gear and press the ignition switch **START/STOP** button to turn the engine off.

EMERGENCY ENGINE SHUT OFF

To shut off the engine in an emergency situation while driving, perform one of the following procedures:

 
- Rapidly push the push button ignition switch 3 consecutive times in less than 1.5 seconds, or
- Push and hold the push button ignition switch for more than 2 seconds.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **01** to turn on the front parking, side marker, tail, license plate and instrument panel lights. Turn the switch to the  position **02** to turn on the headlights.

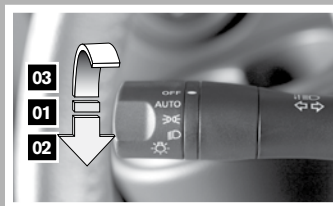


AUTOLIGHT SYSTEM

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **03** then push the ignition switch to **ON**. To deactivate the autolight system, turn the headlight control switch to the **OFF**,  position **01** or  position **02**.

HIGH BEAM SELECT

 - Push the headlight control switch forward **04** to select the high beam function. The blue indicator light  illuminates in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light goes off.
- Pull and release the headlight control switch **05** to flash the headlight high beams on and off.

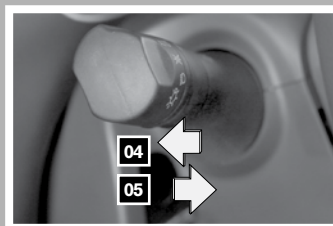

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

WINDSHIELD WIPER/WASHER SWITCH

 
- Move the lever to the following positions to operate the windshield wipers:

- 01** Mist (**MIST**) - One sweep operation of the front wipers.
- 02** Intermittent (**INT**) - Front wipers operate intermittently. The intermittent speed can be adjusted by twisting the time control ring **03**.

- 04** Low (**LO**) - Front wipers operate at a continuous low-speed.

- 05** High (**HI**) - Front wipers operate at a continuous high-speed.

- 06** Pull the lever toward you to activate the front washer. The front wipers will operate several times.

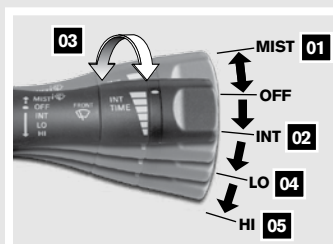

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

2013 370Z Delivery Checklist

BLUETOOTH® HANDS-FREE PHONE SYSTEM (if so equipped)

- Yes
1. Connect the customer's phone

2. Explain voice tagging

3. Identify microphone location

4. Explain how to dial a number

5. Explain how to receive and end a call

☐

☐

☐

☐

☐



HEATING, VENTILATION AND AIR CONDITIONING

- Demonstrate
- Yes
1. **AUTO** mode

2. Fan Speed control

3. Mode control

4. A/C function

5. Defrost and Defog operation
(include recirculation button)

☐

☐

☐

☐

☐



NAVIGATION SYSTEM (if so equipped)

- Demonstrate
- Yes
1. How to operate the touch screen
and/or scrolling dial

2. How to add a home location

3. How to set a destination

4. How to search for nearby places

5. How to turn the display off

☐

☐

☐

☐

☐



CRUISE CONTROL

- Demonstrate
- Yes
1. How to activate/deactivate cruise control

2. How to set a cruising speed

3. How to reset at a faster/slower cruising speed

4. How to cancel the preset speed

☐

☐

☐

☐



CLOCK SETTING

- Demonstrate
- Yes
1. How to set the clock in the instrument panel and/or audio system.

☐

2013 370Z Delivery Checklist

TIRE PRESSURE MONITORING SYSTEM TPMS

- 1. Explain TPMS
- 2. Identify location of the low tire pressure warning light
- 3. Explain how to reset the TPMS and turn off the low tire pressure warning light
- 4. Identify location of the Tire and Loading Information label

Yes

☐

☐

☐

☐



FUEL GAUGE

- 1. Identify location of the fuel gauge
- 2. Explain how to read the fuel gauge
- 3. Identify location of the low fuel warning

Yes

☐

☐

☐



ELECTRONIC QUICK REFERENCE GUIDE (EQRG)

- 1. Explain that additional vehicle operation information can be viewed via the Nissan EQRG website at www.nissanownersinfo.mobi
- 2. Explain that EQRG information can be viewed via SmartPhone or personal computer
- 3. Identify where on the vehicle's Quick Reference Guide they can find the internet address (PC viewing) or Quick Response Code (SmartPhone viewing) to access the Nissan EQRG site

Yes

☐

☐

☐

Sales Consultant Signature

Date

Sales Manager Signature

Date

 
Customer Signature

Date

All information, specifications, photographs and illustrations are those in effect at the time of printing. NISSAN reserves the right to change specifications or design without notice and without obligation. For additional information, see your NISSAN dealer or contact NISSAN North America, Inc. See Owner's Manual for important warnings and details on vehicle operation and maintenance.



first drive features

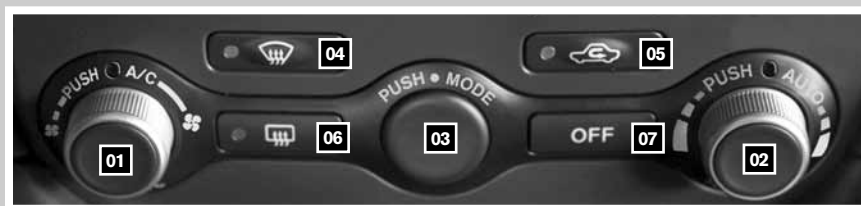

AUTOMATIC CLIMATE CONTROLS (if so equipped)

01 A/C BUTTON/FAN SPEED CONTROL DIAL

- Push the **A/C** button to turn the A/C on or off. Turn the fan speed control dial to the left to decrease fan speed or to the right to increase fan speed.

02 AUTO BUTTON/TEMPERATURE CONTROL DIAL

- The auto mode may be used year-round. Press the **AUTO** button to turn the system on and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.

03 MODE/MANUAL AIR FLOW CONTROL BUTTON

- Press the **MODE** button to cycle through the following air flow outlets:

- Air flows from the center and side vents.
- Air flows from the center, side, and foot vents.
- Air flows mainly from the foot vents.
- Air flows from the defroster and foot vents.

04 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the front window defroster button  to turn the system on. The A/C automatically turns on when the defroster mode is selected. This feature removes humidity from the air.
- Set the fan speed control dial **01** and the temperature control dial **02** to their maximum settings.

05 AIR RECIRCULATION BUTTON

- Press the air recirculation button  to recirculate air inside the vehicle. The indicator light on the button will illuminate. This system is used to avoid certain outside odors and helps to adjust the inside vehicle temperature more effectively.
- Press the air recirculation button  again to turn air recirculation off. This allows outside air to be drawn into the passenger compartment to prevent fogging in defrost, floor or defrost/floor modes.

06 REAR WINDOW AND OUTSIDE MIRROR (if so equipped) DEFROSTER SWITCH

- Push the rear window defroster switch  to turn the system on or off.
- The rear window defroster automatically turns off after approximately 15 minutes.

07 OFF BUTTON

- Press the **OFF** button to turn the climate control system off.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Center display, heater, air conditioner, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.



FM/AM/SiriusXM™* SATELLITE RADIO WITH CD/DVD PLAYER (if so equipped)

01 VOL/ON-OFF CONTROL KNOB

- Press the **VOL/ON-OFF** control knob to turn the system on or off.
- Turn the knob right or left to increase or decrease the volume.

02 SEEK/CAT AND TRACK BUTTONS

- To scan quickly through each broadcasting station, press the **SEEK/CAT** button or the **TRACK** button to stop at the previous or next broadcast station.
- For SiriusXM™ satellite radio, to switch to the first channel of the previous or next category, press the **SEEK/CAT** button or the **TRACK** button.
- To change tracks on a CD, press the **SEEK/CAT** button or the **TRACK** button.
- To fast forward or rewind a track on a CD, press and hold the **SEEK/CAT** button or the **TRACK** button.

03 TUNE/FOLDER/AUDIO CONTROL KNOB

- To manually tune the radio, turn the **TUNE/FOLDER/AUDIO** knob left or right.

04 STATION PRESET BUTTONS

- Twelve stations can be set for the FM band, six for the AM band and eighteen for SiriusXM satellite radio.
- To store a station in a preset, you must first select a radio band by pressing the **FM-AM** button **05** or **SAT** button **06**, then tune to the desired AM, FM or SiriusXM satellite station.
- Then press and hold the desired station preset button (1-6) until the sound is briefly muted. The channel indicator will then display and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select button (1-6).

*SiriusXM™ Satellite Radio is only available on vehicles equipped with optional SiriusXM™ satellite subscription service.

For more information, refer to the “**Center display, heater, air conditioner, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

first drive features

CRUISE CONTROL

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph.
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON/OFF** **01** switch. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** **02** switch and release. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** **03** switch. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** **02** switch. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **04**.
- To turn off cruise control, push the **ON/OFF** **01** switch. The **CRUISE** indicator light in the instrument panel will turn off.



For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

CLOCK SET/ADJUSTMENT

- Adjust the clock **01** using the trip computer’s  switch **02** and  switch **03** :
 1. Press  until the **SETTING** mode appears in vehicle information display.
 2. Press  until **CLOCK** is highlighted.
 3. Press . The clock mode setting menu appears.
 4. Press  to enter the clock setting mode.
 5. Press  to begin setting the clock.
 6. Press  to select hours, then press . Hours is selected and minutes is highlighted.
 7. Press  to set minutes, then press  to complete the clock set procedure.



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

FUEL-FILLER DOOR

 
- The fuel-filler door is located on the passenger's side of the vehicle.
- Unlock the fuel-filler door using one of the following operations, then push and release the left side of the door to open:
 - Push the door handle request switch while carrying the NISSAN Intelligent Key® with you.
 - Press the  button on the Intelligent Key.
 - Push the power door lock switch to the  position.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.

TRIP COMPUTER

- When the  button **01** is pressed, the following modes will appear on the vehicle information display **02** :
 - **MPG** – Displays the current fuel consumption.
 - **MPG/MPH** – Displays the average fuel consumption and speed since the last reset.
 - **TIME/MILES** – Displays the elapsed time and total distance the vehicle has been driven since the last reset.
 - **RANGE** – Displays the estimated distance to empty (dte) the vehicle can be driven before refueling.
 - **OUTSIDE TEMP** – Displays the exterior air temperature including a low temperature warning feature.
 - **SETTING** – Allows you to set reminders for alerts and maintenance intervals or change the language and units used in the system.
 - Press the  button **03** to cycle through the various setting modes.
 - Press the  button **01** to choose the selected menu.
 - **WARNING** – If there are any.

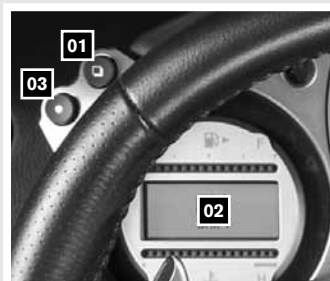

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

BLUETOOTH® HANDS-FREE PHONE SYSTEM* (if so equipped)

 
- With an overhead microphone and sound transmitted through the audio system speakers, the Bluetooth® Hands-free Phone System utilizes Bluetooth wireless technology and voice recognition to provide hands-free cellular phone communication.
- Bluetooth Streaming Audio (available with Navigation System only) allows you to use a compatible Bluetooth phone to play audio files on your device. Your compatible cellular phone can be connected to the vehicle’s audio system allowing audio files to play through the vehicle’s speakers.
- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*



*Some jurisdictions prohibit the use of cellular telephones while driving.

SYSTEM OPERATING TIPS

- Close all windows. Surrounding noises may interfere with system operation and performance.
- Press the  or  button on the steering wheel to activate voice recognition.
- Wait for the tone before speaking.
- Begin speaking a command within 5 seconds of the tone.
- Speak in a clear and natural voice without pausing between words.
- Look straight ahead and avoid speaking too loudly or too softly.
- To go back to the previous command, say "Go back".
- To cancel a voice recognition session, say "Exit" or press and hold the  or  button.
- To interrupt the system voice and give a command quickly, press the  or  button.
- When speaking Phonebook names, please be aware some phones require the last name to be spoken before the first name. For example, "Michael Smith" may be spoken as "Smith Michael".
- To increase or decrease the volume of the voice prompts, push the volume control switches  or  on the steering wheel or turn the **VOL/ON-OFF** control knob on the audio system while the system is responding.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Speaker Adaptation Mode. See your Owner's Manual for detailed information.
- Some commands are not available while the vehicle is in motion.
- The "Help" command can be used to hear a list of available commands at any time.
- Please refer to the cellular phone manufacturer's Owner's Manual for detailed information regarding your Bluetooth phone.

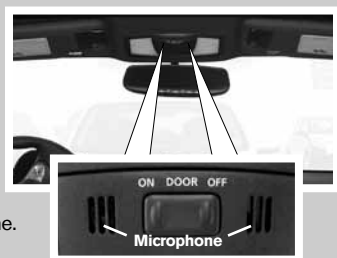

Bluetooth® System with Navigation* (if so equipped)

CONNECTING PROCEDURE

NOTE: The vehicle must be stationary when connecting the phone.



1. Press the **PHONE** button on the instrument panel or the  button on the steering wheel and select the "Connect Phone" key.



*Some jurisdictions prohibit the use of cellular telephones while driving.

system guide

2. Initiate connecting from the phone.

- The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible phones, please visit www.nissanusa.com/bluetooth.
- When prompted for a PIN code, enter "1234" from the handset. (The PIN code is assigned by NISSAN and cannot be changed.)



 
3. When the connecting is complete, the screen will return to the Phone menu display.

PHONEBOOK SETUP

- Depending on your cell phone, the system may automatically download your cell phone's entire phonebook into the "Handset Phonebook" in the vehicle's Bluetooth system.
- If the phonebook does not download automatically, the vehicle phonebook may be set up to 1,000 entries.
- To manually download entries:

1. Press the **PHONE** button and select the "Vehicle Phonebook" key.
2. Select the "Add New" key at the top of the display. There are different methods to input a phone number. Select one of the following options:


- "Copy from Call History" to save a number from the Outgoing, Incoming or Missed Calls lists.
- "Copy from the Handset" to save a number that has been downloaded from your handset to the vehicle.
- "Enter Number by Keypad" to input the number and name manually.

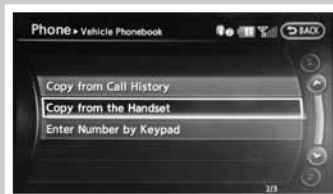

MAKING A CALL


To make a call, follow this procedure:

 1. Press the **PHONE** button on the instrument panel or the  button on the steering wheel. The "Phone" menu will appear on the control panel display.
2. Select the "Vehicle Phonebook", "Call History", "Handset Phonebook" or "Dial Number" key.
3. Select the desired entry from the list.
4. Select "Call" to start dialing the number.

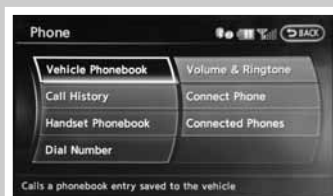

RECEIVING/ENDING A CALL

 - To accept the call, press the **PHONE** button on the instrument panel, the  button on the steering wheel or select the "Answer" key. To reject the call, select the "Reject Call" key.
- To hang-up, press the  button or select the "Hang-Up" key.

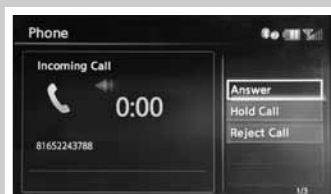

Bluetooth® System without Navigation* (if so equipped)

PAIRING PROCEDURE

1. Press the  button on the steering wheel.
The system announces the available commands.
2. Say "Connect Phone". The system acknowledges the command and announces the next set of available commands.
3. Say "Add Phone". The system acknowledges the command and asks you to initiate connecting from the phone handset.
4. Initiate pairing from the phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible phones, please visit www.nissanusa.com/bluetooth.
 - When prompted for a PIN code, enter "1234" from the handset. (The PIN code is assigned by NISSAN and cannot be changed.)
5. The system asks for a name for the phone. Say "Yes". The system acknowledges the command and registers the cellular phone.



PHONEBOOK REGISTRATION

- When the cellular phone is connected to the in-vehicle module, the data stored in the cellular phone such as phonebook, outgoing call logs, incoming call logs and missed call logs is automatically transferred and registered to the system.
- The availability of this function depends on each cellular phone. The copying procedure also varies according to each cellular phone. See your cellular phone Owner's Manual for more information.
- Up to 1,000 phone numbers per registered cellular phone can be stored in the phonebook.

*Some jurisdictions prohibit the use of cellular telephones while driving.

system guide

MAKING A CALL

1. Push the  button on the steering wheel. A tone will sound.
2. Say "Call". The system acknowledges the command and announces the next set of available commands.
3. Say the registered person's name. The system acknowledges the name. If there are multiple locations associated with the name, the system asks the user to choose the location.
4. Once the name and location are confirmed, the system begins the call.

RECEIVING/ENDING A CALL

- To accept the call, press the  button on the steering wheel. To reject the call, press the  button.
- To hang-up, press the  button.

For more information, refer to the "Center display, heater, air conditioner, audio, phone and voice recognition systems (section 4)" of your Owner's Manual or please visit www.nissanusa.com/bluetooth.

 


NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from the current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.

- 01** Touch screen display.
- 02** **STATUS** – Press multiple times to display audio information with either the air conditioner status, fuel economy or navigation directions.
- 03** Destination (**DEST**) – Press to enter a destination.
- 04** **ZOOM OUT** – Press to zoom the map out.
- 05** **ROUTE** – Press to access guidance control functions (guidance cancellation, route priority, waypoint setting on the route, etc.).
- 06** Information (**INFO**) – Press to display the vehicle, traffic (if so equipped), weather (if so equipped) or voice recognition information.
- 07**  – Press to switch between the day screen (bright) and the night screen (dark). Press and hold the button to turn the display off. Press again to turn the display on.
- 08** Multi-Function Controller
- **ENTER** – Press to select the highlighted item on the screen. If this button is pushed while a map is displayed, the map menu screen is displayed.
 - Main directional buttons – Press to move across the map, highlight an item on the screen or adjust a setting.
 - Additional directional buttons – Press to move across the map or highlight an item on the character input screen.
 - Center Dial – Turn the dial to highlight an item on the screen, adjust a setting or adjust the map scale.
- 09** **ZOOM IN** – Press to zoom the map in.
- 10** **MAP** – Press to display the map. While following a programmed route, press multiple times to change the type of route information.
- 11** **SETTING** – Press to access the system settings.
- 12**  **BACK** – Press to return to the previous screen. In a settings screen, this button can also be used to apply the setting. In a character input screen, this button can also delete the characters that have been entered.
- 13** **VOICE** – Press to hear the current voice guidance for a programmed route.

For more information, please refer to your Navigation System Owner's Manual.

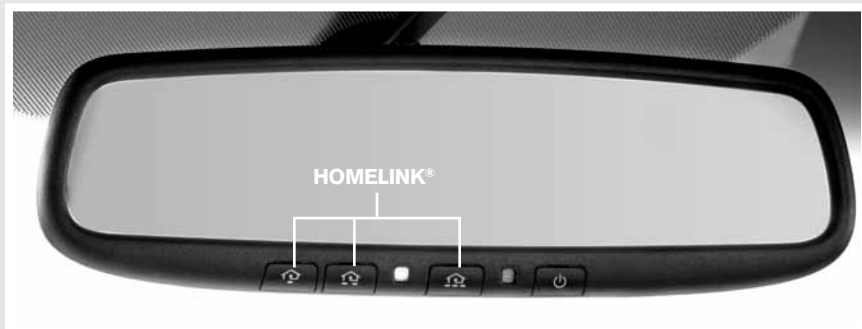

HOMELINK® UNIVERSAL TRANSCIEIVER (if so equipped)

- The HomeLink® system can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.

For more information, refer to the **“Instruments and controls (section 2)”** of your Owner’s Manual, the HomeLink® website at www.homelink.com or call 1-800-355-3515.

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. See your Owner's Manual, which contains important safety warnings and information about the operation and maintenance of your vehicle, for complete details. Nissan North America, Inc. reserves the right to make changes, at anytime, without prior notice, in prices, colors, materials, equipment, specifications, and models and to discontinue models or equipment. Due to continuous product development and other pre- and post-production factors, actual vehicle, materials and specifications may vary. Some vehicles are shown with optional equipment. See the actual vehicle for complete accuracy. Specifications, options and accessories may differ in Hawaii, U.S. territories and other countries. For additional information on availability, options or accessories, see your NISSAN dealer or contact Nissan North America, Inc.



To view detailed instructional videos,
go to **www.nissanownersinfo.mobi/2013/370z**
or snap this barcode with an appropriate barcode reader.

